



# Getting to Know Your 2008 Enclave



## Table of Contents

### DRIVER INFORMATION

Instrument Panel	2
Instrument Panel Cluster	3
Driver Information Center	4

### SAFETY & SECURITY

Remote Keyless Entry	5
OnStar®	6
Child Restraints (LATCH)	6

### COMFORT

Seat Adjustments	6
2nd-Row Seats	7
3rd-Row Seats	8
Heated Seat Controls	8
Memory Seats and Mirrors	9
Steering Wheel Adjustment	9
Tri-Zone Automatic Climate Controls	10
Rear Seat Climate Controls	10

### ENTERTAINMENT

Audio System Features	11
-----------------------	----

Multiple-Disc CD Player	13
Touch Screen Navigation Entertainment System	14
XM Satellite Radio	14
Audio Steering Wheel Controls	14
Rear Seat Audio and DVD Rear Seat Entertainment Systems	15

### CONVENIENCE

Automatic Headlamp System	16
Adaptive Forward Lighting	16
Interior Lighting Features	16
Windshield Wipers and Washer	17
Heated Washer Fluid	17
Cruise Control	18
Power Windows	18
Outside Power Foldaway Mirrors	18
Power Liftgate	19
Center Console Features	19

Sunroof	20
115-Volt Outlet	20
Rear Convenience Storage Center	20
Ultrasonic Rear Park Assist	20
Remote Vehicle Start	21

 
### PERFORMANCE & MAINTENANCE

Refueling the Vehicle	22
Automatic Transmission Operation	22
StabiliTrak® – Stability Control System	22
Trailer Towing	23
Tire Pressure Monitor	23
Resetting the Oil Life System	23

### OWNER INFORMATION

Roadside Assistance	24
My GMLink	24

Congratulations on your purchase of a Buick Enclave. Please read this information and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Keep this booklet with your Owner Manual for easy reference.

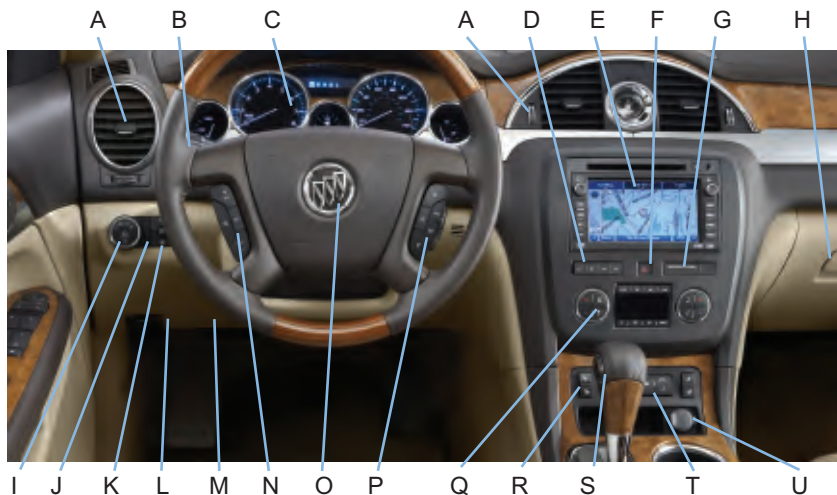**DRIVER INFORMATION****Instrument Panel**

- |  |   |   |
|--|---|---|
| A. Air Outlets                                       | I. Exterior Lamps Control                   | R. Heated Seat Buttons (if equipped)  |
| B. Turn Signal/Windshield Wipers/Multifunction Lever | J. Instrument Panel Brightness Control      | S. Shift Lever  |
| C. Instrument Panel Cluster                          | K. Heated Wiper Fluid Button                | T. Rear Wiper Control/Traction Control/Tow/Haul Mode (if equipped)/Power Liftgate Buttons |
| D. Driver Information Center Buttons                 | L. Hood Release                             | U. Accessory Power Outlet   |
| E. Audio System/Navigation System (if equipped)      | M. Tilt and Telescopic Steering Wheel Lever |   |
| F. Hazard Warning Flashers Button                    | N. Cruise Controls                          |   |
| G. Passenger Air Bag Status Indicator                | O. Horn                                     |   |
| H. Glove Box   | P. Audio Steering Wheel Controls            |   |
|  | Q. Climate Controls                         |   |

**See Section 3 of your Owner Manual.**

## Instrument Panel Cluster



Your vehicle's instrument panel is equipped with this cluster or one very similar to it. The instrument panel cluster includes these key features:

 
- A. Engine Coolant Temperature Gauge
- B. Tachometer
- C. Malfunction Indicator Lamp (Check Engine Light)
- D. Tire Pressure Warning Light
- E. Driver Information Center
- F. Fuel Gauge
- G. Speedometer
- H. Security Light
- I. Cruise Control Set Light
- J. Antilock Brake System Warning Light
- K. StabiliTrak Warning Light
- L. Voltmeter\*

\* The charging system is designed to regulate voltage output to help improve fuel economy and extend battery life. Normal system operation readings may fluctuate based on vehicle operation, including the number of electrical accessories being operated and engine speed.


**Note:** The instrument panel cluster is designed to let you know about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with the information being relayed to you by the lights, gauges and indicators, as well as what action can be taken to ensure safety and to prevent damage.

*See Section 3 of your Owner Manual.*

## Driver Information Center

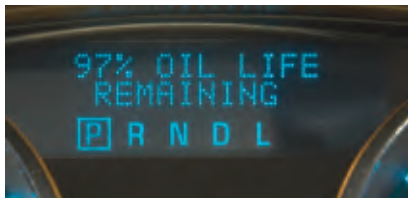

 Your vehicle's Driver Information Center (DIC) provides vehicle information, vehicle feature customization, and vehicle warning messages. The DIC messages will be shown on the instrument panel cluster display.

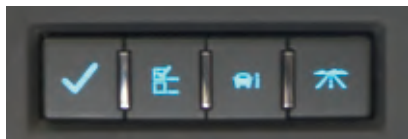

To access DIC features, press the following buttons located below the radio on the instrument panel:

✓ **(Set/Reset):** Press this button to set or reset DIC information while it is displayed or to acknowledge a warning message.

☐ **(Customization):** Press this button to scroll through the following customization settings:

- Display Language
- Auto Door Lock
- Auto Door Unlock
- Remote Door Lock
- Remote Door Unlock
- Delay Door Lock
- Exit Lighting
- Approach Lighting


- Chime Volume
- Park Tilt Mirrors (if equipped)
- Easy Exit Seat (if equipped)
- Memory Seat Recall (if equipped)
- Remote Start On/Off (if equipped)
- Reset to Factory Settings

To customize features:

1. With the vehicle in Park, turn on the ignition.
2. Press the ☐ (Customization) button to enter the Feature Settings menu.
3. Press the ☐ button to scroll through the available customization features.
4. With the desired feature displayed, press the ✓ (Set/Reset) button to access the settings.
5. Press the ☐ button to scroll through the available settings.
6. With the desired setting displayed, press the ✓ button to select it.
7. Press the ☐ button to scroll to the next available customization feature.
8. To exit the Feature Settings menu, press the ☐ button until FEATURE SETTINGS EXIT is displayed, and then press the ✓ button; or press the ☐ button or the 🚗i button.

🚗i **(Vehicle Information):** Press this button to display the following vehicle information:

- Oil Life
- Park Assist On/Off (if equipped)
- Units
- Tire Pressure
- Tire Pressure System Programming
- Remote Keyless Entry Programming

 **(Trip/Fuel)**: Press this button to display the following trip and fuel information:

- Odometer
- Trip Odometers
- Fuel Range
- Average Economy
- Timer
- Fuel Used
- Average Speed

### Warnings and Messages

The DIC provides a variety of vehicle warning messages (depending on optional equipment) if a problem is sensed in a vehicle system. To acknowledge a message and clear it from the display, press the DIC reset stem or any DIC button. Some urgent messages cannot be cleared from the DIC display.

If you have a current OnStar subscription, and a warning message appears, you can press the blue OnStar button and speak to an OnStar Advisor. In many vehicles, OnStar Advisors can access certain diagnostic information and can tell you how serious the problem is and what you should do about it.

**Note:** Your vehicle's warnings and messages provide critical information that can prevent damage to your vehicle. Review your Owner Manual to become familiar with the information displayed and the action required.


See Section 3 of your Owner Manual.


## SAFETY & SECURITY


### Remote Keyless Entry


The Remote Keyless Entry (RKE) transmitter allows you to lock and unlock your vehicle and perform other functions while up to approximately 195 feet away from the vehicle.


RKE functions include:

 **(Remote Vehicle Start)** (if equipped): This feature can be used to start the engine from outside the vehicle. (See Remote Vehicle Start.)

 **(Lock)**: Press this button to lock all the doors. RKE feedback (light flash and/or horn chirp) can be programmed using the Driver Information Center (DIC).

 **(Unlock)**: Press this button to unlock the driver's door. Press it again within five seconds to unlock all remaining doors. RKE feedback (light flash) can be programmed using the DIC.

 **(Power Liftgate)** (if equipped): Press and hold this button until the liftgate starts moving to open and close the liftgate. The taillamps will flash and a chime will sound when the liftgate is moving.

 **(Vehicle Locator/Panic Alarm)**: Press and release this button to locate your vehicle. The turn signal lamps will flash and the horn will sound three times.

Press and hold the button to activate the panic alarm. The turn signal lamps will flash and the horn will sound for 30 seconds. Press the button again or turn the ignition to On to cancel the alarm.

See Section 2 of your Owner Manual.

## OnStar®

The OnStar system provides in-vehicle safety, security and phone services, available 24 hours a day, 7 days a week. These services are easily accessed through the three OnStar buttons in your vehicle.

OnStar-equipped vehicles also have the ability to deliver driving directions to you automatically using OnStar Turn-by-Turn Navigation. OnStar Advisors can send a planned route to your vehicle and, as you approach a turn, the directions play over your vehicle's speakers.

For more information about OnStar features, refer to the OnStar Owner's Guide and enclosed audio CD located in your glove box.

See *Section 2 of your Owner Manual*.

 
## Child Restraints (LATCH)

Your vehicle is equipped with LATCH anchors, and may have top tethers for use with a LATCH compatible child restraint. The LATCH anchors are located in the 2nd-row outboard seating positions. If your child restraint is not compatible with the LATCH system, you may still use it by installing the child restraint with the safety belt system. Choose a child seat that is appropriate for the child's age and size (weight and height).

See *Section 1 of your Owner Manual*.

## COMFORT

### Seat Adjustments

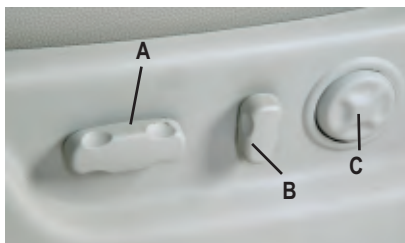

#### Power Seat Adjustment

Use the horizontal control (A) on the outboard side of the seat cushion to move the seat forward/rearward and — on the driver's seat only — up/down, as well as raise/lower the front or rear of the seat cushion.

#### Power Seatback Recline Adjustment (if equipped)

Use the vertical control (B) on the outboard side of the seat cushion to recline/raise the seatback.

#### Power Lumbar Support Adjustment (if equipped)

 
Use the control pad (C) on the outboard side of the seat cushion to increase/decrease lumbar support and to raise/lower the height of the support.

#### Manual Seatback Recline Adjustment



Lift the lever located on the outboard side of the seatback and move the seatback to the desired position; then release the lever.

## Manual Lumbar Support Adjustment

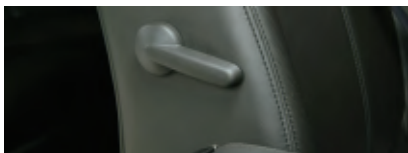

To adjust the amount of lumbar support, use the lever located on the inboard side of the seatback. To increase support, ratchet the lever up repeatedly. To decrease support, ratchet the lever down repeatedly.

See *Section 1 of your Owner Manual*.

## 2nd-Row Seats

### Entering or Exiting the 3rd-Row Seats



The 2nd-row SmartSlide™ seats allow for easy access to the 3rd-row seats. To enter or exit the 3rd-row seats:

1. Make sure nothing is on the 2nd-row seat or the floor in front of the seat.
2. Before sliding the 60/40 split bench seat, fold the center armrest into the upright position in the seatback.

3. Pull forward the release lever located on the upper outboard side of the seatback.



4. Push the top of the seatback forward. The seat cushion will fold up automatically and the entire seat will slide forward.

To return the 2nd-row seat to the seating position:

1. Make sure nothing is on the floor behind the 2nd-row seat.
2. Push the top of the seatback rearward until the seatback and floor tracks lock.
3. Push down at the rear of the seat cushion to lock it in place.
4. Pull on the seatback to be sure it is locked in place.

### Sliding the Seats

To slide the 2nd-row seats for more leg room in the 2nd or 3rd row:

1. Make sure nothing is on the floor in front or behind the 2nd-row seat.
2. Pull outward on the handle located on the outboard side of the seat cushion and slide the seat forward or rearward.



3. Release the handle.
4. Pull on the seat to make sure it is locked in place.

## Folding the Seatbacks

To fold the seatbacks forward to create a flat load floor:

1. Pull outward on the handle located on the outboard side of the seat cushion and slide the seat rearward.
2. Fold the armrest into the upright position.
3. Pull forward on the strap located on the outboard side of the seatback and fold down the seatback.



 
To return the seatbacks upright, pull up the seatback and push it rearward until it locks in place.

See Section 1 of your Owner Manual.

## 3rd-Row Seats

The 3rd-row 60/40 split bench seat features folding seatbacks. Prior to folding a seatback, make sure all of the seatbelts are unbuckled, nothing is on the 3rd-row seat, and the 2nd-row seat is not reclined.

Lift the lever (A) on the upper-back outboard corner of the seatback until the head restraint folds forward, and then fold down the seatback.

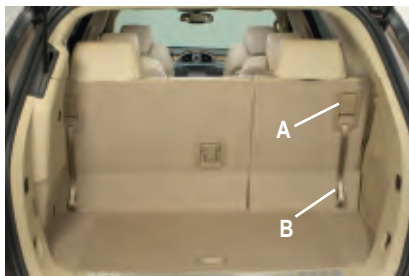


To return the seatback to the upright position, pull the seatback strap (B) from the rear of the vehicle or lift up the seatback from inside the vehicle. Pull on the seatback to make sure it is locked in place. Lift up the head restraint to lock it in place.


See Section 1 of your Owner Manual.

## Heated Seat Controls (if equipped)

The following heated front seat controls are located on the center console in front of the shift lever:



 **(Heated Seat/Seatback):** Press the bottom button to turn on the heated seat cushion and seatback.

 **(Heated Seatback):** Press the top button to turn on the heated seatback.

Continue to press the desired button to cycle through the temperature settings of High (three indicator lights), Medium (two indicator lights), Low (one indicator light), and Off (no indicator lights).

See Section 1 of your Owner Manual.



## Memory Seats and Mirrors (if equipped)



Memory settings can be programmed for the position of the driver's seat, outside mirrors and power adjustable steering wheel (if equipped). The memory buttons are located on the driver's door.


To save memory settings:

1. Adjust the driver's seat, outside mirrors, and power adjustable steering wheel to the desired position.
2. Press and hold button 1 until two beeps sound.

Repeat these steps using button 2 for a second driver.

To recall the memory settings, press button 1 or 2 with the vehicle in Park. The memory seat setting also can be programmed in the DIC to be recalled automatically when using the Remote Keyless Entry transmitter.

### Easy Exit Seat

With the vehicle in Park, press the  (Easy Exit Seat) button to recall the exit position for the driver's seat. The easy exit seat setting also can be programmed in the DIC to be recalled when removing the key from the ignition.

See *Section 1 of your Owner Manual*.

## Steering Wheel Adjustment

Adjust the driver's seat to a comfortable position before adjusting the steering wheel.

### Manual Adjustment

To tilt and telescope the position of the steering wheel:

1. Push down the lever on the left side of the steering column.
2. Adjust the wheel to a comfortable position by moving it up or down as well as forward or backward.
3. Pull up the lever to lock the wheel in place.



### Power Adjustment (if equipped)

To operate the power tilt and telescope feature, use the control located on the left side of the steering column.



To tilt the steering wheel up or down, push the control up or down.

To move the steering wheel away from you or toward you, push the control forward or rearward.

See *Section 3 of your Owner Manual*.

## Tri-Zone Automatic Climate Controls



The automatic climate control system maintains the desired individual temperature for the driver and front seat passenger. The system adjusts the airflow mode, fan speed, air conditioning and recirculation functions to reach the set temperature(s) as quickly as possible.

### Automatic Operation

To set the automatic system:

1. Press the AUTO button.
2. Set the desired driver's and front passenger's temperature using the + or – temperature buttons. Allow time for the system to reach the desired temperature.
3. Rear seat passengers can adjust rear temperature, fan speed and airflow using the rear controls.


### Manual Operation


To operate the system manually, use the following controls:


○ **(On/Off):** Press this button to turn the system on or off.


**Temperature Control:** Press the + or – button(s) to raise or lower the temperature setting(s).

**PASS (Passenger Temperature Control):** Press this button to turn the passenger temperature setting on or off. Until adjusted, the passenger temperature will be the same as the driver's.


 **(Fan):** Press the up or down button to increase or decrease fan speed.


 **(Airflow Mode):** Press the up or down button to change the direction of the airflow to the vent, floor or defog outlets.

 **(Air Conditioning):** Press this button to turn the air conditioning system on or off.

 **(Recirculation):** Press this button to recirculate air inside the vehicle. This mode keeps outside air from entering the vehicle. The recirculation feature will operate only when the vent or bi-level airflow setting is selected.

**AUX (Rear Climate Control):** Press this button to turn the rear climate control system on or off.

 **(Defrost):** Press this button to direct most of the air to the windshield and some air to the side window and floor outlets.

 **(Rear Window Defogger):** Press this button to activate the rear window defogger and the heated outside rearview mirrors. The defogger and heated mirrors will turn off automatically or can be turned off by pressing the button again.

See *Section 3 of your Owner Manual.*


## Rear Seat Climate Controls

The rear seat climate control system can be operated using the front climate controls on the instrument panel or the rear control panel, located in the rear of the console or integrated with the Rear Seat Audio (RSA) controls (if equipped).


To turn the rear system on or off, press the AUX button on the front control panel. The settings in the rear will be the same as in the front until they are changed by rear occupants using the rear controls.

### Rear Control Panel

To operate the system, use the following rear controls:

 **(Fan):** Turn this knob to adjust fan speed or to turn off the system.


**Temperature Control:** Turn this knob to adjust the temperature setting.


 **(Airflow Mode):** Turn this knob to adjust the direction of the airflow between the floor and headliner outlets.

### Rear Controls with Rear Seat Audio



To operate the system, use the following controls that are integrated with the RSA controls:

 **(Fan):** Press the up or down button to adjust fan speed or to turn off the system.

 **(Airflow Mode):** Press this button to adjust the direction of the airflow between the floor and headliner outlets.

**+ – (Temperature Control):** Press the + or – button to adjust the temperature setting from 0 (cooler) to 12 (warmer).

 
See Section 3 of your Owner Manual.


## ENTERTAINMENT

### Audio System Features




While most of the features on your radio will look familiar, some of the following may be new:

 **(Power/Volume):** Press this knob to turn the system on or off. Turn the knob to adjust the volume.

 **(Tune):** Turn this knob to select radio stations or, when a CD is playing, to select a track or MP3 file.

**i (Information):** Press this button to display additional information related to the current FM-RDS or XM station, or MP3 song.

**Tone and Speaker Control:** Press the  (Tune) knob to adjust the tone control (bass/treble) or speaker control (balance/fade) setting. Turn the knob or press the SEEK, FWD or REV button to adjust the selected setting.

**FAV (Favorite):** Press this button to go through up to six pages of any combination (AM, FM, or XM, if equipped) of preset favorite radio stations. On each page, up to six stations are available by using the six pushbuttons below the radio display.

**BAND:** Press this button to switch to FM, AM, or XM (if equipped). When playing a CD or portable audio player, press this button to play the radio instead.

**CD/AUX:** Press this button to play a CD instead of the radio. Press again and the system will automatically search for a portable audio player connected to the auxiliary input jack.

**EQ (Equalization):** Press this button to select preset equalization settings.

**CAT (Category)** (if equipped): Press this button to find XM stations within a desired category.

**Auxiliary Input Jack:** A portable audio player (such as an iPod® or other MP3 player) can be connected to the auxiliary input jack located on the radio. Press the CD/AUX button to begin playing audio from the portable player over the vehicle speakers. To optimize speaker volume, fully increase the volume level of the portable player.


### Setting Favorite Stations

 Before setting your favorite stations, shift the vehicle into Park.

**Note:** Choosing to engage in extended searching for specific audio stations or songs by using buttons and knobs — or to give extended attention to entertainment tasks — can lead you to look away from the road frequently or longer than usual. Looking away from the road for prolonged periods may cause you to miss seeing things on the road that you need to see. Be sure to keep your eyes on the road and mind on the drive — and avoid engaging in extended searching for specific items while driving.

You can set up to six pages of any combination (AM, FM, or XM, if equipped) of favorite radio stations, with up to six stations stored on each page.

To set the number of favorite station pages:

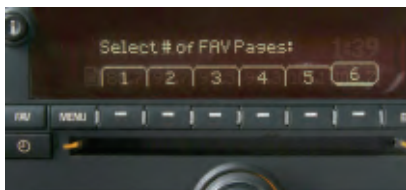

1. Press the MENU button to display the radio setup menu.
2. Press the pushbutton located below the FAV 1–6 label on the radio display.
3. Select the desired number of favorite station pages.
4. Press the FAV button. You may now begin storing your favorite stations for the chosen number of pages.

To store favorite stations:

1. Tune in the desired radio station.
2. Press the FAV button to display the page where the station is to be stored.
3. Press and hold one of the six pushbuttons until a beep sounds to store the station.
4. Repeat the steps for each pushbutton on each page.

### Setting the Time on the Audio System



To set the time:

1. Turn on the radio.

2. Press the ⌚ (Clock) button. Or, if equipped, press the MENU button until the clock option is displayed; and then press the pushbutton located under the clock option label. The HR, MIN, MM, DD, YYYY labels will appear on the display.
3. Press the pushbutton under any of the labels to be changed.
4. Press the pushbutton again, the right SEEK arrow or the FWD button to increase the numbers. Press the left SEEK arrow or the REV button to decrease the numbers. Rotating the 🎵 (Tune) knob also will increase or decrease the selected label.
5. Press the Clock or MENU button again to set the currently displayed time and date.

### Playing MP3 Files

Your audio system has MP3 file playback capability. A CD-R containing MP3 audio tracks will play automatically when inserted into the CD player. An MP3 label will be displayed.

 
### Radio Data System

When you tune to a Radio Data System (RDS) station, the station name or call letters will appear on the display instead of the frequency. Depending on the RDS station, additional text information may be available by pressing the ⓘ (Information) button.

RDS features are available for use only on FM stations that broadcast RDS information. RDS relies on receiving specific information from these stations and will work only when the information is available.

See Section 3 of your Owner Manual.

### Multiple-Disc CD Player (if equipped)

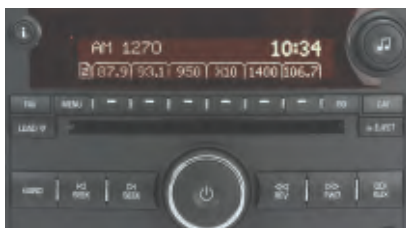

To load a CD(s):

- Press and release the LOAD ▾ button to load one CD. Press and hold the LOAD ▾ button for two seconds to load multiple CDs. Follow the display prompts to load each CD. Press the LOAD ▾ button again to cancel loading more CDs.

To play a specific CD:

- Press the pushbutton below the arrow label on the display to select the desired CD number.

To eject a CD(s):

- Press the ▲ EJECT button once to eject the CD that is currently playing. Press and hold the ▲ EJECT button to eject all CDs.

If a CD is not removed after several seconds, it will be pulled back into the player automatically.

**Note:** CDs with any affixed labels may jam in the CD player. Label a CD using a permanent marker. If more than one CD is inserted into the slot at one time, or if scratched or damaged CDs are played, the CD player could be damaged. Keep the CD player and the loading slot free of foreign materials, liquids or debris.

See Section 3 of your Owner Manual.

### Touch Screen Navigation Entertainment System (if equipped)



Your vehicle's Navigation Entertainment System provides you with detailed maps of all major highways and roads throughout the United States. The system provides turn-by-turn driving instructions for each destination you enter and can help you locate a variety of points of interest, such as banks, airports and restaurants. In addition, the system offers a variety of enhanced audio features.

Refer to your Navigation Entertainment System Owner Manual for operating instructions.

See Section 3 of your Owner Manual.

### XM Satellite Radio

XM Satellite Radio offers more than 170 channels of digital-quality sound that goes wherever you go — coast to coast. XM can display song title, artist or entertainment genre by pressing the **i** (Information) button.

After a free three-month trial period, activation and service subscription fees apply. Service is based in the continental U.S. and Canada.

For more information, visit XM online at [www.XMradio.com](http://www.XMradio.com) or call 1-800-852-XXMX (9696).

See Section 3 of your Owner Manual.

### Audio Steering Wheel Controls (if equipped)

The following audio controls are located on the steering wheel:

**+ – (Volume):** Pull up on the + or – button to increase or decrease the volume.

**△▽ (Next/Previous):** Press the up or down arrow to go to the next or previous radio station stored as a favorite or, when a CD or DVD (if equipped) is playing, to the next or previous track or chapter. Press the ▽ (Previous) button to end the OnStar call.

**SRCE (Source):** Press this button to switch between AM, FM, XM (if equipped), CD, DVD (if equipped) and AUX.

**▷ (Seek):** Press this button to go to the next radio station on the same band or, when a CD or DVD (if equipped) is playing, to the next track or chapter.

**⏏ (Mute/Voice Recognition):** Press this button to mute the vehicle speakers. Press and hold the button for one second to initiate navigation system voice recognition or interact with the OnStar system.

See Section 3 of your Owner Manual.



## Rear Seat Audio and DVD Rear Seat Entertainment Systems (if equipped)



### Rear Seat Audio

The Rear Seat Audio (RSA) system allows front seat and rear seat passengers to listen to different entertainment sources at the same time using the rear seat controls and wired headphones (not supplied) or wireless headphones (if equipped).

To select an entertainment source (radio, CD, or DVD, if equipped):

- Press the SRCE (Source) button.

To adjust the volume:

- Turn the left volume knob to adjust the left wired headphones and the right volume knob to adjust the right wired headphones. On wireless headphones, adjust volume using the headphone volume control.

### DVD Rear Seat Entertainment

The Rear Seat Entertainment (RSE) system includes a DVD player as part of the front radio, a video display screen, audio/video jacks, two wireless headphones, and a remote control.

To play a DVD:

1. Turn the ignition to the Accessory or On position.
2. Push the release button on the DVD display console and fold down the video screen.

3. Insert a DVD into the DVD slot in the radio. It will turn on the video screen and begin playing automatically. To cycle through available inputs, press the DVD/CD AUX button. It may be necessary to press the Play pushbutton on the radio or the remote control to start playing the movie if the DVD stops at a menu screen.

**Note:** Aim the remote control at the video screen, not the DVD player, for proper operation.

4. To listen to the DVD through the vehicle speakers, press the DVD/CD AUX button. Adjust volume using the radio volume control.

To listen to the DVD through the headphones, press the On/Off button on the headphones. Adjust volume using the headphone volume control.

5. To control DVD playback, use the remote control or the front radio pushbuttons.

### Parental Control

The Parental Control feature turns off the video screen and Rear Seat Audio to help gain the attention of rear passengers, such as when using headphones.

To enable the Parental Control feature, press and hold the radio power button for two seconds. To turn off Parental Control, press and hold the radio power button again for two seconds.

*See Section 3 of your Owner Manual.*

## CONVENIENCE

### Automatic Headlamp System



The Automatic Headlamp System turns on the Daytime Running Lamps in the daytime and the headlamps and other exterior lamps at night or when necessary.

The system uses a light sensor, located on top of the instrument panel, to determine light conditions. For proper operation, avoid placing any objects on or near the sensor.

### Exterior Lamps Control

The exterior lamps can be operated using the control knob located on the left side of the instrument panel. The knob can be rotated to the following positions:

#### **AUTO (Automatic Lamp Control):**

This position enables the Automatic Headlamp System.

○ **(On/Off):** Momentarily turn the knob to this position to turn the Automatic Headlamp System off or on again.

⇒⇐ **(Parking Lamps):** This position turns on the parking lamps and taillamps.

≡◻ **(Headlamps):** This position turns on the headlamps, parking lamps and taillamps.

☾ **(Fog Lamps):** Press this button on the exterior lamps control knob to turn the fog lamps on or off.

See Section 3 of your Owner Manual.

### Adaptive Forward Lighting (if equipped)


The Adaptive Forward Lighting System (AFS) features headlamps that swivel horizontally to provide greater road illumination while turning.

To enable AFS, turn the exterior lamps control knob to the AUTO position. AFS operates only at speeds greater than 2 mph and after starting the vehicle and driving a short distance to calibrate the system.


See Section 3 of your Owner Manual.

### Interior Lighting Features

#### Instrument Panel Brightness

The  (instrument panel brightness) control knob is located on the left side of the instrument panel. To brighten or dim the instrument panel lights, press the knob; it will pop out. Turn the knob to adjust the intensity of the lights.

#### Courtesy Lamps

The courtesy lamps will come on when a door is open. The lamps also can be turned on by fully rotating the instrument panel brightness control knob clockwise. To disable the courtesy lamps, press the  (Courtesy Lamp Override) button located above the instrument panel brightness control knob.


See Section 3 of your Owner Manual.





## Windshield Wipers and Washer



The windshield wipers and washer controls, located on the multifunction lever on the left side of the steering column, include the following functions:


 **(Mist):** Rotate the control band to this position to turn the wipers on for one wipe.

 **(Off):** Rotate the control band to this position to turn off the wipers.

 **(Delay):** Rotate the control band to one of these positions to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

**1 (Low):** Rotate the control band to this position for steady wipes.


**2 (High):** Rotate the control band to this position for rapid wipes.


 **(Washer Fluid):** Push the button on the end of the lever to spray washer fluid on the windshield.

 
### Rear Wiper and Washer

The rear wiper and washer button, located on the center console in front of

the shift lever, includes the following functions:


 **(Rear Wiper):** Press the top of the button (A) to turn the rear wiper on or off.


 **(Washer):** Press the bottom of the button (B) to spray washer fluid on the rear window.

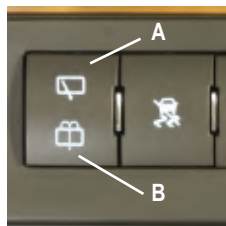

See Section 3 of your Owner Manual.

### Heated Washer Fluid (if equipped)

 Press the  (Heated Washer Fluid) button (A) on the left side of the instrument panel to spray heated washer fluid on the windshield. This will help to clear ice, tree sap and bugs from the windshield. It may take up to 40 seconds to heat the washer fluid, after which the wipers will automatically turn on for four heated wash cycles. Press the button again to cancel any remaining cycles.

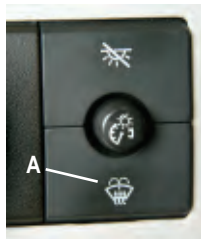


See Section 3 of your Owner Manual.


## Cruise Control

 The cruise control buttons are located on the steering wheel. They include the following functions:


 **(On/Off):** Press this button to enable the cruise control system.

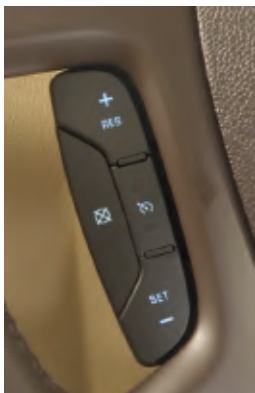

**SET- (Set):** Press this button to set a speed. If the system is active, press and release this button to decrease speed 1 mph, or press and hold the button to decrease speed more than 1 mph.

When the cruise control is set, the  (Cruise Control) symbol will illuminate in the instrument panel cluster.

**RES+ (Resume):** Press this button to resume a set speed. If the system is active, press and release this button to increase speed 1 mph, or press and hold the button to increase speed more than 1 mph.

 **(Cancel):** Press this button to cancel the cruise control but retain the set speed in memory.

See Section 3 of your Owner Manual.

## Power Windows

All four power window switches are located on the driver's door armrest. In addition, each passenger door has a switch for its own window.


## Express-Down Windows

To operate the driver or front passenger express-down window, press the switch fully and the window will lower automatically. Press the switch partway to open the window a small amount. To stop the window, pull or press on the switch momentarily.

## Express-Up Window

To operate the driver or front passenger express-up window, pull up the switch fully and the window will rise automatically. To stop the window, pull or press on the switch momentarily.


## Window Lockout

Press the  (Window Lockout) switch on the driver's door armrest to prevent the rear windows from operating except from the driver's position. Press the switch again to turn off the lockout feature.


See Section 2 of your Owner Manual.

## Outside Power Foldaway Mirrors (if equipped)

The following power foldaway mirror controls are located on the driver's door:

 **(Mirror Selector):** Press the left side of this switch (A) to select the driver's side mirror or the right side of this switch to select the passenger's side mirror.

Press either side of the switch twice to lock out the control pad to prevent unintentional adjustment.

 **(Mirror Adjustment):** Press the four-way control pad (B) to adjust the selected mirror.

 



**(Foldaway Mirrors)** (if equipped): Press the right side of this switch (C) to fold the mirrors, and press the left side of this switch to unfold the mirrors.

See Section 2 of your Owner Manual.

- Press the button (B) on the bottom of the liftgate, next to the liftgate latch, to close. Press it again to reverse operation.





To disable all power liftgate controls, switch the  button on the center console to the  (Off) position. The liftgate can be operated manually.

See Section 2 of your Owner Manual.


## Power Liftgate

 There are several ways to open and close the power liftgate:

- Press and hold the  (Power Liftgate) button on the Remote Keyless Entry transmitter until the liftgate starts moving. Press it again to reverse operation.
- Press the  (Power Liftgate) button on the center console in front of the shift lever. Press it again to reverse operation.
- Press the touchpad (A) on the liftgate handle to open. Press it again to reverse operation.



## Center Console Features

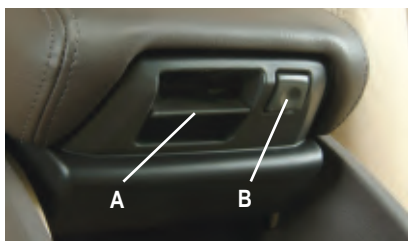

To slide the center console/armrest forward or backward, while in the driver's seat, pull up and hold the larger lever (A) located on the front of the console.

To open the console storage area, press the smaller button (B) located on the front of the console.

Slide the console back to open the tambour sliding door. Remove the tray under the door to access additional storage space and an accessory power outlet.

See Section 2 of your Owner Manual.

### Sunroof (if equipped)



The following sunroof and sunshade switches are located on the headliner above the rearview mirror:

**Express-Open/Express-Close:** From the closed position, press the rear of the driver's side switch (A) to express-open the sunroof. Press the front of the switch to express-close the sunroof.

**Vent:** From the closed position, press and hold the front of the driver's side switch (A) to vent the sunroof. Press and hold the rear of the switch to close the sunroof.

**Front Sunshade:** Push up and slightly forward on the sunshade handle and then release it rearward to open the manual sunshade.

**Rear Sunshade:** Press the rear of the passenger's side switch (B) to express-open the sunshade over the 2nd-row seats. Press the front of the switch to express-close the sunshade.

See Section 2 of your Owner Manual.

### 115-Volt Outlet (if equipped)



The 115-volt power outlet is located on the back of the center console. With the ignition turned to Accessory or On, it provides convenient plug-in power to run electronic equipment such as video games, a laptop computer, or a cell phone charger.

See Section 3 of your Owner Manual.

### Rear Convenience Storage Center

The rear convenience storage center, located behind the 3rd-row seats, features additional storage compartments. To open, pull the handle up and lift the cover. The side covers also can be opened to store small items.

See Section 2 of your Owner Manual

### Ultrasonic Rear Park Assist (if equipped)

This feature uses ultrasonic sensors on the rear bumpers to help you avoid colliding with objects when parking the vehicle. It operates only at speeds less than 5 mph.



The rear park assist display is located in the headliner near the rear window and provides the following indicators when an object is detected:

- At 8 ft. (2.5 m), one light illuminates.
- At 40 in. (1.0 m), two lights illuminate.
- At 23 in. (0.6 m), all three lights illuminate.
- At 12 in. (0.3 m), a chime sounds and all three lights flash.

Use the Driver Information Center to turn off the system when towing. The system automatically turns back on after each vehicle start.

### Rear View Camera (if equipped)

The rear view camera displays a view of the area behind the vehicle on the navigation system screen when the vehicle is shifted into Reverse. The rear park assist indicators will appear on the screen, indicating the distance and position of an object behind the vehicle.

See *Section 2 of your Owner Manual*.



## Remote Vehicle Start (if equipped)

This feature allows you to start the engine from outside the vehicle by using the Remote Keyless Entry (RKE) transmitter. The remote start capability must be turned on using the Driver Information Center.

Based on outside temperature, the vehicle's automatic climate control system will default to a heating or cooling mode and the heated seats (if equipped) will turn on.

## Starting the Vehicle

To remote start the vehicle:


1. Aim the RKE transmitter at the vehicle. (Transmitter range is within approximately 195 feet of the vehicle.)
2. Press and release the  (Lock) button on the transmitter.
3. Immediately press and hold the  (Remote Start) button for about four seconds. When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes.
4. Repeat these steps for a 10-minute time extension. Only two consecutive remote starts are allowed.

When you enter the vehicle after a remote start, the ignition must be turned to the On position before driving.

**Note:** The Remote Vehicle Start feature will not operate if the key is in the ignition, the hood or liftgate is open, or the Check Engine light is illuminated on the instrument panel cluster.

## Canceling a Remote Start

If you wish to turn off the engine instead of driving after a remote start, perform one of the following functions:

- Press and hold the  (Remote Start) button until the parking lamps turn off.
- Press and release the Hazard Warning Flashers button. Press it again to turn off the flashers.
- Turn the key in the ignition switch to the On position and then off.

See *Section 2 of your Owner Manual*.

## PERFORMANCE & MAINTENANCE

### Refueling the Vehicle

To open the fuel door, press the center of the rear edge of the door and it will pop open slightly. Pull the door to open it fully.

When closing the fuel door, press the center of the rear edge of the door until it latches and is flush with the side of the vehicle.

See *Section 5 of your Owner Manual.*

### Automatic Transmission Operation

The automatic transmission has an Electronic Range Select mode that enables the driver to select the top-gear limit desired for the current driving conditions, such as when driving on downhill grades. This provides engine braking and reduces brake wear.



To use this feature, move the shift lever to the Low (L) range position and select a lower or higher driving gear using the + / - button on the side of the shift lever. The display on the instrument panel cluster will show the current gear selection.

The transmission will be limited to the gear selected and lower gears. Gears higher than the gear selected will not be available.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur.


See *Section 2 of your Owner Manual.*

### StabiliTrak® – Stability Control System

StabiliTrak is an advanced computer-controlled vehicle stability and traction enhancement system that assists with directional control of the vehicle in difficult driving conditions. It turns on automatically every time you start your vehicle.



To limit wheelspin and help maintain directional control, you should always leave the system on. However, if your vehicle becomes stuck and rocking the vehicle is required, the system should be turned off.

To turn off the traction control part of the system, press the  (Traction Control) button located on the center console in front of the shift lever.


When the system is turned off, the Traction Control light will illuminate.

See *Section 4 of your Owner Manual.*

## Trailer Towing


The Tow/Haul mode (if equipped) assists when pulling a heavy trailer by reducing the frequency of transmission shifts and improves the control of vehicle speed.



To turn on this feature, press the  (Tow/Haul) button located on the center console in front of the shift lever. Press it again to turn off the feature.

See Section 4 of your Owner Manual.

## Tire Pressure Monitor

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the  (Low Tire Pressure) warning light on the instrument panel. The low tire pressure warning light will remain on until you correct the tire pressure.

A CHECK TIRE PRESSURE message may appear on the DIC.

### Correcting the Tire Pressure

When the low tire pressure warning light illuminates, you must fill the tire to the proper tire inflation pressure. The Tire and Loading Information label, located on the center pillar below the driver's door latch, shows the correct inflation pressure for the tires when they're cold. "Cold" means your vehicle has been sitting for at least three hours or driven no more than one mile.

You can temporarily remove the DIC message by acknowledging it with your DIC controls. However, at the next

vehicle startup, the DIC message will reappear if the tire pressure has not been corrected.

You may notice during cooler conditions that the low tire pressure warning light will appear when the vehicle is first started and then turn off as you start to drive the vehicle. This could be an early indicator that your tire pressures are getting low and need to be inflated to the proper pressure.



**Note:** The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance.

See Section 5 of your Owner Manual.

## Resetting the Oil Life System

The Oil Life System calculates engine oil life based on vehicle use and displays CHANGE OIL SOON in the Driver Information Center (DIC) when it's necessary to change your engine oil and filter. The Oil Life System should be reset to 100% only following an oil change.

To reset the Oil Life System:

1. Turn on the ignition, with the engine off.
2. Press the  (Vehicle Information) button until the DIC displays OIL LIFE REMAINING.
3. Press and hold the  (Set/Reset) button until 100% is displayed.
4. Turn off the ignition.

See Section 5 of your Owner Manual.

**OWNER INFORMATION****Roadside Assistance****1-800-252-1112**

TTY Users: 1-888-889-2438

As the proud owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Buick's Roadside Assistance toll-free number is staffed by a team of technically trained advisors who are available 24 hours a day, 365 days a year, to provide minor repair information or make arrangements to tow your vehicle to the nearest Buick dealer.

Buick will provide the following services for 5 years/100,000 miles at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealer for warranty service
- Flat tire assistance
- Jump starts

In many instances, mechanical failures are covered under Buick's comprehensive warranty. However, when other services are utilized, our advisors will explain any payment obligations you might incur.

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

Buick reserves the right to limit services or reimbursement to an owner or driver when, in Buick's judgment, the claims become excessive in frequency or type of occurrence.

**Roadside Assistance and OnStar (if equipped)**

If you have a current OnStar subscription, press the blue OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

**My GMLink**

The Buick Owner Center at My GMLink is a complimentary service for Buick owners, a one-stop resource to enhance your Buick ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at [www.mygmlink.com](http://www.mygmlink.com).

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice. © 2007 by GM Corp. All rights reserved.



P15861578 A