



# Getting to Know Your **2014 Enclave**



Review this Quick Reference Guide for an overview of some important features in your Buick Enclave. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle.

If you have additional questions about the features and controls in your vehicle, press the blue OnStar button to speak with a customer assistance representative who can provide more information.

[www.buick.com](http://www.buick.com)

## Instrument Panel



### Symbols

	Low Fuel		Low Tire Pressure		Charging System
	Traction Control Off		StabiliTrak Active		Safety Belt Reminder
	Engine Coolant Temperature		StabiliTrak Off		Airbag Readiness
	BRAKE Brake System		Security		Antilock Brake System
	Cruise Control Set		Check Engine		Side Blind Zone Alert
			Oil Pressure		

Driver Information Center Buttons\*  
 USB Port (inside storage compartment)  
 Audio System/Navigation System\*  
 Hazard Warning Flashers Button  
 Lane Departure Warning Button\*/Forward Collision Alert Button\*



 
Driver's Heated/Cooled Seat Buttons\*  
 Rear Wiper Switch/Traction Control Off Button/Tow/Haul Mode Button\*/Power Liftgate Switch\*  
 Accessory Power Outlet  
 Passenger's Heated/Cooled Seat Buttons\*  
 Climate Controls

*Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.*

*See In Brief in your Owner Manual.*

## Front Seats

### Power Seats

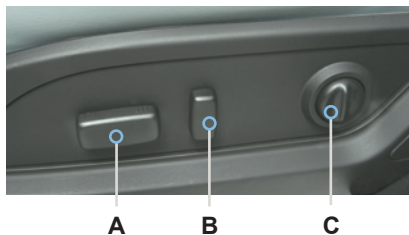

#### A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to raise, lower or tilt the seat.

 
#### B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

#### C. Lumbar Adjustment<sup>◆</sup>

Press the switch to adjust the amount of lumbar support.

### Manual Lumbar

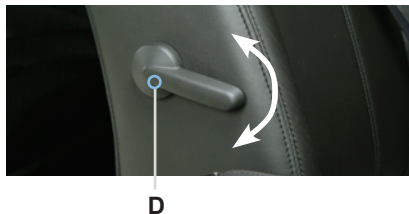

#### D. Lumbar Adjustment

Pull up/push down the lever on the inboard side of the seatback to adjust the amount of lumbar support.

### Head Restraints



The driver and front passenger head restraints are adjustable.

- ▶ Press the button on the left side of the head restraint to raise or lower the head restraint, or move it rearward. Move the head restraint forward by pulling it forward.

*See Seats and Restraints in your Owner Manual.*

 
## Enter or Exit the 3rd-Row Seats



A

1. Make sure nothing is on the 2nd-row seat or the floor in front of or behind the seat.
2. Fold up the armrest(s) and make sure the safety belt is unfastened and in the stowed position.
3. Rotate the release lever (A) on the upper-outboard side of the seatback forward.
4. Push the top of the seatback forward. The seat cushion will fold and the entire seat will slide forward.
5. After entering/exiting, push the top of the seatback rearward until the seatback and floor tracks lock.
6. Push down at the rear of the seat cushion to lock it in place.

## Slide the Seat

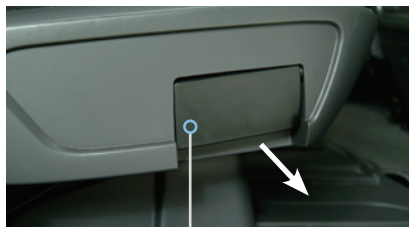

B

1. Make sure nothing is on the floor in front of or behind the 2nd-row seat.
2. Pull outward on the handle (B) on the outboard side of the seat cushion and slide the seat forward or rearward.
3. Release the handle.

## Fold/Recline the Seatback



C

1. Make sure the seat is all the way rearward (when folding the seat), the armrest(s) are upright and the safety belt is unfastened.
2. Pull forward on the strap (C) on the outboard side of the seatback.
3. Fold down or recline the seatback.

See *Seats and Restraints in your Owner Manual.*



### Exterior Lamps

Rotate the knob to operate the exterior lamps.

 **Off/On**

#### **AUTO Automatic Headlamp System**

Activates the Daytime Running Lamps (DRLs) in the daytime and the headlamps and other exterior lamps at night or when necessary.

 **Parking Lamps**

 **Headlamps**

### Ambient Lighting

#### **Ambient Off**

The ambient lighting illuminates across the instrument panel. Press the button to turn the ambient lighting on or off. Turn the instrument panel brightness knob to adjust the lighting. The headlamps must be on for the ambient lighting to operate.

**Note:** Only the instrument panel ambient lighting, not the door panel ambient lighting, can be turned off.

### Interior Lighting

#### **Instrument Panel Brightness**

Press the small knob to extend it. Turn the knob to adjust the instrument panel lighting. Turn the knob fully to turn on the dome lamps when all doors are closed.

### Dome Lamps

#### **Dome Off**

Press the button to turn off the dome lamps. The button indicator will illuminate when the dome lamps are turned off. With the button depressed, the dome lamps will not turn on when a door is open.

Press the button again to have the dome lamps turn on when a door is open.

## Audio Steering Wheel Controls

### Volume

Pull up the + or – button to adjust the volume.

### SRCE Source

Press to select an audio source.



 

### Next/Previous

Press the up or down arrow to go to the next or previous favorite radio station, track, or file.

### Seek

Press to go to the next radio station on the same band or CD track.

### Push to Talk/Mute

 Press to start voice recognition to interact with the audio, OnStar®, Bluetooth or navigation  system.

Press and hold for two seconds to mute the speakers.




### End Call

Press to end or reject an OnStar or a Bluetooth call.

*See Instruments and Controls in your Owner Manual.*

## Cruise Control

### Setting Cruise Control

1. Press the  **On/Off** button. The  **Cruise Control** symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET/–** button to set the speed. The  symbol will illuminate in green on the instrument cluster.



### Adjusting Cruise Control

#### **RES/+ Resume/Accelerate**

Press to resume a set speed.

When the system is active, press to increase speed.

#### **SET/– Set/Coast**

When the system is active, press to decrease speed.

#### **Cancel**

Press to cancel the cruise control but retain the set speed in memory.

Pressing the brake pedal also will cancel the cruise control.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

*See Driving and Operating in your Owner Manual.*



## Infotainment System

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

The infotainment system is controlled using the faceplate buttons, touch screen, voice recognition and audio steering wheel controls.



See Infotainment System in your Owner Manual.



## Setting the Time

1. Touch the Time Display on the touch screen.
2. Touch the desired **∨ down** or **∧ up** screen button to adjust the time.
3. Touch the **OK** screen button to confirm the setting.

## Storing Favorite Stations

Radio stations from all bands (AM, FM or XM<sup>◆</sup>) can be stored, in any order, on up to six pages of favorites.

1. Tune in the desired radio station.
2. Press and hold one of the six preset screen buttons until a beep is heard.
3. Repeat the steps for each desired station.

## Home Page

### Adding Home Page Screen Buttons

1. Press the **Home** button.
2. Touch the **Menu** screen button.
3. Touch **Customize**.
4. Touch a button to add or remove. Up to eight screen buttons can be displayed.
5. Touch **Done**.

### Moving Home Page Screen Buttons

1. Press the **Home** button.
2. Touch the **Menu** screen button.
3. Touch **Sort**.
4. Touch the screen button to be moved and the screen button for the new location.
5. Touch **Done**.

## Portable Audio Devices



**Note:** Connect an iPod/iPhone USB cord after starting the vehicle for optimum performance.

A USB port<sup>◆</sup> is located in the upper instrument panel storage compartment.

- An iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Compatible devices connected to the USB port can be controlled by the audio system. Not all devices may be supported. Use the audio controls and audio steering wheel controls to access various functions.


See *Infotainment System in your Owner Manual*.

 
## Bluetooth® System

Refer to your Owner Manual for important safety information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Bluetooth streaming audio is available with the IntelliLink system. ♦ For more information, visit [www.gmtotalconnect.com](http://www.gmtotalconnect.com).

### Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say “Pair.”  
To use the screen buttons, press the **Settings** screen button and then touch **Bluetooth Device List > New Device**.
2. Start the pairing process on the phone. Locate IntelliLink on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or confirm the six-digit code on the phone.
4. If your phone prompts you to accept the connection or phone book download, click “yes” and always allow.

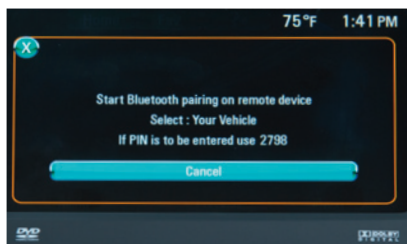

### Streaming Audio

With a paired device connected via Bluetooth, select Bluetooth Audio on the home screen to stream audio from the device. Control audio operation using the device controls.

*See Infotainment System in your Owner Manual.*

## Buick IntelliLink

 
IntelliLink uses a Bluetooth or USB connection to link a smartphone, cell phone, USB flash drive or portable audio player/iPod™ to the touch screen infotainment display. It offers a variety of entertainment options, including streaming audio from the Internet through a smartphone, and features enhanced hands-free voice control, music information and the ability to play music files from a USB flash drive.

**For assistance** with Bluetooth pairing, application downloading and installation, mobile device compatibility, and operation of the IntelliLink system, contact Customer Assistance at 1-855-4-SUPPORT (855-478-7767) or visit [www.buick.com/intellilink](http://www.buick.com/intellilink).

*See Infotainment System in your Owner Manual.*

## Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the enhanced voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say "Command please," followed by a beep.
3. After the beep, say what you want it to do.

### Phone (Using your paired phone):

Example command: "Call Amanda" or "Dial 555-1212"

### Media Music Device Search (when connected to USB only):

Example command: "Play artist [name]" or "Play song 'Dance the Night Away'"

### Radio Control:

Example command: "Tune FM 104.3" or "Tune XM Classic Vinyl"

## PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres (a slight delay may occur when loading a song or changing a station).

- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your phone to listen to a customized song list in the vehicle.
- ▶ If you like or dislike a song, you can say "Thumbs up" or "Thumbs down" using voice recognition, or touch the **Thumbs Up** or **Thumbs Down** screen button.
- ▶ Use voice commands to tune your Pandora stations.

## Stitcher SmartRadio™

Stream favorite podcasts, radio shows and news to your vehicle.

- ▶ Download the Stitcher app to your smartphone. Restart the smartphone and sign in to Stitcher.
- ▶ Select a category to listen to.
- ▶ If you like the station, touch the **Star** screen button to add it to your Favorites list.

**Note:** Pandora and Stitcher can be played using the Bluetooth connection. However, the Pandora and Stitcher screen icons and voice commands will be active only when connected to the USB port.

 
## SiriusXM™ Satellite Radio♦ (Subscription required)

**NEW** – XM Tune Select finds your favorite artists or songs on all XM stations and alerts you.

SiriusXM provides access to over 180 channels of commercial-free music, sports, talk, entertainment, comedy and weather using the radio controls or voice commands.

See Infotainment System in your Owner Manual.

## Climate Controls

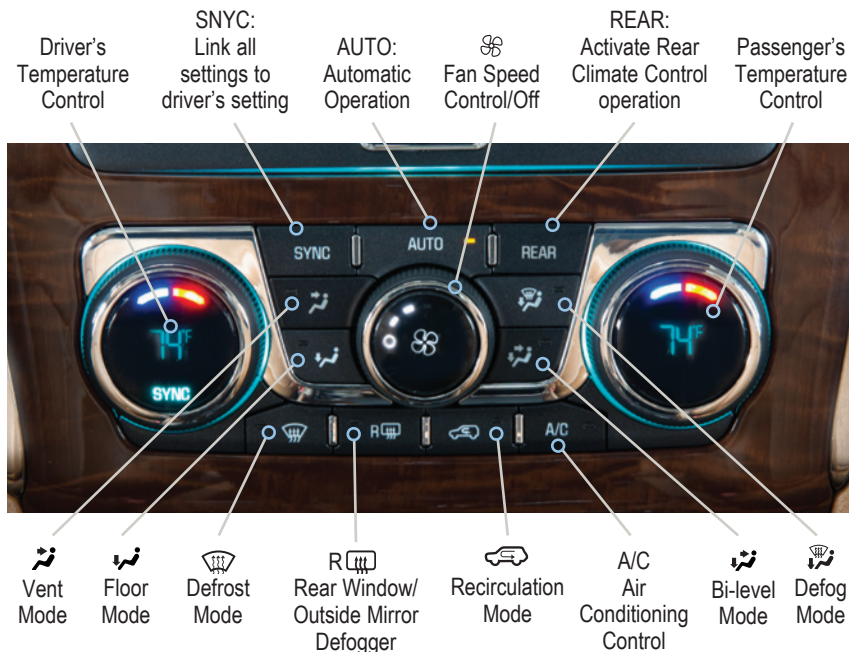


### Automatic Operation

1. Press **AUTO**.
2. Set the temperature for the driver and front passenger. If desired, press **SYNC** to link all temperature settings to the driver's setting. Allow time for the system to automatically reach the desired temperature.

If the air delivery mode or fan speed is adjusted manually, automatic operation is canceled.

### Recirculation Mode

The  Recirculation Mode can help to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle. It is not available while the Floor, Defog or Defrost Mode is selected. When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

See *Climate Controls* in your Owner Manual.

## Front Seat Control



- ▶ Press the **REAR** button to activate rear climate control operation. REAR will illuminate on the fan control knob and temperature control knob.
- ▶ Use the fan control knob to adjust the rear climate control fan speed. Turning the fan control knob to Off turns off the climate control system.
- ▶ Use the temperature control knob to adjust the rear climate control temperature.

**Note:** Maximum system operation is achieved by turning on the rear system even if the rear seats are unoccupied.

## Rear Seat Controls

Rear seat occupants can adjust the rear settings at any time by using the rear controls, regardless of the front control panel REAR setting.



Rear climate controls with rear seat audio<sup>†</sup> shown.

See Climate Controls in your Owner Manual.

## Rear Wiper/Washer



### Rear Wiper

Press the top of the switch to turn the rear wiper on or off.

### Washer Fluid



Press the bottom of the switch to spray washer fluid on the rear window.

See *Instruments and Controls* in your Owner Manual.

## Power Liftgate<sup>†</sup>



### Power Liftgate Switch

- ▶ Press the  **Power Liftgate OFF** switch to turn off the power liftgate. The liftgate can only be operated manually when the switch is in the Off position.
- ▶ Press the top of the  **Power Liftgate** switch to turn on the power liftgate.

**Note:** If the power liftgate does not open or close, make sure the power liftgate switch is not in the Off position. The Driver Information Center will display **POWER LIFTGATE OFF** if the power liftgate is disabled.





A



B

### Open/Close the Power Liftgate

- ▶ Press and hold the  **Power Liftgate** button on the Remote Keyless Entry transmitter until the liftgate starts moving.
- ▶ Press the top of the  **Power Liftgate** switch on the center console.
- ▶ Press the touchpad (A) in the liftgate handle to open.
- ▶ Press the touchpad (B) next to the liftgate latch to close.

See *Keys, Doors and Windows* in your Owner Manual.



## Wind Noise


If a rear window is open, there may be a buffeting wind noise inside the vehicle. Opening a front window slightly when a rear window is open will prevent this noise from occurring.

*See Keys, Doors and Windows in your Owner Manual.*

## Towing

The Enclave base towing capacity is 2,000 lbs. Vehicles equipped with the Trailer Towing Package have a towing capacity of 4,500 lbs.

Use the Tow/Haul mode  when pulling a heavy trailer to reduce the frequency of transmission shifts and improve the control of vehicle speed.

- ▶ To turn the Tow/Haul mode on or off, press the  **Tow/Haul** button on the center console.


*See Driving and Operating in your Owner Manual.*

## Battery Location

The battery is located beneath the floor behind the front passenger seat. Jump-start positive and negative posts are located under the hood on the passenger's side of the vehicle.

*See Vehicle Care in your Owner Manual.*

## Tire Pressure Monitor

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

*Refer to your Owner Manual for additional information about normal monthly tire maintenance.*

*See Vehicle Care in your Owner Manual.*

## Roadside Assistance

1-800-252-1112

TTY Users: 1-888-889-2438

As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for up to 6 years/70,000 miles, whichever occurs first, at no expense to you. This value-added service is intended to provide you with peace of mind as you drive across town or travel the open road.

Buick's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-start, flat tire and lock-out) or make arrangements to tow your vehicle to the nearest Buick dealer.

### Roadside Assistance and OnStar

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

## myBuick and OnStar® Mobile Apps



The myBuick and OnStar mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Download the mobile apps from your iPhone® or Android™ device's app store. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit **OnStar.com**.

## Buick Owner Center

The Buick Owner Center, a complimentary service for Buick owners, is a one-stop resource designed to enhance your ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at **my.buick.com**.

### We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Always read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2013 by General Motors. All rights reserved.



22867664 A