



## Getting to Know Your **2016 Envision**



[www.buick.com](http://www.buick.com)

*Review this Quick Reference Guide for an overview of some important features in your Buick Envision. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.*









 



# Instrument Panel

- Power Door Lock Buttons
- Memory Seat Buttons
- Exterior/Interior Lamp Controls
- Turn Signal Lever/IntelliBeam Button
- Driver Information Center
- Windshield Wipers Lever
- Hazard Warning Flashers Button



- Power Mirror/Window Controls
- Power Liftgate Control
- Head-Up Display Controls
- Cruise Control/Forward Collision Alert/Heated Steering Wheel/Voice Recognition Buttons
- Tilt/Telescoping Steering Wheel Lever
- Driver Information Center Controls/Audio Steering Wheel Controls
- Engine Start/Stop Button

## Symbols

- |   |                     |   |                                     |   |                            |
|---|---------------------|---|-------------------------------------|---|----------------------------|
|  | Check Engine        |  | Service Electric Parking Brake      |  | Engine Coolant Temperature |
|  | Engine Oil Pressure |  | Traction Control/StabiliTrak Active |  | BRAKE Brake System Warning |
|  | Lane Keep Assist    |  | Charging System                     |  | Electric Parking Brake     |
|  | Airbag Readiness    |  | Security                            |   |                            |
|  | Cruise Control Set  |   |                                     |   |                            |

Infotainment System Touch Screen

Infotainment System Controls

Lane Keep Assist Button

Automatic Parking Assist Button

Parking Assist Button



Driver's Heated/Cooled Seat Buttons

Electric Parking Brake Switch

Traction Control and StabiliTrak button

Climate Controls

Passenger's Heated/Cooled Seat Buttons



Adaptive Forward Lighting



Lights On Reminder



Antilock Brake System Warning



Low Tire Pressure



Door Ajar



Vehicle Ahead



StabiliTrak Off



Driver Safety Belt Reminder



Passenger Safety Belt Reminder

Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner Manual.

◆ Optional equipment

## Remote Keyless Entry Transmitter

### Unlock

Press to unlock the driver's door. Press again to unlock all doors.

### Power Liftgate

Press twice to open or close the liftgate. Press once to stop power liftgate operation.

### Lock

Press to lock all doors.

### Vehicle Locator/Panic Alarm



Press and release to locate your vehicle. The exterior lamps will flash and the horn will sound.

 
Press and hold to activate the alarm. Press it again to cancel the alarm.

**Note:** To change the remote lock, unlock, and remote start settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.



### Remote Vehicle Start

Press and release the  Lock button and then immediately press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes. Repeat these steps to run the engine for an additional 10 minutes. A remote start can be extended once.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

**Remote Start and Heated Seats:** Select the remote start heated seat option in the Vehicle Settings to have the heated seats turn on during a remote start. The heated seat button indicators do not illuminate and the temperature of the unoccupied seat may be reduced during a remote start.

*See Keys, Doors and Windows in your Owner Manual.*

## Keyless Access System

The Keyless Access System enables operation of the doors, ignition and liftgate without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or the liftgate.**

### Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.

### Keyless Locking

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

**Note:** To change the Keyless Locking and Unlocking settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.



## Pushbutton Start

### Start

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

**Note:** The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the front cupholder to enable the engine to start. Replace the transmitter battery as soon as possible.



### Stop/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine. Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

### Accessory Mode

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory mode. The amber indicator on the button will illuminate.

*See Driving and Operating in your Owner Manual.*

## Auto Engine Stop/Start

A fuel-saving stop/start system has been integrated with the 2.0L engine. While driving, when the brake pedal is applied and the vehicle is at a complete stop, the automatic engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current settings for the climate control or defog system have not been reached.
- The Auto Stop time is greater than 2 minutes.

*See Driving and Operating in your Owner Manual.*



## Front Seats

### Power Seat Adjustments



#### A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

#### B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

#### C. Lumbar Support Adjustment

Press the rear control to adjust the amount of lumbar support.

### Set Memory Seat Positions

With the ignition On or in Accessory mode:

1. Adjust the seat and power outside mirrors to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** until two beeps sound.

Repeat these steps using button **2** for a second driver.

- ▶ To store a seat position for more clearance when exiting the vehicle, repeat these steps using the **Exit** button instead of button **1** or **2**.

### Recall Memory Seat Positions

- ▶ Press and hold button **1**, **2** or **Exit** until the seat and mirrors reach the set position. The memory/exit positions can be programmed to be recalled automatically.
- ▶ To set the Auto Memory Recall or Easy Exit options, go to the Settings > Vehicle > Comfort and Convenience menu.

*See Seats and Restraints in your Owner Manual.*



## Steering Wheel Adjustment

- ▶ With the vehicle parked, push down the lever under the steering column to adjust the steering wheel. The steering wheel can then be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

*See Instruments and Controls in your Owner Manual.*

## Rear Seats

### Rear Seat Adjustment

- ▶ To slide the seat forward or rearward, lift the bar (A) under the seat cushion and slide the seat.

### Reclining the Seatback

- ▶ To recline the seat cushion, pull the lever (B) on the side of the seatback and move the seatback to the desired position. Release the lever.

### Folding the Seatback

1. Press the button on the side of the head restraint. It will fold automatically.
  2. Pull the lever (B) on the side of the seat cushion and fold the seatback forward or pull the release lever located on the side of the cargo area.
- ▶ To raise the seatback, pull the lever on the side of the seat cushion and push the seatback rearward until it locks in the upright position. Adjust the seatback.



*See Seats and Restraints in your Owner Manual.*

## Power Liftgate

### Open/Close the Power Liftgate

- ▶ Press the **Power Liftgate** button on the RKE transmitter twice.
- ▶ Press the Power Liftgate knob on the driver's door.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the button next to the liftgate pull to close the liftgate.

### Programming the Liftgate Height

1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate pull for 3 seconds. The turn signals will flash when the setting is saved.

### Hands-Free Operation

- ▶ To open or close the liftgate hands-free, kick your foot under the left side of the rear bumper. The RKE transmitter must be within 3 feet of the liftgate.



*See Keys, Doors and Windows in your Owner Manual.*

## Driver Information Center

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.



### DIC Controls

Use the controls on the right side of the steering wheel to view and move through the DIC menus.

- ▶ Press the < or > button to move between the display zones. Press the left < to go back to the previous menu.
- ▶ Press the ^ or v button to scroll through the menus.
- ▶ Press the ✓ button to open a menu or select a setting. Press and hold to reset a value.



### Menus

- **Info** – display trip odometers and fuel information
- **Audio** – browse music and change the audio source
- **Phone** – view the active call and scroll through contacts
- **Navigation** – view the active route and change prompts
- **Settings** – change display information



### Info Pages Menu

1. Use the controls to display Settings and then press ✓.
2. Scroll to Info Pages. Press the > to enter the menu.
3. Scroll through the list of items.
4. Press the ✓ button to select or deselect an item to display.

*See Instruments and Controls in your Owner Manual.*



## Head-Up Display♦

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also may be displayed. The HUD controls are located on the left side of the instrument panel.



### HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

### INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.

### + – Brightness

Lift up or press down to brighten or dim the display.

Hold down to turn off the display.

*See Instruments and Controls in your Owner Manual.*

## Audio Steering Wheel Controls



### Voice Recognition Controls (left side of steering wheel)

#### Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

#### End Call/Mute

Press to end or decline a call.

Press to mute/unmute the vehicle speakers.

### Audio Controls (right side of steering wheel)

#### Next/Previous Favorite Station

Press  or  to go to the next or previous favorite radio station or track.

#### Volume

Press up or down to adjust the volume.

*See Infotainment System in your Owner Manual.*

## IntelliLink Infotainment System

Refer to your Owner Manual for important information about using the infotainment system while driving.



### Buick IntelliLink

Buick IntelliLink uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod® and offers hands-free voice control. For assistance with the IntelliLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or go to [www.buick.com](http://www.buick.com) and click the Owners link.

See Infotainment System in your Owner Manual.


# IntelliLink Infotainment System

## Setting the Time

1. Touch **Settings** on the Home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch the arrows to adjust the hours and minutes.
5. Press the **BACK** button to exit the menu.

## Storing Favorites


Radio stations from all bands (AM, FM or SiriusXM<sup>◆</sup>), media (song, artist, etc.) phone contacts and navigation destinations<sup>◆</sup> can be stored in any order on the favorites list.

1. Display the desired radio station, media favorite, contact or destination.
2. Touch the  **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite item.

**Note:** To change the number of favorites displayed, go to **Radio** in the Vehicle Settings menu.

## Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
  2. The radio will say “Command please,” followed by a beep.
  3. After the beep, say what you want it to do using natural speech.
- **Phone (using your paired phone)** – Example command: “Call Amanda” or “Call 555-1212”
  - **Media Music Device Search (when connected to USB only)** – Example command: “Play artist [name]” or “Play song [name]”
  - **Radio** – Example command: “Tune FM 104.3” or “Tune XM Classic Vinyl”
  - **Help** – Say “Help” for voice recognition assistance

## PANDORA<sup>®</sup> Internet Radio

Listen to personalized radio stations based on favorite artists or genres. Requires an Internet-connected device with Pandora software.

1. Download the latest Pandora app to your smartphone and sign in.
2. Create a station on your smartphone to listen to a customized song list in the vehicle.
3. Connect your smartphone to the system by Bluetooth or, for Apple devices, by a USB cable.
4. Touch the **Pandora** icon on the infotainment screen to access Pandora. A slight delay may occur when loading a song or changing a station.

*See Infotainment System in your Owner Manual.*

## IntelliLink Infotainment System

### Voice Pass-Thru

Voice Pass-Thru allows access to the voice recognition commands on a compatible cell phone; i.e. Siri or Voice Command. Visit [my.buick.com/learn](http://my.buick.com/learn) for more information.

- ▶ To activate phone voice recognition, press and hold the **Push to Talk** button on the steering wheel for 2 seconds.

### Portable Audio Devices

4 USB ports and 4 accessory power outlets are located in the vehicle to connect portable audio devices. Use the USB ports to connect and charge mobile devices.

- ▶ Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to a USB port. Search for music on-screen or by voice commands.
- ▶ Press the **MEDIA** button to select a portable device as the audio source.



*See Infotainment System in your Owner Manual.*

## Bluetooth® System

*Refer to your Owner Manual for important information about using the Bluetooth system while driving.*

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit [my.buick.com/learn](http://my.buick.com/learn) for more information.

### Pair a Phone

1. To use voice recognition, press the **Push to Talk** button on the steering wheel; after the beep, say "Pair Phone"; or use the touch screen to select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. Locate your vehicle or Buick IntelliLink on the phone.
3. Confirm the codes that appear on the touch screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

*See Infotainment System in your Owner Manual.*

## OnStar® with 4G LTE and Wi-Fi®

With OnStar 4G LTE and Wi-Fi, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the **OnStar Voice Command** button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

**Note:** See [onstar.com](#) for a detailed instruction guide, vehicle availability, details, and system limitations.

*See Infotainment System in your Owner Manual.*

## Vehicle Personalization

Some vehicle features can be customized using the Settings menus and the touch screen buttons. The Settings menus may include Time and Date, Language, Radio, Vehicle, Bluetooth, Display, Rear Camera, Return to Factory Settings and others.

1. Press the **MENU** knob or touch Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press **BACK** to exit each menu.

*See Instruments and Controls in your Owner Manual.*

## Windshield Wipers

Raise or lower the lever to activate the wipers.



**HI Fast Wipes**

**LO Slow Wipes**

**INT Intermittent (Rainsense)**

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

**OFF**

**1x Single Wipe**

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

**Rear Wiper and Washer**

Turn the end of the lever to activate the rear wiper.

**REAR OFF-INT-ON**

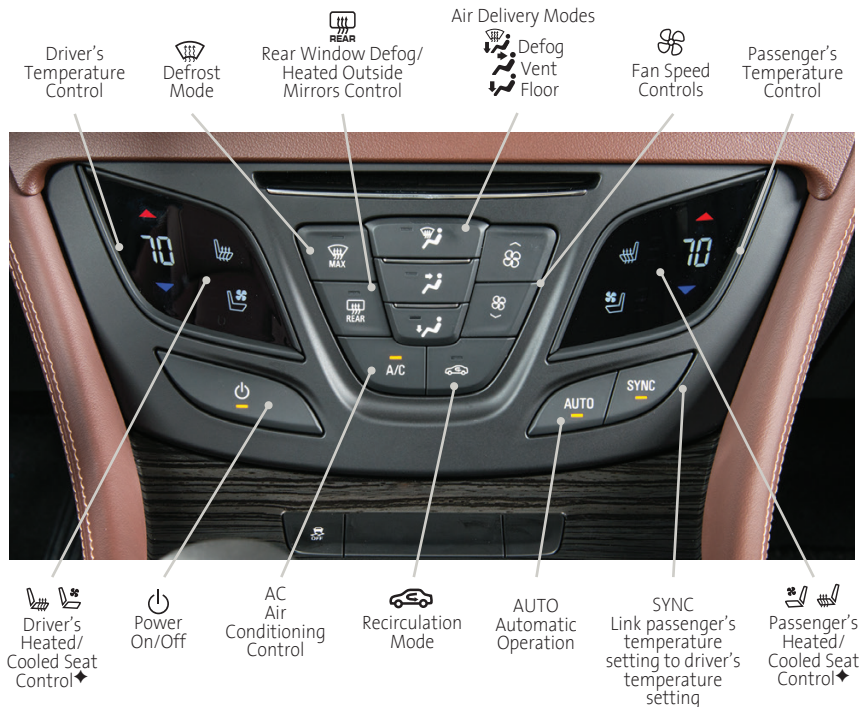
 **Rear Washer Fluid**

Push the lever away from you to spray washer fluid on the rear window.

*See Instruments and Controls in your Owner Manual.*



## Automatic Climate Controls



### Automatic Operation

- ▶ Press AUTO.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If the fan speed or air delivery mode is manually adjusted, automatic operation is canceled.

### Rear Climate Controls

The rear climate control settings can be adjusted using the rear climate control buttons on the rear of the center console or the touch screen. The front climate controls must be on to use the rear controls.

**See Climate Controls in your Owner Manual.**

## Lighting

### Exterior Lamps

Rotate the knob to activate the exterior lamps.



#### Off/On

#### AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 Parking Lamps

 Headlamps

 Fog Lamps

Press to turn the fog lamps on or off.

### IntelliBeam System\*

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ Press the  button on the turn signal lever with the lamp control in the AUTO or  Headlamps position to turn the automatic high-beam system on or off.

**Note:** IntelliBeam activates the high-beam headlamps only when driving over 25 mph. The system is turned off if the high/low-beam changer or the flash-to-pass feature is used. Press the lever button again to turn on the system.

### Adaptive Forward Lighting\*

The Adaptive Forward Lighting system pivots the headlamps left or right in the direction of travel.

**Note:** The system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

### Instrument Panel Lighting




#### Instrument Panel Brightness

Rotate and hold the thumbwheel to adjust the instrument panel lighting.

*See Lighting in your Owner Manual.*

## Cruise Control

### Setting Cruise Control

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.

### Adjusting Cruise Control

#### RES+ Resume/Accelerate

Press up to resume a set speed. When the system is active, press up to increase speed.

#### SET- Set/Coast

When the system is active, press down to decrease speed.

#### Following Gap

#### (Adaptive Cruise Control\*)

Press to select a following gap setting of Far, Medium, or Near.

#### Cancel

Press to cancel the cruise control without erasing the set speed from memory. Pressing the brake pedal will also cancel the cruise control.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

### Adaptive Cruise Control\*

The system maintains the cruise control set speed and a following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking.

#### Following Gap

Press to select a following gap setting of Far, Medium, or Near. This is also the Forward Collision Alert setting.

*See Driving and Operating in your Owner Manual.*



## Traction Control and StabiliTrak Systems

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak Off** button at the front of the center console to turn traction control on or off.

*See Driving and Operating in your Owner Manual.*

## Automatic Transmission

### Driver Shift Control

Driver Shift Control is a manual mode that allows the driver to shift gears manually. This feature can be used to limit the top gear and vehicle speed or to downshift when driving on a downhill grade to provide engine braking.

1. Move the shift lever left to the L (Low) position.
2. Press the + (plus) or - (minus) button on the shift lever to upshift or downshift.

The current gear will be displayed on the Driver Information Center.

If vehicle speed is too high or too low for the requested gear, the shift will not occur.



*See Driving and Operating in your Owner Manual.*

## Electric Parking Brake

- ▶ To apply the parking brake, pull the **(P) Parking Brake** switch.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.

**Note:** The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



*See Driving and Operating in your Owner Manual.*

## Tire Pressure Monitor

The **(T) Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

*See Vehicle Care in your Owner Manual.*


## Driving Assistance Systems

### Safety Alert Seat

The driver's seat pulses — left side, right side or simultaneously — to alert the driver of potential hazards.



- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection > Alert Type.

### Lane Change Alert with Side Blind Zone Alert

While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection > Lane Change Alert.



### Lane Keep Assist with Lane Departure Warning


The  **Lane Keep Assist** indicator illuminates in green on the instrument cluster when a lane marking is detected. If your vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and provide a Lane Departure Warning alert by flashing an amber  and pulsing the Safety Alert Seat.

- ▶ To turn the system on or off, press the  **Lane Keep Assist** button on the center of the instrument panel.



### Forward Collision Alert

The  **Vehicle Ahead** indicator illuminates in green on the instrument cluster when a vehicle is detected and illuminates in amber when following a vehicle ahead too closely. If your vehicle approaches another vehicle too rapidly, the  flashes, a visual alert flashes on the windshield and the Safety Alert Seat pulses.

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near. This is also the Adaptive Cruise Control Following Gap setting.



*See Driving and Operating in your Owner Manual.*



## Driving Assistance Systems

### Forward Automatic Braking<sup>◆</sup>

The brakes may be applied in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead.

- ▶ To set the Forward Automatic Braking and Forward Collision Alert systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection > Auto Collision Prep.

*See Driving and Operating in your Owner Manual.*

## Parking Assistance Systems

### Rear Vision Camera/Surround Vision<sup>◆</sup>

When the vehicle is in Reverse, the Rear Vision Camera displays a view of the area behind the vehicle on the touch screen. Vehicle speed must be below 5 mph.

The Surround Vision system displays front and rear camera views along with a bird's-eye view of the area surrounding the vehicle on the touch screen when the vehicle is in Reverse or Drive below 5 mph.

### Front and Rear Park Assist/Rear Cross Traffic Alert

During low-speed parking maneuvers, the Front and Rear Park Assist system provides "distance to closest object" information on the Driver Information Center, sounds a beep, and pulses the Safety Alert Seat. When an object is very close, 5 beeps sound and the Safety Alert Seat pulses 5 times.

When the vehicle is in Reverse, the Rear Cross Traffic Alert system warns of traffic coming in either direction by displaying a visual alert on the touch screen and pulsing the left or right side of the Safety Alert Seat or sounding 3 beeps.

- ▶ To turn the Front and Rear Park Assist and Rear Cross Traffic Alert systems on or off, press the **P** **Park Assist** button on the center of the instrument panel.

### Automatic Parking Assist<sup>◆</sup>

Automatic Parking Assist steers the vehicle to help park in parallel and perpendicular spaces. The system is available when vehicle speed is below 18 mph.

- ▶ Press the **AP** **Automatic Parking Assist** button on the center of the instrument panel. A beep sounds and a parking assist display is shown on the Driver Information Center (DIC). The system will begin searching for a large enough parking space.
- ▶ Once a space is found, shift the vehicle into Reverse or Drive as directed on the DIC and apply the accelerator or brake as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

*See Driving and Operating in your Owner Manual.*



## Roadside Assistance

1-800-252-1112

TTY Users: 1-888-889-2438

As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for up to 6 years/70,000 miles, whichever occurs first, at no expense to you. Buick's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Buick dealer for any repairs.

### Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

## myBuick and OnStar® Mobile Apps



The myBuick mobile app connects owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance.

Download the OnStar RemoteLink mobile app and enjoy select features for 5 years from date of vehicle delivery. With a compatible mobile device, owners can access many services, including remotely starting/stopping the vehicle, locking/unlocking the doors, and locating the vehicle on a map (on properly equipped vehicles). To learn more about OnStar services, press the blue OnStar button, call 1-888-466-7827, visit [onstar.com](http://onstar.com) or refer to your Owner Manual.



Download the mobile apps from your compatible mobile device's app store.

## Buick Owner Center

Get to know your vehicle inside and out with the Buick Owner Center. Check out personalized information, including an online Owner Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at [my.buick.com](http://my.buick.com).

**We recommend always using ACDelco or genuine GM service parts.**

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2016 General Motors. All rights reserved.



22949624 A