



Getting to Know Your **2016 Regal**



www.buick.com

Review this Quick Reference Guide for an overview of some important features in your Buick Regal. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.

Instrument Panel


Power Mirror Controls/
Power Locks Button

Exterior Lamps Control/
Instrument Panel Illumination Control

Turn Signal Lever

Driver Information Center

Windshield Wipers Lever

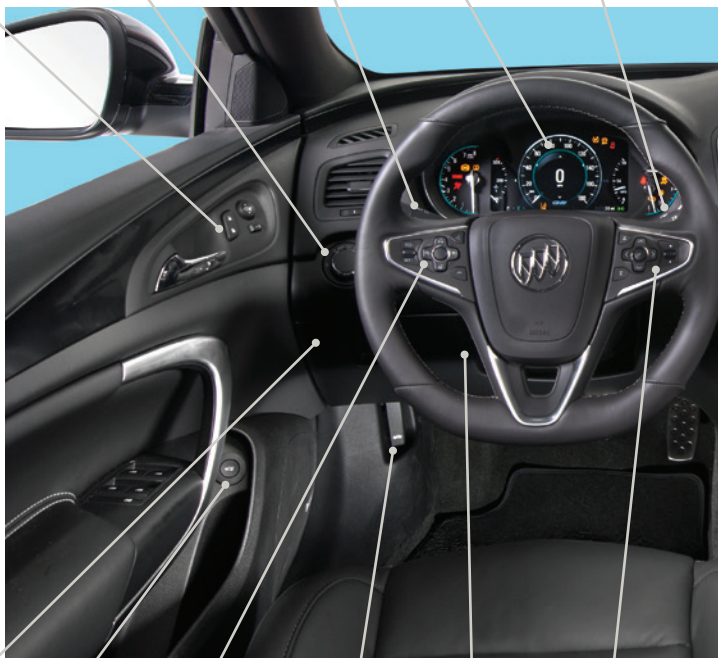

Storage/
Fuse Panel
Access

Trunk
Release

Adaptive Cruise
Control/Forward
Collision Alert/Heated
Steering Wheel/Voice
Recognition Buttons

Hood
Release
Lever

Tilt/Telescopic
Steering
Wheel Lever

Audio Steering
Wheel
Controls/Driver
Information
Center Controls

Symbols



Oil Pressure



Airbag Readiness



StabiliTrak/Traction
Control Warning



Security



Charging System



Door Ajar



Safety Belt Reminder



BRAKE Brake System Warning



Electric Parking Brake Service



Lights On



Low Tire Pressure






Antilock Brake System Warning

GS Button ◆
 Traction Control/StabiliTrak Button
 Hazard Warning Flashers Button
 Lane Departure Warning Button ◆
 Rear Parking Assist Button ◆
 Sport Button ◆



Climate Controls/Driver's Heated Seat Control ◆
 Climate Controls
 Electric Parking Brake
 Accessory Power Outlet (in storage compartment)
 Climate Controls/Passenger's Heated Seat Control ◆
 Infotainment System ◆

-  Check Engine
-  Traction Control Off
-  StabiliTrak/Traction Control Off

-  Fog Lamps
-  Cruise Control
-  Lane Departure Warning

Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner Manual.

Remote Keyless Entry Transmitter (Key Fob)

Unlock

Press to unlock the driver's door.
Press again to unlock all doors.

Lock

Press to lock all doors. The driver's door will not lock when open if the Unlocked Door Anti-Lockout feature is turned on.

Vehicle Locator/ Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.



Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.


HOLD Trunk

Press and hold to unlock the trunk.



Remote Vehicle Start[†]

Press and release the  **Lock** button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn the ignition to the ON position or press the **ENGINE START/STOP** button[†].




- During a remote start, the engine will run for 10 minutes.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

Note: To change the remote lock, unlock, and remote start settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

If the remote start heated seat option is selected, the heated seat button indicators will not illuminate and the temperature of the unoccupied heated seat may be reduced during the remote start. The heated seat turns off when the ignition is turned on.

See Keys, Doors and Windows in your Owner Manual.

Power Door Locks/Door Opening

- ▶ Press the power door  **Unlock**/ **Lock** button on the front doors to unlock or lock all doors.
- ▶ To open a locked door from the inside, pull the inside door handle to unlock the door and then pull the handle again to open the door.
- ▶ To prevent a rear door from opening from the inside, activate the  **Rear Door Security Lock**. See your Owner Manual for more information.

See Keys, Doors and Windows in your Owner Manual.

Seats

Power Seat Adjustment



A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Press the control pad to adjust the lumbar support.

D. Memory Seat Buttons[◆]

With the driver's seat in the desired position, press and hold the **MEM** button and button **1** or **2** to set the memory position. Press and hold button **1** or **2** to recall the stored position.

Head Restraint Adjustment



- ▶ Press the release button on the left side of the head restraint to raise or lower the head restraint.

Folding Rear Seats



1. Make sure the safety belt is in the retainer clip (A).
2. Pull the lever (B) on top of the seatback. When the red marking is visible, the seatback is unlatched.
3. Fold down the seatback.

See Seats and Restraints in your Owner Manual.

Lighting

Exterior Lights



 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps***

Press to turn the fog lamps on or off.

Instrument Panel Lighting




Instrument Brightness Control

Rotate and hold the thumbwheel to adjust the instrument panel lighting.

See Lighting in your Owner Manual.

Windshield Wipers and Washer

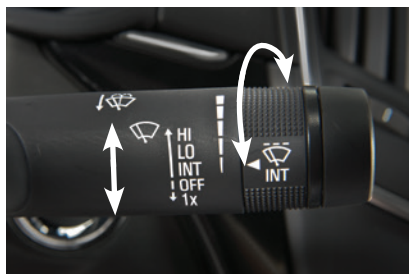

HI Fast Wipes

LO Slow Wipes

 **INT Intermittent**

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Mist


Single wipe.

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

See Instruments and Controls in your Owner Manual.

Climate Controls

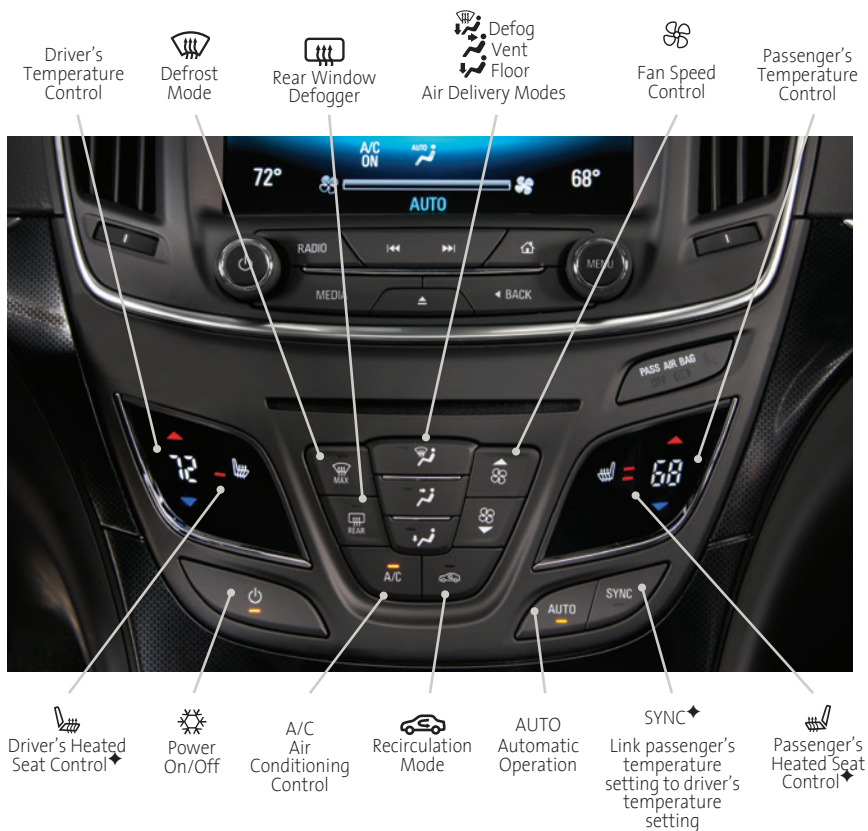

Automatic Operation

1. Press **AUTO**.
2. Set the temperature for the driver and front passenger. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature.

If the air delivery mode or fan speed is manually adjusted, automatic operation is turned off.

Note: When the recirculation mode is used without air conditioning, the air humidity increases and the windows may fog.

See *Climate Controls* in your Owner Manual.

Infotainment System

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

The infotainment system controls include the audio system buttons, touch screen, steering wheel controls and voice recognition.



See your Infotainment System Owner Manual.

Infotainment System

Setting the Time

1. Touch **Settings** on the home page.
2. Touch **Time** and **Date**.
3. Touch **Set Time**.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch **◀BACK** to exit the menu.

Storing Favorites

Up to 60 radio stations from all bands (AM, FM or XM[◆]), media (song, artist, album, etc.), phone contacts and navigation destinations[◆] can be stored in any order.

1. Display the desired radio station, media favorite, contact or destination.
2. Touch the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite item.

Note: To change the number of favorites displayed, go to Radio in the Vehicle Settings menu.



SiriusXM™ Satellite Radio[◆] (Subscription required)

SiriusXM provides access to over 180 channels of commercial-free music, sports, talk, entertainment, comedy and weather using the radio controls or voice commands.

- XM Tune Select finds your favorite artists or songs on all XM stations and alerts you.
- XM Travel Link includes fuel locations and prices, weather, and movies with theater locations. Additional subscription fee required.

Portable Audio Devices – MEDIA

Two USB ports and an auxiliary input jack are located in the center console.

- ▶ An iPod[®], iPhone[®], MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Search for music on-screen or by voice commands.
- ▶ Press the **MEDIA** button to select a portable device as the audio source.

Note: Connect an iPod/iPhone USB cord after starting the vehicle for optimum performance.




See your Infotainment System Owner Manual.

IntelliLink System

IntelliLink uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. IntelliLink enables streaming audio through a smartphone and hands-free voice control. For assistance with the IntelliLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or go to **www.buick.com** and click the Owners link.

Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.


1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say “Command please,” followed by a beep.
3. After the beep, say what you want it to do.
 - Example Phone command (using your paired phone): “Call Amanda” or “Dial 555-1212”
 - Example Media Music Device Search command (when connected to USB only): “Play artist [name]” or “Play song [name]”
 - Example Radio command: “Tune FM 104.3” or “Tune XM Classic Vinyl”
 - Help: Say “help” for voice recognition assistance


PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres.

- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your smartphone to listen to a customized song list in the vehicle.
- ▶ Connect your smartphone to the system by Bluetooth or, for Apple devices, by a USB cable.
- ▶ Touch the **Pandora** icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

Apple CarPlay™ and Android Auto™*

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play store.
2. Connect your Apple iPhone or Android phone by plugging the compatible phone USB cable into a USB data port. Use your device’s factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-SUPPORT (1-855-478-7767) or visit **my.buick.com/learn**.

See your Infotainment System Owner Manual.

Audio Steering Wheel Controls




+ - Volume

Press up or down to adjust the volume.

Next/Previous

Press  or  to go to the next or previous radio station or track.

Push to Talk

Press to answer an incoming call or to interact with the audio, Bluetooth, navigation  or OnStar[®] system.

End Call/Mute

Press to end or reject a call.

Press to mute the vehicle speakers.


See your Infotainment System Owner Manual.



Bluetooth[®] System

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit my.buick.com/learn.

Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair Phone," or Use the **MENU** knob or the touch screen to select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. Locate your vehicle name or IntelliLink on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If your phone prompts you to accept the connection or phone book download, select Always Accept and Allow.



Streaming Audio

With a paired device connected via Bluetooth, press the **MEDIA** button and select Bluetooth Audio to stream audio from the device. Control audio operation using the device controls.

See your Infotainment System Owner Manual.

OnStar® with 4G LTE♦

With OnStar 4G LTE and Wi-Fi®, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the touch screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability and system limitations.

See your Infotainment System Owner Manual.

Navigation System♦

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

- ▶ Touch the **Navigation** icon on the home page to access the navigation functions.

Entering a Destination

Destinations can be entered by Voice Recognition, Address, Recent Destination, Contacts and Places of Interest (POI).

To enter a destination using the single line destination feature:

1. Touch **Navigation** on the home page.
2. Touch **Destination**.
3. To enter a specific address, touch **Address** and type the address, intersection or road.
4. Touch **Go**.
5. Select the desired name from the generated list.
6. Touch **Go**.



To enter a destination using voice recognition:

1. Press the **Push to Talk** button.
2. Say "Destination" to enter specific destination information.
3. Say the address or other destination information.

See your Infotainment System Owner Manual.

Driver Information Center

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.



Menu Items

Use the controls on the right side of the steering wheel to view the Info (includes the trip odometers and fuel information), Performance[◆], Audio, Phone, Navigation, and Settings menus.

- ▶ Press the < or > button to move between the display zones.
- ▶ Press the ^ or v button to move through the displayed menu or submenu.
- ▶ Press the ✓ button to open a menu or select/deselect a setting.

Reset an Item

1. Use the controls to display the item.
2. Use the controls to display the Reset option.
3. Press the ✓ button to reset or clear the item.

Reconfigurable Instrument Cluster

1. Use the controls to display the Settings menu.
2. Select **Display Theme**.
3. Select the desired cluster theme.

See Instruments and Controls in your Owner Manual.

Vehicle Personalization

Some vehicle features can be customized using the audio controls and touch screen menus. The Vehicle Settings menus may include Climate and Air Quality, Collision/Detection Systems, Comfort and Convenience, Lighting, Power Door Locks, or Remote Lock/Unlock/Start.



Changing Vehicle Settings

Use the **MENU** knob or the touch screen to:

1. Select **Settings** on the home page.
2. Select **Vehicle**.
3. Select the desired menu item.
4. Select the desired feature and setting. Settings are saved automatically.
5. Touch **◀BACK** to exit each menu.

See Instruments and Controls in your Owner Manual.

Selective Ride Control

Selective Ride Control adapts to your driving style and preference within one of three driving modes. It automatically adjusts suspension, steering and automatic transmission settings in real time. System controls are located on the top center of the instrument panel.



STANDARD (Default)

Use for normal city and highway driving; is active each time the vehicle is started.

SPORT

Press the **SPORT** button (A) when road conditions or personal preference demand more responsive, controlled handling.

GS






Press the **GS** button (B) for the highest level of responsiveness and controlled handling. The instrument panel backlighting color changes from Ice Blue to White.

See Driving and Operating in your Owner Manual.

Cruise Control



Setting Cruise Control

1. Press the  On/Off button (or  button if equipped with Adaptive Cruise Control ). The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the switch down to the **SET-** position to set the speed. The  symbol will illuminate in green on the instrument cluster.

Adjusting Cruise Control

RES+ Resume/Accelerate

Press up to resume a set speed. When the system is active, press up to increase speed.

SET- Set/Coast

When the system is active, press down to decrease speed.

Follow Distance Gap (Adaptive Cruise Control only)

Press to select a setting of Far, Medium, or Near.

Cancel

Press to cancel the cruise control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the cruise control.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

See Driving and Operating in your Owner Manual.

Sunroof



Express Open/ Close

Fully press the rear of the switch to express open the sunroof. Gently press and hold the switch to partially open the sunroof.

Fully press the front of the switch to express close the sunroof. Gently press and hold the switch to partially close the sunroof.

Tilt/ Close

Press the rear of the switch to tilt the sunroof.

Press the front of the switch to close the sunroof.

See Keys, Doors and Windows in your Owner Manual.

Automatic Transmission

Driver Shift Control

Driver Shift Control allows the driver to shift gears manually. This feature can be used to drive the vehicle in a sportier manner or to downshift when driving on a downhill grade to provide engine braking.



- ▶ Move the shift lever to the left of the Drive (D) position. Tap the shift lever forward (+) to upshift or rearward to downshift (-). The currently selected gear will be displayed on the instrument cluster.

If vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will automatically downshift.

See Driving and Operating in your Owner Manual.

StabiliTrak®/Traction Control Systems

The traction control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.



Turning Off Traction Control



Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **StabiliTrak/Traction Control** button on the top center of the instrument panel to turn the system on/off. The  **Traction Control Off** light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner Manual.

Electric Parking Brake





- ▶ To apply the parking brake, pull up the  **Parking Brake** switch by the shift lever.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal and press down the  **Parking Brake** switch.

See Driving and Operating in your Owner Manual.

Driver Assistance Systems

The driver assistance systems use advanced technologies to help avoid collisions by providing visual and audible alerts under some imminent collision conditions.

Forward Collision Alert ♦ – When approaching a vehicle directly ahead too quickly, the system flashes a visual alert on the windshield and sounds an audible tone.

- ▶ To set the alert timing to Far, Medium, or Near, press the  **Collision Alert** button or the  **Follow Distance Gap** button ♦ on the left side of the steering wheel.



Lane Departure Warning ♦ – When crossing a detected lane marking without using a turn signal, the system flashes a visual alert and sounds an audible tone. The system operates at speeds of 35 mph or greater.


- ▶ To turn the system on or off, press the  **Lane Departure Warning** button on the top center of the instrument panel.

Rear Parking Assist ♦ – During low-speed parking maneuvers, the Rear Parking Assist system displays a caution symbol on the Rear Vision Camera when an object is detected. One beep sounds when an object is first detected and five beeps sound when an object is very close.

- ▶ To turn the system on or off, press the  **Parking Assist** button on the top center of the instrument panel.

Rear Cross Traffic Alert ♦ – During low-speed maneuvers when backing up, the system warns of traffic coming from the left or right by displaying a visual alert on the Rear Vision Camera and sounding an audible tone.

- ▶ To turn the alerts on or off, go to Collision/Detection Systems > Rear Cross Traffic Alert in the Vehicle Settings menu.

Side Blind Zone Alert/Lane Change Alert ♦ – While driving, the Side Blind Zone Alert/Lane Change Alert displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected.



- ▶ To turn the system on or off, go to Collision/Detection Systems > Lane Change Alert in the Vehicle Settings menu.

See Driving and Operating in your Owner Manual.

eAssist Overview (if equipped on fleet/commercial vehicles)

A compact electric assist system called eAssist has been integrated with the highly efficient 2.4-liter four-cylinder engine and six-speed automatic transmission to provide an electric “boost” to help conserve fuel. eAssist includes a small, but powerful, electric motor rated at 15 kilowatts. It replaces the typical alternator found on most engines. eAssist also uses a small, advanced 115-volt lithium-ion battery located in the trunk.

eAssist Features

Auto Start/Stop

While driving, when the brake is applied and the vehicle comes to a complete stop, the automatic engine start/stop system may turn off the engine, referred to as an Auto Stop. In Auto Stop mode, the tachometer gauge will read AUTO STOP. The audio system, climate controls and other accessories will be powered by the high-voltage battery. The engine will restart immediately when the brake pedal is released or the accelerator pedal is applied.

After parking the vehicle and turning off the engine, the tachometer gauge will read OFF. There are several conditions that may cause the engine to remain running or restart when the vehicle is stopped.

- The engine, transmission or high-voltage battery is not at the required operating temperature.
- The outside temperature is less than -4°F (-20°C).
- The shift lever is in any gear other than Drive (D).
- The high-voltage battery state of charge is low. It will automatically recharge as the vehicle is driven.
- The climate control system requires the engine to run based on the climate control or defog setting. Using the eco Air Conditioning mode will result in more frequent and longer Auto Stops than the Comfort Air Conditioning mode.
- The Auto Stop time is greater than two minutes.

See Driving and Operating in your Owner Manual.

Power Flow Display

The Power Flow display, located on the infotainment system touch screen, indicates the current eAssist operating mode, energy flow direction and high voltage battery charge level. The operating modes include Engine Idle, Auto Stop, Engine Power, Hybrid Power, and Regen Recovery.

See Instruments and Controls in your Owner Manual.

eAssist Features

Driver Efficiency Gauge

The driver efficiency gauge, located on the instrument cluster, assists you in driving efficiently. To maximize efficiency, attempt to keep the pointer in the solid green zone in the middle of the gauge. The gauge moves down when braking and up when accelerating or driving at high speeds. When driving aggressively, it is less efficient and the gauge will move farther away from center. The eAssist system's ability to capture energy while the vehicle is slowing down makes decelerating important for vehicle efficiency.

See Instruments and Controls in your Owner Manual.

Climate Control Settings

Press the **A/C** button twice to select the eco Air Conditioning setting (green A/C indicator) for maximum efficiency. This setting will maximize the frequency and duration of Auto Stops while still providing cabin comfort when the vehicle is in an Auto Stop. To further maximize efficiency, operate the climate controls in the Automatic mode at the highest comfortable temperature setting or turn off the air conditioning system when climate conditions allow.

Select the Comfort Air Conditioning setting (amber A/C indicator) for maximum cabin comfort. Auto Stops will be reduced in both frequency and duration.

See Climate Controls in your Owner Manual.

Regenerative Braking

When braking or coasting, the electric motor acts like a generator to charge the high-voltage battery. This "regenerative braking" process captures kinetic energy that would otherwise be lost and stores it in the high-voltage battery. This electrical energy can then be reused.

Note: *Capturing kinetic energy causes transmission shifts that have more feel when braking or coasting.*

See In Brief in your Owner Manual.

Next Generation Transmission

The eAssist system employs a next generation six-speed transmission with sophisticated algorithms that continuously store information about your driving style, such as acceleration and braking. Over the first 250–400 miles, some transmission shifts may be more noticeable. As the vehicle is driven in a variety of city and highway driving conditions, eAssist will use its on-board processing power to quickly "learn" your driving habits in order to deliver a seamless driving experience.

See Driving and Operating in your Owner Manual.

Hill Start Assist

After stopping on an incline, the Hill Start Assist feature momentarily holds the vehicle when the brake pedal is released. The driver-applied brake pressure is used during the stop to keep the vehicle from rolling during the period between when the brake pedal is released and the accelerator pedal is applied.

See Driving and Operating in your Owner Manual.

Roadside Assistance

1-800-252-1112

TTY Users: 1-888-889-2438

As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for 6 years/70,000 miles, whichever occurs first, at no expense to you. Buick's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-start, flat tire and lock-out) or make arrangements to tow your vehicle to the nearest Buick dealer.

Roadside Assistance and OnStar

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

myBuick and OnStar® Mobile Apps



The myBuick and OnStar mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app.

Download the mobile apps from your compatible device's app store. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit **onstar.com**.

Buick Owner Center

The Buick Owner Center, a complimentary service for Buick owners, is a one-stop resource designed to enhance your ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at **my.buick.com**.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2015 General Motors. All rights reserved.



23179976 A