



## Getting to Know Your **2017 Enclave**



[www.buick.com](http://www.buick.com)

*Review this Quick Reference Guide for an overview of some important features in your Buick Enclave. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.*

## Instrument Panel

Cruise Control Buttons/  
Heated Steering  
Wheel Button

Turn Signal Lever/  
Windshield Wipers  
Lever

Driver Information  
Center

Audio Steering  
Wheel Controls



Exterior Lamps  
Control

Ambient Light  
Control

Instrument Panel  
Illumination Control/  
Dome Lamp Off  
Button

Tilt/Telescope  
Steering Wheel Lever

### Symbols



Low Fuel



Traction Control Off



Engine Coolant  
Temperature

**BRAKE** Brake System



Cruise Control Set



Low Tire Pressure



StabiliTrak Active



StabiliTrak Off



Security




Check Engine

Driver Information  
Center Buttons

Audio System/  
Navigation  
System◆

Hazard Warning  
Flashers Button

Lane Departure  
Warning Button◆/  
Forward Collision  
Alert Button◆

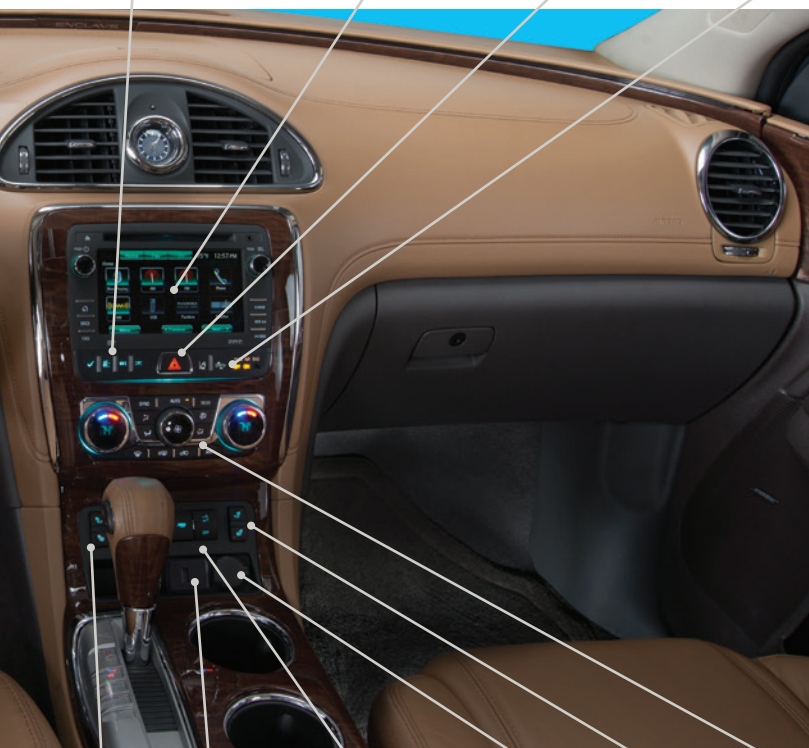

Driver's Heated/  
Cooled Seat  
Buttons◆




USB  
Port




Rear Wiper Switch/  
Traction Control Off  
Button/Tow/  
Haul Mode Button◆/  
Power Liftgate Switch◆

Accessory  
Power  
Outlet

Passenger's  
Heated/Cooled  
Seat Buttons◆

Climate  
Controls

-  Oil Pressure
-  Charging System
-  Safety Belt Reminder

-  Airbag Readiness
-  Antilock Brake System
-  Side Blind Zone Alert


*Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.*

**See In Brief in your Owner Manual.**

◆ *Optional equipment*

## Front Seats

### Power Seats

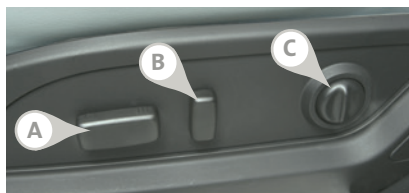

#### A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to raise, lower or tilt the seat.


#### B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

#### C. Lumbar Adjustment<sup>◆</sup>

Press the switch to adjust the amount of lumbar support.

### Manual Lumbar

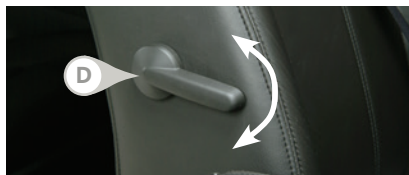

#### D. Lumbar Adjustment

Pull up/push down the lever on the inboard side of the seatback to adjust the amount of lumbar support.

### Head Restraints



The driver and front passenger head restraints are adjustable.

- ▶ Press the button on the left side of the head restraint to raise or lower the head restraint, or move it rearward. Move the head restraint forward by pulling it forward.

*See Seats and Restraints in your Owner Manual.*


## 2nd-Row Seats

### Enter or Exit the 3rd-Row Seats



1. Make sure nothing is on the 2nd-row seat or the floor in front of or behind the seat.
2. Fold up the armrest(s) and make sure the safety belt is unfastened and in the stowed position.
3. Rotate the release lever (A) on the upper-outboard side of the seatback forward.
4. Push the top of the seatback forward. The seat cushion will fold and the entire seat will slide forward.
5. After entering/exiting, push the top of the seatback rearward until the seat-back and floor tracks lock.
6. Push down at the rear of the seat cushion to lock it in place.

### Slide the Seat

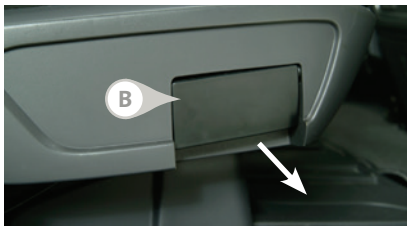

1. Make sure nothing is on the floor in front of or behind the 2nd-row seat.
2. Pull outward on the handle (B) on the outboard side of the seat cushion and slide the seat forward or rearward.
3. Release the handle.

### Fold/Recline the Seatback



1. Make sure the seat is all the way rearward (when folding the seat), the armrest(s) are upright and the safety belt is unfastened.
2. Pull forward on the strap (C) on the outboard side of the seatback.
3. Fold down or recline the seatback.

**See Seats and Restraints in your Owner Manual.**



### Exterior Lamps

Rotate the knob to operate the exterior lamps.

 **Off/On**

#### **AUTO Automatic Headlamp System**

Activates the Daytime Running Lamps (DRLs) in the daytime and the headlamps and other exterior lamps at night or when necessary.

 **Parking Lamps**

 **Headlamps**

### Ambient Lighting

#### **Ambient Off**

The ambient lighting illuminates across the instrument panel. Press the button to turn the ambient lighting on or off. Turn the instrument panel brightness knob to adjust the lighting. The headlamps must be on for the ambient lighting to operate.

**Note:** Only the instrument panel ambient lighting, not the door panel ambient lighting, can be turned off.

### Interior Lighting

#### **Instrument Panel Brightness**

Press the small knob to extend it. Turn the knob to adjust the instrument panel lighting. Turn the knob fully to turn on the dome lamps when all doors are closed.

### Dome Lamps

#### **Dome Off**

Press the button to turn off the dome lamps. The button indicator will illuminate when the dome lamps are turned off. With the button depressed, the dome lamps will not turn on when a door is open.

Press the button again to have the dome lamps turn on when a door is open.



## Audio Steering Wheel Controls

### **Volume**

Pull up the **+** or **-** button to adjust the volume.

### **SRCE Source**

Press to select an audio source.



 
### **Next/Previous**

Press the up or down arrow to go to the next or previous favorite radio station, track, or file.

### **Seek**

Press to go to the next radio station on the same band or CD track.

### **Push to Talk**

 Press to start voice recognition to interact with the audio, OnStar®, Bluetooth or navigation system.




### **End Call**

Press to end or reject an OnStar or a Bluetooth call.

*See Instruments and Controls in your Owner Manual.*

## Cruise Control

### Setting Cruise Control

1. Press the  **On/Off** button. The  **Cruise Control** symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET/-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.



### Adjusting Cruise Control

#### **RES/+ Resume/Accelerate**

Press to resume a set speed.

When the system is active, press to increase speed.

#### **SET/- Set/Coast**

When the system is active, press to decrease speed.

#### **Cancel**

Press to cancel the cruise control but retain the set speed in memory.

Pressing the brake pedal also will cancel the cruise control.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

*See Driving and Operating in your Owner Manual.*

## Infotainment System

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

The infotainment system is controlled using the faceplate buttons, touch screen, voice recognition and audio steering wheel controls.



### Setting the Time

1. Touch the Time Display on the touch screen.
2. Touch the desired **∨ down** or **∧ up** screen button to adjust the time.
3. Touch the **OK** screen button to confirm the setting.

See Infotainment System in your Owner Manual.



## Infotainment System

### Storing Favorite Stations

Radio stations from all bands (AM, FM or SiriusXM<sup>◆</sup>) can be stored, in any order, on up to six pages of favorites.

1. Tune in the desired radio station.
2. Press and hold one of the six preset screen buttons until a beep is heard.
3. Repeat the steps for each desired station.

### Portable Audio Devices



A USB port is located at the front of the center console.

An iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Compatible devices connected to the USB port can be controlled by the audio system. Not all devices may be supported. Use the audio controls and audio steering wheel controls to access various functions.


*See Infotainment System in your Owner Manual.*

## Bluetooth® System

*Refer to your Owner Manual for important safety information about using the Bluetooth system while driving.*

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Bluetooth streaming audio is available with the IntelliLink system. For more information, visit [my.buick.com/learn](http://my.buick.com/learn).

### Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair."  
To use the screen buttons, press the **Settings** screen button and then touch **Bluetooth Device List > New Device**.
2. Start the pairing process on the phone. Locate IntelliLink on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or confirm the six-digit code on the phone.
4. If your phone prompts you to accept the connection or phone book download, select Always Accept and Allow.

*See Infotainment System in your Owner Manual.*


## Buick IntelliLink

IntelliLink uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. IntelliLink enables streaming audio through a smartphone and hands-free voice control. Music also can be played from a USB flash drive.

For assistance with the IntelliLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or go to [my.buick.com/learn](http://my.buick.com/learn).

### Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the enhanced voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say “Command please,” followed by a beep.
3. After the beep, say what you want it to do.

### Phone (using your paired phone):

Example command: “Call Amanda” or “Dial 555-1212”

### Media Music Device Search (when connected to USB only):

Example command: “Play artist [name]” or “Play song [name]”

### Radio Control:

Example command: “Tune FM 104.3” or “Tune XM Classic Vinyl”

### PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres.

- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your phone to listen to a customized song list in the vehicle.
- ▶ Connect your smartphone/device to the system by Bluetooth or, for Apple devices, by a USB cable.
- ▶ Touch the **Pandora** icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

*See Infotainment System in your Owner Manual.*

## OnStar® with 4G LTE and Wi-Fi®

With OnStar 4G LTE and Wi-Fi, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle’s built-in Wi-Fi hotspot.


- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rearview mirror, wait for the prompt, and then say “Wi-Fi settings.” The information will be displayed on the screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

**Note:** See [onstar.com](http://onstar.com) for a detailed instruction guide, vehicle availability, details, and system limitations.

*See OnStar in your Owner Manual.*

## Climate Controls

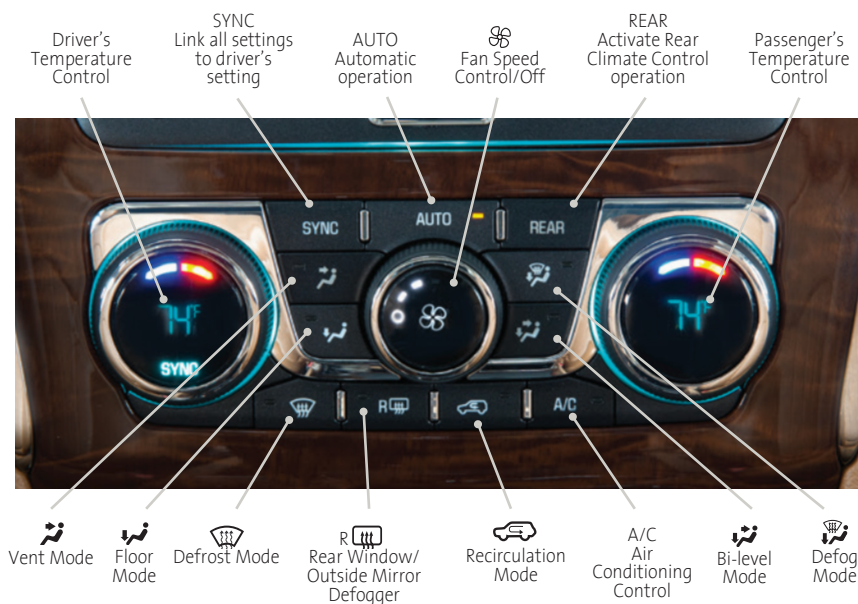


### Automatic Operation

1. Press **AUTO**.
2. Set the temperature for the driver and front passenger. If desired, press **SYNC** to link all temperature settings to the driver's setting. Allow time for the system to automatically reach the desired temperature.

If the air delivery mode or fan speed is adjusted manually, automatic operation is canceled.

### Recirculation Mode


The  Recirculation Mode can help to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle. It is not available while the Floor, Defog or Defrost Mode is selected. When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

*See Climate Controls in your Owner Manual.*

## Rear Seat Climate Controls

### Front Seat Controls



- ▶ Press the **REAR** button (A) to activate rear climate control operation. REAR will illuminate on the fan control knob and temperature control knob.
- ▶ Use the fan control knob (B) to adjust the rear climate control fan speed. Turning the fan control knob to  Off turns off the climate control system.
- ▶ Use the temperature control knob (C) to adjust the rear climate control temperature.

**Note:** Maximum system operation is achieved by turning on the rear system even if the rear seats are unoccupied.

### Rear Seat Controls

Rear seat occupants can adjust the rear settings at any time by using the rear controls, regardless of the front control panel REAR setting.




Rear climate controls with rear seat audio<sup>◆</sup> shown


**See Climate Controls in your Owner Manual.**


## Driver Assistance Systems

The driver assistance systems use advanced technologies to help avoid collisions by providing visual and audible alerts under some imminent collision conditions.


**Lane Departure Warning** † – When crossing a detected lane marking without using a turn signal, the system flashes an amber  visual alert on the instrument cluster.

- ▶ Press the  **Lane Departure Warning** button (A) on the center of the instrument panel to turn the system on or off.

**Forward Collision Alert** † – The  Vehicle Ahead indicator will illuminate in green on the instrument cluster when a vehicle is detected and will illuminate in amber when following a vehicle ahead too closely. If your vehicle approaches another vehicle much too rapidly, a red alert will flash on the windshield and rapid beeps will sound.

- ▶ Press the  **Collision Alert** button (B) on the center of the instrument panel to set the alert sensitivity to Far, Medium, Near, or Off. The setting is displayed in the Driver Information Center.



**Side Blind Zone Alert** † – While driving, the Side Blind Zone Alert displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to the Vehicle Information menu in the Driver Information Center.

**Rear Vision Camera** – Provides a view directly behind the vehicle when backing up.

- ▶ To turn the Rear Vision Camera Guidelines or Rear Park Assist Symbols on or off, go to Settings > Rear Camera.

**Rear Cross Traffic Alert** † – Warns of traffic coming in either direction behind the vehicle by displaying a visual alert on the Rear Vision Camera display.

- ▶ To turn the system on or off, go to the Vehicle Information menu in the Driver Information Center.

**Rear Parking Assist** – When the vehicle is in Reverse, detected objects are indicated by audible beeps. The interval between beeps becomes shorter as the vehicle gets closer to an object. When the distance is less than 12 in. (30 cm), the beeps are continuous. The system operates only at speeds less than 5 mph.

- ▶ To turn the system on or off, go to the Vehicle Information menu in the Driver Information Center.

*See Driving and Operating in your Owner Manual.*

## Rear Wiper/Washer



### **Rear Wiper**

Press the top of the switch to turn the rear wiper on or off.

### **Washer Fluid**



Press the bottom of the switch to spray washer fluid on the rear window.

*See Instruments and Controls in your Owner Manual.*

## Power Liftgate♦





### **Power Liftgate Switch**

- ▶ Press the  **Power Liftgate OFF** switch to turn off the power liftgate. The liftgate can only be operated manually when the switch is in the Off position.
- ▶ Press the top of the  **Power Liftgate** switch to turn on the power liftgate.

**Note:** If the power liftgate does not open or close, make sure the power liftgate switch is not in the Off position. The Driver Information Center will display POWER LIFTGATE OFF if the power liftgate is disabled.

### **Open/Close the Power Liftgate**

- ▶ Press and hold the  **Power Liftgate** button on the Remote Keyless Entry transmitter until the liftgate starts moving.
- ▶ Press the top of the  **Power Liftgate** switch on the center console.
- ▶ Press the touchpad (A) in the liftgate handle to open.
- ▶ Press the touchpad (B) next to the liftgate latch to close.



*See Keys, Doors and Windows in your Owner Manual.*




## Wind Noise


If a rear window is open, there may be a buffeting wind noise inside the vehicle. Opening a front window slightly when a rear window is open will prevent this noise from occurring.

*See Keys, Doors and Windows in your Owner Manual.*

## Towing

The Enclave base towing capacity is 2,000 lbs. Vehicles equipped with the Trailer Towing Package have a towing capacity of 4,500 lbs.

Use the Tow/Haul mode  when pulling a heavy trailer to reduce the frequency of transmission shifts and improve the control of vehicle speed.

- ▶ To turn the Tow/Haul mode on or off, press the  **Tow/Haul** button on the center console.


*See Driving and Operating in your Owner Manual.*

## Battery Location

The battery is located beneath the floor behind the front passenger seat. Jump-start positive and negative posts are located under the hood on the passenger's side of the vehicle.

*See Vehicle Care in your Owner Manual.*

## Tire Pressure Monitor

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

*Refer to your Owner Manual for additional information about normal monthly tire maintenance.*

*See Vehicle Care in your Owner Manual.*

## Roadside Assistance

**1-800-252-1112**

**TTY Users: 1-888-889-2438**

As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for up to 6 years/70,000 miles, whichever occurs first, at no expense to you. Buick's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Buick dealer for any repairs.

### **Roadside Assistance and OnStar®**

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

## myBuick Mobile App



The myBuick mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information, OnStar vehicle diagnostic information and Roadside Assistance.

The myBuick mobile app also enables users to send destinations to the navigation system (if equipped), send remote commands — including remotely starting/stopping the vehicle and locking/unlocking doors — and locate the vehicle on a map (on properly equipped vehicles).

Download the mobile app from your compatible mobile device's app store.

To learn more about OnStar services, press the blue OnStar button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner Manual.

## Buick Owner Center

Get to know your vehicle inside and out with the Buick Owner Center. Check out personalized information, including an online Owner Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at **my.buick.com**.

**We recommend always using ACDelco or genuine GM service parts.**

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2016 General Motors. All rights reserved.



23216837 B