



# GETTING TO KNOW YOUR 2018 ENCLAVE



buick.com

Review this Quick Reference Guide for an overview of some important features in your Buick Enclave. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at [my.buick.com/learn](http://my.buick.com/learn). For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.  
Please read your Owner's Manual for complete instructions.





 
 







 



# INSTRUMENT PANEL

Memory Seat Buttons ♦  
 Cruise Control/Forward Collision Alert ♦/Voice Recognition/Heated Steering Wheel ♦ Buttons  
 Turn Signal Lever/IntelliBeam Control ♦  
 Driver Information Center  
 Driver Information Center Controls/Audio Steering Wheel Controls  
 Windshield Wipers Lever



Power Mirror/Window Controls  
 Power Liftgate Control  
 Electric Parking Brake Button  
 Instrument Panel/Exterior Lamp Controls  
 Steering Wheel Adjustment Control  
 Engine Start/Stop Button

## Symbols

 Low Fuel	 StabiliTrak Off	 Lights On Reminder
 Traction Control Off	 Forward Collision Alert	 Airbag Readiness
 BRAKE Brake System	 Security	 Engine Oil Pressure
 Cruise Control	 Electric Parking Brake	 Check Engine
 StabiliTrak Active	 Service Electric Parking Brake	 Lane Keep Assist

Traction Control-StabiliTrak  
Off/AWD Control◆/  
Sport or Tow-Haul  
Mode◆ Buttons

Infotainment  
System Touch  
Screen

Infotainment  
System Controls

Hazard Warning  
Flashers/Parking  
Assist/Lane Keep  
Assist Buttons








USB Ports/  
Accessory Power  
Outlet

Electronic  
Precision Shift  
Lever

Wireless  
Charging Pad◆

Climate Controls/  
Heated/Ventilated  
Seat Controls◆

-  Vehicle Ahead
-  Pedestrian Ahead
-  Antilock Brake System
-  Low Tire Pressure
-  Door Ajar

 Charging System

 Driver Safety Belt  
Reminder

 Passenger Safety Belt  
Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner's Manual.

◆ Optional equipment

## REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



### Lock

Press to lock all doors.



### Unlock

Press to unlock the driver's door. Press again to unlock all doors and liftgate.



### Power Liftgate

Press twice to open or close the liftgate. Press once to stop power liftgate operation.



### Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold to activate the alarm. Press again to cancel the alarm.

**Note:** To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



### Remote Vehicle Start

Press and release the Lock button and then press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes. Repeat the steps for an additional 10 minutes.
- To cancel a remote start, press and hold the button until the parking lamps turn off.

### Key Release

In case of loss of vehicle power, press the button on the back of the transmitter to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

## KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and liftgate without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of a front door or the trunk.

### Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.

### Keyless Locking

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

**Note:** To change the lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



See Keys, Doors and Windows in your Owner's Manual.

## KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

### Starting the Engine

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

**Note:** If the Remote Keyless Entry transmitter battery is weak, place the transmitter at the front of the center console storage compartment to enable the engine to start. Replace the transmitter battery as soon as possible.



### Stopping the Engine/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

### Accessory Mode

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode. The amber button indicator will illuminate.

See Driving and Operating in your Owner's Manual.

## AUTO ENGINE STOP/START OPERATION

The fuel-saving engine stop/start system automatically stops and restarts the engine to help conserve fuel. The system may turn off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer gauge will read AUTO STOP. The audio system, climate controls and other accessories will continue to operate. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.



The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time is greater than 2 minutes.

See Driving and Operating in your Owner's Manual.

## ELECTRONIC PRECISION SHIFT

The automatic transmission shift lever always starts in a center position, represented by a dot on the shift pattern displayed on top of the shift lever. The selected gear position illuminates in red. After shifting, the shift lever returns to the center position.

**Park** – Press the button (A) on top of the lever to shift into Park.

To shift out of Park, with the ignition on and the brake pedal applied, press and hold the shift lock button (B) on the left side of the lever and select the desired gear.

**Reverse** – Press and hold the shift lock button on the left side of the lever and move the lever forward and then left to shift into Reverse.

**Neutral** – Move and hold the lever forward for 2 seconds to shift into Neutral.

**Note:** The transmission will not stay in Neutral for an extended period. It will automatically shift into Park.

**Drive** – Move the lever rearward to shift into Drive.

**Tap Shift Mode** – With the transmission in Drive, pull back on the lever to activate Manual Mode. Press the left steering wheel paddle to downshift and the right paddle to upshift. Pull back on the lever again to return to Drive.

To temporarily take control of gear selection while in Drive (D), press either paddle behind the steering wheel. Automatic shifting returns after no manual shifts have occurred for 7 to 10 seconds.

The current gear will be displayed on the instrument cluster. If current speed is too high or too low for the requested gear, the shift will not occur.



### Automated Car Wash Mode

To exit the vehicle with the transmission in Neutral and the engine running:

1. While pressing the brake pedal, open the driver's door and then shift to Neutral.
2. The indicator should show N. If it does not, select Neutral again.
3. Upon returning to the vehicle, shift into Park.

See Driving and Operating in your Owner's Manual.

## DRIVER MODE CONTROL

The Driver Mode Control automatically adjusts the steering, suspension, and powertrain tuning based on the selected mode.

- ▶ Press the **AWD** button♦ to send power to all four wheels. The button indicator will stay on when AWD is active.
- ▶ Press the **Sport** button (Avenir model) for enhanced steering and suspension performance.
- ▶ Press the **Tow/Haul** button when towing or hauling a heavy load.

**Note:** On Avenir models equipped with Sport mode and Tow/Haul mode, pressing the Tow/Haul button also activates Sport mode.

See Driving and Operating in your Owner's Manual.



## POWER FRONT SEATS

### Power Seat Adjustments

#### A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

#### B. Seatback Recline Adjustment


Move the vertical control to recline or raise the seatback.

#### C. Lumbar Support Adjustment

Press and hold the round control to adjust the lumbar support.



### Memory Seats

1. Adjust the seat, power outside mirrors and power steering wheel♦.
  2. Press and release the **SET** button; a beep will sound.
  3. Immediately press and hold button **1** or **2** until two beeps sound.
- ▶ To save a seat position for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button.



### Recall Memory Positions

- ▶ Press and hold button **1**, **2** or  **Exit** until the saved position is reached.

The memory/exit positions can be programmed to be recalled automatically.

- ▶ To set the Auto Memory Recall or Easy Exit options, go to Settings > Vehicle > Comfort and Convenience.

See Seats and Restraints in your Owner's Manual.

## STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever or use the power control♦ under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.



See Instruments and Controls in your Owner's Manual.

Power tilt/telescoping steering column♦ shown

## REAR SEATS

### Enter or Exit the 3rd-Row Seats

1. Remove anything on the 2nd-row seat or the floor in front of or behind the seat.
2. Pull the handle on the side of the passenger-side seatback (A) and pull the seat forward.
3. After entering/exiting, move the seatback rearward until it locks in place.

**Note:** The 2nd-row passenger-side seat can be moved for 3rd-row entry/exit with a forward facing child seat installed. Remove a rearward facing child seat before moving the 2nd-row seat.

### Recline the 2nd-Row Seatbacks

- ▶ While seated, pull the lever on the side of the seat cushion (B) and move the seatback to the desired position.

### Slide the 2nd-Row Seats

- ▶ Lift the bar under the seat cushion (C) to slide the seat forward or rearward.

### Fold the 2nd-Row Seats

 
1. Press the button on the head restraint. It will fold automatically.
2. Pull the lever on the side of the seat cushion (B) and fold the seatback forward.
3. To raise the seatback, lift it up until it locks in place.

### Fold the 3rd-Row Seats

1. Adjust the 2nd-row seat to allow the 3rd-row seat to fold fully flat.
2. Remove anything on or under the 3rd-row seat.
3. Use the door key from the Remote Keyless Entry transmitter in the mini-buckle slot to disconnect the mini-latch of the center safety belt and stow the mini-latch in the headliner.
4. Pull the release strap to release the seatback and fold the seatback forward or press the power seatback switches♦ (D) on the passenger's side of the rear cargo area.

### Rear Seat Reminder

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not actually detect objects in the rear seat; instead, under certain conditions, it detects when a rear door has been opened, indicating that there may be something in the rear seat.

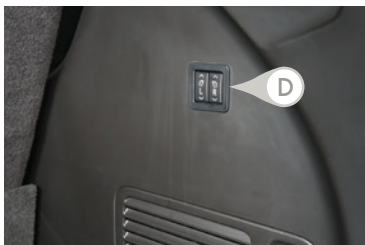


See Seats and Restraints in your Owner's Manual.



## POWER LIFTGATE

### Open/Close the Power Liftgate

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the Power Liftgate knob (A) on the driver's door.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the button next to the latch to close the liftgate.



### Programming the Liftgate Height

- ▶ Turn the Power Liftgate knob to the 3/4 mode position.
- ▶ Open the liftgate.
- ▶ Adjust the liftgate manually to the desired height.
- ▶ To save the setting, press and hold the button next to the latch until the turn signals flash and a beep sounds.

### Hands-Free Operation†

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center.

The kick should take about 1 second and come within 5 inches of the bottom of the bumper. The RKE transmitter must be within 3 feet of the liftgate.



### Projected Logo†

The vehicle logo is projected on the ground near the rear bumper, indicating the kicking motion location for hands-free operation, when an RKE transmitter is detected within 6 feet of the liftgate. The logo is shown for 1 minute, depending on operating conditions.

See Keys, Doors and Windows in your Owner's Manual.

## UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to [www.homelink.com](http://www.homelink.com) for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.



## DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

### DIC Controls

Use the controls on the right side of the steering wheel to select the Info (includes trip and fuel information), Audio, Phone, Navigation, and Options menus.

- ▶ Press the < or > button to move between the display zones. Press the < button to go back to the previous screen.
- ▶ Press the ^ or v button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.



### Changing Display Themes (Avenir model)

The DIC features 2 reconfigurable display themes: Sport and Touring.

1. Use the controls to display the Options menu. Press ✓.
2. Select Display Themes.
3. Select the desired theme.

See Instruments and Controls in your Owner's Manual.



## AUDIO STEERING WHEEL CONTROLS

### ☎ Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Voice Pass-Thru (Siri Eyes Free or Voice Command) on a paired, compatible cell phone.

### 📞 End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

### + - Volume

Press the switch up or down to adjust the volume.

### ⏮ ⏭ Next/Previous Favorite Station

Press the top or bottom button to go to the next or previous favorite radio station or track.



See your Infotainment System Manual.

## BUICK INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Applications: Touch the screen icon to access the application

Home page

SEEK: Previous radio station or track

Power/Volume

SEEK: Next radio station or track

BACK: Press to go back to previous menu

The Buick Infotainment System uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®, and offers hands-free voice control. You can use simple gestures on the touch screen, such as tap, drag, and swipe, to interact with the system.

For assistance, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit [my.buick.com/learn](http://my.buick.com/learn).

### Storing Favorites

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order.

1. Tune in the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite station.


See your Infotainment System Manual.

## BUICK INFOTAINMENT SYSTEM

Visit [my.buick.com/learn](http://my.buick.com/learn) for more information about the infotainment system.

### Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
  2. The radio will play a prompt followed by a beep.
  3. After the beep, say what you want it to do using natural speech.
- **Example Phone command (using your paired phone – “Call Amanda” or “Dial 555-1212”**
  - **Example Media Music Device Search command (when connected to USB only) – “Play artist [name]” or “Play song [name]”**
  - **Example Radio command – “Tune FM 104.3” or “Tune XM Classic Vinyl”**
  - **Help – Say “Help” for voice recognition assistance**


### Buick Shop


In-vehicle apps – connecting to music, news, weather, travel information and more – are available for download to the infotainment system through the SHOP icon on the home page.

Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.



### Apple CarPlay™ and Android Auto™

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your phone by plugging the compatible phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.

### Portable Audio Devices

An iPod®, iPhone®, MP3 Player, a USB flash drive or a portable USB hard drive can be connected to a USB data port located at the front of the center console or inside the center console storage compartment.

- ▶ Touch the  Audio screen button to select a portable device as the audio source.

The USB ports on the rear of the center console and by the 3rd-row seats are for charging only.

See your Infotainment System Manual.

## BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit [my.buick.com/learn](http://my.buick.com/learn) for more information.

### Pair a Phone

1. To use voice recognition, press the **Push to Talk** button on the steering wheel; after the beep, say "Pair Phone."  
To use the infotainment screen, select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See your Infotainment System Manual.

## ONSTAR® WITH 4G LTE AND WI-FI®

With OnStar 4G LTE and Wi-Fi, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, go to Settings > Wi-Fi; or press the **OnStar Voice Command** button on the overhead console, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the infotainment screen.


For assistance, press the blue **OnStar** button or call 1-888-4-ONSTAR (1-888-466-7827).

**Note:** See [onstar.com](http://onstar.com) for a detailed instruction guide, vehicle availability and system limitations.

See your Infotainment System Manual.

## WIRELESS CHARGING (AVENIR MODEL)

The Wireless Charging system for mobile devices is located at the front of the center console. Visit [my.buick.com/learn](http://my.buick.com/learn) to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be on, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  on the pad.
4. The charging symbol will appear on the infotainment screen when charging. If not charging, remove the device for 3 seconds and rotate it 180 degrees.



See Instruments and Controls in your Owner's Manual.

## VEHICLE PERSONALIZATION

Some vehicle features can be customized using the Settings menus and the touch screen buttons. The Settings menus may include Time and Date, Rear Seat Reminder, Valet Mode, Teen Driver, Radio, Vehicle, Bluetooth, Apple CarPlay, Android Auto, Return to Factory Settings, Wi-Fi, and others.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press **<BACK** to exit each menu.



See Instruments and Controls in your Owner's Manual.

## EXTERIOR LIGHTING

### Exterior Lamp Controls

 Off/On



### AUTO



Automatically activates the exterior lamps depending on outside lighting conditions.

 Parking Lamps

 Headlamps

### IntelliBeam System<sup>†</sup>

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.



- ▶ To turn the IntelliBeam system on or off, press the  button on the turn signal lever with the lamp control in the AUTO or  Headlamps position.

**Note:** IntelliBeam activates the high-beam headlamps only when driving over 25 mph.



See Lighting in your Owner's Manual.

## SUNROOF/SUNSHADE<sup>†</sup>

- ▶ Press and release the  **SLIDE** switch to express-open the sunroof.
- ▶ Press and release the  **Close** switch to express-close the sunroof.
- ▶ To open the sunshade, press the latch button on the handle while pushing up to unlatch it.
- ▶ To close the sunshade, pull the handle forward until it latches.

See Keys, Doors and Windows in your Owner's Manual.



## AUTOMATIC CLIMATE CONTROLS



### Automatic Operation

- ▶ Press **AUTO**.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, automatic operation for that function is turned off.

### Rear Climate Controls

The rear climate control settings can be adjusted using the rear climate control buttons on the rear of the center console or the infotainment screen. When **SYNC** is active, the rear display is not shown on the rear center console.

- ▶ To lock/unlock the rear controls from the front seat, press the **CLIMATE** button and select **Rear > Rear Control Lockout** on the infotainment screen.

### Ionizer

The ionizer, which removes contaminants such as pollen and dust to help clean the air inside the vehicle, turns on automatically with the climate control system. The ionizer status is shown on the climate control display on the infotainment screen.

- ▶ To turn on or off, go to **Settings > Vehicle > Climate and Air Quality**.

See Climate Controls in your Owner's Manual.

## WIPERS AND WASHERS

### Windshield Wipers

Raise or lower the wiper lever.

#### HI Fast Wipes

#### LO Slow Wipes

#### INT Intermittent

 
Rotate the band up for more frequent wipes or down for less frequent wipes.

#### OFF

#### 1x Single Wipe

#### Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

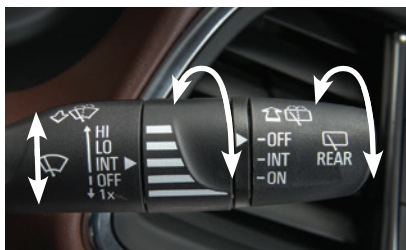

### Rear Window Wiper

Rotate the end of the wiper lever.

#### OFF

#### INT Intermittent

#### ON




#### Rear Washer Fluid

Push the lever away from you to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

## CRUISE CONTROL

### Setting Cruise Control

- ▶ Press the  **On/Off** button. The  symbol will illuminate white on the instrument cluster.
- ▶ When traveling at the desired speed, press down the **SET-** switch to set the speed. The  symbol will illuminate green on the instrument cluster.

### Adjusting Cruise Control


#### RES+ Resume/Accelerate

Press the switch up to resume a set speed. When active, press up to increase speed.

#### SET- Set/Coast

When active, press the switch down to decrease speed.





#### Cancel

Press the  button, or press the brake pedal, to cancel the cruise control without erasing the set speed from memory.

The set speed is erased when cruise control or the vehicle ignition is turned off.

### Adaptive Cruise Control+ (Avenir model)

The system maintains the set speed and a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically.

- ▶ Press the  **Following Gap** button to select a gap setting of Far, Medium or Near. This is also the Forward Collision Alert+ setting.
- ▶ Press and hold the  **Cancel** button to switch between  regular cruise control and  Adaptive Cruise Control.




## DRIVER ASSISTANCE SYSTEMS


**Safety Alert Seat**♦ – The driver's seat pulses – left side, right side, or simultaneously – to alert the driver of potential hazards.

- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

**Traction Control and StabiliTrak Systems** – The full-time traction control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn traction control on or off, press the  **Traction Control/StabiliTrak Off** button on the center of the instrument panel.

**Forward Collision Alert**♦ – The  Vehicle Ahead indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or beeps sound (if selected).


- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near. The setting is displayed on the Driver Information Center.

**Follow Distance Indicator**♦ – The follow distance is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.


**Forward Automatic Braking**♦ (Avenir model)

– The brakes may be applied automatically in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead.

 
- ▶ To set Forward Automatic Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

**Front Pedestrian Braking**♦ – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 feet and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or beeps sound (if selected). The system may prepare the brakes or automatically brake the vehicle.

- ▶ To set the system to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.



**Lane Change Alert with Side Blind Zone Alert**♦ – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

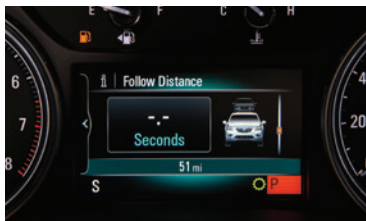
- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.



See Driving and Operating in your Owner's Manual.

## DRIVER ASSISTANCE SYSTEMS

**Lane Keep Assist with Lane Departure Warning** ♦ – The system may help avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green on the instrument cluster if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and Safety Alert Seat pulses or beeps sound (if selected) on the side of the departure direction as the lane marking is crossed. In order to use this system safely, the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the system on or off, press the  **Lane Keep Assist** button on the center of the instrument panel.

**Rear Vision Camera** – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. Vehicle speed must be below 5 mph.

- ▶ To turn the guidelines on or off, go to Settings > Rear Camera.

**Surround Vision** ♦ – The Surround Vision system displays a bird's-eye view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 5 mph.



**Front** ♦ and **Rear Parking Assist** – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or beeps sound (if selected). When an object is very close, the Safety Alert Seat pulses 5 times or beeps sound (if selected).

**Rear Cross Traffic Alert** ♦ – When the vehicle is in Reverse, the system warns of traffic coming in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn Parking Assist and Rear Cross Traffic Alert on or off, press the  **Parking Assist** button on the center of the instrument panel.

See Driving and Operating in your Owner's Manual.

## REAR CAMERA MIRROR ♦

The rear camera mirror provides a wide angle view of the area behind the vehicle.

- ▶ Pull or push the lever (A) at the bottom of the mirror to turn the video display on or off.
- ▶ To adjust the brightness of the display, press and release the button (B) on the top back of the mirror without covering the light sensor. There are 5 brightness settings.



See Keys, Doors and Windows in your Owner's Manual.

## ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the **(P)** **Parking Brake** button on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** button.

**Note:** The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



See *Driving and Operating* in your Owner's Manual.

## CARGO STORAGE

### Underfloor Rear Cargo Storage

- ▶ Lift up the rear cargo floor for additional storage space.

Remove the storage bin to access the spare tire. Refer to your Owner's Manual for instructions.

 
See *Storage* in your Owner's Manual.



## REFUELING THE VEHICLE

- ▶ To open the fuel door, press and release the center of the rear edge of the door. It will pop out slightly. Pull the door open.
- ▶ The vehicle's capless fuel system does not have a fuel cap. Fully insert the fuel pump nozzle before starting to fill the tank.

**Note:** When using a portable gas can, insert the funnel adapter, stored with the spare tire, into the capless fuel fill.

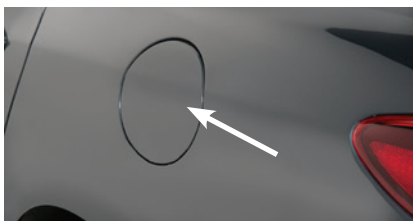

See *Driving and Operating* in your Owner's Manual.

## TIRE PRESSURE MONITOR

The **(!**) Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure.

Refer to your Owner's Manual for information about normal monthly tire maintenance.

See *Vehicle Care* in your Owner's Manual.

## ROADSIDE ASSISTANCE

1-800-252-1112

TTY Users: 1-888-889-2438

As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for up to 6 years/70,000 miles, whichever occurs first, at no expense to you. Buick's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Buick dealer for any repairs.

### Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar service plan, press the **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit [onstar.com](http://onstar.com), call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

## MYBUICK MOBILE APP



The myBuick mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myBuick mobile app also enables users to send remote commands – including remotely starting the vehicle and locking/unlocking the doors – as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

## BUICK OWNER CENTER

Get to know your vehicle inside and out with the Buick Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at [my.buick.com](http://my.buick.com).

**We recommend always using ACDelco or genuine GM service parts.**

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2017 General Motors. All rights reserved.



GENERAL MOTORS

84456135 A