



GETTING TO KNOW YOUR 2018 ENVISION



buick.com

Review this Quick Reference Guide for an overview of some important features in your Buick Envision. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.buick.com/learn. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Power Door
Lock Buttons

Memory
Seat
Buttons

Exterior/
Interior Lamp
Controls

Turn Signal
Lever

Driver
Information
Center

Windshield
Wipers Lever

Hazard
Warning
Flashers Button



Power Mirror/
Window
Controls

Power
Liftgate
Control

Head-Up
Display
Controls

Cruise Control/Forward
Collision Alert/
Heated Steering
Wheel/
Voice
Recognition Buttons

Tilt/
Telescoping
Steering
Wheel Lever

Driver Information
Center Controls/
Audio Steering
Wheel Controls

Engine
Start/Stop
Button

Symbols



Check Engine



Engine Oil Pressure



Lane Keep Assist



Airbag Readiness



Cruise Control Set



Service Electric
Parking Brake



Traction Control/
StabiliTrak Active



Charging System



Security



Engine Coolant
Temperature

BRAKE

Brake System
Warning



Electric Parking
Brake

Infotainment System Touch Screen

Infotainment System Controls

Parking Assist Button

Automatic Parking Assist Button◆

Lane Keep Assist Button◆



Driver's Heated/Ventilated◆ Seat Buttons






Electric Parking Brake Switch

Traction Control and StabiliTrak Button

Climate Controls

Passenger's Heated/Ventilated◆ Seat Buttons

-  Adaptive Forward Lighting
-  Lights On Reminder
-  Antilock Brake System Warning
-  Low Tire Pressure

-  Door Ajar
-  Vehicle Ahead
-  StabiliTrak Off
-  Driver Safety Belt Reminder
-  Passenger Safety Belt Reminder

Uplevel DIC display◆ shown

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner's Manual.

◆ Optional equipment

REMOTE KEYLESS ENTRY (RKE) TRANSMITTER

Unlock

Press to unlock the driver's door. Press again to unlock all doors.

Power Liftgate

Press twice to open or close the liftgate. Press once to stop power liftgate operation.

Lock

Press to lock all doors.

Vehicle Locator/Panic Alarm



Press and release to locate your vehicle. The exterior lamps will flash and the horn will sound.


Press and hold to activate the alarm. Press it again to cancel the alarm.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start

Press and release the  Lock button and then immediately press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes. Repeat these steps to run the engine for an additional 10 minutes. A remote start can be extended once.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

Remote Start and Heated Seats: Select the remote start heated seat option in the Vehicle Settings to have the heated seats turn on during a remote start. The heated seat button indicators do not illuminate and the temperature of the unoccupied seat may be reduced during a remote start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and liftgate without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door or the liftgate for the system to operate.**

Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.

Keyless Locking

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the keyless locking and unlocking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



KEYLESS (PUSHBUTTON) START

Start

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

Note: The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the front cupholder to enable the engine to start. Replace the transmitter battery as soon as possible.



Stop/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and moonroof♦ until any door is opened.

Accessory Mode

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION♦

A fuel-saving stop/start system has been integrated with the engine. While driving, when the brake pedal is applied and the vehicle is at a complete stop, the automatic engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current settings for the climate control or defog system have not been reached.
- The Auto Stop time is greater than 2 minutes.

See Driving and Operating in your Owner's Manual.

FRONT SEATS

Power Seat Adjustments

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press the rear control to adjust the amount of lumbar support.




Memory Seats♦

Set Memory Seat Positions

With the ignition On or in Accessory mode:

1. Adjust the seat and power outside mirrors to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** until two beeps sound.

Repeat these steps using button **2** for a second driver.

- ▶ To store a seat position for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button instead of button **1** or **2**.

Recall Memory Seat Positions

- ▶ Press and hold button **1**, **2** or  **Exit** until the seat and mirrors reach the set position.

The memory/exit positions can be programmed to be recalled automatically.

- ▶ To set the Auto Memory Recall or Easy Exit options, go to Settings > Vehicle > Comfort and Convenience.

See Seats and Restraints in your Owner's Manual.



STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the steering column to adjust the steering wheel. The steering wheel can then be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.

REAR SEATS

Rear Seat Adjustment

- ▶ To slide the seat forward or rearward, lift the bar (A) under the seat cushion and slide the seat.



Reclining the Seatback

- ▶ To recline the seatback, pull the lever (B) on the side of the seat cushion and move the seatback to the desired position. Release the lever.



Folding the Seatback

1. Press the button on the side of the head restraint. It will fold automatically.
 2. Pull the lever (B) on the side of the seat cushion and fold the seatback forward or pull the release lever located on the side of the cargo area.
- ▶ To raise the seatback, pull the lever on the side of the seat cushion and push the seatback rearward until it locks in the upright position. Adjust the seatback.

See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

Open/Close the Power Liftgate

- ▶ Press the Power Liftgate button on the Remote Keyless Entry transmitter twice.
- ▶ Press the Power Liftgate knob on the driver's door.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the button next to the liftgate pull to close the liftgate.

Hands-Free Operation

- ▶ To open or close the liftgate hands-free, kick your foot under the rear bumper in the area directly below the left edge of the license plate. To function, the Remote Keyless Entry transmitter must be within 3 feet of the liftgate.



Programming the Liftgate Height

1. Turn the Power Liftgate knob to the 3/4 position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate pull for 3 seconds. The turn signals will flash when the setting is saved.

See Keys, Doors and Windows in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

DIC Controls

Use the controls on the right side of the steering wheel to view and move through the DIC menus.

- ▶ Press the < or > button to move between the display zones. Press the left < button to go back to the previous menu.
- ▶ Press the ^ or v button to scroll through the menus.
- ▶ Press the ✓ button to open a menu or select a setting. Press and hold to reset a value.



Menus

- **Info** – display trip odometers and fuel information
- **Audio** – browse music and change the audio source
- **Phone** – view the active call and scroll through contacts
- **Navigation**♦ – view the active route and change prompts
- **Settings** – change display information

Info Pages Menu

1. Use the controls to display Settings and then press the ✓ button.
2. Scroll to Info Pages. Press the > button to enter the menu.
3. Scroll through the list of items.
4. Press the ✓ button to select or deselect an item to display.



Uplevel DIC display♦ shown



Uplevel DIC display♦ shown

See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY◆

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also may be displayed. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.

Brightness

Lift up or press down to brighten or dim the display.

Hold down to turn off the display.



See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Voice Recognition Controls (left side of steering wheel)

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.



End Call/Mute

Press to end or decline a call.

Press to mute/unmute the vehicle speakers.

Audio Controls (right side of steering wheel)

Next/Previous Favorite Station

Press  or  to go to the next or previous favorite radio station or track.

+ - Volume

Press up or down to adjust the volume.



See your Infotainment System Manual.

BUICK INFOTAINMENT SYSTEM


Refer to your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®, and offers hands-free voice control. For assistance with the infotainment system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or go to my.buick.com/learn.


BUICK INFOTAINMENT SYSTEM

Setting the Time

1. Touch Settings on the Home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch the arrows to adjust the hours and minutes.
5. Press the  **BACK** button to exit the menu.

Storing Favorites


Radio stations from all bands (AM, FM or SiriusXM[◆]), media (song, artist, etc.), phone contacts and navigation destinations[◆] can be stored in any order on the favorites list.

1. Display the desired radio station, media favorite, contact or destination.
2. Touch the  **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite item.

Note: To change the number of favorites displayed, go to Settings > Radio.


Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
 2. The radio will play a prompt followed by a beep.
 3. After the beep, say what you want it to do using natural speech.
- **Phone (using your paired phone)** - Example command: "Call Amanda" or "Call 555-1212"
 - **Media Music Device Search (when connected to USB only)** - Example command: "Play artist [name]" or "Play song [name]"
 - **Radio** - Example command: "Tune FM 104.3" or "Tune XM Classic Vinyl"
 - **Help** - Say "Help" for voice recognition assistance

Voice Pass-Thru

Voice Pass-Thru allows access to the voice recognition commands on a compatible cell phone; i.e. Siri or Voice Command.

- ▶ To activate Voice Pass-Thru, press and hold the  **Push to Talk** button on the steering wheel for 2 seconds.

See your Infotainment System Manual.

BUICK INFOTAINMENT SYSTEM


Portable Audio Devices


4 USB ports and 4 accessory power outlets are located in the vehicle to connect portable audio devices. Use the USB ports to connect and charge mobile devices.

- ▶ Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to a USB port. Search for music on-screen or by voice commands.
- ▶ Press the **MEDIA** button to select a portable device as the audio source.



Apple CarPlay™ and Android Auto™

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your Apple iPhone or Android phone by plugging the compatible phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the Home page.


For more information on using Apple CarPlay or Android Auto, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.buick.com/learn.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.buick.com/learn for more information.

Pair a Phone

1. To use voice recognition, press the  Push to Talk button on the steering wheel; after the beep, say "Pair Phone"; or use the infotainment screen to select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

ONSTAR® 4G LTE AND WI-FI®

With OnStar 4G LTE and Wi-Fi, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the **OnStar Voice Command** button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability, details, and system limitations.

See OnStar in your Owner's Manual.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the Settings menus and the infotainment screen buttons. The Settings menus may include Time and Date, Language, Radio, Vehicle, Bluetooth, Display, Rear Camera, Return to Factory Settings and others.

1. Press the **MENU** knob or touch Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press **◀BACK** to exit each menu.

See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. A Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Teen Driver.

See your Infotainment System Manual.


UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting.

Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS

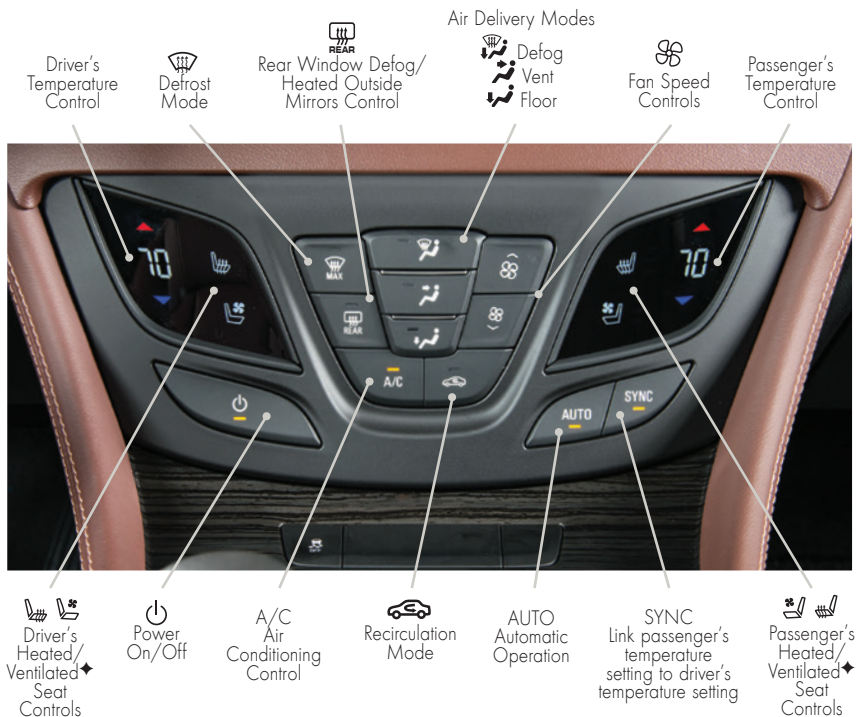

Automatic Operation

- ▶ Press AUTO.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If the functions are manually adjusted, automatic operation is canceled.

Rear Climate Controls*

The rear climate control settings can be adjusted using the rear climate control buttons on the rear of the center console or the infotainment screen. The front climate controls must be on to use the rear controls.

See Climate Controls in your Owner's Manual.

LIGHTING

Exterior Lamps

Rotate the knob to activate the exterior lamps.

Off/On

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

☾ Parking Lamps

☾ Headlamps

☾ Fog Lamps

Press to turn the fog lamps on or off.

IntelliBeam System♦

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green ☾ indicator displays on the instrument cluster when the system is on; a blue ☾ indicator displays when the high-beam headlamps are on.

- ▶ Turn the lamp control to the AUTO position to turn the automatic high-beam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

Adaptive Forward Lighting♦

The system pivots the headlamps left or right in the direction of travel.

Note: The system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

Instrument Panel Lighting

- ▶ Rotate and hold the ☾ thumbwheel to adjust the instrument panel lighting.

See Lighting in your Owner's Manual.



ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the (P) Parking Brake switch.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.

See Driving and Operating in your Owner's Manual.



AUTOMATIC TRANSMISSION

Driver Shift Control

Driver Shift Control is a manual mode that allows the driver to shift gears manually. This feature can be used to limit the top gear and vehicle speed or to downshift when driving on a downhill grade to provide engine braking.

1. Move the shift lever left to the L (Low) position.
2. Press the + (plus) or - (minus) button on the shift lever to upshift or downshift. The current gear will be displayed on the Driver Information Center.




If vehicle speed is too high or too low for the requested gear, the shift will not occur.



See Driving and Operating in your Owner's Manual.

CRUISE CONTROL

Setting Cruise Control

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the switch down to the **SET-** position to set the speed. The  symbol will illuminate in green on the instrument cluster.

Adjusting Cruise Control

RES+ Resume/Accelerate

Press up to resume a set speed. When the system is active, press up to increase speed.

SET- Set/Coast

When the system is active, press down to decrease speed.

Cancel

Press to cancel the cruise control without erasing the set speed from memory. Pressing the brake pedal will also cancel the cruise control.

The set speed is erased when cruise control or the vehicle ignition is turned off.

Adaptive Cruise Control[†]

The system maintains the cruise control set speed and the following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking.

Following Gap

Press to select a following gap setting of Far, Medium, or Near. This is also the Forward Collision Alert setting.



See Driving and Operating in your Owner's Manual.


TRACTION CONTROL AND STABILITRAK SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak Off** button at the front of the center console to turn traction control on or off.

See *Driving and Operating* in your Owner's Manual.

TIRE PRESSURE MONITOR

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

See *Vehicle Care* in your Owner's Manual.

WIPERS AND WASHERS

Windshield Wipers

Raise or lower the lever to activate the wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent/
AUTO (Rainsense)†


Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

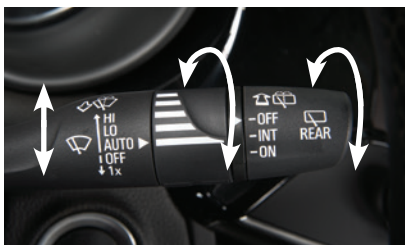

Rear Wiper and Washer

Turn the end of the lever to activate the rear wiper.

OFF

INT Intermittent

ON

Rear Washer Fluid

Push the lever away from you to spray washer fluid on the rear window.

See *Instruments and Controls* in your Owner's Manual.


DRIVER ASSISTANCE SYSTEMS

Safety Alert Seat♦

The driver's seat pulses – left side, right side or simultaneously – to alert the driver of potential hazards.

 

- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.


Lane Change Alert with Side Blind Zone Alert♦

While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.


Lane Keep Assist with Lane Departure Warning♦


The system may help avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green on the instrument cluster if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and display an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. In order to use this system safely, the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the system on or off, press the  **Lane Keep Assist** button on the center of the instrument panel.

Forward Collision Alert♦

The  Vehicle Ahead indicator illuminates in green on the instrument cluster when a vehicle is detected and illuminates in amber when following a vehicle ahead too closely. If your vehicle approaches another vehicle too rapidly, a visual alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near. This is also the Adaptive Cruise Control Following Gap setting.



DRIVER ASSISTANCE SYSTEMS

Follow Distance Indicator[◆]

The follow distance is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

Forward Automatic Braking[◆]

The brakes may be applied in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead.

- ▶ To set the Forward Automatic Braking and Forward Collision Alert systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

Rear Vision Camera/Surround Vision[◆]

When the vehicle is in Reverse, the Rear Vision Camera displays a view of the area behind the vehicle on the infotainment screen. Vehicle speed must be below 5 mph.

The Surround Vision system displays front and rear camera views along with a bird's-eye view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 5 mph.

Front[◆] and Rear Parking Assist/Rear Cross Traffic Alert[◆]

During low-speed parking maneuvers, the Front and Rear Parking Assist system provides "distance to closest object" information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected).

When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

When the vehicle is in Reverse, the Rear Cross Traffic Alert system warns of traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding 3 beeps (if selected).



- ▶ To turn the Front and Rear Parking Assist and Rear Cross Traffic Alert systems on or off, press the **P** **PA** **Parking Assist** button on the center of the instrument panel.

Automatic Parking Assist[◆]

Automatic Parking Assist steers the vehicle to help park in parallel and perpendicular spaces. The system is available when vehicle speed is below 18 mph.

- ▶ Press the **PA** **Automatic Parking Assist** button on the center of the instrument panel. A beep sounds and a parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
- ▶ Once a space is found, shift the vehicle into Reverse or Drive as directed on the infotainment screen and apply the accelerator or brake as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See Driving and Operating in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-252-1112

TTY Users: 1-888-889-2438

 
As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for up to 6 years/70,000 miles, whichever occurs first, at no expense to you. Buick's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Buick dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar service plan, press the **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYBUICK MOBILE APP



The myBuick mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myBuick mobile app also enables users to send remote commands – including remotely starting the vehicle and locking/unlocking the doors – as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

BUICK OWNER CENTER

Get to know your vehicle inside and out with the Buick Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.buick.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2017 General Motors. All rights reserved.



GENERAL MOTORS

84032053 A