



GETTING TO KNOW YOUR 2019 ENVISION



buick.com

Review this Quick Reference Guide for an overview of some important features in your Buick Envision. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.buick.com/learn. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

- Power Door Lock Buttons
- Memory Seat Buttons
- Exterior/Interior Lamp Controls
- Turn Signal Lever
- Driver Information Center
- Windshield Wipers Lever
- Hazard Warning Flashers Button



- Power Mirror/Window Controls
- Power Liftgate Control
- Head-Up Display Controls
- Cruise Control/Forward Collision Alert/Heated Steering Wheel/Voice Recognition Buttons
- Tilt/Telescoping Steering Wheel Lever
- Driver Information Center Controls/Audio Steering Wheel Controls
- Engine Start/Stop Button

Symbols

- | | | | | | |
|--|---------------------|--|-------------------------------------|--|----------------------------|
| | Check Engine | | Service Electric Parking Brake | | Security |
| | Engine Oil Pressure | | Traction Control Off | | Engine Coolant Temperature |
| | Lane Keep Assist | | Traction Control/StabiliTrak Active | | Brake System Warning |
| | Airbag Readiness | | Charging System | | Electric Parking Brake |
| | Cruise Control Set | | | | Low Fuel Warning |

Infotainment System Touch Screen

Infotainment System Controls

Parking Assist/
Automatic Parking Assist♦/Lane Keep Assist♦ Buttons

Auto Engine Stop/
Start Disable Button



Driver's Heated/
Ventilated♦
Seat Controls

Electric Parking
Brake Switch

Traction Control/
StabiliTrak Button

Climate
Controls

Passenger's
Heated/
Ventilated♦
Seat Controls



Lights On Reminder



Antilock Brake System
Warning



Low Tire Pressure



Door Ajar



Vehicle Ahead



StabiliTrak Off



Driver Seat Belt Reminder



Passenger Seat Belt
Reminder

Uplevel Driver Information Center♦ shown

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner's Manual.

♦ Optional equipment

REMOTE KEYLESS ENTRY (RKE) TRANSMITTER

Lock

Press to lock all doors.

Unlock

Press to unlock the driver's door. Press again to unlock all doors.

Power Liftgate

Press twice to open or close the liftgate. Press once to stop power liftgate operation.

Vehicle Locator/Panic Alarm



Press and release to locate your vehicle. The exterior lamps will flash and the horn will sound.


Press and hold to activate the alarm. Press it again to cancel the alarm.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start

Press and release the  Lock button and then immediately press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes. Repeat these steps to run the engine for an additional 10 minutes. A remote start can be extended once.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

Remote Start and Heated Seats: Select the remote start heated seat option in the Vehicle Settings to have the heated seats turn on during a remote start. The heated seat button indicators do not illuminate and the temperature of the unoccupied seat may be reduced during a remote start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and liftgate without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door or the liftgate for the system to operate.**

Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.

Keyless Locking

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the keyless locking and unlocking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

Start

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: If the transmitter battery is weak, place the transmitter in the front cupholder to enable the engine to start. Replace the transmitter battery as soon as possible.

Stop/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and moonroof* until any door is opened.

Accessory Mode

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

A fuel-saving stop/start system has been integrated with the engine. While driving, when the brake pedal is applied and the vehicle is at a complete stop, the automatic engine stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The current settings for the climate control or defog system have not been reached.
- The Auto Stop time is greater than 2 minutes.

Disabling Auto Engine Stop/Start

- ▶ Press the **(A)** button, located below the analog clock on the center of the instrument panel, when the engine is running to disable the automatic engine stop/start system.

When the system is disabled, the button indicator will not be illuminated. The system is enabled each time the vehicle is started.

* Optional equipment

FRONT SEATS

Power Seat Adjustments

A. Seat Adjustment


Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press the rear control to adjust the amount of lumbar support.

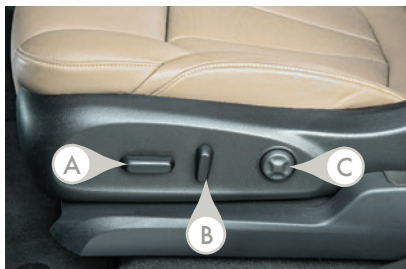


Memory Seats♦

Set Memory Seat Positions


With the ignition On or in Accessory mode:

1. Adjust the seat and power outside mirrors to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** until two beeps sound.

Repeat these steps using button **2** for a second driver.

- ▶ To store a seat position for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button instead of button **1** or **2**.

Recall Memory Seat Positions

- ▶ Press and hold button **1**, **2** or  **Exit** until the seat and mirrors reach the set position.

The memory/exit positions can be programmed to be recalled automatically.

- ▶ To set the Auto Memory Recall or Easy Exit options, go to Settings > Vehicle > Comfort and Convenience.

See Seats and Restraints in your Owner's Manual.



STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the steering column to adjust the steering wheel. The steering wheel can then be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.

REAR SEATS

Rear Seat Adjustment

- ▶ To slide the seat forward or rearward, lift the bar (A) under the seat cushion and slide the seat.



Reclining the Seatback

- ▶ To recline the seatback, pull the lever (B) on the side of the seat cushion and move the seatback to the desired position. Release the lever.



Folding the Seatback

1. Press the button on the side of the head restraint. It will fold automatically.
 2. Pull the lever (B) on the side of the seat cushion and fold the seatback forward or pull the release lever (C) located on the side of the cargo area.
- ▶ To raise the seatback, pull the lever on the side of the seat cushion and push the seatback rearward until it locks in the upright position. Adjust the seatback.



See Seats and Restraints in your Owner's Manual.

REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not actually detect objects in the rear seat; instead, under certain conditions, it detects when a rear door has been opened, indicating that there may be something in the rear seat.

See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

Open/Close the Power Liftgate

- ▶ Press the Power Liftgate button on the Remote Keyless Entry transmitter twice.
- ▶ Press the Power Liftgate knob on the inside of the driver's door.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the button next to the liftgate pull to close the liftgate.
- ▶ To open or close the liftgate hands-free, kick your foot under the rear bumper in the area directly below the left edge of the license plate. To function, the Remote Keyless Entry transmitter must be within 3 feet of the liftgate.



Programming the Liftgate Height

1. Turn the Power Liftgate knob to the 3/4 position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate pull for 3 seconds. The turn signals flash and a beep sounds when the setting is saved.

See Keys, Doors and Windows in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

DIC Controls

Use the controls on the right side of the steering wheel to view and move through the Info (trip and fuel information), Audio, Phone, Navigation[◆], and Options menus.

- ▶ Press the < or > button to move between the display zones.
- ▶ Press the ^ or v button to scroll through the menus.
- ▶ Press the ✓ button to open a menu or to select or reset a setting.

Select Info Pages

1. Use the controls to display Options and then press the ✓ button.
2. Scroll to Info Pages. Press the > button to enter the menu.
3. Scroll through the list of items.
4. Press the ✓ button to select or deselect an item to display in the Info menu.



Base DIC display shown

HEAD-UP DISPLAY♦

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also may be displayed. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.

Brightness

Lift up or press down to brighten or dim the display.

Hold down to turn off the display.



See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Voice Recognition Controls (left side of steering wheel)

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth Speech Recognition (i.e. Siri or Voice Command) on a paired cell phone.



End Call/Mute

Press to end or decline a call.

Press to mute/unmute the vehicle speakers.

Audio Controls (right side of steering wheel)

Next/Previous Favorite Station

Press  or  to go to the next or previous favorite radio station or track.

+ - Volume

Press up or down to adjust the volume.



See your Infotainment System Manual.

BUICK INFOTAINMENT SYSTEM


Refer to your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touch screen, such as tap, drag, and swipe, to interact with the system. For assistance, contact Customer Assistance at 1-855-478-7767 or go to my.buick.com/learn.

Managing Home Page Icons

The Home page icons can be arranged in any order.

1. To enter edit mode, touch and hold the Home page icon to move.
2. Drag the icon to the desired position and release. Drag the icon to the edge of the screen to move to another page.
3. Press the  **Home** button to exit edit mode.

BUICK INFOTAINMENT SYSTEM

Setting the Time

1. Touch Settings on the Home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch the arrows to adjust the hours and minutes.
5. Press the **BACK** button to exit the menu.

Storing Favorites

Radio stations from all bands (AM, FM or SiriusXM[◆]), media (song, artist, etc.), phone contacts and navigation destinations[◆] can be stored in any order on the favorites list.

1. Display the desired radio station, media favorite, contact or destination.
2. Touch the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite item.

Note: To change the number of favorites displayed, go to Settings > Radio.

Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech. Examples: "Call Amanda" or "Tune FM 104.3." Say "Help" for assistance.

Shop

In-vehicle apps – connecting to audio, weather, travel information and more – are available for download to the radio through the SHOP icon on the Home page. Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

Marketplace

Marketplace enables access to popular brands of retail, fuel, food, transportation and other categories for on-demand reservations and purchasing goods and services. Using Marketplace requires internet connectivity through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

Portable Audio Devices

4 USB ports and 4 accessory power outlets are located in the vehicle to connect portable audio devices. Use the USB ports to connect and charge mobile devices.

- ▶ Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to a USB port. Search for music on-screen or by voice commands.
- ▶ Press the **MEDIA** button to select a portable device as the audio source.

APPLE CARPLAY[†]

Apple CarPlay capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
2. The Projection icon will change to Apple CarPlay. Apple CarPlay may launch automatically upon USB connection. If not, touch the Apple CarPlay icon.

See your Infotainment System Manual.

ANDROID AUTO[†]

Android Auto capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Projection icon will change to Android Auto. Android Auto may launch automatically upon USB connection. If not, touch the Android Auto icon.

See your Infotainment System Manual.

BLUETOOTH[®] SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.buick.com/learn for more information.

Pair a Phone

1. Press the **Push to Talk** button on the steering wheel and, after the beep, say "Pair Phone"; or use the infotainment screen to select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See your Infotainment System Manual.

4G LTE WI-FI[®] HOTSPOT

With the vehicle's built-in Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet using the 4G LTE signal.

- To retrieve the SSID and password for the hotspot, go to Settings > Wi-Fi > Manage Wi-Fi Networks.

Note: For more information on use and system limitations, visit my.buick.com/learn.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the Settings menus and the infotainment screen buttons. The Settings menus may include Time and Date, Language, Radio, Vehicle, Bluetooth, Display, Rear Camera, Return to Factory Settings and others.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press **◀BACK** to exit each menu.



See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. A Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Teen Driver.

See your Infotainment System Manual.

WIRELESS CHARGING[†]

The Wireless Charging system for mobile devices is located in the center console. To check the compatibility of your smartphone, visit my.buick.com/learn.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pocket.
3. Place the smartphone, with the screen facing the rear of the vehicle, in the charging pocket.
4. The charging symbol will appear on the infotainment screen when charging. If not charging, remove the smartphone for 3 seconds and rotate it 180 degrees.

See Instruments and Controls in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting.

Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS



Automatic Operation

1. Press AUTO.
2. Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If a function is adjusted manually, automatic operation for that function is canceled.

Rear Climate Controls*

The rear climate control settings can be adjusted using the rear climate control buttons on the rear of the center console or the infotainment screen. The front climate controls must be on to use the rear controls.

Ionizer*

The ionizer, which removes contaminants such as pollen and dust to help clean the air inside the vehicle, turns on automatically with the climate control system. The ionizer status is shown on the climate control display on the infotainment screen.

- To turn on or off, go to Settings > Vehicle > Climate and Air Quality > Ionizer.

See Climate Controls in your Owner's Manual.

LIGHTING

Exterior Lamps

Rotate the knob to activate the exterior lamps.

⏻ Off/On

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

🚗 Parking Lamps

☰ Headlamps

🚗 Fog Lamps

Press to turn the fog lamps on or off.

IntelliBeam System*

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green 🚗 indicator displays on the instrument cluster when the system is on; a blue 🚗 indicator displays when the high-beam headlamps are on.

- ▶ Turn the lamp control to the AUTO position to turn the automatic high-beam system on.
- ▶ Using the high/low-beam changer on the turn signal lever disables the IntelliBeam system. Activate the high/low-beam changer twice in 2 seconds to enable the system again.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

Instrument Panel Lighting

- ▶ Rotate and hold the 🚗 thumbwheel to adjust the instrument panel lighting.

See Lighting in your Owner's Manual.



ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the 🚗 Parking Brake switch.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the 🚗 switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



See Driving and Operating in your Owner's Manual.

AUTOMATIC TRANSMISSION

Driver Shift Control

Driver Shift Control is a manual mode that allows the driver to shift gears manually. This feature can be used to limit the top gear and vehicle speed or to downshift when driving on a downhill grade to provide engine braking.

1. Move the shift lever to the L (Low) position.
2. Press the + (plus) or - (minus) button on the shift lever to upshift or downshift. The current gear will be displayed on the Driver Information Center.




If vehicle speed is too high or too low for the requested gear, the shift will not occur.



See *Driving and Operating* in your Owner's Manual.

CRUISE CONTROL

Setting Cruise Control

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the switch down to the **SET-** position to set the speed. The  symbol will illuminate in green on the instrument cluster.

Adjusting Cruise Control

RES+ Resume/Accelerate

Press up to resume a set speed. When the system is active, press up to increase speed.

SET- Set/Coast

When the system is active, press down to decrease speed.





Cancel

Press to cancel the cruise control without erasing the set speed from memory. Pressing the brake pedal will also cancel the cruise control.

The set speed is erased when cruise control or the vehicle ignition is turned off.

Adaptive Cruise Control[†]

The system maintains the set speed and a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a following gap setting of Far, Medium, or Near. This is also the Forward Collision Alert[†] setting.
- ▶ Press and hold the  **Cancel** button to switch between  regular cruise control and  Adaptive Cruise Control.




TRACTION CONTROL AND STABILITRAK SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak Off** button at the front of the center console to turn traction control on or off.

See **Driving and Operating** in your Owner's Manual.

TIRE PRESSURE MONITOR

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid.

Refer to your Owner's Manual for information about normal monthly tire maintenance.

See **Vehicle Care** in your Owner's Manual.

WIPERS AND WASHERS

Windshield Wipers

Raise or lower the lever to activate the wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent/ AUTO (Rainsense)♦

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

OFF

1x Single Wipe

Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

Rear Wiper and Washer

Turn the end of the lever to activate the rear wiper.



OFF

INT Intermittent

ON

Rear Washer Fluid

Push the lever away from you to spray washer fluid on the rear window.

See **Instruments and Controls** in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS


Safety or Driver Assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. Refer to your Owner's Manual for important feature limitations and information.

Safety Alert Seat♦

The driver's seat pulses – left side, right side or simultaneously – to alert the driver of the direction of potential hazards.



- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.


Lane Change Alert with Side Blind Zone Alert♦

While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.


Lane Keep Assist with Lane Departure Warning♦


The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green on the instrument cluster if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and display an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the system on or off, press the  **Lane Keep Assist** button on the center of the instrument panel.

Forward Collision Alert♦

The  Vehicle Ahead Indicator illuminates in green when a vehicle is detected and illuminates in amber when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near. This is also the Adaptive Cruise Control Following Gap setting.



DRIVER ASSISTANCE SYSTEMS

Follow Distance Indicator[◆]

The follow distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

Forward Automatic Braking[◆]

In potential front-end collision situations with detected vehicles, the brakes may be applied to help reduce damage or avoid collisions at very low speeds.

- ▶ To set the Forward Automatic Braking and Forward Collision Alert systems to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

Rear Vision Camera/Surround Vision[◆]

When the vehicle is in Reverse, the Rear Vision Camera displays a view of the area behind the vehicle on the infotainment screen. Vehicle speed must be below 8 mph.

The Surround Vision[◆] displays a rear or front camera view along with a view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 5 mph.

Front[◆] and Rear Parking Assist/Rear Cross Traffic Alert[◆]

During low-speed parking maneuvers, the Front and Rear Parking Assist system provides "distance to closest object" information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

When the vehicle is in Reverse, the Rear Cross Traffic Alert system warns of traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding 3 beeps (if selected).

- ▶ To turn the Front and Rear Parking Assist and Rear Cross Traffic Alert systems on or off, press the **P** **Parking Assist** button on the center of the instrument panel.



Automatic Parking Assist[◆]

Automatic Parking Assist steers the vehicle to help you park in parallel or perpendicular spaces while you follow commands and control the gear selection, acceleration and braking. The system is available when vehicle speed is below 18 mph.

- ▶ Press the **P** **Automatic Parking Assist** button on the center of the instrument panel. A beep sounds and a parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
- ▶ Once a space is found, shift the vehicle into Reverse or Drive as directed, follow the commands on the infotainment screen and apply the accelerator or brake as needed. The steering wheel will briefly vibrate as a reminder to remove your hands. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See Driving and Operating in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-252-1112

TTY Users: 1-888-889-2438

 
As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for up to 6 years/70,000 miles, whichever occurs first, at no expense to you. Buick's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Buick dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar service plan, press the **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYBUICK MOBILE APP



The myBuick mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myBuick mobile app also enables users to send remote commands to the vehicle – including remotely starting the vehicle and locking/unlocking the doors – as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

BUICK OWNER CENTER

Get to know your vehicle inside and out with the Buick Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.buick.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 General Motors. All rights reserved.



GENERAL MOTORS

84134741 A