



# GETTING TO KNOW YOUR 2019 REGAL TOURX



buick.com

Review this Quick Reference Guide for an overview of some important features in your Buick Regal TourX. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at [my.buick.com/learn](https://my.buick.com/learn). For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.  
Please read your Owner's Manual for complete instructions.



## INSTRUMENT PANEL

Cruise Control/Forward  
Collision Alert/Voice  
Recognition/Heated Steering  
Wheel Buttons

Turn Signal  
Lever

Driver  
Information  
Center

Driver Information  
Center Controls/  
Audio Steering  
Wheel Controls

Windshield  
Wipers Lever



Power Mirror/  
Window  
Switches

Power Liftgate  
Control

Instrument Panel/  
Exterior Lamp  
Controls

Steering Wheel  
Adjustment Lever

Engine Start/  
Stop Button

### Symbols

	Low Fuel		StabiliTrak Active		Service Electric Parking Brake
	Traction Control Off		StabiliTrak Off		Lights On Reminder
	BRAKE Brake System		Forward Collision Alert		Airbag Readiness
	Cruise Control		Security		Engine Oil Pressure
	Adaptive Cruise Control		Electric Parking Brake		Check Engine

Hazard  
Warning  
Flashers Button

Infotainment  
System Touch  
Screen

Infotainment  
System  
Controls

Traction Control/  
StabiliTrak Button











Climate Controls/  
Heated Seat  
Buttons◆

Electric  
Parking Brake  
Switch

Lane Keep Assist◆/  
Rear Park Assist  
Buttons

Accessory  
Power Outlet

-  Lane Keep Assist
-  Vehicle Ahead
-  Pedestrian Ahead
-  Antilock Brake System
-  Low Tire Pressure

-  Door Ajar
-  Charging System
-  Driver Seat Belt Reminder
-  Passenger Seat Belt Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

**See In Brief in your Owner's Manual.**

◆ Optional equipment

## REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

### Lock

Press to lock all doors.

### Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.

### Power Liftgate\*

Press twice to open or close the liftgate. Press once to stop power liftgate operation.

### Vehicle Locator/Panic Alarm



Press and release to locate your vehicle.


Press and hold to activate the alarm. Press again to cancel the alarm.

**Note:** To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



### Remote Vehicle Start\*

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press and hold the  button until the parking lamps turn off.

### Key Release

In case of loss of vehicle power, press the button on the back of the transmitter to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

## KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the door to be opened or within 3 feet of the liftgate.

### Keyless Unlocking

With the transmitter within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger's door handle to unlock all doors.
- ▶ Press the touchpad under the emblem to open the liftgate.

### Keyless Locking

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

**Note:** To change the lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



See Keys, Doors and Windows in your Owner's Manual.

## KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

### Starting the Engine/On

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

**Note:** If the Remote Keyless Entry transmitter battery is weak, place the transmitter in the cupholder (remove the liner) in front of the shift lever to enable the engine to start. Replace the transmitter battery as soon as possible.

### Stopping the Engine/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

### Accessory Mode

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode. The amber button indicator will illuminate.



See Driving and Operating in your Owner's Manual.

## AUTO ENGINE STOP/START OPERATION

The fuel-saving engine stop/start system automatically stops and restarts the engine to help conserve fuel. The system may turn off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer gauge will read AUTO STOP. The audio system, climate controls and other accessories will continue to operate. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time has reached the maximum allowed time.



See Driving and Operating in your Owner's Manual.

## POWER FRONT SEATS

### Power Seat Adjustments

#### A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

#### B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

#### C. Lumbar Support Adjustment

Press and hold the round control to adjust the lumbar support.



### Memory Seats

1. Adjust the seat and power outside mirrors.
2. Press and release the **MEM (Memory)** button (D). A beep will sound.
3. Immediately press and hold button **1** or **2** until two beeps sound.



### Recall Memory Positions

- ▶ Press and hold button **1** or **2** until the saved position is reached.

The memory/exit positions can be programmed to be recalled automatically.

- ▶ To set the Seat Entry Memory and Seat Exit Memory options, go to Settings > Vehicle > Seating Position.

See Seats and Restraints in your Owner's Manual.

## REAR SEATS

### Fold the Rear Seatbacks

1. Pull the lever (A) on top of the outboard seatback and fold the seatback forward. A red tab near the lever is visible when the seatback is unlatched.
2. If equipped with a center seatback, pull the strap (B) on top of the seatback and fold the seatback forward.
3. Each outboard seatback also can be folded by pulling the switch (C) on either side of the cargo area.
4. To raise each seatback, lift it up until it locks in place.



See Seats and Restraints in your Owner's Manual.


## STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.

## POWER LIFTGATE♦

### Open/Close the Power Liftgate

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the Power Liftgate knob on the driver's door.
- ▶ Press the touchpad under the emblem to open the liftgate.
- ▶ Press the button next to the latch to close the liftgate.



### Programming the Liftgate Height

1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the latch until the turn signals flash and a beep sounds.



### Hands-Free Operation

- ▶ To open or close the liftgate hands-free, kick your foot straight under the center of the rear bumper. The RKE transmitter must be within 3 feet of the liftgate.

### Projected Logo

The vehicle logo is projected on the ground near the rear bumper, indicating the kicking motion location for hands-free operation, when an RKE transmitter is detected within 6 feet of the liftgate. The logo is shown for 1 minute, depending on operating conditions.



See Keys, Doors and Windows in your Owner's Manual.

 
## DRIVER INFORMATION CENTER (DIC)

The DIC on the instrument cluster displays a variety of messages and system information.

### DIC Controls

Use the controls on the right side of the steering wheel to select the Trip/Fuel, Vehicle, and Eco menus (base DIC) or the Info (includes trip and fuel information), Audio, Phone, Navigation, and Options menus (up-level DIC<sup>◆</sup>).

- ▶ Press the < or > button to move between the display zones. Press the < button to go back to the previous screen.
- ▶ Press the ^ or v button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.

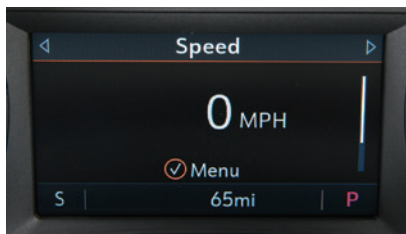

### Info Pages<sup>◆</sup>

1. Use the controls to display the Options menu. Press ✓.
2. Scroll to display Info Pages. Press > to view the pages.
3. Press ^ or v to scroll through the active pages.
4. Press ✓ to select or deselect a page to display in the Info menu.

See Instruments and Controls in your Owner's Manual.

## LIGHTING

### Exterior Lamp Controls

Rotate the knob on the left side of the instrument panel to activate the exterior lamps.

 Off/On

**AUTO**

Automatically activates the exterior lamps depending on outside lighting conditions.

 Parking Lamps

 Headlamps

 Fog Lamps

Press the button to turn the fog lamps on or off.



### Instrument Panel Lighting

 Instrument Panel Illumination

Press and release the knob to extend it. Turn the knob to adjust the instrument panel lighting.

See Lighting in your Owner's Manual.



## WIPERS AND WASHERS

### Windshield Wipers

Raise or lower the wiper lever.

#### HI Fast Wipes

#### LO Slow Wipes

#### INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

#### OFF

 
#### 1x Single Wipe

#### Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

### Rear Window Wiper

Turn the end of the wiper lever.

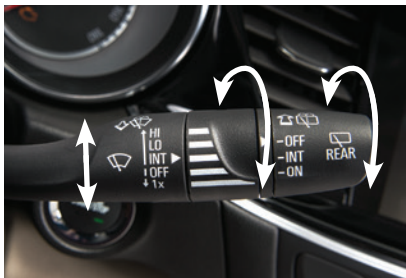

#### OFF

#### INT Intermittent Wipes

#### ON

#### Rear Washer Fluid

Push the lever away from you to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

## UNIVERSAL REMOTE SYSTEM



The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting.

Go to [www.homelink.com](http://www.homelink.com) for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.



See Instruments and Controls in your Owner's Manual.

## ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the  **Parking Brake** switch on the center console.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the  switch.

**Note:** The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



See Driving and Operating in your Owner's Manual.

## AUTOMATIC CLIMATE CONTROLS



Dual-zone climate controls♦ shown

### Automatic Operation

- ▶ Press **AUTO**.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, the Auto indicator turns off and automatic operation for that function is disabled.

### Air Conditioning Modes

1. Press **CLIMATE** to view the climate control display on the infotainment screen.
2. Touch A/C to cycle between MAX, ECO and OFF modes. The ECO setting balances air conditioning comfort and fuel economy.



### Sync Temperature Settings

 
1. Press **CLIMATE** to view the climate control display on the infotainment screen.
2. Touch Sync to link all passenger settings to the driver settings. Sync is displayed when the settings are not linked.

See Climate Controls in your Owner's Manual.



## SUNROOF/SUNSHADE

### Open/Close the Sunroof

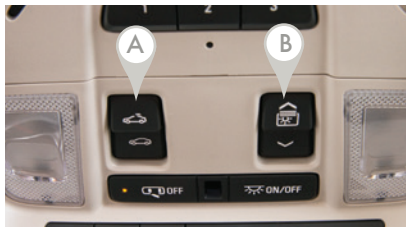- ▶ Fully press and release the  switch (A) to express-open the sunroof.
- ▶ Fully press and release the  switch to express-close the sunroof.



### Open/Close the Power Sunshade

- ▶ Press the  switch (B) to open the sunshade.
- ▶ Press the  switch to close the sunshade.

See Keys, Doors and Windows in your Owner's Manual.

## AUDIO STEERING WHEEL CONTROLS

### Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth Speech Recognition (Siri® Eyes Free or Voice Command) on a paired, compatible phone.

### End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

### + - Volume

Press the switch up or down to adjust the volume.

### Next/Previous Favorite Station

Press the top or bottom button to go to the next or previous favorite radio station or track.



See your Infotainment System Manual.

## INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



8-inch\* screen◆ shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touch screen, such as tap, drag, and swipe, to interact with the system. For assistance, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit [my.buick.com/learn](http://my.buick.com/learn).

### Managing Home Page Icons

The Home page icons can be arranged in any order.

1. To enter edit mode, touch and hold the Home page icon to move.
2. Drag the icon to the desired position and release. Drag the icon to the edge of the screen to move to another page.

## INFOTAINMENT SYSTEM


### Storing Favorites

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order.

1. Tune in the desired radio station.
2. Touch and hold a favorite screen button. Favorites also can be stored by touching the ★ in a station or channel list.
3. Repeat the steps to store another favorite station.

### Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt.
3. After the prompt, say what you want it to do using natural speech.
  - **Example Phone command (using your paired phone):** "Call Amanda" or "Dial 555-1212"
  - **Example Media Music Device Search command (when connected to USB only):** "Play artist [name]" or "Play song [name]"
  - **Example Radio command:** "Tune FM 99.5" or "Tune XM Classic Vinyl"
  - **Help:** Say "Help" for voice recognition assistance

### Apple CarPlay♦

Apple CarPlay capability is available through a compatible smartphone using the Apple CarPlay icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use your device's factory-provided Lightning cable. Aftermarket cables may not work.
2. The Apple CarPlay icon will illuminate. Touch the Apple CarPlay icon to have your apps displayed.

### Android Auto♦

Android Auto capability is available through a compatible smartphone using the Android Auto icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Android Auto icon will illuminate. Touch the Android Auto icon to have your apps displayed.

### Apps♦

In-vehicle apps – connecting to music, news, weather, travel information, sports, entertainment and more – are available for download to the radio through the Apps icon on the Home page. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

See your Infotainment System Manual.

## INFOTAINMENT SYSTEM

### Portable Audio Devices

An iPod®, iPhone®, MP3 Player, a USB flash drive or a portable USB hard drive can be connected to a USB data port located inside the center console storage compartment.

- ▶ Select the Audio icon and then touch More to select a portable device as the audio source.

 
The USB ports on the rear of the center console are for charging only.

See your Infotainment System Manual.

## BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit [my.buick.com/learn](http://my.buick.com/learn) for more information.

### Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button; after the prompt, say "Pair phone."  
To use the infotainment screen buttons, select the Phone icon > Connect Device > Add Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Depending on the phone, your phone book may be downloaded automatically.

### Stream Audio♦

- ▶ To stream audio from a paired device connected via Bluetooth, select the Audio icon on the infotainment screen and then touch Bluetooth from the recent sources list. Control audio operation using the device controls or infotainment controls.

See your Infotainment System Manual.

## 4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the SSID and password for the hotspot, select the Wi-Fi Hotspot icon or go to Settings > System > Wi-Fi Hotspot.

**Note:** For more information on use and system limitations, visit [my.buick.com/learn](http://my.buick.com/learn).

See your Infotainment System Manual.

## WIRELESS CHARGING

The Wireless Charging system for smartphones is located in a pocket under the center console armrest. Visit [my.buick.com/learn](http://my.buick.com/learn) to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be on, or Retained Accessory Power must be active.
2. Remove all objects from the charging pocket.
3. Place the smartphone in the pocket with the screen facing the rear of the vehicle.
4. The charging symbol will appear on the infotainment screen when charging.

 


See Instruments and Controls in your Owner's Manual.

## VEHICLE PERSONALIZATION

Some vehicle features can be customized using the Settings menus. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press **<BACK** to exit each menu.

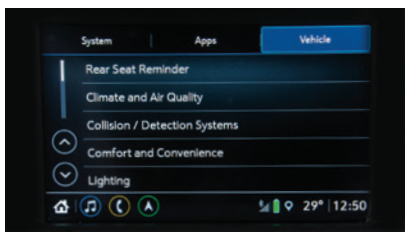

See Instruments and Controls in your Owner's Manual.

## TEEN DRIVER

Teen Driver mode allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver mode settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.




See your Infotainment System Manual.


## DRIVER ASSISTANCE SYSTEMS


Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

**Traction Control and StabiliTrak** – The full-time traction control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.

 


- ▶ To turn traction control on or off, press the  **Traction Control/StabiliTrak** button on the center of the instrument panel.

**Forward Collision Alert** – The  Vehicle Ahead Indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.


- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near. The setting is displayed on the Driver Information Center.

**Follow Distance Indicator** – The follow distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

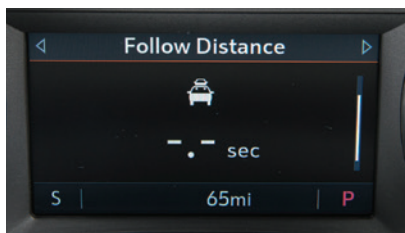

**Forward Automatic Braking** – In potential front-end imminent collision situations with detected vehicles, the brakes may be applied, if you have not already done so, to help reduce damage or avoid collisions at very low speeds.


- ▶ To set Forward Automatic Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

**Front Pedestrian Braking** – During daytime driving, the system detects pedestrians directly ahead up to a distance of approximately 131 feet and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound. The system may prepare the brakes or automatically brake the vehicle, if you have not already done so.



- ▶ To set the system to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.




## DRIVER ASSISTANCE SYSTEMS

**Lane Change Alert with Side Blind Zone Alert** † – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

**Lane Keep Assist with Lane Departure Warning** † – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist Indicator is green on the instrument cluster if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and 3 beeps may sound on the side of the departure direction as the lane marking is crossed. The Lane Keep Assist system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

 
- ▶ To turn the system on or off, press the  Lane Keep Assist button (A) on the front of the center console.



**Rear Vision Camera** – When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. Vehicle speed must be below 8 mph.

**Rear Cross Traffic Alert** † – When the vehicle is in Reverse, the system warns of cross-traffic coming in either direction by displaying a red alert on the infotainment screen and beeps sound.

**Rear Park Assist** – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center. A beep sounds when an object is detected and 5 beeps sound when an object is very close.

- ▶ To turn Rear Park Assist and Rear Cross Traffic Alert on or off, press the  Rear Park Assist button (B) on the front of the center console.



See Driving and Operating in your Owner's Manual.

## AUTOMATIC TRANSMISSION

### Driver Shift Control

Driver Shift Control is a manual mode that allows the driver to shift gears manually. It can be used to drive the vehicle in a sportier manner, or to downshift when driving on a downhill grade to provide engine braking.

1. From the Drive (D) position, move the shift lever left to the +/- position.
2. Tap the shift lever forward (+) to upshift or rearward (-) to downshift. The current gear is shown on the Driver Information Center.




If vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will downshift automatically.



See Driving and Operating in your Owner's Manual.

## CRUISE CONTROL

### Setting Cruise Control

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press down the SET- switch to set the speed. The  symbol will illuminate in green on the instrument cluster.



### Adjusting Cruise Control


#### RES+ Resume/Accelerate

Press up to resume a set speed. When active, press up to increase speed.

#### SET- Set/Coast

When active, press down to decrease speed.

#### Cancel





Press the  button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.



### Adaptive Cruise Control\*

The system maintains the set speed and a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

 
- ▶ Press the  **Following Gap** button to select a gap setting of Far, Medium or Near. This is also the Forward Collision Alert\* setting.
- ▶ Press and hold the  **Cancel** button to switch between  regular Cruise Control and  Adaptive Cruise Control.

## CARGO STORAGE

### Cargo Tie-Down System

The cargo tie-down system can be adjusted to secure a variety of items on the cargo floor.

- ▶ Press the button on the tie-down to insert or remove each tie-down in the rails (A).
- ▶ Press the button on the tie-down to slide it to the required position. Fold up the tie-down to use it.

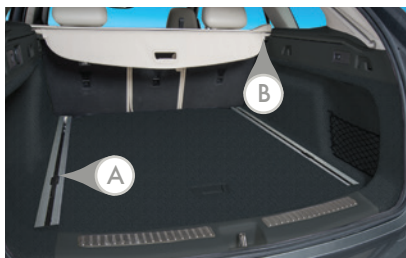

### Cargo Cover

- ▶ Pull the cover handle rearward to extend the cargo cover. Once extended, pull the handle up to engage the cover in the side retainers. Pull the handle rearward and down to release the cover.
- ▶ Pull up the release lever (B) on the right side of the cargo cover to remove the cover. Lift up the right side of the cover first to remove it from the side retainer. When installing the cover, insert the left side of the cover first in the side retainer.

See Storage in your Owner's Manual.

## REFUELING THE VEHICLE


- ▶ To open the fuel door, press and release the center of the rear edge of the door. It will pop out slightly. Pull the door open.
- ▶ The vehicle's capless fuel system does not have a fuel cap. Fully insert the fuel pump nozzle before starting to fill the tank.

**Note:** When using a portable gas can, insert the funnel adapter, stored under the cargo floor, into the capless fuel fill.



See Driving and Operating in your Owner's Manual.

## TIRE PRESSURE MONITOR

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

See Vehicle Care in your Owner's Manual.

## ROADSIDE ASSISTANCE

1-800-252-1112

TTY Users: 1-888-889-2438

As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for up to 6 years/70,000 miles, whichever occurs first, at no expense to you. Buick's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Buick dealer for any repairs.

### OnStar Roadside Assistance

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

## MYBUICK MOBILE APP

Download the myBuick app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.

## BUICK OWNER CENTER

Get to know your vehicle inside and out with the Buick Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at **my.buick.com**.

**We recommend always using ACDelco or genuine GM service parts.**

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2018 General Motors. All rights reserved.



GENERAL MOTORS

84414198 A