



GETTING TO KNOW YOUR 2022 ENCLAVE



[buick.com](https://www.buick.com)

Review this Quick Reference Guide for an overview of some important features in your Buick Enclave. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. More information can be found in your Owner's Manual and at my.buick.com. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Cruise Control/
Forward Collision
Alert/Heated Steering
Wheel Buttons

Turn Signal
Lever/Exterior
Lamps Control

Manual
Shift
Paddle

Driver
Information
Center

Manual
Shift
Paddle

Windshield
Wipers
Lever

Driver Information
Center Controls/
Voice Recognition
Buttons



Memory
Seat
Buttons

Power
Mirror/
Window
Controls

Power
Liftgate
Control

Head-Up
Display/Electric
Parking Brake/
Instrument Panel
Lighting Controls

Audio Favorite
Station or Seek
Controls (behind
steering wheel)

Steering
Wheel
Adjustment
Control

Audio Volume
Controls
(behind
steering wheel)

Engine
Start/Stop
Button

Symbols



Low Fuel



Traction Control Off

BRAKE Brake System



Cruise Control



StabiliTrak Active



StabiliTrak Off



Forward Collision Alert



Security



PARK Electric Parking Brake



Service Electric Parking Brake



Lights On Reminder



Airbag Readiness



Engine Oil Pressure



Check Engine



Lane Keep Assist

Auto Stop Disable/
AWD♦/Driver
Mode♦ Buttons

Infotainment
System
Touchscreen

Hazard Warning
Flashers/Park
Assist/Lane Keep
Assist Buttons

Infotainment
System Controls



Electronic
Precision Shift
Lever

USB Ports/Navigation
SD Card♦
(Do not remove card
with ignition On)

Wireless Phone
Charging Pad♦

Climate Controls/
Heated/Ventilated
Seat Controls♦



Vehicle Ahead



Pedestrian Ahead



Antilock Brake System



Low Tire Pressure



Door Ajar



Charging System



Driver Seat Belt
Reminder



Front Passenger Seat
Belt Reminder

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your
Owner's Manual.

♦ Optional equipment

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

Lock

Press to lock all doors.

Unlock

Press to unlock the driver's door. Press again to unlock all doors and liftgate.

Power Liftgate

Press twice to open or close the liftgate. Press once to stop power liftgate operation.

Vehicle Locator/Panic Alarm



Press and release to locate your vehicle.


Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.



Remote Vehicle Start

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press and hold the  button until the parking lamps turn off.

Key Release

In case of loss of vehicle power, press the button on the back of the transmitter to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from a pocket or purse. The key fob must be within 3 feet of a front door or within 3 feet of the liftgate.

Keyless Unlocking

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.

Keyless Locking

With the ignition off, the key fob out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

Note: To change the lock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.



See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

Starting the Engine

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

Note: If the key fob battery is weak, place the key fob at the front of the center console storage compartment to enable the engine to start. Replace the key fob battery as soon as possible.



Stopping the Engine/Off

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine.

Accessory Mode

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode. The amber button indicator will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time has reached the maximum allowed time.

Disabling Auto Stop/Start

- ▶ Press the **(A) Auto Stop** button on the center of the instrument panel to turn off the engine stop/start system. The button indicator turns off when the system is disabled. The system automatically turns on each time the vehicle is started.



See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The automatic transmission is electronically controlled using the shift switches on the center console. The selected gear position illuminates in red on the shift switch and is shown on the instrument cluster.

Park – Press the P switch to shift to Park.

Reverse – Pull the R switch to shift to Reverse.

Neutral – Press and hold the N switch until the indicator is red to shift to Neutral.

Note: The transmission will not stay in Neutral for an extended period. It will automatically shift into Park.

Drive – Pull the D switch to shift to Drive.

Manual Mode – With the transmission in Drive, press the L (Manual) switch to shift manually. Pull the left steering wheel paddle to downshift and the right steering wheel paddle to upshift. Pull the D switch to return to Drive.

Automated Car Wash Mode

- ▶ To enter a car wash with the driver in the vehicle: Apply the brake pedal, press and hold the N switch to shift to Neutral, turn off the engine (if desired) and then release the brake pedal.
- ▶ To enter a car wash with the driver out of the vehicle: Apply the brake pedal, open the driver's door, press and hold the N switch to shift to Neutral, turn off the engine (if desired), and then release the brake pedal and exit the vehicle. The vehicle may shift to Park upon re-entry.

See Driving and Operating in your Owner's Manual.



DRIVER MODE SELECTOR

The Driver Mode Selector system automatically adjusts the steering, suspension, and powertrain tuning based on the selected mode.

- ▶ Press the **AWD** button (A) to send power to all four wheels. The button indicator will stay on when AWD is active.
- ▶ Press the **Mode** button (B) to select Sport mode (for enhanced steering and suspension performance) or Tow/Haul mode (when towing or hauling a heavy load). The current mode is displayed on the Driver Information Center.



See Driving and Operating in your Owner's Manual.

POWER FRONT SEATS

Power Seat Adjustments

A. Seat Adjustment

Move the horizontal control to slide the seat forward or rearward, and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the round control to adjust the lumbar support.




Massage Seats*


- ▶ Press the  **Massage** button (D) on the side of the seat to turn the massage feature on or off.



Memory Seats*

1. Adjust the seat, power outside mirrors and power steering wheel*.
 2. Press and release the **SET** button; a beep will sound.
 3. Immediately press and hold button **1** or **2** until two beeps sound.
- ▶ To save a seat position for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button instead of button **1** or **2**.

Recall Memory Positions

- ▶ Press and hold button **1**, **2** or  **Exit** until the saved position is reached.
- ▶ To set the memory/exit positions to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever or use the power control* under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.



See Instruments and Controls in your Owner's Manual.

Power tilt/telescoping steering column* shown

REAR SEATS

Enter or Exit the 3rd-Row Seats

1. Remove anything on the 2nd-row seat or the floor in front of, or behind, the seat.
2. Pull the handle on the side of the passenger-side seatback (A) and pull the seat forward.
3. After entering/exiting, move the seatback rearward until it locks in place.

Note: The 2nd-row passenger-side seat can be moved for 3rd-row entry/exit with a forward-facing child seat installed. Remove a rearward-facing child seat before moving the 2nd-row seat.



Recline the 2nd-Row Seatbacks

- ▶ While seated, pull the lever on the side of the seat cushion (B) and move the seatback to the desired position.

Slide the 2nd-Row Seats

- ▶ Lift the bar under the seat cushion (C) to slide the seat forward or rearward.



Fold the 2nd-Row Seats

1. Pull the lever on the side of the seat cushion (B) and fold the seatback forward.
2. To raise the seatback, lift it up until it locks in place.

Fold the 3rd-Row Seats

1. Adjust the 2nd-row seat to allow the 3rd-row seat to fold fully flat.
2. Remove anything on or under the 3rd-row seat.
3. Use the door key from the Remote Keyless Entry transmitter in the mini-buckle slot to disconnect the mini-latch of the center seat belt and stow the mini-latch in the headliner.
4. Pull the release strap to release the seatback and fold the seatback forward or press the power seatback switches♦ (D) on the passenger's side of the rear cargo area.



 


Rear Seat Reminder

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Always check the rear seat before exiting the vehicle. The system does not actually detect people or items in the rear seat; instead, under certain conditions, it detects when a rear door has been opened, indicating that there may be something in the rear seat.

See Seats and Restraints in your Owner's Manual.



POWER LIFTGATE

Open/Close the Power Liftgate

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry transmitter (key fob) twice.
- ▶ Press the  **Power Liftgate** knob (A) on the driver's door.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the  button (B) next to the latch to close the liftgate.



Programming the Liftgate Height

1. Turn the  **Power Liftgate** knob (A) to the 3/4 mode.
2. Open the liftgate and adjust it manually to the desired position.
3. To save the setting, press and hold the  button (B) next to the liftgate latch until the turn signals flash and a beep sounds.
4. With the knob in the 3/4 mode, the liftgate will open to the saved position.





Hands-Free Operation

To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The key fob must be within 3 feet of the liftgate. Depending on operating conditions, the Buick logo is projected on the ground near the rear bumper to indicate the kicking motion location.



See Keys, Doors and Windows in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the  **Parking Brake** button on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the  button.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



See Driving and Operating in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

DIC Controls

Use the controls on the right side of the steering wheel to select the Info (includes trip and fuel information), Audio, Navigation, Phone, and Options menus.

- ▶ Press the < or > button to move between the display zones. Press the < button to go back to the previous screen.
- ▶ Rotate the ^ or v thumbwheel to scroll through the menus.
- ▶ Press the thumbwheel to open a menu, or to select or reset an item.



Changing Display Themes* (Avenir model)

The DIC features 2 reconfigurable display themes: Sport and Touring.

1. Use the controls to display the Options menu. Press the thumbwheel.
2. Select Display Themes.
3. Select the desired theme.



See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY*

The Head-Up Display (HUD) projects some operating information on the windshield. The HUD controls are located on the left side of the instrument panel.

HUD Position

Lift up or press down to adjust the position of the image. It cannot be adjusted side to side.

INFO

Press to select the Speed View, Audio/Phone View, Navigation View, or Performance View.

± Brightness

Lift up to brighten or press down to dim the display. Hold down to turn off the display.

Rotation Option

To rotate the angle of the HUD image, use the DIC controls to go to Options > Head-Up Display. Select the Rotation option to adjust the HUD image angle.



See Instruments and Controls in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



Applications ♦: Touch a screen icon to access an app

Applications Tray: Shortcuts to commonly used apps

Home page

SEEK: Previous radio station or track

Power/Volume

SEEK: Next radio station or track

<BACK: Go back to previous menu

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player/iPod®, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag, and swipe, to interact with the system. For assistance, visit my.buick.com/how-to-support or call 1-855-4-SUPPORT (1-855-478-7767).

Storing Favorites

Radio stations from all bands (AM, FM or SiriusXM ♦) can be stored in any order.

 
1. Tune in the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite station.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.



1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt.
3. After the prompt, say what you want it to do using natural speech.
Examples: "Call Dave" or "Tune to 99.5 FM." Say "Help" for assistance.

In-Vehicle Apps

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-In, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to onstar.com for data plan information.

Apple CarPlay® and Android Auto™

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
 2. There are two ways to set up device projection:
 - **Wireless Connection** - Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - **Wired Connection** - Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 3. Follow the instructions on the infotainment system and the phone.
 4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the  **Home** button.

SIRIUSXM® with 360L

The personalized content of SiriusXM with 360L offers over 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and the Buick Connected Access plan. See siriusxm.com and onstar.com for details.

Portable Audio Devices

An iPod®, iPhone®, MP3 Player, a USB flash drive or a portable USB hard drive can be connected to a USB data port located at the front of the center console or inside the center console storage compartment.

- To play a device, touch Audio on the infotainment screen; and then touch USB from the Sources list or touch More to view the USB option.

 
USB ports on the rear of the center console and by the 3rd-row seats are for charging only.

See **Infotainment System** in your **Owner's Manual**.

BLUETOOTH® SYSTEM


Read your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit my.buick.com/how-to-support for more information.

Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button on the steering wheel; after the prompt, say "Pair Phone." To use the infotainment screen, select the Phone icon > Phones or Connect Phone > Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

Secondary Phone

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, select the Phone icon > Phones and then the  Information icon next to the phone name.

See Infotainment System in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Voice Pass-Thru (Siri or Google Assistant) on a paired, compatible phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.



See Infotainment System in your Owner's Manual.

4G LTE WI-FI HOTSPOT®

With the vehicle's available built-in 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. Some services require a data plan. For more information on use and system limitations, visit my.buick.com/how-to-support.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING* (AVENIR MODEL)

The Wireless Phone Charging system is located at the front of the center console. Visit my.buick.com/how-to-support to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad.
4. The ⚡ charging symbol will appear on the infotainment screen when charging. If not charging, remove the phone for 3 seconds and rotate it 180 degrees.



See Instruments and Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some vehicle features can be turned on/off or customized using the Settings menus on the infotainment screen, including Remote Vehicle Start, Safety Alert Seat, Wiper functions and others.

1. Select Settings on the Home page.
2. Select the System, Apps, or Vehicle menu.
3. Select the desired feature and setting.
4. Press <BACK to exit each menu.



See Instruments and Controls in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. For detailed videos and instructions on programming the Universal Remote System, go to homelink.com. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS



Automatic Operation

- ▶ Press **AUTO** and set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, automatic operation for that function is turned off.

Rear Climate Controls

- ▶ To adjust the rear climate control settings, use the climate control buttons on the rear of the center console or select Rear Climate on the infotainment screen. When Sync is active, the display is not shown on the rear of the center console.

See Climate Controls in your Owner's Manual.

SUNROOF/SUNSHADE*

- ▶ Press and release the rear of the **TILT** switch to vent the sunroof. Press the front of the switch to close the sunroof.
- ▶ Press and release the rear of the **SLIDE** switch to express-open the sunroof. Press the front of the switch to express-close the sunroof.
- ▶ Press up the handle on the front sunshade and slide it back to open the sunshade. Pull the handle forward until it latches to close the sunshade.
- ▶ Press and hold the rear or front of the **Sunshade** switch to open or close the rear sunshade.




* Optional equipment

See Keys, Doors, and Windows in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

 


Forward Collision Alert - The  Vehicle Ahead Indicator is green when a vehicle that you're following is detected ahead and is amber when you're following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound or the Safety Alert Seat[◆] pulses (if selected).


▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near. This is also the Adaptive Cruise Control[◆] following gap setting.


Following Distance Indicator - The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

Automatic Emergency Braking - At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

Lane Keep Assist with Lane Departure Warning - The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle unintentionally approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and beeps may sound or the Safety Alert Seat[◆] may pulse (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

▶ To turn on or off, press the  **Lane Keep Assist** button (A) on the center of the instrument panel.

Front Pedestrian Braking - During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber  indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound or the Safety Alert Seat[◆] pulses (if selected). The system may automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.




DRIVER ASSISTANCE SYSTEMS

Safety Alert Seat ♦ – The driver's seat pulses – left, right, or both sides – to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.



Lane Change Alert with Side Blind Zone Alert


– While driving, the system displays a  warning symbol on the left- or right-side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

Traction Control and StabiliTrak Systems – The full-time traction control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn traction control on or off, go to Options > Traction & Stability on the Driver Information Center.

Front and Rear Park Assist – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and beeps sound or the Safety Alert Seat ♦ pulses (if selected). When an object is very close, 5 beeps sound or the Safety Alert Seat ♦ pulses (if selected).

- ▶ To turn on or off, press the  Park Assist button (B) on the center of the instrument panel.

Rear Cross Traffic Alert – When in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red triangle with directional arrow alert on the infotainment screen and directional beeps sound or the Safety Alert Seat ♦ pulses (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

Rear Vision Camera – When the vehicle is in Reverse below 8 mph, a view of the area behind the vehicle displays on the infotainment screen.

HD Surround Vision ♦ – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. It works at low speeds and can help when parking.

- ▶ Touch one of the Camera buttons on the infotainment screen to change the camera view.



REAR CAMERA MIRROR♦

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull/push the lever at the bottom of the mirror to turn the video display on/off.

B. Selection Control

Press and release the button to select the brightness, zoom or tilt setting.

C. Adjustment Controls

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

EXTERIOR LIGHTING

Exterior Lamp Controls

⏻ Off/On

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

☞ Parking Lamps

☞ Headlamps

IntelliBeam System

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night. A green ☞ indicator displays on the instrument cluster when the system is on; a blue ☞ indicator displays when the high-beam headlamps are on.

► To turn the IntelliBeam system on or off, press the ☞ button on the turn signal lever with the lamp control in the AUTO or ☞ Headlamps position.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.






TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The (⚠) Low Tire Pressure light illuminates when a tire on the vehicle is significantly under-inflated. Fill the tires to the proper tire pressure listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center. The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. With the vehicle On, the horn sounds and the turn signal changes from flashing to solid when the recommended pressure is reached.

See Vehicle Care in your Owner's Manual.

CRUISE CONTROL

Setting Cruise Control

1. Press the  **On/Off** button. The  symbol will illuminate white on the instrument cluster.
2. When traveling at the desired speed, press down the switch to the **SET-** position to set the speed. The  symbol will illuminate green on the instrument cluster.

Adjusting Cruise Control

RES+ Resume/Accelerate

Press the switch up to resume a set speed. When active, press up to increase speed.

SET- Set/Coast

When active, press the switch down to decrease speed.





Cancel

Press the  button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory. Turn off Cruise Control to erase the set speed.



Adaptive Cruise Control+ (Avenir model)

The system enhances regular Cruise Control to maintain a driver-selected following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a targeted gap setting of Far, Medium or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  **Cancel** button to switch between  regular Cruise Control and  Adaptive Cruise Control.

See Driving and Operating in your Owner's Manual.

WIPERS AND WASHERS

Windshield Wipers

Raise or lower the wiper lever.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes/AUTO RainSense+

Rotate the band up for more frequent wipes or down for less frequent wipes.


OFF

1x Single Wipe

Washer Fluid

Pull the lever to wash the windshield.

◆ Optional equipment

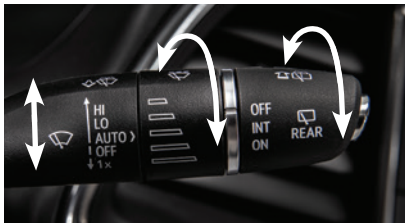

Rear Window Wiper

Rotate the end of the wiper lever.

OFF

INT Intermittent

ON

Rear Washer Fluid

Push the lever to wash the rear window.

- ▶ To enable several wiper features, go to Settings > Vehicle > Comfort and Convenience.

See Instruments and Controls in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-252-1112

TTY Users: 1-888-889-2438

As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Buick Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Buick dealer for any repairs.

Roadside Assistance and OnStar®

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYBUICK MOBILE APP

Download the myBuick app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

BUICK OWNER CENTER

Get to know your vehicle inside and out with the Buick Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.buick.com.

We recommend always using ACDelco or GM Genuine Parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2021 General Motors. All rights reserved.



84742931 A