



Brother Intellifax 2750



Learner's Manual



Brother Intellifax 2750

Table of Contents

Introduction

Sending a Fax

Printing Reports

Maintenance

Troubleshooting

Table of Contents

- Table of Contents
- Introduction
- Sending a Fax
 - Resolution Keys 4
 - Manual Transmission 5
 - Manual Fax Redial 6
 - Dual Access 7
- Printing Reports
 - Activity Report 8
- Maintenance
 - Loading Paper 9
 - Loading Via Manual Feed Slot 10
 - Cleaning the Scanner 11
 - Cleaning the Printer 12
 - Cleaning the Drum Unit 13
 - Replacing the Toner Cartridge 14
 - Replacing the Drum Unit 15
- Troubleshooting
 - Paper Jam 16
 - Sheet Feeder Jam 17
 - Paper Jam Near Drum Unit 18
 - Paper Jam Near Fuser Unit 19
 - Common Error Codes 20



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Printing Reports](#)

[Maintenance](#)

[Troubleshooting](#)

Introduction

Congratulations on the purchase of your new Brother Intellifax 2750 multipurpose fax machine. The Intellifax 2750 is a cutting edge solution for communications in today's business world that allows for sending and receiving of faxes as well as basic printing and copying capabilities.

Because of the multitude of functions that are found in this one machine, users may sometimes feel slightly overwhelmed when trying to become familiar with the 'ins' and 'outs' of use. The purpose of this document is to provide guidance in becoming familiar with some of the most basic and essential functions of the Intellifax 2750.

Throughout this document the instructor will prompt you to respond to questions. Additionally in some sections you will be asked to practice some of the activities on your fax machine. By participating as you read, you are more likely to be successful at using your new Intellifax 2750.



Brother Intellifax 2750

Table of Contents

Introduction

Sending a Fax

Resolution Keys

Manual Transmission

Manual Fax Redial

Dual Access

Printing Reports

Maintenance

Troubleshooting

Sending a Fax > Resolution Keys

Before you send a fax, select the resolution for the document you are sending. To change resolution, press the resolution button to cycle through the following options.

Standard: Suitable for most typed documents. (see image 4.1)

Fine: Good for small print; transmits slower than standard resolution. (see image 4.2)

Super Fine: Good for small print or artwork; transmits slower than fine resolution. (see image 4.3)

Photo: Use when document has varying shades of gray; slowest transmission time. (see image 4.4)

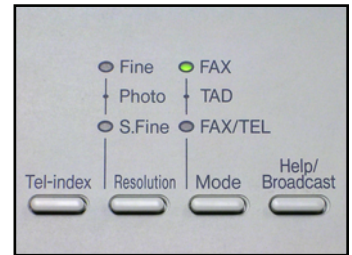


image 4.1

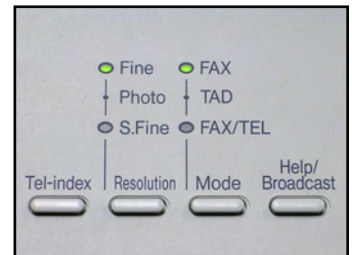


image 4.2

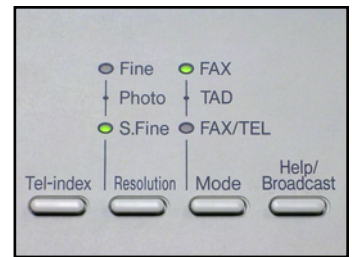


image 4.3

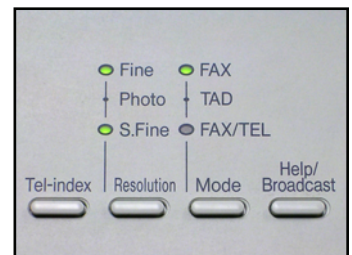


image 4.4



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Resolution Keys](#)

[Manual Transmission](#)

[Manual Fax Redial](#)

[Dual Access](#)

[Printing Reports](#)

[Maintenance](#)

[Troubleshooting](#)

Sending a Fax > Manual Transmission

1. Insert your document(s) face down in the feeder.
(see *image 5.1*)
If you're sending a multi-page document stagger the pages
2. Dial the fax machine number.
 - Pick up the handset or press the hook button before starting to dial. (see *image 5.2*)
 - On-campus number: 7-extension number (e.g., 7-7236)
 - Local number: 9-phone number (e.g., 9-753-6342)
 - Long distance: 9-<pause>-1-<pause>--<area code>-<phone number>-<pause>--<authorization number> (e.g., 9-<pause>-1-<pause>-435-797-6342-<pause>--<authorization number>)
 - When dialing an international number from anywhere in the USA, 011 must precede the number. (see *image 5.3*) (For example, if you were faxing the Fiji Islands, which has a country code of 679, you would first dial a 9, then, 011, then the country code 679, then the phone number.)
3. Once you hear the fax machine you've dialed answer the call press the Start button. (see *image 5.4*)
4. Hang up the handset. (see *image 5.5*)



image 5.1



image 5.2



image 5.3

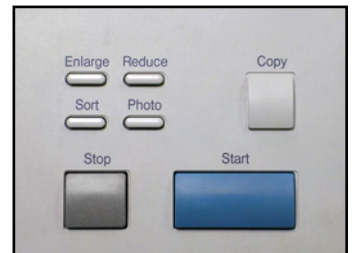


image 5.4



image 5.5



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Resolution Keys](#)

[Manual Transmission](#)

[Manual Fax Redial](#)

[Dual Access](#)

[Printing Reports](#)

[Maintenance](#)

[Troubleshooting](#)

Sending a Fax > Manual Fax Redial

When the line is busy, after you disconnect the call press Redial/Pause to retry the number. (see *image 6.1*)

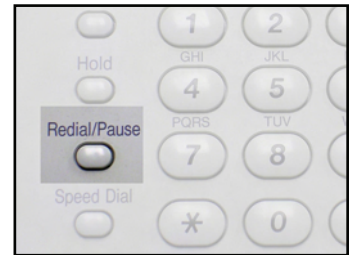


image 6.1



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Resolution Keys](#)

[Manual Transmission](#)

[Manual Fax Redial](#)

[Dual Access](#)

[Printing Reports](#)

[Maintenance](#)

[Troubleshooting](#)

Sending a Fax > Dual Access

You can scan up to 50 pages into the fax memory, even when the fax machine is receiving or sending another fax.

1. Make sure the document feeder is empty.
 2. Place the document in the feeder.
 3. Enter the fax number.
 4. Press Start.
- You can cancel a job while you are scanning it into memory by pressing Stop.
 - Eject the document by pressing Stop again.



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Printing Reports](#)

[Activity Report](#)

[Maintenance](#)

[Troubleshooting](#)

Printing Reports > Activity Report

The activity report gives a summary of approximately the last 50 faxes. The abbreviation TX indicates an outgoing fax or "Transmit" and RX refers to an incoming fax or "Receive".

1. Push the function key. *(see image 8.1)*
2. Push the 7 key. This tells the fax machine that you want to print a report. *(see image 8.2)*
3. Push the 2 key. This tells the fax machine that you want to print an Activity Report. *(see image 8.3)*
4. Push the set key. *(see image 8.4)*
5. Push the start key to begin printing. *(see image 8.5)*
6. To exit, push the stop key. *(see image 8.5)*

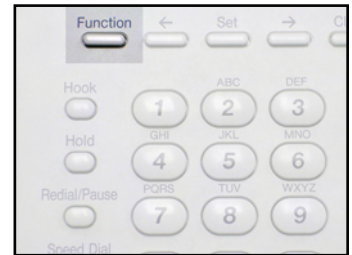


image 8.1

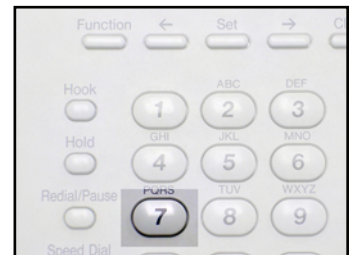


image 8.2

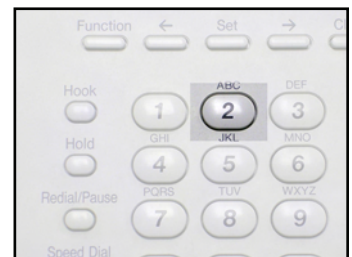


image 8.3

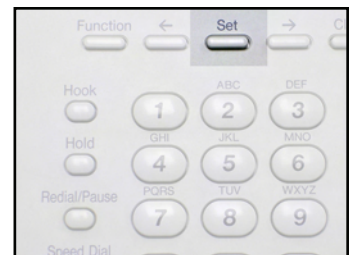


image 8.4

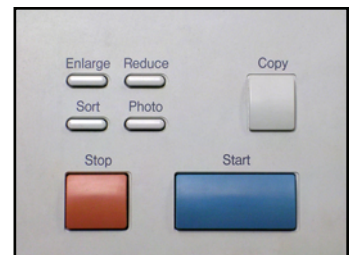


image 8.5



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Printing Reports](#)

[Maintenance](#)

[Loading Paper](#)

[Loading Via Manual Feed Slot](#)

[Cleaning the Scanner](#)

[Cleaning the Printer](#)

[Cleaning the Drum Unit](#)

[Replacing the Toner Cartridge](#)

[Replacing the Drum Unit](#)

[Troubleshooting](#)

Maintenance > Loading Paper

1. Open the multi-purpose sheet feeder cover. (see *image 9.1*)
2. Load the paper
 - Fan the paper well.
 - Make sure that the print side is toward the fax machine.
 - Make sure the paper level is stacked below the paper mark. (see *image 9.2*)
3. Adjust the paper guides to fit the paper. (see *image 9.3*)
4. Close the multi-purpose sheet feeder cover. (see *image 9.4*)

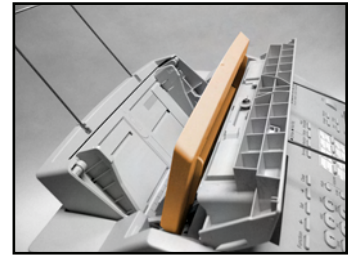


image 9.1



image 9.2



image 9.3



image 9.4



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Printing Reports](#)

[Maintenance](#)

[Loading Paper](#)

[Loading Via Manual Feed Slot](#)

[Cleaning the Scanner](#)

[Cleaning the Printer](#)

[Cleaning the Drum Unit](#)

[Replacing the Toner Cartridge](#)

[Replacing the Drum Unit](#)

[Troubleshooting](#)

Maintenance > Loading Via Manual Feed Slot

1. Insert the side you wish to print on face down in the manual feed slot (see image 10.1)
2. Align the paper at the center of the manual feed slot. Be sure to insert the sheet all the way. (see image 10.2)
3. Adjust the paper guide of the manual feed slot to the width of the paper you're using. (see image 10.3)



image 10.1

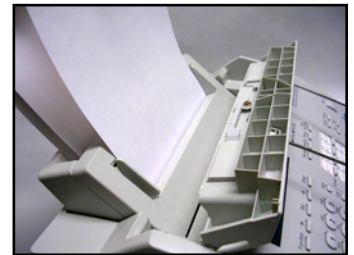


image 10.2

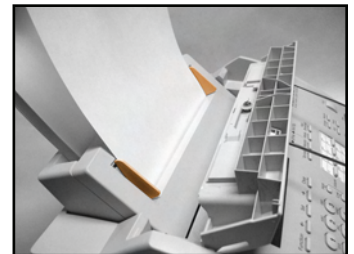


image 10.3



Brother Intellifax 2750

Table of Contents

Introduction

Sending a Fax

Printing Reports

Maintenance

Loading Paper

Loading Via Manual Feed Slot

Cleaning the Scanner

Cleaning the Printer

Cleaning the Drum Unit

Replacing the Toner Cartridge

Replacing the Drum Unit

Troubleshooting

Maintenance > Cleaning the Scanner

1. Unplug the telephone line and the power cord.
 - When you reconnect these lines later, make sure to connect the power cord first, then the telephone line.
2. Open the Control Panel cover. *(see image 11.1)*
3. Wipe any dirt off the critical scanning areas using a damp cloth.
 - To clean white bar, moisten a small piece of clean soft, lint-free cloth with isopropyl alcohol. *(see image 11.2)*
 - Follow the same procedure to clean the glass cover. *(see image 11.3)*



image 11.1



image 11.2

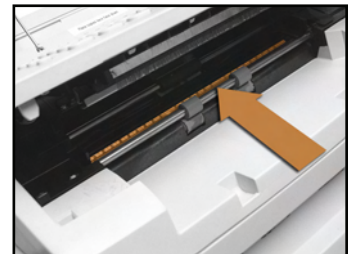


image 11.3



Brother Intellifax 2750

Table of Contents

Introduction

Sending a Fax

Printing Reports

Maintenance

Loading Paper

Loading Via Manual Feed Slot

Cleaning the Scanner

Cleaning the Printer

Cleaning the Drum Unit

Replacing the Toner Cartridge

Replacing the Drum Unit

Troubleshooting

Maintenance > Cleaning the Printer

1. Open the top cover. *(see image 12.1)*
2. Remove the drum unit assembly.
 - Remove by holding each side of the drum by its handles and gently lifting the drum forward towards you. *(see image 12.2)*
3. Wipe the electric terminals with isopropyl alcohol on a cotton swab. *(see image 12.3)*
4. Gently wipe the scanner window *(see image 12.4)* and the toner sensor with a clean soft dry cloth. *(see image 12.5)*
 - Do not use alcohol to clean the scanner window or the toner sensor



image 12.1



image 12.2

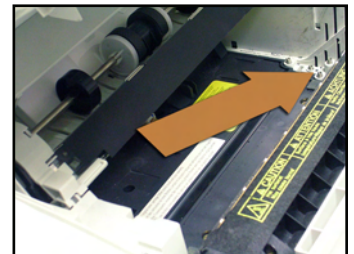


image 12.3

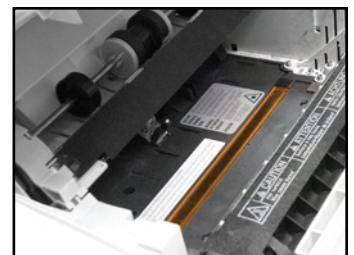


image 12.4

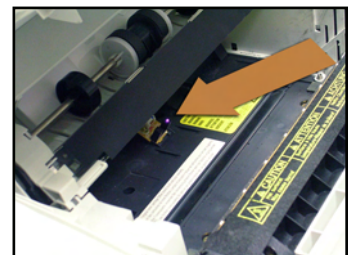


image 12.5



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Printing Reports](#)

[Maintenance](#)

[Loading Paper](#)

[Loading Via Manual Feed Slot](#)

[Cleaning the Scanner](#)

[Cleaning the Printer](#)

[Cleaning the Drum Unit](#)

[Replacing the Toner Cartridge](#)

[Replacing the Drum Unit](#)

[Troubleshooting](#)

Maintenance > Cleaning the Drum Unit

1. Carefully turn the drum unit upside down. (*see image 13.1*)
2. Clean the primary corona wire inside the drum unit
 - Gently slide the tab from right to left several times. (*see image 13.2*)
3. Return the tab to the home position.
 - Home position is indicated by the mark position.
 - The tab must be in the home position before reinstalling the drum unit. (*see image 13.3*)
4. Install the drum unit into the fax machine. (*see image 13.4*)
 - Install by holding the drum unit by its handles and inserting it into the fax machine.
5. Close the top cover. (*see image 13.5*)
6. Plug in the power cord.



image 13.1

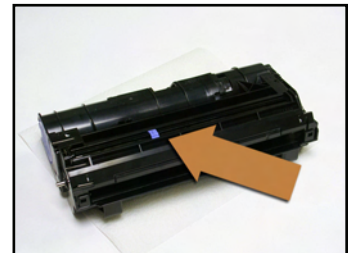


image 13.2

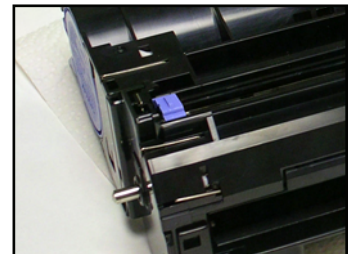


image 13.3



image 13.4



image 13.5



Brother Intellifax 2750

Table of Contents

Introduction

Sending a Fax

Printing Reports

Maintenance

Loading Paper

Loading Via Manual Feed Slot

Cleaning the Scanner

Cleaning the Printer

Cleaning the Drum Unit

Replacing the Toner Cartridge

Replacing the Drum Unit

Troubleshooting

Maintenance > Replacing the Toner Cartridge

1. Open the top cover
2. Remove the drum unit
 - Remove by holding each side of the drum by the handles and gently lifting the drum forward toward you. (see image 14.1)
 - Place drum unit on a drop cloth or large piece of disposable paper to avoid spilling and scattering the toner.
3. Gently turn the lever on the toner cartridge forward until it stops. (see image 14.2)
 - Close the shutter by turning the lever fully to the front.
 - The toner cartridge cannot be removed unless the shutter is completely closed
4. Remove the old toner cartridge from the drum unit
 - Gently pull the cartridge out. (see image 14.3)
5. Unpack the new toner cartridge.
 - Place the used toner cartridge into the bag and discard it.
6. Gently rock the toner cartridge from side to side
 - Rock the cartridge five or six times.
7. Slide the new toner cartridge into the opening on the right side of the unit.
 - Make sure the toner cartridge guide arrow is exactly aligned with the guide arrow on the drum unit. (see image 14.4)
8. Gently turn the lever on the toner cartridge backward until it stops
9. Reinstall the drum unit into the fax machine and close the top cover.



image 14.1



image 14.2

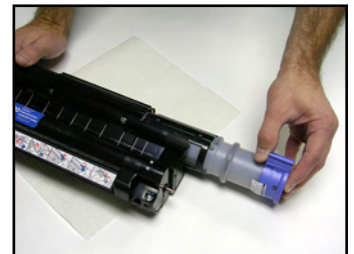


image 14.3



image 14.4



Brother Intellifax 2750

Table of Contents

Introduction

Sending a Fax

Printing Reports

Maintenance

Loading Paper

Loading Via Manual Feed Slot

Cleaning the Scanner

Cleaning the Printer

Cleaning the Drum Unit

Replacing the Toner Cartridge

Replacing the Drum Unit

Troubleshooting

Maintenance > Replacing the Drum Unit

The drum unit is used to create print on the paper. The display will show "Change drum soon" when the unit is wearing down. However, if there is a noticeable deterioration in the print quality without the display prompt, the drum unit should be replaced. The drum life is estimated anywhere from 8,000 to 20,000 pages.

1. Open the top Cover (*see image 15.1*)
2. Remove the drum unit
 - Remove unit by holding each side of the drum by its handles and gently lifting the drum forward toward you. (*see image 15.2*)
 - Place drum unit on a drop cloth or large piece of disposable paper to avoid spilling and scattering toner.
3. Remove the toner cartridge from the drum unit and keep it in a safe place.
4. Wait to unpack the new drum unit until you are ready to install it.
 - Place the old drum into the aluminum bag and discard it according to local regulations.
5. Gently rock the new drum from side to side five or six times.
6. Do not remove the clear plastic starter sheet.
7. Reinstall the toner cartridge into the new drum unit. (*see image 15.3*)
 - See previous section on replacing the toner cartridge.
8. Holding the new drum unit by the handles, install it.
9. Close the top cover.
 - The fax machine will eject the clear plastic starter sheet automatically



image 15.1



image 15.2

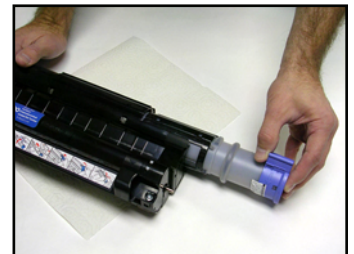


image 15.3



Brother Intellifax 2750

Table of Contents

Introduction

Sending a Fax

Printing Reports

Maintenance

Troubleshooting

Paper Jam

Sheet Feeder Jam

Paper Jam Near Drum Unit

Paper Jam Near Fuser Unit

Common Error Codes

Troubleshooting > Paper Jam

Important: During use of the fax machine, certain parts will heat up and become extremely HOT. Be very careful what you touch to avoid being burned.

1. Open the control panel on the front of the machine by lifting up on the front, lower edge. (see image 16.1)
2. Pull the offending sheet of paper toward the front of the machine until it comes free. (see image 16.2)
 - Important: Do NOT pull the jammed paper toward the rear of the machine as it may damage the feeder mechanism.
3. Press the Stop button on the control panel to cancel the operation. (see image 16.2)



image 16.1



image 16.2

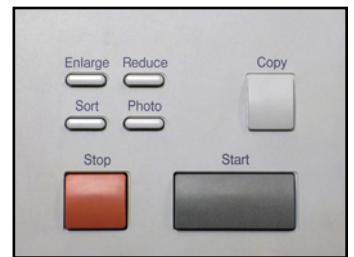


image 16.3



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Printing Reports](#)

[Maintenance](#)

[Troubleshooting](#)

[Paper Jam](#)

[Sheet Feeder Jam](#)

[Paper Jam Near Drum Unit](#)

[Paper Jam Near Fuser Unit](#)

[Common Error Codes](#)

Troubleshooting > Sheet Feeder Jam

1. Open the feeder unit. *(see image 17.1)*
2. Pull the stuck sheet(s) up toward the rear of the machine. *(see image 17.2)*
3. Close the feeder unit.
 - Important: It is a good idea to open up the top cover and check to make sure there aren't any torn pieces of paper stuck in the machine. *(see image 17.3)*

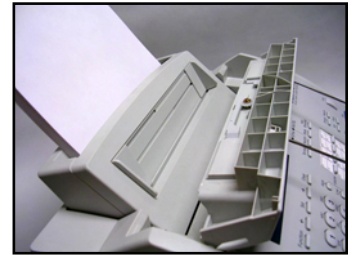


image 17.1

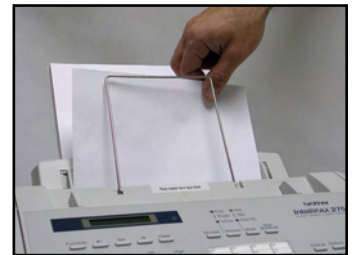


image 17.2



image 17.3



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Printing Reports](#)

[Maintenance](#)

[Troubleshooting](#)

[Paper Jam](#)

[Sheet Feeder Jam](#)

[Paper Jam Near Drum Unit](#)

[Paper Jam Near Fuser Unit](#)

[Common Error Codes](#)

Troubleshooting > Paper Jam Near Drum Unit

1. Open the front cover.
2. Remove the drum unit. (*see page 15*)
3. Pull the paper toward the front of the machine until it comes free. (*see image 18.1*)
4. Replace the drum unit.
5. Close the cover.



image 18.1



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Printing Reports](#)

[Maintenance](#)

[Troubleshooting](#)

[Paper Jam](#)

[Sheet Feeder Jam](#)

[Paper Jam Near Drum Unit](#)

[Paper Jam Near Fuser Unit](#)

[Common Error Codes](#)

Troubleshooting > Paper Jam Near Fuser Unit

1. Open the front cover.
2. Remove the drum unit.
3. Pull the paper up towards the rear machine until it comes free. *(see image 19.1)*
4. Replace the drum unit.
5. Close the cover.

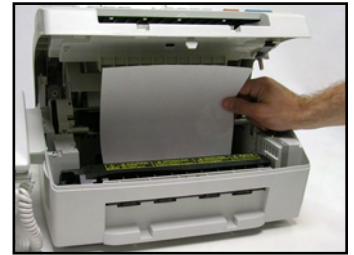


image 19.1



Brother Intellifax 2750

[Table of Contents](#)

[Introduction](#)

[Sending a Fax](#)

[Printing Reports](#)

[Maintenance](#)

[Troubleshooting](#)

[Paper Jam](#)

[Sheet Feeder Jam](#)

[Paper Jam Near Drum Unit](#)

[Paper Jam Near Fuser Unit](#)

[Common Error Codes](#)

Troubleshooting > Common Error Codes

CHECK PAPER – The machine is out of paper or the paper is incorrectly loaded. Check to make sure there is paper loaded and that it is correctly loaded into the feeder.

COOLING DOWN PLEASE WAIT – The temperature of the internal component is too hot. The machine will go into cooling down mode and wait for the toner and/or drum to cool down sufficiently. The machine will resume printing once the components have cooled sufficiently.

COVER OPEN – The front cover or the feeder cover is open. Open each cover and close firmly to verify that the covers are shut.

DISCONNECTED – The call was terminated by the other party's machine. If you were transmitting a fax, try sending it again. If you were receiving a transmission, have the party resend the fax.

MACHINE ERROR XX PRESS STOP KEY – There is a mechanical problem with the machine and it needs to be serviced by Brother. Please call 800.284.4329 to report the problem.

NO RESPONSE/BUSY – The number you are trying to connect to is busy or isn't answering. Verify the number you are dialing and try to send the fax again.

PRINTER JAM - There is a sheet of paper that is stuck or is not moving through the machine properly. Refer to the previous sections on how to correctly remove the paper jam.

SET CARTRIDGE – The toner cartridge is not installed or is incorrectly installed. Refer to the maintenance section for instructions on how to correctly install the cartridge.

TONER LOW – The toner cartridge is almost empty. You can still receive faxes and print reports for the time being. You should order a new toner cartridge when this message is shown.