


brother®

TZ
TAPE

P-touch

1800

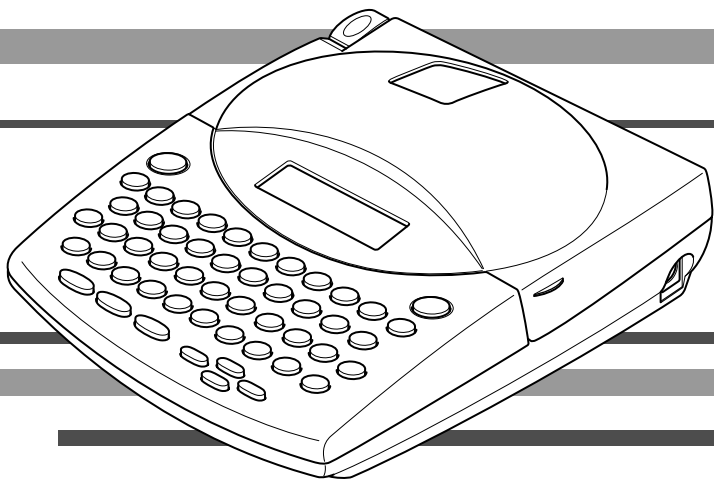

USER'S GUIDE

- Read this User's Guide before you start using your P-touch.
- Keep this User's Guide in a handy place for future reference.

INTRODUCTION

Thank you for purchasing the P-touch 1800!

Your new P-touch will allow you to create labels and stamps for any need. Its versatility enables you to design custom labels by choosing from a variety of frame designs and from many characters sizes and styles. In addition, the four tape widths (1/4" (6 mm), 3/8" (9 mm), 1/2" (12 mm), and 3/4" (18 mm)) and variety of tape colors allow you to print personalized labels, useful for color-coded filing. With the **Stamp** function, you can quickly and easily make stamps for reusable pre-inked stamp holders.






 

You no longer have to worry about urgent tasks that require professional printing. In the office, the factory, the lab and the home, the quality and performance of the P-touch 1810 makes it an extremely practical machine.

Finally, as you may want to refer to this User's Guide occasionally, we suggest that you keep it in a handy place.

Canadian Department of Communications Compliance Statement

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of the Department of Communications.

Switching the language of the messages between English and French

1. Erase all of the text in the display either with  or by holding down  and pressing .
2. Hold down  and press  to display the current language setting ("ENGLISH" or FRANÇAIS).
3. Keep  held down and press  again until the desired setting appears in the display, then release the keys.



The default setting is English.

Turning off the machine does not change the language setting.

The language cannot be changed if some text remains in the display.

CONTENTS

Getting Started

GENERAL DESCRIPTION.....	2
GENERAL PRECAUTIONS	4
BATTERIES.....	5
OPTIONAL AC ADAPTOR	6
TAPE CASSETTE.....	7
ATTACHING LABELS.....	8
PRINT HEAD & ROLLERS	12

Learning the Ropes

DOOR LABEL EXAMPLE.....	14
ADDRESS LABEL EXAMPLE	18

For Your Information

POWER KEY	26
CURSOR KEYS.....	27
CODE, ALT & SHIFT KEYS.....	29
SPACE KEY	32
RETURN KEY	33
TAB FUNCTION.....	34
DELETE KEY	36
LINE OUT FUNCTION	37
CLEAR FUNCTION.....	38
ACCENT FUNCTION.....	41
SYMBOL FUNCTION	43
AUTO FORMAT FUNCTION.....	45
STAMP FUNCTION	47
SIZE & WIDTH FUNCTIONS.....	51
STYLE FUNCTION.....	55
UNDERLINE FUNCTION.....	58
FONT FUNCTION.....	59
FRAME FUNCTION	61


TAPE MARGIN FUNCTION..... 63
HORIZONTAL ALIGNMENT FUNCTION..... 65
MIRROR PRINTING FUNCTION 66
LENGTH FUNCTION 67
PRINT KEY & FEED FUNCTION 69
NUMBERING FUNCTION..... 70
REPEAT PRINTING FUNCTION..... 72
MEMORY FUNCTIONS 74
TROUBLESHOOTING 78
ERROR MESSAGE LIST 79
SPECIFICATIONS..... 83
ACCESSORIES..... 84

Getting Started




GENERAL DESCRIPTION


TOP VIEW

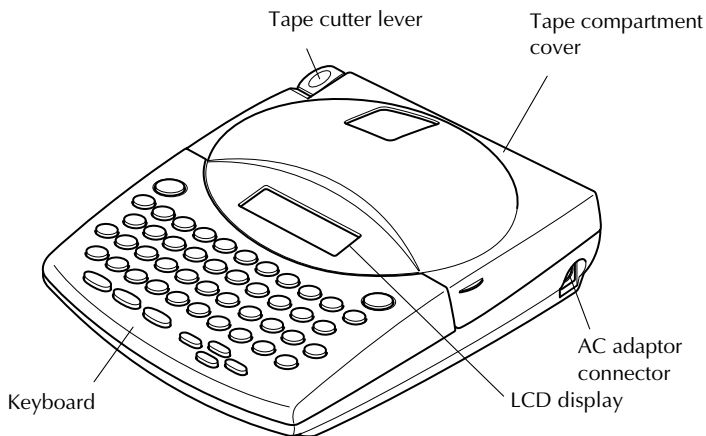


BOTTOM VIEW

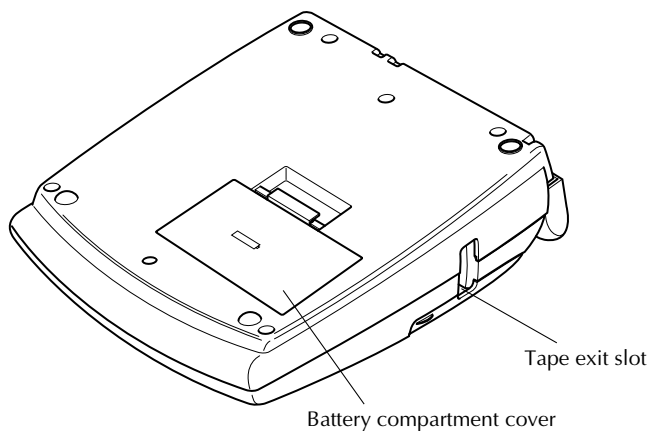

KEYBOARD & LCD DISPLAY

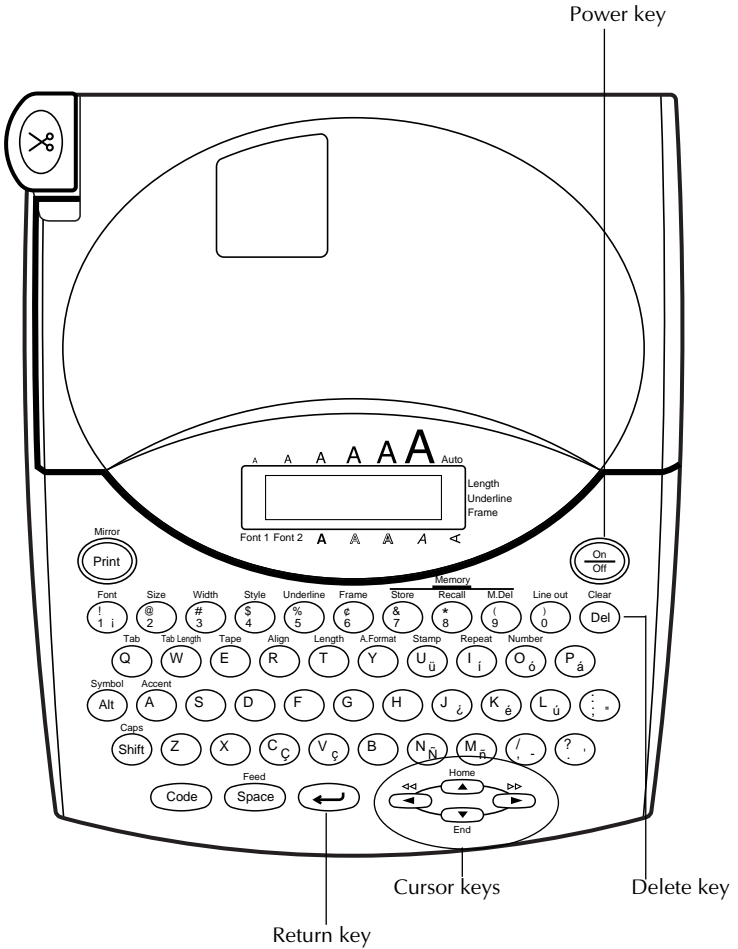

GENERAL PRECAUTIONS


- Use only Brother TZ tapes with this machine. Do not use tapes that do not have the  mark.
- Do not pull on the tape being fed from the P-Touch. This may damage the tape cassette.
- Do not use the machine in dusty places, and keep it out of both direct sunlight and rain.
- Do not expose the machine to high temperatures or high humidity. Never leave it on the dashboard or in the back of your car.
- Do not leave any rubber or vinyl on the machine for an extended period of time. Doing so may cause staining.
- Do not clean the machine with alcohol or other organic solvents. Use a soft, dry cloth only.
- Do not put any foreign objects into or anything on the machine.
- To avoid injuries, do not touch the cutter's edge.
- Use only the AC adaptor (model AD-60) designed exclusively for this machine. Use of any other adaptor will void the warranty.
- Do not try to disassemble the AC adaptor.
- When the machine is not being used for a long period of time and it is not necessary to keep the text files stored in the memory, disconnect the AC adaptor, and remove the batteries to prevent them from leaking and damaging the machine.
- When the AC adaptor is connected, unplugging the adaptor from the electrical outlet before unplugging it from the machine can delete all text files in the memory, even if batteries are installed.
- **Use six AA alkaline batteries in this machine.**

BATTERIES



This lightweight and portable machine can be used anywhere by installing six (6) **AA alkaline batteries**. When you change the batteries, always replace all six at the same time.

To change the batteries:

- 1 Remove the battery compartment cover on the back of the machine.
- 2 If batteries are already installed, remove them.
- 3 Insert six new AA alkaline batteries, making sure that they face the correct direction.
- 4 Attach the battery compartment cover.

 *Be sure to insert the new batteries within five minutes of removing the old ones, otherwise the text shown in the display and any text files stored in the memory will be lost (unless the machine is plugged into an AC outlet with the AC adaptor).*

Remove the batteries and disconnect the AC adaptor if you do not intend to use this machine for an extended period of time. When the power is disconnected, all text shown in the display and stored in the memory will be lost. If alkaline batteries are not used, large fonts cannot be printed.

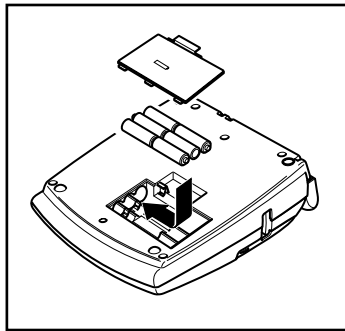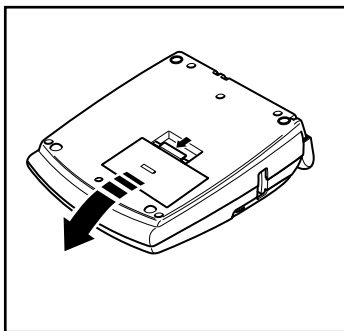

OPTIONAL AC ADAPTOR

The AC adaptor (model AD-60) allows you to use this machine wherever there is an electrical outlet.

To connect the optional AC adaptor:

- 1 Insert the plug on the adaptor cord into the connector marked DC IN 9.5V on the right side of the machine.
- 2 Insert the plug on the adaptor into the nearest standard electrical outlet.




Only use the AC adaptor designed exclusively for this machine.

Remove the batteries and disconnect the AC adaptor if you do not intend to use this machine for an extended period of time. When the power is disconnected, all text shown in the display and stored in the memory will be lost.

When the AC adaptor is connected, unplugging the adaptor from the electrical outlet before unplugging it from the machine can delete all text files in the memory, even if batteries are installed.

It is recommended that you use the AC adaptor when printing large fonts on 3/4" (18-mm)-wide tape since this operation can quickly drain the batteries.

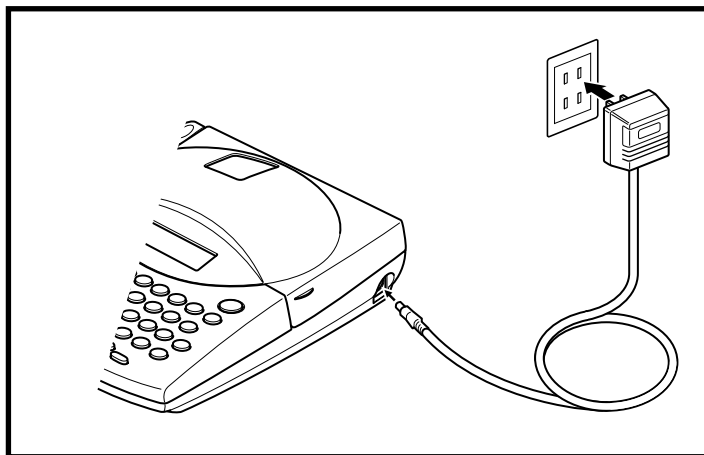







TAPE CASSETTE

A single TZ tape cassette is supplied with this unit. However, since TZ tape cassettes are available for this machine in a wide variety of colors and sizes, it is possible to make distinctive color-coded and stylized labels.

In addition, this machine has been designed to allow you to change the tape cassettes quickly and easily.

To change the tape cassette:

- 1 Lift open the tape compartment cover. The installed cassette is also released.
- 2 If a tape cassette is already installed, remove it by pulling it straight up.
- 3 If the ink ribbon in the other tape cassette is loose, use your finger to wind the toothed wheel in the direction of the arrow on the cassette until there is no slack in the ribbon. Also, make sure that the end of the tape feeds under the tape guides.
 *If you are using a new tape cassette provided with a stopper, be sure to remove the stopper.*
- 4 Insert the tape cassette firmly into the tape compartment, making sure that the entire back of the cassette touches the bottom of the compartment.
 *When inserting the tape cassette, make sure that the inner ribbon does not catch on the corner of the metal guide.*
- 5 Close the compartment cover, then turn on the machine if it is off.
- 6 Hold down  and press  once to advance the tape and remove any slack.
- 7 Push down on the tape cutter lever to cut off any excess tape.

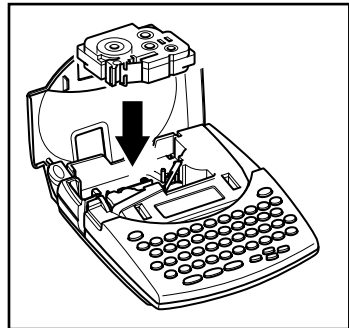
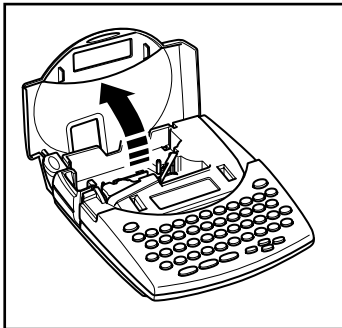


ATTACHING LABELS

LAMINATED TAPE


The enclosed stick enables you to easily remove the backing from labels printed on laminated tapes.

- 1 Hold the tape in your left hand, with the printed surface facing up, and hold the stick in your right hand.
- 2 Pass the tape halfway through the long narrow hole in the stick.
- 3 Turn the stick three-quarters of a turn towards you and pull the stick away from you as shown below.
- 4 Peel off the label backing.

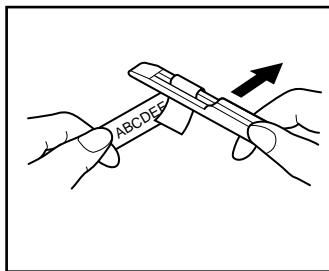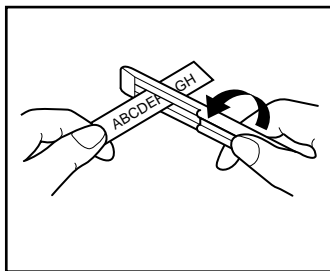

NON-LAMINATED TAPE


Labels printed on non-laminated tapes can be folded in half so that the inside edges of the two backing pieces come off the label, enabling the backing to easily be peeled off.

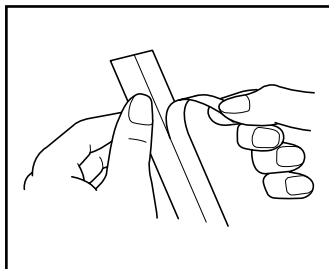

INSTANT-LETTERING TAPE (RUB-ON TRANSFERS)


Instant-lettering tape is used to transfer your text onto paper. After printing the text onto instant-lettering tape and cutting off the label, position the label on a sheet of paper. By simply rubbing the instant lettering tape's non-printed side with the enclosed stick, you can transfer the text directly onto the paper.



☞ *Hold the tape very firmly and do not move it while rubbing the tape.*

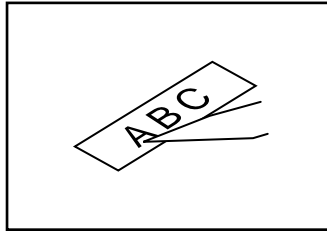

IRON-ON TRANSFER TAPE

 Iron-on transfer tape is used to transfer your text onto garments using an iron.

- 1 Insert an iron-on transfer cassette, press  to print the text, then push down on the tape cutter lever to cut off the label.
- 2 Iron the garment to flatten it before transferring the text.
- 3 Place the label on the garment at the location where you wish the text to be transferred.
- 4 Set the iron to cotton (300 to 350°F or 150 to 180°C), then press down on the label with the iron for about 15 seconds.
- 5 Allow the iron-on transfer to cool (for about 60 seconds), then carefully remove the backing tape.

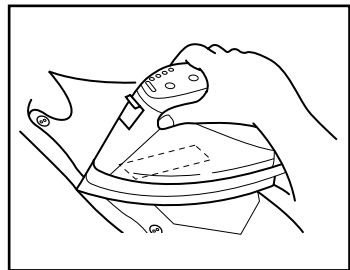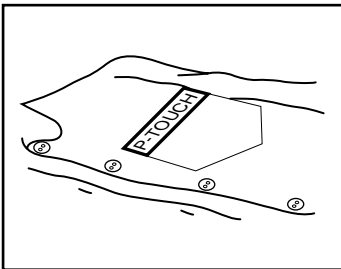



White garments made from 100% cotton with a plain (smooth) surface are best for iron-on transfers.

You can also make transfers to garments made from 100% linen or cotton and polyester mix as long as they have a plain (smooth) surface.

The label will not adhere properly to any cloth with a rough surface, such as pile or denim, or with a waterproof surface. Heat-sensitive materials, such as nylon, acetate or other similar fibers, are also unsuitable as they may be damaged when pressing with an iron at a high temperature.

Do not move the iron while pressing. The label may move out of the desired position. Press the iron vertically down onto the cloth.

After the backing tape has been removed, the transferred label may appear glossy. In addition, some white spots may have appeared on the label if it was touched while the backing tape was peeled off. These can be removed by ironing over the label with a piece of cloth placed between the label and the iron.

The label will have a white background on colored cloth.

Since the transferred label cannot be removed once it is applied, make all transfers with care.

Washing:

Garments with transfer labels can be washed over 20 times if the label has been transferred correctly. Normal biological and non-biological household detergents may be used.

The label may become discolored if the garment is placed in bleach for an extended length of time.

Be careful that hard objects such as buckles or buttons do not come into contact with the label during the wash.

Do not dry clean garments which have had transfer labels applied.

Drying:


Garments with transfer labels may be dried either inside or outside out.

Do not tumble dry. The transfers will come off and may stick to other items of clothing.

Ironing:

Iron garments with transfers using normal temperature settings.

Be sure to place a piece of cloth between the iron and the label when you iron over it to prevent the label from sticking to the iron.

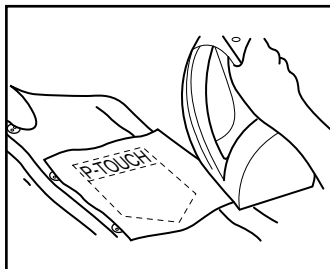

The labels are non-toxic, however, please maintain the usual precautions, such as not placing them in your mouth, etc.

Do not store the tape cassette in areas exposed to direct sunlight, high humidity or dust.

FABRIC TAPE

Fabric tape is used to attach a piece of fabric printed with your text onto garments using an iron. After printing the text onto fabric tape and cutting off the label using scissors, place the label on an ironed garment at the location where you wish to attach it in such a way that the printed text can be read correctly. Cover the label with another piece of cloth and use an iron set to a medium-high temperature (320 to 356 °F (160 to 180 °C)) to press down firmly for 10 to 15 seconds. For more details, refer to the instructions included with the fabric tape cassette.

STAMP TAPE

Refer to pages 47 through 50 for a detailed explanation on using the stamp tape to make stamps.



PRINT HEAD & ROLLERS

Occasionally, specks of dust or dirt become attached to the machine's print head and rollers. This is particularly likely when you are using the unit outdoors or in a very dusty environment. If a section of the print head is covered with dust, a blank horizontal streak may appear through the label text. Therefore, as with a tape recorder, the machine's head may need to be cleaned from time to time.


To clean the print head and rollers:

- 1 Turn off the machine.
- 2 Open the tape compartment cover, then remove the tape cassette if one is installed. The print head and rollers are located in the tape compartment.
- 3 **Print head:** Use a dry cotton swab to gently wipe the print head with an up-and-down motion.
Rollers: Use a dry cotton swab to wipe each roller with an up-and-down motion while rotating them with your finger.
- 4 Install a tape cassette, close the tape compartment cover, and then try printing again.
- 5 If dust still remains, repeat steps 3 and 4 using a cotton swab dipped in isopropyl (rubbing) alcohol.

If none of the above works, contact your service representative.

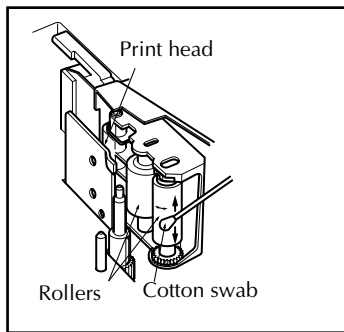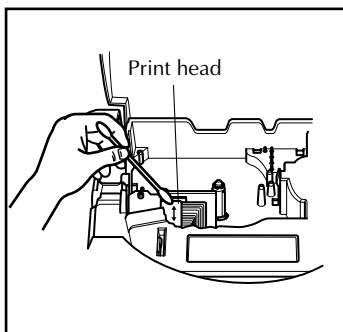

*Learning
the Ropes*

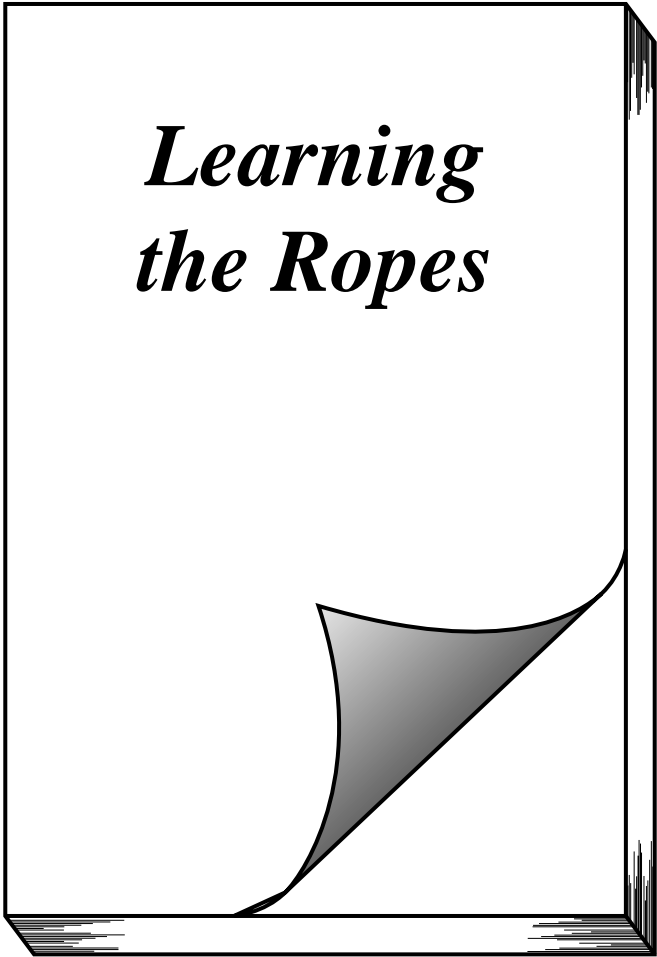

DOOR LABEL EXAMPLE



After you have inserted the batteries and the enclosed tape cassette as explained in the *Getting Started* chapter, let's practice using some of the basic functions of your P-touch. We must first begin by turning on the power to the machine.

To turn on the machine:

- 1 Press  in the top right-hand corner of the keyboard.




The underline in the LCD display is called the “cursor”. It is like a pointer which shows your current position and lets you select characters in your text.


The text you create may sometimes be longer than the 11 characters that the LCD display can show at one time. Therefore, the cursor can be moved to show other parts of the text. Pressing the left cursor key () moves the cursor to the left so that the left side of the text can be seen and pressing the right cursor key () moves the cursor to the right so that the right side of the text can be seen.

Some format settings are shown by the triangular and square indicators around the edge of the display. The default settings (the selected settings when the power is turned on for the very first time) have been pre-programmed into the machine and represent the most common settings for labels. However, you can design your own label to have any format that you wish. Detailed explanations of the formats can be found on pages 66 through 68. Now, let's enter the text for our first example, the simple door label shown below.

 

MEETING ROOM


 *The label in this example was made using the enclosed 1/2" (12-mm)-wide tape.*

ENTERING THE TEXT

Since all of the text will be in capital letters, we will use the **Caps** mode, which allows us to type capital letters continuously without holding down .






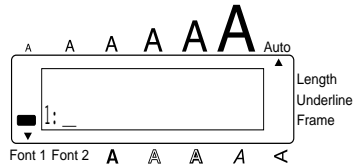
To enter Caps mode:

 
- ② Hold down  and press  once. The **Caps** indicator on the left side of the display lights up.






 
Then, let's type in the text in the same way that you would type on a typewriter or a computer keyboard.

To type in "MEETING":

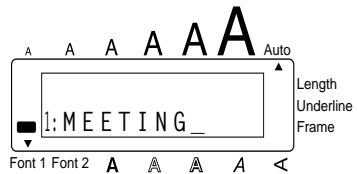 
- ③ Press  once and  twice, then press , ,  and  once each.
- All letters are automatically entered as capital letters.*



Also like on a typewriter or computer keyboard, the **Space** key () allows you to add blank spaces to the text.

 The **Space** key () is different from the right cursor key () , which moves the cursor through the entered text without adding blank spaces.


 

To add a space:

- 4 Press .



Type the second word, "ROOM", to finish the text.

To type in "ROOM":



- 5 Press  once,  twice, then  once.

Since the text is longer than the LCD display, "ME" moves off the display to the left.



Now that we are finished entering capital letters, we can exit **Caps** mode.

To exit Caps mode:

- 6 Hold down  and press  once. The **Caps** indicator goes off.




Once you have entered the text, you can easily edit it by correcting mistakes or simply adjusting it or its format. For detailed explanations of text editing methods, see pages 36 to 40.

PRINTING THE TEXT

Several format settings are available, however, in this example we will use the default settings pre-programmed into the machine and print out our label.

To print the door label:

- Press  once. The message "COPIES 1/1" appears while the label is being printed.




To cut off the door label:

- Push down on the tape cutter lever.

ADDRESS LABEL EXAMPLE

While making the multi-line address label in this example, we will learn how to create more decorative labels using the various format settings.

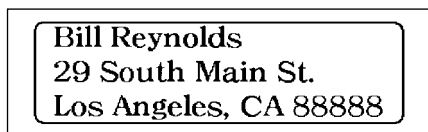


☞ *Three-line labels, such as this address label, can only be printed on either 1/2" (12-mm)- or 3/4" (18-mm)-wide tape.*

Before entering the new text, we must first erase the text shown in the display from the previous time that the machine was used. When clearing the display, we can choose whether to erase all of the text and return all format functions (**Font**, **Size**, **Width**, **Style**, **Underline**, **Frame**, **Tape margin**, **Alignment**, and **Length**) to their default settings or just to erase the text.

To erase all of the text and reset the format functions:

- ① Hold down **Code** and press

Clear
Del once.

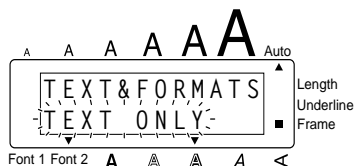

- ② Press **Home** or **End** until






TEXT&FORMATS is selected,
and then press **←**.




 
ENTERING THE TEXT

Let's begin by typing in the first row of text, the name "Bill Reynolds".

To type in "Bill Reynolds":

- 3 Hold down  and press  once, then release . Press  once, then  twice.

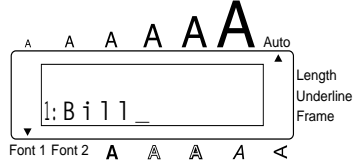




- 4 Press .




- 5 Type in "Reynolds".

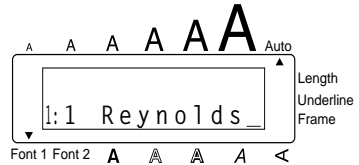Again, the text is longer than the LCD display. So "Bill" moves off the display to the left.



In a multi-line label, the return key () is used to end one line and start the next one. The return mark () indicates the end of the line.

 
To end the first line and begin another one:

- 6 Press .




Now, we can enter the address: 29 South Main St.; Los Angeles, CA 88888.

To type in the address:

- 7 Type "29 South Main St.", then press .



- 8 Type "Los Angeles, CA 88888".

 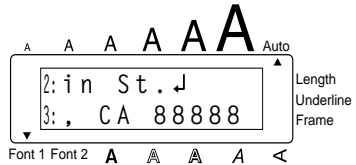

 



FORMATTING THE TEXT

Now the text has been entered as we wish. If it were printed, the standard default settings would be used. The text would be aligned on the left side with 1 1/24" (25 mm) margins and would not be framed or underlined. In addition, the characters would be auto-sized (**Auto**) and printed using the **HELSEINKI** font (Font1) and **NORMAL** style settings. For more details concerning format settings, please see pages 51 and 65.

For this label, though, let's assume we want a different style of text: **BRUSSELS** font (Font2), framed, and printed with **NARROW** (1/6" (4 mm)) tape margins. Therefore, we must change the format.

To select the BRUSSELS font setting:

- 9 While holding down , press  once, and keep  held down to display the current font setting.

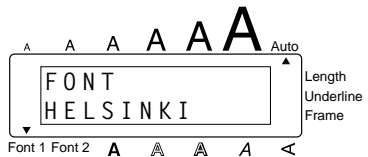


- 10 While still holding down

Code, continue pressing

Font **1** **A** until **BRUSSELS** is displayed, and then release

Code.

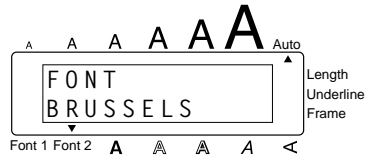

To select the **ROUND** frame setting:

- 11 While holding down **Code**,

press **Frame** **6** once, and keep

Code held down to display the current frame setting.



- 12 While still holding down **Code**,

continue pressing **Frame** **6** until

ROUND is displayed, and then release **Code**.




To select the **NARROW** tape margin setting:

- 13 While holding down **Code**,

press **Tape** **E** once, and keep

Code held down to display the current tape margin setting.

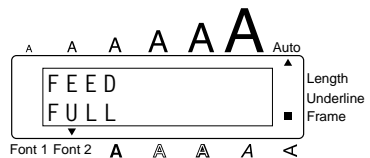

- 14 While still holding down


Code, continue pressing **Tape** **E**

until **NARROW** is displayed, and then release **Code**.




Different format settings can be chosen either before or after the text is entered. The procedure shown above can be used to change the other format settings.

PRINTING THE TEXT


If we want only one copy of the text, we could just press  to print it. However, let's assume that we have three letters onto which we wish to attach address labels. Therefore, we need to print three copies of the same text.

To print three copies of the label:


15 Hold down  and press

 once.



 
16 Press .



17 Press . The number of each copy is displayed while it is being printed.




- 18 Push down on the tape cutter lever to cut the tape, then use scissors to cut along the cutting guide to separate the labels.




With these examples, we have covered many of the basic features of your P-touch so that you can begin creating your own customized labels. If you have any questions about any of the functions or keys, refer to the appropriate explanation in the following section.

*For Your
Information*

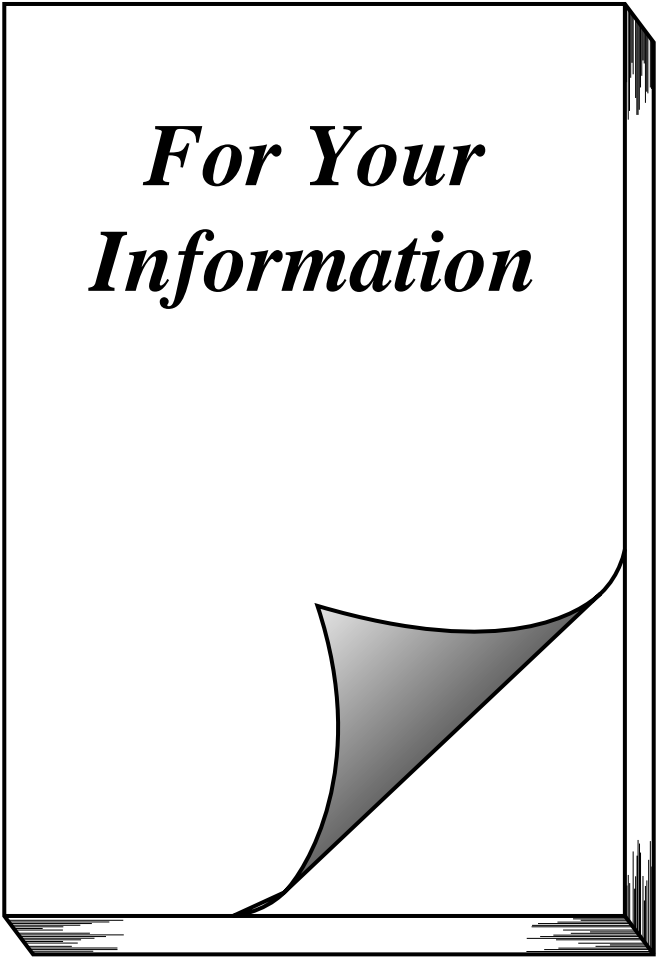


POWER KEY


The power key () is located in the top right-hand corner of the keyboard. If batteries have been installed or the machine has been plugged in using the optional AC adaptor, the previous session's information is displayed when the machine is turned on. This feature allows you to stop work on a label, turn off the machine, and return to it later without having to re-enter the text.

The machine will automatically turn off if no key is pressed within 5 minutes. The machine's internal memory stores the current session's information and displays it when you turn on the machine again.

To turn on the machine:

- Press . The previous session's information appears in the LCD display.

To turn off the machine:


- Press . The current session's information is stored in the internal memory.

CURSOR KEYS


The machine's LCD display shows two rows of 11 characters; however, the text that you create can be up to 99 characters long. You can review and edit your text by using the cursor keys to move the cursor so that different parts are shown in the display.

LEFT CURSOR KEY

 

To move the cursor one character to the left:

- Press  once.

To move the cursor several characters to the left:


- Hold down  until the cursor moves to the desired position.

To move the cursor to the beginning of the current line:


- Hold down  and press .

RIGHT CURSOR KEY

 

To move the cursor one character to the right:

- Press  once.

To move the cursor several characters to the right:


- Hold down  until the cursor moves to the desired position.

To move the cursor to the end of the current line:

- Hold down  and press .

UP CURSOR KEY

 
To move the cursor up to the previous line:

- Press  once.



If the cursor is in the first line of text, it will move to the beginning of the line.

To move the cursor up several lines:

- Hold down  until the cursor moves to the desired position.

To move the cursor to the beginning of the entire text:

- Hold down  and press .

DOWN CURSOR KEY


To move the cursor down to the following line:

- Press  once.

 



If the cursor is in the last line of text, it will move to the end of the line.

To move the cursor down several lines:

- Hold down  until the cursor moves to the desired position.

To move the cursor to the end of the entire text:

- Hold down  and press .

CODE, ALT & SHIFT KEYS

Most characters can be entered simply by pressing their keys. However, to use special functions or to enter capital letters, accented characters and some symbols, the following special keys are necessary.


CODE KEY

To use a function printed above a key:

- Hold down **Code** and press the key immediately below the desired function.

EXAMPLE

To start the Symbol function:

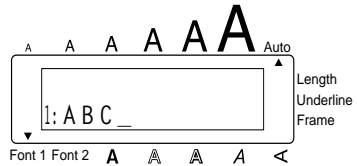



- Hold down **Code** and press

Symbol
Alt once.






  ALT KEY


To type in characters printed in color on the right-hand side of the keys:

- Hold down  and press the key of the desired character written in color. The **Alt** indicator on the left side of the display lights up while  is held down.

 EXAMPLE


To type in “-”:

- Hold down  and press  once. The **Alt** indicator lights up while  is held down.

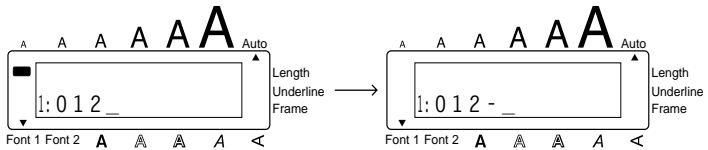


SHIFT KEY

To type in a capital letter or a symbol printed in the top left-hand corner of a key:

- Hold down  and press the key of the desired letter or symbol.


EXAMPLE

To type in “%”:

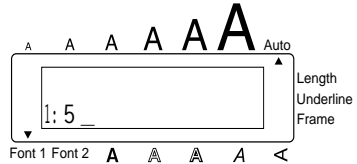



- Hold down  and press .




 
The **Caps** mode is similar to holding down . It allows you to type capital letters continuously.



To type in many capital letters:

 - 1 Hold down  and press . The **Caps** indicator on the left side of the display lights up.




- 2 Press the keys of the desired letters or symbols.
- 3 To exit **Caps** mode, hold down  and press . The **Caps** indicator goes off.

SPACE KEY

The **Space** key () lets you add blank spaces between characters in your text. It is different from the right cursor key (), which just moves the cursor without adding blank spaces.



To add a space:

- Press .


EXAMPLE



To add a space:

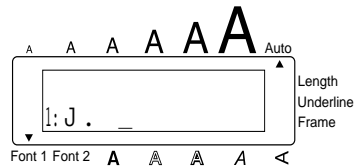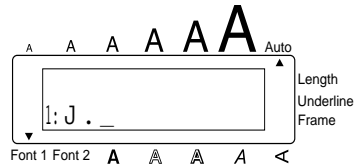- Press .




RETURN KEY



Like on a typewriter or word processor, this machine's return key () is used to end a line of text and start another one. When you have finished entering one line, press the return key to make a new line and move the cursor to it.

 A single block can only contain a maximum of three text lines. If you press  when the cursor is located in the third line, the error message "3 LINE LIMIT!" will appear.



Tape widths	Maximum number of lines that can be printed
1/4" (6 mm)	1
3/8" (9 mm)	2
1/2" (12 mm)	3
3/4" (18 mm)	3

The return key can also be used to select an item from a list (e.g., add a symbol or accented character to the text) or to apply a selected setting.


Some questions asking you to confirm a command may appear on the LCD display, especially when the function that you have chosen will delete or affect files. In these cases, pressing  is like answering "yes".

 To answer "no", press . Refer to DELETE KEY on page 36.


To add a new line:

- Press . The return mark () appears to indicate the end of the line.

To select an item from a list:



- Press .

To answer "yes":

- Press .

 



TAB FUNCTION


 
This function allows you to separate sections of a line of text by adding tabs. This enables you to create perfectly aligned columns without having to type in several spaces. All tabs have the same length and are measured from either the beginning of the line or the previous tab if there is more than one. The tab length can be set between 0.0" and 11.8" (0.0 and 30.0 cm).


 The text can contain no more than 50 tabs. If 50 tabs have already been added to the text when  is pressed, the error message "TAB LIMIT!" appears.

Part No.	Product	Price
Printer	8667	\$300
Fax	122960	\$75




To set the tab length:


- 1 Hold down  and press  once. The current tab length is displayed.
- 2 Press  or  until the desired length is displayed or use the number keys to type in the length.

  To change the units (inches or centimeters) used to display the tab lengths, press  until the desired units are displayed.

- 3 Press .

  
To add a tab:

- Hold down  and press  once. The tab mark () appears in the text to indicate the position of the tab.

 If the text in front of a tab extends past the point where the next section of text should start, the text will instead start at the following tab position. For example, if the tab length is set to 2" and the following text is typed in:

1: A B C  D E F  G H I ↓
2: J K L M N O P Q R S T  U

the label shown below will be printed.

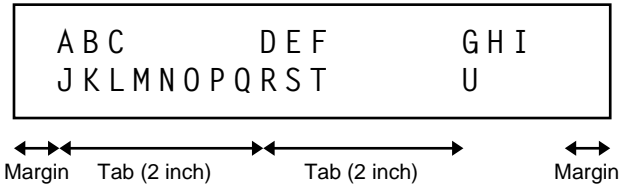


EXAMPLE


To set the tab length to 1”:

- 1 Hold down **Code** and press

Tab Length
W once.

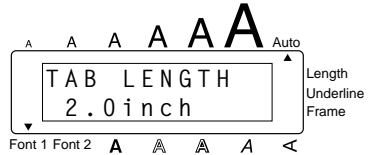

- 2 Press **End** until **1.0** is displayed.

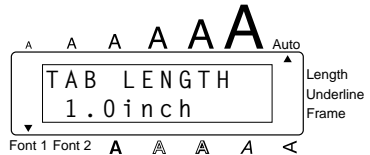


- 3 Press **Left Arrow**.



To add a tab:

- Hold down **Code** and press

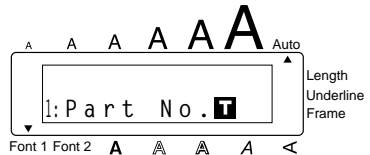
Tab
Q once.



DELETE KEY




 

The delete key () allows you to remove characters to the left of the cursor's current position. It differs from the left cursor key (), which only moves the cursor without deleting any characters.

The delete key can also be used to quit most functions and return to the previous display without changing the text.






Some questions asking you to confirm a command may appear on the LCD display, especially when the function that you have chosen will delete or affect files. In these cases, pressing  is like answering "no".

 To answer "yes", press . Refer to RETURN KEY on page 33.


To delete one character:

- 1 Press , ,  or  to position the cursor below the character immediately to the right of the character that you wish to delete.
- 2 Press  once.

To delete a sequence of characters:

- 1 Press , ,  or  to position the cursor immediately to the right of the last character that you wish to delete.
- 2 Hold down  until all of the characters that you wish to delete are deleted.

To quit a function without changing your text:

- Press  to return to your text.

To answer "no":

- Press .

LINE OUT FUNCTION

With the **Line Out** function, you can easily remove an entire line of text.

To delete a line of text:


① Press , , or to position the cursor within the line of text that you wish to delete.

② Hold down and press once.

Each time is pressed while is held down, one line of text is deleted.

EXAMPLE

To delete "012-345-6789":

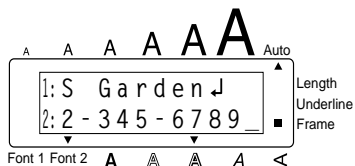

● Hold down and press


once.



CLEAR FUNCTION


When clearing the display before entering new text, the **Clear** function can be used to choose whether all of the text is erased and all format functions (**Font, Size, Width, Style, Underline, Frame, Tape margin, Alignment, Tab length, Mirror printing, and Length**) are returned to their default settings, or whether just the text is erased.

To delete all of the text and return all formats to their default settings:

- 1 Hold down **Code** and press **Clear Del**.
- 2 Press **Home** or **End** until **TEXT&FORMATS** is selected (flashing).
 To return to the text without erasing anything, press **Clear Del**.
- 3 Press **Left Arrow**.

EXAMPLE


To clear the text and formats:

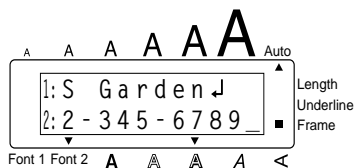


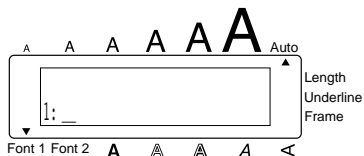
- 1 Hold down **Code** and press



- 2 Press **Home** until **TEXT&FOR-**
MATS is flashing.

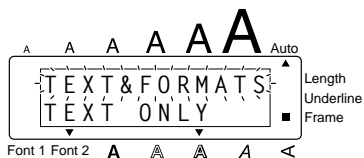



3 Press .




To delete just the text:

1 Hold down  and press .


2 Press  or  until **TEXT ONLY** is selected (flashing).

 
 To return to the text without erasing anything, press .

3 Press .


EXAMPLE


To clear just the text:

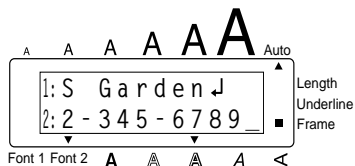


1 Hold down  and press

 
.

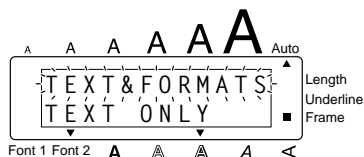

- 2 Press  until **TEXT ONLY** is flashing.



- 3 Press .

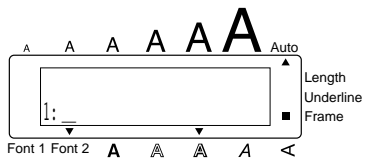



ACCENT FUNCTION

The **Accent** function can also be used to add accented characters to your text. Many of these characters can also be typed in using the **Symbol** function.



  
 
The accented characters are grouped according to the capital or small letter that they are combined with. The following accented characters are available:


 
Letters	Accented characters	Letters	Accented characters
a	à á â ã ä å æ	l	í î ï
A	À Á Â Ã Ä Å Æ	n	ñ
c	ç	N	Ñ
C	Ç	o	ó ô õ ö
e	è é ê ë ì	O	Ó Ô Õ Ö
E	È É Ê Ë Ì	u	ù ú û ü
i	í î ï	U	Ú Ú Û Ü


To type in an accented character:







 ① Hold down  and press . The message “a – u / A – U?” appears on the display.

② Press the key of the letter in the desired accented character.

 To type a capital letter, hold down  (or hold down  and press  to turn on **Caps** mode) before pressing the letter key.

③ Press  or  until the desired accented character flashes.


④ Press . The letter and the accent flash alternately in the text.

 To type in a series of accented characters, hold down  before pressing . Then, continue adding accented characters by selecting them as explained in steps ② and ③, and holding down  while pressing . Press just  after selecting the last character in the series.

EXAMPLE

To add the accented character “É”:

- 1 Hold down **Code** and press

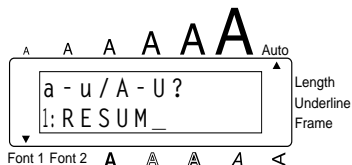

- 2 Hold down **Caps Shift** and press



- 3 Press **▶▶** until **É** flashes.



- 4 Press **↶**.



SYMBOL FUNCTION

In addition to the letters, symbols and numerals on the key tops, there are 53 additional marks available with the **Symbol** function.

The following symbols are available:

Group	Symbol
1	Ü Æ æ Ã ã Ę ě Ő ő • ° ™
2	+ × ÷ = § ² ³ ² ³ 4 []
3	↑ ↓ → ← ↵ ↶ ☉ ☺ ☎ 📁 📧 ☠
4	🌐 🍷 🔥 ♿ ⚡ 🎬 🌐 🌐 🔑 🌀 🍷 🧑
5	🤖 🍷 🎵 ♥ ★

To type in a symbol:





- Hold down **Code** and press **Alt**^{Symbol}. A row of symbols appear in the display.
 - Press **Home** or **End** to display different rows of symbols and press **←** or **→** until the desired symbol flashes.
 - Press **↵**. The symbol appears in the text.
- ☞ *To type in a series of symbols, hold down **Code** before pressing **↵**. Then, continue adding symbols by selecting them as explained in steps 2 and 3, and holding down **Code** while pressing **↵**. Press just **↵** after selecting the last symbol in the series.*

EXAMPLE

 
To add the symbol “☠”:

- 1 Hold down  and press



- 2 Press  or  until the row containing “☠” appears, then press  or  until “☠” flashes.



- 3 Press .






 


AUTO FORMAT FUNCTION


With the **Auto Format** function, you can select from a variety of preset formats perfect for your specific need. This function automatically adjusts the label length, tape margins and horizontal alignment without changing the text or any other formats, allowing you to create labels faster and easier.

The following preset formats are available:

Auto Format setting	Label length setting	Tape margin setting	Horizontal alignment setting
DEFAULT	OFF	FULL	LEFT
3.5" FLOPPY	2.8" (7.0 cm)	NARROW	CENTER
5" FLOPPY	4.8" (12.2 cm)	NARROW	CENTER
VHS SPINE	5.5" (14.0 cm)	NARROW	CENTER
VHS	3.0" (7.7 cm)	NARROW	CENTER
VCR8mm CASE	3.6" (9.2 cm)	NARROW	CENTER
VCR8mm	2.9" (7.3 cm)	NARROW	CENTER
VHS-C SPINE	1.8" (4.5 cm)	NARROW	CENTER
VHS-C	2.3" (5.8 cm)	NARROW	CENTER
AUDIO	3.5" (8.9 cm)	NARROW	CENTER
DAT CASSETTE	2.2" (5.6 cm)	NARROW	CENTER
MINI DISK	2.0" (5.2 cm)	NARROW	CENTER
ORGANIZER L	3.2" (8.2 cm)	NARROW	CENTER
ORGANIZER S	2.6" (6.5 cm)	NARROW	CENTER
FILE LONG	7.2" (18.3 cm)	NARROW	CENTER
FILE SHORT	3.7" (9.4 cm)	NARROW	CENTER

To select a preset format:

- 1 Hold down  and press  once. The currently selected setting appears in the display.
 - 2 Press  or  to select the desired setting.
-  To return to default settings, press .


- ③ Press  to apply the selected setting.
 ➔ The **Length** indicator lights up if any setting other than **DEFAULT** is selected.


 
EXAMPLE


To select the **AUDIO** setting:


- ① Hold down  and press

.

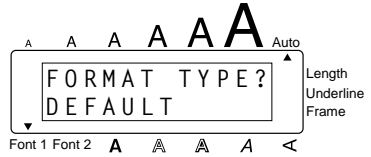

- ② Press  or  until the **AUDIO** setting is displayed.

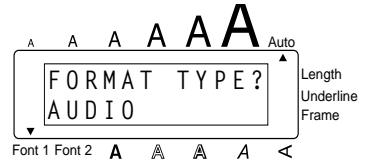





- ③ Press .

STAMP FUNCTION

 
The **Stamp** function allows you to quickly and easily create your own stamp stencil films for customized stamps. Select this function to automatically center the text and adjust the tape length and margins to a perfect format for the pre-inked stamp film holders. Since the stamp holder is reusable, just make a new stamp stencil film and replace the one in the holder.


To make a stamp:


- 1 Type in the text, and then insert a Medium (3/4" (18-mm)-wide) stamp film cassette.
- 2 Hold down  and press  once. The message "STAMP FORMAT?" appears in the display.
- 3 Press . The text is formatted for a stamp: centered within the preset message area with the tape length and margins automatically adjusted.
- 4 Press  to cut the text out of the stamp stencil film.
- 5 Push down on the tape cutter lever, remove the backing paper from the stamp stencil film and affix it to the ink pad of a stamp film holder.


EXAMPLE

To cut a stamp:

 - 1 Enter the text and insert a stamp film cassette in the tape compartment.
- 2 Hold down  and press

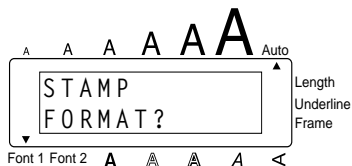

3 Press  .

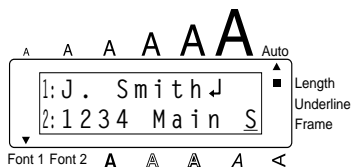


4 Press  .




5 Push down on the tape cutter lever to cut the stamp stencil film.

To affix a stamp:


- 6 Remove the stamp frame from around the stamp film holder ink pad, one side at a time, then remove the protective seal covering the ink pad and the backing paper from the stamp stencil film.
- 7 With the glossy side of the stamp stencil film upward, align one of its ends with the slit on the side of the stamp film holder.

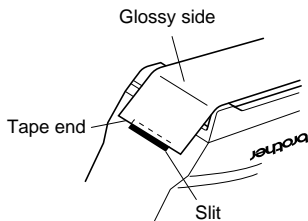


- 8 Hold the end of the stamp stencil film in place with your thumb, then pass the tape through the guides while pulling it tight.

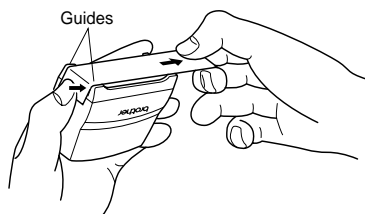


- 9 Fold the other end of the stamp stencil film over the other side of the stamp film holder and hold it in place with your finger.

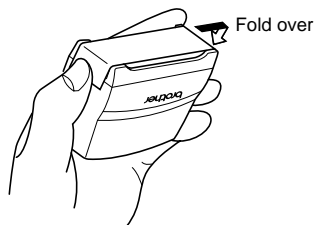

- 10 Fit the stamp frame over the stamp stencil film and push it into place.

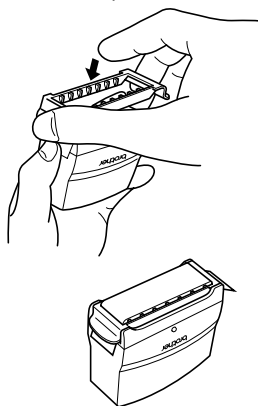

- 11 Insert the stamp film holder straight into its cap.

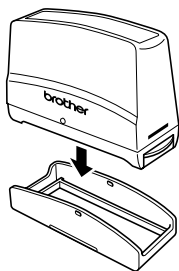

☞ Be sure that the stamp is correctly covered in order to prevent ink spills.

SIZE & WIDTH FUNCTIONS

The character size can be adjusted using both the **Size** and **Width** functions. Since the character size that can be used depends on the width of the tape, the following table shows the character sizes that can be used with each tape width.

Tape widths	Sizes (in points)
1/4" (6 mm)	6, 9, 12
3/8" (9 mm)	6, 9, 12, 18
1/2" (12 mm)	6, 9, 12, 18, 24
3/4" (18 mm)	6, 9, 12, 18, 24, 36



The default size setting is **AUTO** and the default width setting is **OFF**. The currently selected size setting is always shown by the indicator above the display.

With the **AUTO** size setting, the machine compares your text with the width of the installed tape and automatically adjusts the characters to the largest possible size. However, six other point sizes are also available and each can be printed in wide characters.

Size setting (in points)	Width function OFF	Width function ON
6	ABC	ABC
9	ABC	ABC
12	ABC	ABC
18	ABC	ABC

Size setting (in points)	Width function OFF	Width function ON
24	ABC	ABC
36	ABC	ABC


To change the size setting:

- 1 While holding down **Code**, press **Size** $\frac{\text{Size}}{\text{2}}$ once, and keep **Code** held down to display the current size setting.
- 2 While still holding down **Code**, continue pressing **Size** $\frac{\text{Size}}{\text{2}}$ until the desired size setting is displayed and is shown by the size indicator.
 -  *The current character size setting is also shown by the size indicator above the display.*
- 3 Release **Code** to apply the selected size setting to the entire text.
 -  *With the **AUTO** setting selected and 3/4" (18-mm)-wide tape installed, text consisting of just one line of only capital letters will be printed with a character size of 48 points.*

EXAMPLE

To select the 24 point size setting:

- 1 While holding down **Code**, press **Size** **@ 2** once, and keep **Code** held down.

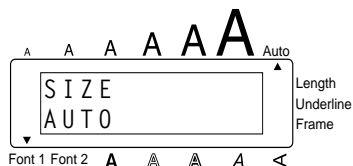

- 2 While still holding down **Code**, continue pressing **Size** **@ 2** until 24 is displayed.



- 3 Release **Code**.

To turn on or off the Width function:

- 1 While holding down **Code**, press **Width** **# 3** once, and keep **Code** held down to display the current width setting.
- 2 While still holding down **Code**, continue pressing **Width** **# 3** until the desired width setting is displayed.
- 3 Release **Code** to apply the selected width setting to the entire text.

EXAMPLE

To turn on the Width function:

- 1 While holding down **Code**, press **Width #3** once, and keep **Code** held down.



- 2 While still holding down **Code**, continue pressing **Width #3** until **ON** is displayed.



- 3 Release **Code**.

STYLE FUNCTION

You can choose from nine different character styles to apply to your text.

☞ *Characters printed using the smaller sizes may be difficult to read if certain style settings (e.g., I+SHADOW) are selected.*

The following style settings are available:

NORMAL	I+BOLD (italic & bold)
BOLD	I+OUTLINE (italic & outline)
OUTLINE	I+SHADOW (italic & shadow)
SHADOW	VERTICAL
ITALIC	

The default style setting is **NORMAL**. The style indicator at the bottom right of the display shows the current style setting when any setting other than **NORMAL** is selected.

Refer to *Reference* at the end of this section for samples of the available settings.

To change the style setting:

- 1 While holding down **Code**, press **Style** $\frac{S}{4}$ once, and keep **Code** held down to display the current style setting.
- 2 While still holding down **Code**, continue pressing **Style** $\frac{S}{4}$ until the desired style setting is displayed.
☞ *The current style setting is shown by the style indicator at the bottom right of the display.*
- 3 Release **Code** to apply the selected style setting to the entire text.


EXAMPLE

To select the I+SHADOW style setting:

- 1 While holding down **Code**, press **Style** $\frac{S}{4}$ once, and keep **Code** held down.



2 While still holding down **Code**, continue pressing **S** until **I+SHADOW** is displayed.

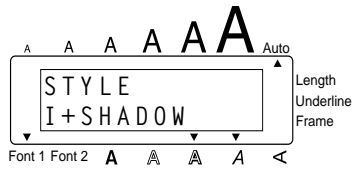

3 Release **Code**.

REFERENCE

Font setting	Style setting		
	NORMAL	BOLD	OUTLINE
HELSINKI	abc	abc	abc
BRUSSELS	abc	abc	abc

Font setting	Style setting		
	SHADOW	ITALIC	I+BOLD
HELSINKI	abc	<i>abc</i>	<i>abc</i>
BRUSSELS	abc	<i>abc</i>	<i>abc</i>

Font setting	Style setting		
	I+OUTLINE	I+SHADOW	VERTICAL
HELSINKI	<i>abc</i>	<i>abc</i>	Ɱ Ɱ Ɱ
BRUSSELS	<i>abc</i>	<i>abc</i>	Ɱ Ɱ Ɱ

UNDERLINE FUNCTION


You can emphasize your text by underlining it.

The default underline setting is OFF. When the **Underline** function is set to **ON**, the **Underline** indicator on the right side of the display lights up.

ON

ABC

To turn on or off the Underline function:

- 1 While holding down **Code**, press **Underline % 5** once, and keep **Code** held down to display the current underline setting.
- 2 While still holding down **Code**, continue pressing **Underline % 5** until the desired underline setting is displayed.
 *The **Underline** indicator lights up when the **ON** setting is selected.*
- 3 Release **Code** to apply the selected underline setting to the entire text.

EXAMPLE

To select the ON underline setting:

- 1 While holding down **Code**, press **Underline % 5** once, and keep **Code** held down.
- 2 While still holding down **Code**, continue pressing **Underline % 5** until **ON** is displayed.
- 3 Release **Code**.



FONT FUNCTION

With the **Font** function, you can choose one of two fonts for your text.


The following font settings are available:

HELSINKI and BRUSSELS

The default font setting is **HELSINKI**. The currently selected font setting is always shown by the **Font** indicators below the display.

Refer to *Reference* at the end of this section for samples of the available settings.

To change the font setting:

- 1 While holding down **Code**, press **Font** once, and keep **Code** held down to display the current font setting.
- 2 While still holding down **Code**, continue pressing **Font** until the desired font setting is displayed and is shown by the font indicator.
 *The current font setting is also shown by the font indicator at the bottom left of the display.*
- 3 Release **Code** to apply the selected font setting to the entire text.

EXAMPLE

To select the BRUSSELS font setting:

- 1 While holding down **Code**, press **Font** once, and keep **Code** held down.
- 2 While still holding down **Code**, continue pressing **Font** until **BRUSSELS** is displayed.
- 3 Release **Code**.



REFERENCE

Font setting	Font sample	Display indicator
HELSINKI	abc	Font 1
BRUSSELS	abc	Font 2

FRAME FUNCTION

With the **Frame** function, you can choose from various frames and highlights to design a more decorative or emphasized label.


The following Frame settings are available:

OFF, ROUND, CANDY, POINTING, NAMEPLATE, DOT

The default frame setting is **OFF**; however, other settings are also available. When any setting other than **OFF** is selected, the **Frame** indicator on the right side of the display lights up.

Refer to *Reference* at the end of this section for samples of the available settings.

To change the frame setting:

- 1 While holding down **Code**, press **Frame** $\frac{c}{6}$ once, and keep **Code** held down to display the current frame setting.
- 2 While still holding down **Code**, continue pressing **Frame** $\frac{c}{6}$ until the desired frame setting is displayed.
 The **Frame** indicator lights up when any setting other than **OFF** is selected.
- 3 Release **Code** to apply the selected frame setting to the entire text.







EXAMPLE

To select the CANDY frame setting:

- 1 While holding down **Code**, press **Frame** $\frac{c}{6}$ once, and keep **Code** held down.
- 2 While still holding down **Code**, continue pressing **Frame** $\frac{c}{6}$ until **CANDY** is displayed.
- 3 Release **Code**.



REFERENCE

Frame setting	Frame sample	Frame setting	Frame sample
OFF		POINT- ING	
ROUND		NAME- PLATE	
CANDY		DOT	

TAPE MARGIN FUNCTION

 
The **Tape margin** function allows you to adjust the size of the margins on the left and right sides of your text.

The default tape margin setting is FULL; however, three other settings are also available.

FULL
(1 1/24" (25 mm
margins))



NONE
(no margins)



NARROW
(1/6" (4 mm
margins))



HALF
(1/2" (12 mm
margins))



☞ After printing a label using the **NONE** tape margin setting, hold down **Code** and press **Feed Space** once to feed the tape before pushing down on the tape cutter lever to cut it. Otherwise some of the printed characters may be cut off.

After printing using the **NARROW** and **HALF** tape margin settings, push down on the tape cutter lever to cut off the label, then use scissors to cut along the printed dots (·) to center the text within the label.

To change the tape margin setting:

- 1 While holding down **Code**, press **Tape E** once, and keep **Code** held down to display the current tape margin setting.
- 2 While still holding down **Code**, continue pressing **Tape E** until the desired tape margin setting is displayed.
- 3 Release **Code** to apply the selected tape margin setting to the entire text.

EXAMPLE

To select the HALF tape margin setting:

- 1 While holding down **Code**, press **E** once, and keep **Code** held down.



- 2 While still holding down **Code**, continue pressing **E** until **HALF** is displayed.



- 3 Release **Code**.

HORIZONTAL ALIGNMENT FUNCTION

You can choose to align the text in one of three ways. In addition, if the **Length** function was used to set the length of the label, the text will align within the label according to the selected horizontal alignment setting.

Three settings exist, as follows. The default setting is **LEFT**.

LEFT	AB CDE FG	CENTER	AB CDE FG	RIGHT	AB CDE FG
------	-----------------	--------	-----------------	-------	-----------------


To change the horizontal alignment setting:

- 1 While holding down **Code**, press **Align R** once, and keep **Code** held down to display the current horizontal alignment setting.
- 2 While still holding down **Code**, continue pressing **Align R** until the desired horizontal alignment setting is displayed.
- 3 Release **Code** to apply the selected horizontal alignment setting to the entire text.

EXAMPLE

To select the RIGHT horizontal alignment setting:

- 1 While holding down **Code**, press **Align R** once, and keep **Code** held down.

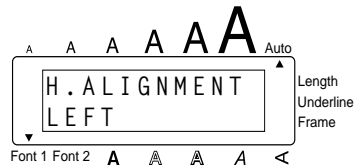

- 2 While still holding down **Code**, continue pressing **Align R** until **RIGHT** is displayed.



- 3 Release **Code**.

MIRROR PRINTING FUNCTION

With this function, you can print your text so that the characters can be read from the tape side of the tape. If mirror-printed labels are attached to glass or some other clear material, they can be read correctly from the opposite side.

☞ When using the **Mirror printing** function, the text should be printed on clear tape. The default mirror printing setting is **OFF**.

ON

ABC

To turn on or off the mirror printing setting:

- 1 While holding down **Code**, press **Print** once, and keep **Code** held down to display the current mirror printing setting.
- 2 While still holding down **Code**, continue pressing **Print** until the desired mirror printing setting is displayed.
- 3 Release **Code** to apply the selected mirror printing setting to the entire text.

EXAMPLE

To select the ON mirror printing setting:

- 1 While holding down **Code**, press **Print** once, and keep **Code** held down.



- 2 While still holding down **Code**, continue pressing **Print** until **ON** is displayed.



- 3 Release **Code**.

LENGTH FUNCTION

Although the length of the printed label automatically adjusts to fit the length of the entered text, there may be times when you will want to make a label with a specific length. The **Length** function allows you to set the label length between 1.6" and 11.8" (4.0 cm and 30.0 cm).

The default length setting is **OFF**. When the **Length** function is set to **ON**, the **Length** indicator on the right side of the display lights up.

☞ *Turning off the machine and turning it on again changes the length setting back to **OFF**.*


To turn on or off the Length function:

- 1 While holding down **Code**, press **Length** (T) once, and keep **Code** held down to display the current length of the label (the text and both margins) briefly, then display the current label length setting (**ON** or **OFF**).
- 2 While still holding down **Code**, continue pressing **Length** (T) until the desired label length setting is displayed.
☞ *The **Length** indicator lights up when **ON** is selected.*
- 3 Release **Code**. If **ON** was selected, the current label length setting is displayed.
- 4 Press **Home** (▲) or **End** (▼) to select the desired length or use the number keys to enter the length.
☞ *To change the units (inches or centimeters) used to display the label length, press **M_n** until the desired units are displayed.
*To change the length in 1" (1.0-cm)-steps, hold down either **Home** (▲) or **End** (▼), and then release the key when the desired setting is displayed.**
- 5 Press **←**.


EXAMPLE

To select a label length of 5":


- 1 While holding down **Code**, press **T** once, and keep **Code** held down.

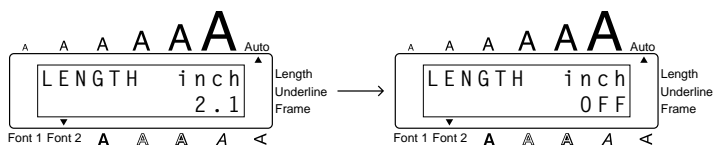


- 2 While still holding down **Code**, continue pressing **T** until **ON** is displayed.

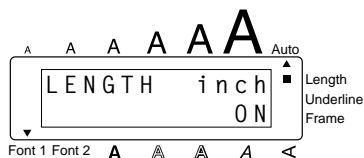

- 3 Release **Code**.

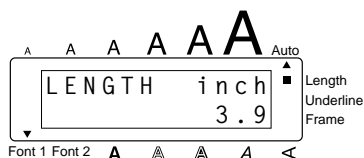

- 4 Press **Home** until **5.0** is displayed.

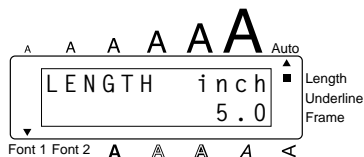


 

- 5 Press **←**.

PRINT KEY & FEED FUNCTION

 

After you have entered your text and chosen the desired format settings, you are ready to print.

To print a label:

- Press  once. The message "COPIES" followed by the number of the label being printed is displayed.


 If **NONE** tape setting is selected and the tape is immediately, some printed characters will be cut off. To feed the tape after printing, hold down  and  once.

To feed the tape:

- Hold down  and press  once. 1 1/24" (25 mm) of tape is fed out.

To cut the tape:


- Push down on the tape cutter lever.


 
 In order to prevent damaging the tape, do not try to cut it while printing or feeding. Pushing down on the tape cutter lever too far may break it.

EXAMPLE

To make a label using the NONE tape margin setting:

- 1 Press  once.

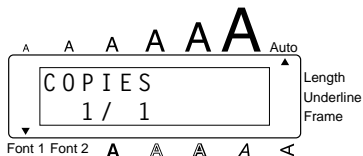

- 2 Hold down  and press  once.
- 3 Push down on the tape cutter lever.

NUMBERING FUNCTION

This function can be used to print many copies of the same text while increasing a certain number in the text by 1 after each label is printed.

To use the Numbering function:

- 1 Press \leftarrow , \rightarrow , \uparrow (Home) or \downarrow (End) to position the cursor below the number that you wish to increase.
- 2 Hold down Code and press O_0 (Number). The message "NUMBER UNTIL 1-9?" appears in the display.
- 3 Press the number key (Font \uparrow 1 A to M.Del \uparrow 9) of the last number that is to be printed.

\rightarrow To cancel the **Numbering**, hold down Code and press O_0 (Number) (or press just Clear Del).

- 4 Press Mirror Print (or \leftarrow) to begin printing the labels. The number of each copy is displayed while it is being printed.

\rightarrow After printing using the **NONE** tape margin setting, hold down Code and press Feed Space once to feed the tape before cutting it, otherwise some of the printed characters may be cut off.

- 5 Press down on the tape cutter lever to cut the tape, and then use scissors to cut along the printed dots to separate the labels.


EXAMPLE

To print three labels with numbers 1, 2 and 3:


- 1 Position the cursor below "1".



- 2 Hold down **Code** and press

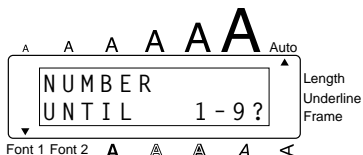

- 3 Press **Width** (# 3).

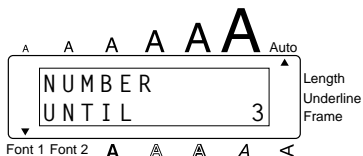

- 4 Press **Mirror** (Print) (or **Reverse**).



- 5 Press in the tape cutter lever to cut the tape, then use scissors to cut along the cutting guide to separate the labels.



REPEAT PRINTING FUNCTION

This function allows you to print up to 9 copies of the same text.

To use the Repeat printing function:

① Hold down **Code** and press **Repeat** (**1** **i**). The message "COPIES UNTIL 1-9?" appears in the display.

② Press the number key (**Font** (**1** **A**) to (**M.Del** (**9**)) of the number of labels that you want.

☞ To cancel the **Repeat printing**, hold down **Code** and press **Repeat** (**1** **i**) (or press just **Clear** (**Del**)).

③ Press **Mirror** (**Print**) (or **←**) to begin printing the labels. The number of each copy is displayed while it is being printed.

☞ If **NONE** tape setting is selected and the tape is immediately, some printed characters will be cut off. To feed the tape after printing, hold down **Code** and **Feed** (**Space**) once.

④ Press down on the tape cutter lever to cut the tape, and then use scissors to cut along the printed dots to separate the labels.

EXAMPLE

To print three copies of a label:

① Hold down **Code** and press


Repeat
(**1** **i**).




2 Press $\left(\begin{array}{c} \text{Width} \\ \# \\ 3 \end{array} \right)$.





3 Press $\left(\begin{array}{c} \text{Mirror} \\ \text{Print} \end{array} \right)$ (or $\left(\leftarrow \right)$).

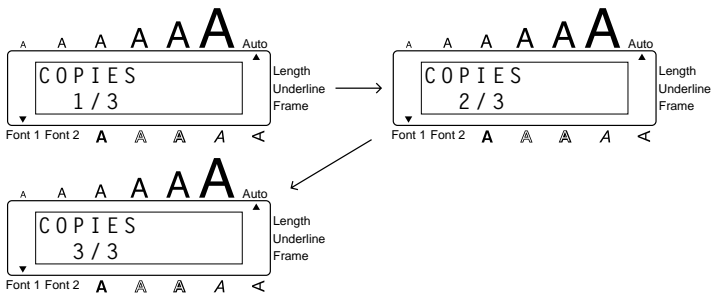

 4 Press down on the tape cutter lever to cut the tape, and then use scissors to cut along the cutting guide to separate the labels.




MEMORY FUNCTIONS

 You can use the memory to store your most frequently used text files. The text remains in the memory, even after all characters are removed from the display using the **Clear** function (holding down  and pressing ).

 

When each file is stored, it is given a number to make recalling it easier. Up to 9 text files or about 300 characters can be stored in the memory. Each stored text file can have a maximum of 99 characters.


Since a copy of the stored text file is recalled when the **Recall** function is used, the text can be edited or printed without changing the originally stored file. When a file is no longer needed or more space is necessary, the **Memory delete** function can be used to delete it.



 *When inserting new batteries, be sure to insert the new ones within five minutes of removing the old ones, otherwise any text files stored in the memory will be lost (unless the machine is plugged into an electrical outlet with the AC adaptor).*


STORING TEXT




To store a text file:

① Hold down  and press . The message "STORE SELECT 1-9?" appears on the display.


 *If 300 characters have already been stored, the error message "MEMORY FULL!" appears in the display. If this occurs, an existing text file must be deleted before the new one can be stored.*

② Press the key ( to ) of the file number where you wish to store the text. The text is stored under the selected file number and the text previously shown in the display reappears.


 *If a file is already stored under the selected file number, the message "OVERWRITE?" appears in the display and you must decide whether or not to overwrite it (delete it from the memory and store the new one).*

To quit the **Store** function without storing the text, hold down  and press  (or press just .

To overwrite the stored file with the new one:

 

- Press  to delete the previously stored file and store the new one under the selected number.



 To go back and choose another file number without overwriting the text file,

press , and then press the key of a different file number.


 
RECALLING TEXT


To recall a text file:



- 1 Hold down  and press . The message “RECALL SELECT 1–9?” appears on the display.


- 2 Press the key ( to ) of the file number containing the text that you wish to recall. The text stored under the selected file number is shown.

 To see other parts of the selected text file, press  or .

To display the text stored under other file numbers, press  or , or the key of a different file number.



To quit the **Recall** function without recalling text, hold down  and

press  (or press just ).

- 3 Press . Any text previously entered in the display is erased and the text stored under the selected file number is recalled into the display.

DELETING A FILE

To delete a text file:

- 1 Hold down  and press . The message “CLEAR SELECT 1–9?” appears on the display.

- 2 Press the key ($\overset{\text{Font}}{\underset{1}{A}}$ to $\overset{\text{M.Del}}{\underset{9}{\text{A}}}$) of the file number containing the text that you wish to delete. The text stored under the selected file number is shown.

To see other parts of the selected text file, press \leftarrow or \rightarrow .

To display the text stored under other file numbers, press $\overset{\text{Home}}{\uparrow}$ or \downarrow End, or the key of a different file number.

To cancel the **Memory delete** function without deleting the text file, hold down Code and press $\overset{\text{M.Del}}{\underset{9}{\text{A}}}$ (or press just $\overset{\text{Clear}}{\text{Del}}$).

- 3 Press \leftarrow to delete the text file that was selected.

EXAMPLE

To store text under file number 4:

- 1 Hold down Code and press

$\overset{\text{Store}}{\underset{7}{\text{A}}}$.

A A A A A A Auto
STORE
SELECT 1-9?
Length Underline Frame
Font 1 Font 2 A A A A <

- 2 Press $\overset{\text{Style}}{\underset{4}{\text{A}}}$.

A A A A A A Auto
4: John Smith
Length Underline Frame
Font 1 Font 2 A A A A <


To recall the text from file number 4:


- 1 Hold down Code and press


$\overset{\text{Recall}}{\underset{8}{\text{A}}}$.

A A A A A A Auto
RECALL
SELECT 1-9?
Length Underline Frame
Font 1 Font 2 A A A A <

2 Press .

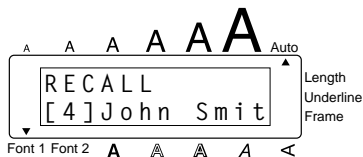


3 Press .

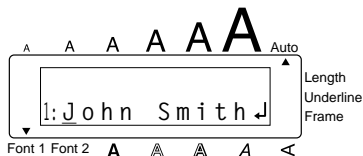


To delete the text stored under file number 4:


1 Hold down  and press

.

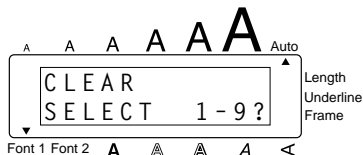

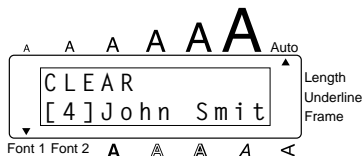

2 Press .






3 Press .



 

 





TROUBLESHOOTING


Problem	Remedy
1. The display stays blank after you have turned on the machine.	<ul style="list-style-type: none"> • Check that the AC adaptor is connected correctly. • If you are using alkaline batteries, check that they are correctly inserted. • If the batteries are low, replace them with new ones.
2. The machine does not print or the printed characters are blurred.	<ul style="list-style-type: none"> • Check that the tape cassette has been inserted properly. • If the tape cassette is empty, replace it with a new one. • Make sure that the tape compartment cover has been closed.
3. The text files that you stored in the memory are no longer there.	<ul style="list-style-type: none"> • If the batteries are low, replace them with new ones.
4. The printed characters are not formed properly.	<ul style="list-style-type: none"> • If you are using alkaline batteries, they may be low. Try using the AC adaptor or replace the batteries with new ones.
5. A blank horizontal line appears through the printed label.	<ul style="list-style-type: none"> • Clean the print head as explained on page 12.
6. Striped tape appears.	<ul style="list-style-type: none"> • You have reached the end of the tape. Replace the tape cassette with a new one.
7. The machine has "locked up" (i.e., nothing happens when a key is pressed).	<ul style="list-style-type: none"> • Turn off the machine, and then while holding down  and , turn the machine back on. The text and formats in the display and all text files stored in the memory are erased.

ERROR MESSAGE LIST

Error Message	Cause	Remedy
3 LINE LIMIT!	<ul style="list-style-type: none"> This message appears if three lines already exist when you press . 	<ul style="list-style-type: none"> Limit the number of lines to three.
BATTERIES WEAK!	<ul style="list-style-type: none"> This message appears when the installed alkaline batteries become weak. 	<ul style="list-style-type: none"> Replace the batteries or use the AC adaptor.
BUFFER EMPTY!	<ul style="list-style-type: none"> This message appears if you hold down  and press , but no text has been entered in the display. This message appears if you try to print, but no text has been entered. This message appears if you try to store a text file in the memory, but no text has been entered in the display. 	<ul style="list-style-type: none"> Enter some text before starting the function. Enter text before printing. Enter text before storing.
BUFFER FULL!	<ul style="list-style-type: none"> This message appears if you try to enter a character, symbol, bar code, return or space after 99 characters have already been entered. 	<ul style="list-style-type: none"> Delete some existing text so that more text can be entered.

 Error Message	Cause	Remedy
CAN'T HERE!	<ul style="list-style-type: none"> This message appears if the cursor is at the end of the text when you hold down  and press . 	<ul style="list-style-type: none"> Move the cursor below a number before holding down  and pressing .
CHANGE ADAPTOR	<ul style="list-style-type: none"> This message appears if a high-voltage adaptor is being used. 	<ul style="list-style-type: none"> Remove the high-voltage adaptor and connect the adaptor designed exclusively for this machine.
CUTTER ERROR!	<ul style="list-style-type: none"> This message appears if the tape cutter lever is pressed down while a label is being printed. 	<ul style="list-style-type: none"> Release the tape cutter lever.
INVAL. CHRS!	<ul style="list-style-type: none"> This message appears if the cursor is not below a number when you hold down  and press . 	<ul style="list-style-type: none"> Move the cursor below a number before holding down  and press .
LENGTH LIMIT!	<ul style="list-style-type: none"> This message appears if the text is longer than 1 meter when you try to print. This message appears if the Length function is used to set a label length that is less than 1.6" (4.0 cm) or more than 11.8" (30.0 cm). 	<ul style="list-style-type: none"> Shorten the text to less than 1 meter before trying to print. Set the label length between 1.6" (4.0 cm) and 11.8" (30.0 cm).
	<ul style="list-style-type: none"> This message appears if the Tab Length function is used to set a tab length that is more than 11.8" (30.0 cm). 	<ul style="list-style-type: none"> Set the tab length so that it is less than 11.8" (30.0 cm).

Error Message	Cause	Remedy
LINE LIMIT!	<ul style="list-style-type: none"> This message appears if the number of lines in the text is greater than the maximum number of lines possible for the installed tape. 	<ul style="list-style-type: none"> Reduce the number of lines or install a tape of greater width.
MEMORY FULL!	<ul style="list-style-type: none"> This message appears if you try to store a text file after 300 characters have already been stored in the memory. 	<ul style="list-style-type: none"> Delete an unwanted file to make room for the new one.
NO FILES!	<ul style="list-style-type: none"> This message appears if you try to recall or delete a text file from the memory when none are stored. 	<ul style="list-style-type: none"> Store a text file first.
NUMBER TOO SMALL!	<ul style="list-style-type: none"> This message appears if the number that is set to be printed using the Numbering function is less than the number above the cursor. 	<ul style="list-style-type: none"> Press the key of a number that is greater than the number in the text.
ROM PROBLEM!	<ul style="list-style-type: none"> This message appears if there is a problem with the machine's read only memory. 	<ul style="list-style-type: none"> Contact your service representative.
REPLACE BATTERIES!	<ul style="list-style-type: none"> This message appears if the installed alkaline batteries are about to run out. 	<ul style="list-style-type: none"> Replace the batteries or use the AC adaptor.
SYSTEM ERROR!	<ul style="list-style-type: none"> This message appears if there is a problem with the machine's software. 	<ul style="list-style-type: none"> Contact your service representative.

 Error Message	Cause	Remedy
NO TAPE!	<ul style="list-style-type: none"> This message appears if you try to print a label or feed the tape when no tape cassette is installed. 	<ul style="list-style-type: none"> Install a tape cassette and try again.
TAB LIMIT!	<ul style="list-style-type: none"> This message appears if 50 tabs have already been added to the text when you press . 	<ul style="list-style-type: none"> Limit the number of tabs in the text to 50.
TEXT TOO HIGH!	<ul style="list-style-type: none"> This message appears if the size of the text is larger than the width of the installed tape. 	<ul style="list-style-type: none"> Reduce the size of the characters or install a wider tape.
TEXT TOO LONG!	<ul style="list-style-type: none"> This message appears if the length of the text is longer than the label length that has been set using the Length function. 	<ul style="list-style-type: none"> Delete some of the text, reduce the character width or increase the set label length.

SPECIFICATIONS

HARDWARE

Input Device: Keyboard - 51 keys

LCD: 7 × 5 dots
12 characters × 2 lines
17 indicators

Print Tape: Pressure-sensitive, Adhesive-based
26' 3" (8 m) long
Four widths available:
1/4" (6 mm)
3/8" (9 mm)
1/2" (12 mm)
3/4" (18 mm)

Power Supply: Six AA alkaline batteries (AM3, LR6) or optional AC adaptor
Auto power-off if no key is pressed for 5 minutes

Print Head: 128 dot / 180 dpi

Dimensions: 7" (W) × 8 1/16" (D) × 2 23/63" (H)
(178 × 205 × 60 mm)

Weight: 1.5lbs (700 g) (without a tape cassette and batteries installed)

SOFTWARE

Buffer Size: Maximum 99 characters
Maximum three lines

Memory Size: 300 characters


Character Size: Six sizes (6, 9, 12, 18, 24 and 36 points) + 48 point (Capital letters only)
All are available in normal and wide

Print Styles: Normal, Outline, Bold, Shadow
(each can be combined with Italic), and Vertical

ACCESSORIES

● Supplies

Obtain tape cassettes from your nearest authorized dealer.

Use only Brother TZ tapes with this machine. Brother cannot be held responsible for trouble caused by the use of unauthorized supplies. Do not use tapes that do not have the  mark.

Stock No.	Description	QTY/ PACKAGE	PRICE
18 mm (3/4")			
TZ141	Black Characters on Clear Tape	1	\$22.99
TZM41	Black Characters on Clear (Mat) Tape	1	\$24.99
TZ241	Black Characters on White Tape	1	\$24.99
TZ641	Black Characters on Yellow Tape	1	\$24.99
TZB41	Black Characters on Flu. Orange Tape	1	\$29.99
TZ242	Red Characters on White Tape	1	\$24.99
TZ243	Blue Characters on White Tape	1	\$24.99
TZ344	Gold Characters on Black Tape	1	\$28.99
TZ345	White Characters on Black Tape	1	\$28.99
TZ545	White Characters on Blue Tape	1	\$28.99
12 mm (1/2")			
TZ131	Black Characters on Clear Tape	1	\$19.99
TZ231	Black Characters on White Tape	1	\$20.99
TZM31	Black Characters on Clear (Mat) Tape	1	\$20.99
TZ431	Black Characters on Red Tape	1	\$20.99
TZ531	Black Characters on Blue Tape	1	\$20.99
TZ631	Black Characters on Yellow Tape	1	\$20.99
TZ731	Black Characters on Green Tape	1	\$20.99
TZ132	Red Characters on Clear Tape	1	\$19.99
TZ232	Red Characters on White Tape	1	\$20.99
TZ133	Blue Characters on Clear Tape	1	\$19.99
TZ233	Blue Characters on White Tape	1	\$20.99
TZ334	Gold Characters on Black Tape	1	\$24.99
TZ335	White Characters on Black Tape	1	\$24.99
TZ435	White Characters on Red Tape	1	\$24.99

Stock No.	Description	QTY/ PACKAGE	PRICE
9 mm (3/8")			
TZ121	Black Characters on Clear Tape	1	\$16.99
TZ221	Black Characters on White Tape	1	\$19.99
TZ222	Red Characters on White Tape	1	\$19.99
TZ223	Blue Characters on White Tape	1	\$19.99
TZ325	White Characters on Black Tape	1	\$22.99
6 mm (1/4")			
TZ111	Black Characters on Clear Tape	1	\$14.99
TZ211	Black Characters on White Tape	1	\$16.99
TZ315	White Characters on Black Tape	1	\$20.99

Non-laminated tapes

Stock No.	Description	QTY/ PACKAGE	PRICE
18 mm (3/4")			
TZN641	Black Characters on Yellow Tape	1	\$21.99
TZN541	Black Characters on Blue Tape	1	\$21.99
TZNF41	Black Characters on Purple Tape	1	\$21.99
12 mm (1/2")			
TZN631	Black Characters on Yellow Tape	1	\$17.99
TZN531	Black Characters on Blue Tape	1	\$17.99
TZNF31	Black Characters on Purple Tape	1	\$17.99

Instant lettering tape

Stock No.	Description	QTY/ PACKAGE	PRICE
18 mm (3/4")			
TZL041	Black Characters	1	\$24.99

Iron on transfer tape

Stock No.	Description	QTY/ PACKAGE	PRICE
18 mm (3/4")			
TZIY41	Black Characters	1	\$31.99

Security tape

Stock No.	Description	QTY/ PACKAGE	PRICE
18 mm (3/4")			
TZSE4	Black Characters on White Tape	1	\$49.95

Fabric tape

Stock No.	Description	QTY/ PACKAGE	PRICE
12 mm (1/2")			
TZFA3	Blue Characters on White Tape	1	\$34.95

Stamp kit/holder

Stock No.	Description	QTY/ PACKAGE	PRICE
18 mm (3/4") Stamp Area -9 × 55 mm			
SKMB	MEDIUM Stamp Kit (Stamp holder + Tape cassette)	1	\$49.95
SHMB	MEDIUM Stamp Holder	1	\$24.95

Options

Stock No.	Description	QTY/ PACKAGE	PRICE
TR9	Lettering Stick	1	\$2.99
AD60	AC adapter	1	\$34.95

brother®