


Common Functions & Commands

Model PT-1600



Quick Reference Guide

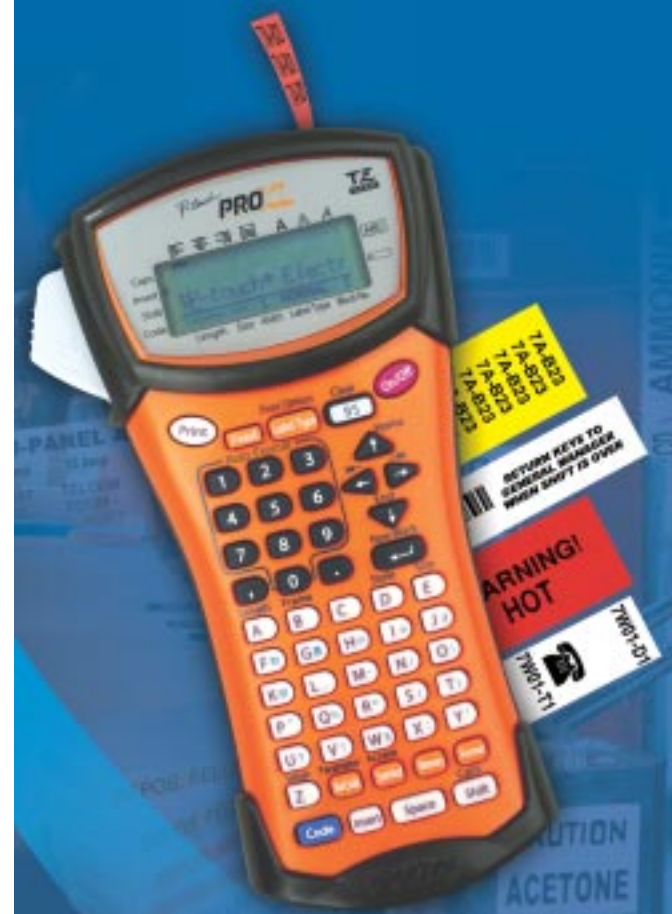

Setup Menu

Code **Z**

- 1. Cut**
 - ▶ 1 (1 = cut-pause; no chain print)
 - ▶ 2 (2 = no cut-pause; no chain print)
 - ▶ 3 (3 = cut-pause; chain print)
 - ▶ 4 (4 = no cut-pause; chain print)
- 2. Contrast**
 - ▶ + 2 to -2 (0 = default, + = darker, - = lighter)
- 3. Auto Reduction**

If label is set to AUTO size, text size or width will change based on label length.

 - ▶ Text Size
 - ▶ Text Width
- 4. Length Adjustment**

Increase or decrease the label length if the length differs from actual.

 - ▶ +3 to -1, 0 = default
- 5. Symbol Save**

Personal Category is full, symbols will be added (on) or not (off).

 - ▶ On
 - ▶ Off
- 6. Units**

Set unit for measurement.

 - ▶ inch
 - ▶ mm
- 7. Language**

Set language for menus, settings and messages.

 - ▶ English
 - ▶ Français
- 8. Version Info**

Version information for P-touch software & symbol set.

 - ▶ Main
 - ▶ Boot
 - ▶ Char-Set (Character Set)
 - ▶ Symb-Set (Symbol Set)

(Label) Length

Code **A**

- 1. Length**

Specify label length.

 - ▶ Auto / 0.30 - 39.00inch (Auto / 6 - 999mm)
- 2. Margin**

Specify margin.

 - ▶ 0.10 - 4.00inch (2 - 99mm)

Bar Code

Parameter **BarCode**

Bar Code Functions

Code **BarCode**

- 1. Bar Code**

Type in bar code data.
- 1. Parameter Settings**

Set settings for bar code.
- A. Protocol**

Specify protocol.

 - ▶ Code 39
 - ▶ Code 128
 - ▶ EAN128
 - ▶ CODABAR
 - ▶ UPC-E
 - ▶ UPC-A
 - ▶ EAN8
 - ▶ EAN13
 - ▶ I-2/5
- B. Width**

Specify width of bar code graphic.

 - ▶ Small
 - ▶ Medium
 - ▶ Large
- C. Under Number**

Specify whether the number is printed under the bar code.

 - ▶ On
 - ▶ Off
- D. Check Digit**

Code 39, I-2/5 and CODABAR only, specify Check Digit on/off.

 - ▶ On
 - ▶ Off

(Line) Style

Code **D**

- 1. Style**

Set font style.

 - ▶ Normal
 - ▶ Bold
 - ▶ Outline
 - ▶ Italic
 - ▶ Italic + Bold
 - ▶ Italic + Outline

(Line) Size

Code **E**

- 1. Size**

Set the size for an individual line.

 - ▶ Auto
 - ▶ 1mm
 - ▶ 2mm
 - ▶ 3mm
 - ▶ 4mm
 - ▶ 6mm
 - ▶ 9mm
 - ▶ 12mm

Print Options

Code **Label Type**

- 1. Copies**
 - ▶ 1-99
- 2. Number (sequential labels)**
 - ▶ Off
 - ▶ 1-99
- 3. Block No.**

Choose the block numbers (start/end) to print.
- 4. Mirror (print text in reverse order)**
 - ▶ Off
 - ▶ On

Format

Format

- 1. GLB (Global) Size**

Set font size for label.

 - ▶ Auto
 - ▶ 1mm
 - ▶ 2mm
 - ▶ 3mm
 - ▶ 4mm
 - ▶ 6mm
 - ▶ 9mm
 - ▶ 12mm
- 2. GLB (Global) Wide**

Set label font width.

 - ▶ Minimum
 - ▶ Narrow
 - ▶ Normal
 - ▶ Wide
- 3. GLB (Global) Style**

Set label font style - individual line style overrides settings.

 - ▶ Normal
 - ▶ Bold
 - ▶ Outline
 - ▶ Italic
 - ▶ Italic + Bold
 - ▶ Italic + Outline
- 4. Align**

Specify text alignment.

 - ▶ Left
 - ▶ Justify
 - ▶ Right
 - ▶ Center

(Label) Frame

Code **B**

- 1. Frame**

Choose from 14 different borders.

 - ▶ Off
 - ▶ 1 - 14

(Label) Clear

Code **BS**

- 1. Clear**

Clear text (and font) to start new label.

 - ▶ Text & Format
 - ▶ Text Only

Label Type

Print Option **Label Type**

- 1. Label Type**

Specify type of label printed.

 - ▶ Normal
 - ▶ Rotate
 - ▶ Rotate-Repeat
 - ▶ Port
 - ▶ Panel
 - ▶ Flag
 - ▶ Vertical

Creating & Printing Commonly Used Labels

General

Sales Out Reports
Regions 1 - 4

1. Press **Label Type** – until Normal.
Press **←** to select.
2. Type *Text* (**↵** for new line, or **Code** **→** to place a block of text to the right).
3. To change text style or size per specific line, use **↑** **↓** to place cursor on line to be changed. Use
 - **Code** **D** to specify different font types.
↑ **↓** to choose. Press **←** to enter.
 - **Code** **E** to specify different font sizes.
↑ **↓** to choose. Press **←** to enter.
4. **Print**

Name Badge




1. Press **Label Type** – until Normal.
Press **←** to select.
2. Set label length **Code** **A** – use number pad to type length or **↑** **↓** to specify.
Press **←** to enter.
3. Type *Name*. Press **↵** for new line.
4. Type *Company*.
5. To change text style or size per specific line, use **↑** **↓** to place cursor on line to be changed. Use
 - **Code** **D** to specify different font types.
↑ **↓** to choose. Press **←** to enter.
 - **Code** **E** to specify different font sizes.
↑ **↓** to choose. Press **←** to enter.
6. **Print**

Vertical



1. Press **Label Type** – until Vertical.
Press **←** to select.
2. Type *Text*. Enter more than one line of text with **A** **↵** or **B** **Code** **↵**. Text will be added to previous text. Example by typing:
A) 1. 123 **B) 1. 123**
2. 456 Output: **2. 456** Output:
3. Print **3. Print**
3. To change text style or size per specific line, use **↑** **↓** to place cursor on line to be changed. Use
 - **Code** **D** to specify different font types.
↑ **↓** to choose. Press **←** to enter.
 - **Code** **E** to specify different font sizes.
↑ **↓** to choose. Press **←** to enter.
4. **Print**

Cable/Wire Wrap

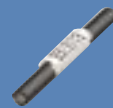

1. Press **Label Type** – until Rot-Rep.
Press **←** to select.
2. Set the length of the label with (*BLK LEN*), use number pad to type length or arrows **↑** **↓** to select, arrow **→** to the next option.
3. Choose frame (*FRAME*) option - Arrow **↓** to select, **←** to end.
4. Type *Text*.
5. To change text style or size per specific line, use **↑** **↓** to place cursor on line to be changed. Use
 - **Code** **D** to specify different font types.
↑ **↓** to choose. Press **←** to enter.
 - **Code** **E** to specify different font sizes.
↑ **↓** to choose. Press **←** to enter.
6. **Print**

Cable/Wire Flag



1. Press **Label Type** – until Flag.
Press **←** to select.
2. Set the diameter of the cable/wire (*FLAG Φ*) arrows **↑** **↓** to select, arrow **→** to next option.
3. Set the length of the label (*FLAG LEN*), use number pad to type length or arrows **↑** **↓** to select, arrow **→** to the next option.
4. Choose frame (*FRAME*) option - Arrow **↓** to select frame, arrow **→** to next option.
5. Choose to have text rotated or not (*ROTATE*), arrows **↑** **↓** to select, **←** to end.
6. Type *text*.
7. To change text style or size per specific line, use **↑** **↓** to place cursor on line to be changed. Use
 - **Code** **D** to specify different font types.
↑ **↓** to choose. Press **←** to enter.
 - **Code** **E** to specify different font sizes.
↑ **↓** to choose. Press **←** to enter.
8. **Print**

Port Label



1. Press **Label Type** – until Port.
Press **←** to select.
2. Set the length of the label (*BLK LEN*), use pad to type length or arrows **↑** **↓** to select, arrow **→** to the next option.
3. Choose frame (*FRAME*) option - Arrow **↓** to select, **←** to end.
4. Type *Text*.
(continue to next column)

Port Label (cont.)



5. To change text style or size per specific line, use **↑** **↓** to place cursor on line to be changed. Use
 - **Code** **D** to specify different font types.
↑ **↓** to choose. Press **←** to enter.
 - **Code** **E** to specify different font sizes.
↑ **↓** to choose. Press **←** to enter.
6. **Print**

Panel Label

7C-A01 7C-A02

1. Press **Label Type** – until Panel.
Press **←** to select.
2. Set the length of the label with (*BLK LEN*), use number pad to type length or arrows **↑** **↓** to select, arrow **→** to the next option.
3. Choose frame (*FRAME*) option - Arrow **↓** to select, **←** to end.
4. Choose print option - front of a panel or for the reverse of a panel — arrow **↓** to select, **←** to end.
5. Type *Text*. Use **Code** **↵** to separate port information.
6. To change text style or size per specific line, use **↑** **↓** to place cursor on line to be changed. Use
 - **Code** **D** to specify different font types.
↑ **↓** to choose. Press **←** to enter.
 - **Code** **E** to specify different font sizes.
↑ **↓** to choose. Press **←** to enter.
7. **Print**