

Scheduled Maintenance

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply.

If any do apply, follow Schedule 2 (Canada and Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates

NOTE
After the described period, continue to follow the described maintenance at the recommended intervals.

Maintenance and Care

▼ Schedule 1

I : Inspect and repair, clean, adjust, or replace if necessary.
(Oil-permeated air filter cannot be cleaned using the air-blow method.)
R : Replace
L : Lubricate

Maintenance Interval	Number of months or kilometers (miles), whichever comes first								
	Months	6	12	18	24	30	36	42	48
	×1000 Km	12	24	36	48	60	72	84	96
Maintenance Item	(×1000 Miles)	(7.5)	(15)	(22.5)	(30)	(37.5)	(45)	(52.5)	(60)
Engine valve clearance									I
Drive belts (tension)					I				I
Engine timing belt	Inspect at 96,000km (60,000miles) Replace every 168,000km (105,000miles)								
Engine oil	R	R	R	R	R	R	R	R	R
Engine oil filter	R	R	R	R	R	R	R	R	R
Cooling system				I					I
Engine coolant	Replace at first 168,000km (105,000miles) or 60 months ; after that, every 48,000km (30,000miles) or 24 months								
Idle speed					I				I
Air filter					R				R
Fuel lines and hoses* ¹					I				I
Hoses and tubes for emission* ¹									I
Spark plugs	2.0-liter engine (non-PLATINUM tipped type)				R				R
	2.5-liter engine (PLATINUM tipped type)	Replace every 96,000km (60,000miles)							
Brake lines, hoses and connections					I				I
Disc brakes					I				I
Drum brakes					I				I
Steering operation and linkages					I				I
Front suspension ball joints					I				I
Driveshaft dust boots					I				I
Bolts and nuts on chassis and body					I				I
Exhaust system heat shields					I				I
All locks and hinges	L	L	L	L	L	L	L	L	L
Refrigerant amount (if installed)		I			I		I		I
Compressor operation (if installed)		I			I		I		I

*1: According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.

▼ Schedule 2

I : Inspect and repair, clean, adjust, or replace if necessary.
 (Oil-permeated air filter cannot be cleaned using the air-blow method.)
 R : Replace
 L : Lubricate

Maintenance Interval Maintenance Item	Number of months or kilometers (miles), whichever comes first													
	Months	4	8	12	16	20	24	28	32	36	40	44	48	
	×1000 Km	8	16	24	32	40	48	56	64	72	80	88	96	
	(×1000 Miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)	
Engine valve clearance													I	
Drive belts (tension)							I						I	
Engine timing belt *2	Inspect at 96,000km (60,000miles) Replace every 168,000km (105,000miles)													
Engine oil	Puerto Rico	Replace every 5,000km (3,000miles) or 3 months												
	others	R	R	R	R	R	R	R	R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R	
Cooling system							I						I	
Engine coolant	Replace at first 168,000km (105,000miles) or 60 months ; after that, every 48,000km (30,000miles) or 24 months													
Engine coolant level		I	I	I	I	I	I	I	I	I	I	I	I	
Idle speed							I						I	
Air filter				I *1			R			I *1			R	
Fuel lines and hoses *1							I						I	
Hoses and tubes for emission *1													I	
Spark plugs	2.0-liter engine (non-PLATINUM tipped type)						R						R	
	2.5-liter engine (PLATINUM tipped type)	Replace every 96,000km (60,000miles)												
Function of all lights		I	I	I	I	I	I	I	I	I	I	I	I	
Brake lines, hoses and connections							I						I	
Brake and clutch fluid level		I	I	I	I	I	I	I	I	I	I	I	I	
Disc brakes				I			I			I			I	
Drum brakes							I						I	
Tire inflation pressure and tire wear		I	I	I	I	I	I	I	I	I	I	I	I	
Steering operation and linkages							I						I	
Power steering fluid level		I	I	I	I	I	I	I	I	I	I	I	I	
Front suspension ball joints							I						I	
Driveshaft dust boots							I						I	
Bolts and nuts on chassis and body				I			I			I			I	
Exhaust system heat shields							I						I	
All locks and hinges		L	L	L	L	L	L	L	L	L	L	L	L	

*1: According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.

*2: If the vehicle is operated in cold districts { below -18 degrees C (0 degrees F) }, replace the timing belt at 96,000km (60,000miles).

Maintenance and Care

I : Inspect and repair, clean, adjust, or replace if necessary.
(Oil-permeated air filter cannot be cleaned using the air-blow method.)

R : Replace

L : Lubricate

Maintenance Interval	Number of months or kilometers (miles), whichever comes first												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
Maintenance Item	×1000 Km	8	16	24	32	40	48	56	64	72	80	88	96
	(×1000 Miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)
Washer fluid level		I	I	I	I	I	I	I	I	I	I	I	I
Refrigerant amount (if installed)				I			I			I			I
Compressor operation (if installed)				I			I			I			I