

DRIVER ASSURANCE

Mazda Drivers Assurance Plan
Check out www.mymazda.com, the website dedicated to you.

Manage your maintenance records, receive valuable offers, see the latest accessories, and much more!

Mazda Roadside Assistance
Exhilaration, liberation and inspiration, are great reasons to drive a Mazda car, truck, SUV or minivan. In addition to all the other great standard features, you also get peace of mind, our Emergency Roadside Assistance Plan, it's just a phone call away, 24 hours a day, 365 days a year, call **1-800-866-1998**

Mazda "bumper-to-bumper" Limited Warranty
We design and build every Mazda to give you driving pleasure now and far down the road. We're so confident in our quality that we cover the entire vehicle against defects in materials and workmanship

for 48 months or 50,000 miles, whichever comes first

Mazda Service Transportation Solution

Being without your Mazda may put a crimp in your day, if you do ever have to take your Mazda in for repairs don't worry, you're covered. With the Mazda Transportation Solution, you will be given a loaner car at no charge when your Mazda vehicle is in for warranty repairs.

For all the details, see your Mazda Dealer

 
This Quick Tips® guide is provided by Mazda North American Operations to make your Mazda ownership experience more convenient. It is not intended to replace your Owner's Manual.

If you have any questions about your vehicle, you are invited to contact your local dealer.

Or if you need additional help, feel free to call our

Customer Assistance Center at 1-800-222-5500

Monday through Friday, 9 a.m.- 4:45 p.m., Pacific 9 a.m.-5:45 p.m., Eastern/Central

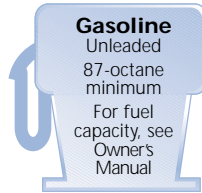

©2003 Calcar. Quick Tips® is a trademark of Calcar, made in USA 6/03 23.701 DOT Mazda North American Operations reserves the right to change product specifications at any time without incurring obligations. 9999-95-023C-04QT

2004

 
 
MAZDA B-SERIES TRUCK

Quick Tips®

Reference Guide for Controls and Functions

mazda®

DRIVER'S VIEW

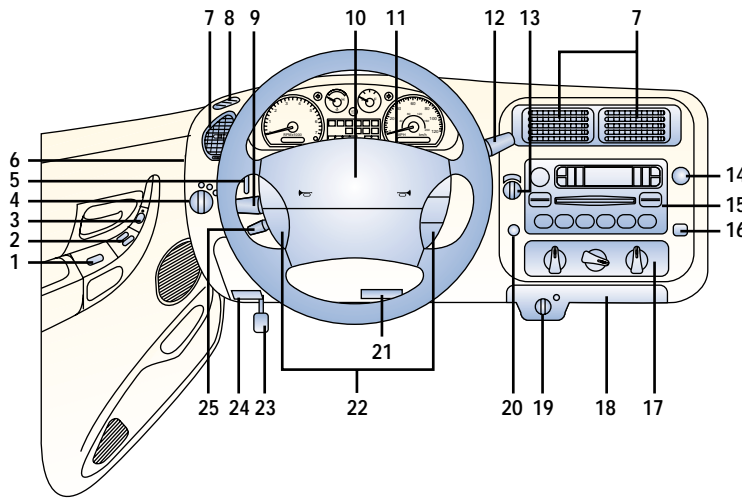**Key/number plate**

Operates ignition and all locks

Tip: Use key number plate to purchase new key; store in safe place

SecuriLock™ passive anti-theft key

Electronically coded key activates ignition; without correct key, engine will not start

Keyless remote entry system*, see Switches

1. **Power door locks***, see Switches
2. **Power window switches***, see Switches
3. **Dual power mirrors***, see Switches
4. **Lighting switch**
 ☞ Tail, parking and dashboard lights on:
 Rotate knob to first notch
 ☞ Tail, parking, dashboard and headlights on: Rotate knob to second notch
5. **Instrument panel lighting**
 To brighten/dim: Rotate thumb-wheel up/down
6. **Fuse panel**
7. **Air vents**
 To open/close: Move thumb-wheel left/right
 To direct air flow: Move tab in center of vent
8. **Side window defroster**
9. **Turn signals/headlight high beams/wiper/washer lever**, see Driver Controls
10. **Horn/Air bag**
 Press to sound horn
11. **▲ Hazard warning switch**
 Press on/off
12. **Gearshift lever (A/T)***, see Transmission
13. **4x4 control***, see Transmission
14. **Power point electrical outlet**
 Use for optional electrical accessories, do not use cigarette lighter for accessories
15. **Audio system**, see Audio Systems
16. **☞ Fog light switch***
 Press on/off; on with low-beams/parking lights only
17. **Climate control panel**, see Climate Control
18. **Ashtray**
 To open/close: Pull out/push in
19. **Passenger's front air bag deactivation switch/light**, see Seats/Console
20. **Cigarette lighter**
21. **☞ Hood release handle**
 Pull to unlatch hood, see Under Hood
22. **Cruise control***, see Switches
23. **Parking brake pedal**
24. **Parking brake release lever**
25. **Tilt steering-wheel lever***
 To change position: Pull lever, tilt wheel up or down, release to lock

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

 
Driver's
View

Instrument Cluster

INSTRUMENT CLUSTER


GAUGES

- 1. **Tachometer**
- 2. **Engine coolant temperature gauge**
If above normal range, stop truck and turn off engine; check coolant level when safe
- 3. **Fuel gauge**
Fuel tank capacity varies by model; see Owner's Manual
- 4. **Speedometer**
- 5. **Gearshift indicator* (A/T)**
- 6. **Trip odometer reset button**
Push to reset
- 7. **Odometer**
- 8. **Trip odometer**

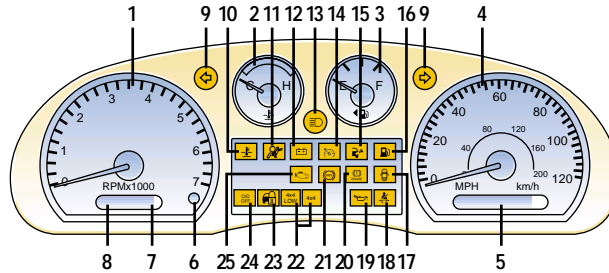

WARNING LIGHTS

 - 9. **Turn signals/hazard warning on**
- 10. **Engine coolant temperature**
High engine coolant temperature; stop truck and turn off engine; check coolant level when safe
- 11. **Air bag readiness**
Air bag malfunction; dealer inspection required
- 12. **Charging system warning light**
Dealer inspection required
- 13. **High beams on**
- 14. **Cruise control on***
- 15. **Check fuel cap**
Fuel cap not securely tightened
- 16. **Low fuel**
- 17. **Door ajar***
Door not completely shut
- 18. **Always fasten safety belts**
Light and chimes
- 19. **Engine oil pressure**
Immediately stop truck and turn off engine; check oil level
- 20. **Brake system**
Indicates parking brake on or low brake fluid level, if brake fluid level is low, have vehicle inspected by nearest Mazda Dealer
- 21. **Anti-lock Brake System (ABS)**
ABS malfunction, normal brakes only, dealer inspection required
- 22. **4x4 /LOW 4X4 HIGH/ 4X4 LOW Indicator***, see Transmission
- 23. **Anti-theft on***
- 24. **Overdrive off indicator* (A/T)**
When lit, transmission does not shift into overdrive
- 25. **Check engine**
Dealer inspection required

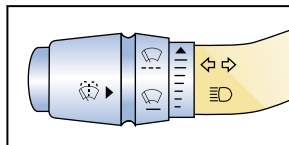

Turn signals/headlight high beams/wiper/washer lever

High beams on/off: Push forward to detent/pull back To flash high beams: Pull rearward and release

To turn on wipers: Rotate knob forward; first 7 detents are progressively faster intervals, 8th detent is low speed, 9th is high To activate washers: Push in end of knob; will also operate wipers

 
*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Driver Controls

Switches

SWITCHES

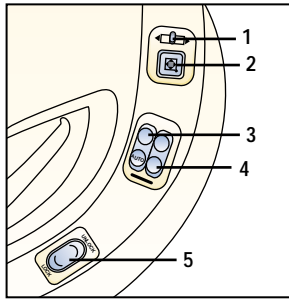

Dual power mirrors*

To adjust left/right mirror: Press control switch (1) left/right, tilt knob (2) in direction of desired mirror movement

Tip: To lock mirrors in place, move control switch (1) to center position

Power window switches*

Operate only with ignition in ACC or ON position
Both windows may be controlled from driver's door; passenger door has separate switch

Driver's window (3): One touch-down; press and release, window goes all the way down; tap front of switch to stop
Press and hold top of switch to close

Passenger window switch (4): Press bottom/top of switch to open/close

 
Power door locks*

Front door lock switches
To lock/unlock both doors: Press bottom/top on either door switch (5)
To lock doors without key, exit the vehicle, press lock on either door, close the door

To unlock: Use key to unlock either front door, open door and press top of switch to unlock other door

Manual door locks will override power locks

Power Door Unlock Disable feature, see Owner's Manual

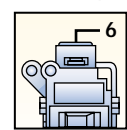

Fuel pump shutoff

Located in right front trim panel under instrument panel
Disables fuel pump after a substantial jolt or collision
To reset: Press down top of exposed red reset button (6)

WARNING: Do not reset shutoff switch if you see or smell fuel



 
Keyless remote entry system*

Functions only with ignition in OFF position

To lock doors: Press lock button (1); pressing again within 5 seconds causes doors to relock, horn to beep once if all doors are closed, twice if any door is ajar

To unlock doors: Press unlock button (2) to open driver's door; press again within 5 seconds to open other door

Panic alarm: Press panic button (3); horn sounds, parking lights flash and interior lights illuminate; press (3) again to stop or insert key and turn ignition to ON or ACC position



Cruise control*

Operates above 30 mph
Press and release ON (4)
To set speed: Press and release SET+ (6) at desired speed; hold (6) to accelerate

 
To decelerate: Press and hold CST- (7), release at desired speed; or tap brake pedal, press and release (6) at desired speed

Incremental deceleration: Press and release (7), each tap = minus 1 mph

Incremental acceleration: Press and release (6), each tap = plus 1 mph

To cancel: Tap brake/clutch pedal or push OFF button (8)

Return to preset speed (after braking): Press and release RES (resume) button (5)

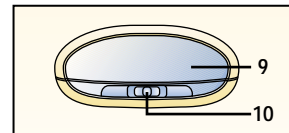

Interior lights

9. Interior light

10. Interior light switch

ON = light always on

DOOR = light on when door open

OFF = light always off

Tip: Battery saver shuts off interior lamps after 45 minutes with ignition off

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Switches

Seats

SEATS

Seats

1. Fore/aft adjustment

Raise lever and hold, slide seat, release lever

2. Seatback angle

To adjust: Lift and hold lever, lean forward or backward to tilt seat, release lever

⚠️ WARNINGS: Do not adjust seats while driving

Safety belts must always be worn when vehicle is in motion

 
All air bags are supplemental and do not replace safety belt usage

Always wear your safety belt and properly secure children

Shoulder belt height adjustment

To raise belt: Slide adjuster up
To lower belt: Push release button (3) and slide down

⚠️ WARNING: Make sure adjuster locks in one of its positions

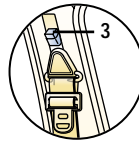


Dual locking mode lap/shoulder belt retractor (passenger seat only)

Emergency locking mode: Belt locks only on hard braking/cornering or impacts of about 5 mph or higher

Automatic locking mode: Must be used when installing child-safety seat

To activate: Pull webbing fully out of retractor; belt will only tighten

 To disengage: Unbuckle belt and allow webbing to retract fully, for complete details see Owner's Manual

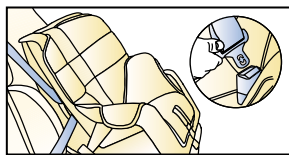

Child-safety seat

To install, use dual-locking mode retractor safety belts; see Owner's Manual for proper installation and child seat tether and LATCH system instructions

⚠️ WARNING: Use age appropriate child restraints, see Owner's Manual and state or province laws



Passenger's front air bag deactivation switch

Deactivate passenger's front air bag

 
when using a child-safety seat
To deactivate/activate: Insert ignition key in switch, rotate to OFF/ON, remove key
Amber OFF light illuminates when deactivated and ignition is on

💡 Tip: Turn ignition off when disabling passenger front air bag

⚠️ WARNINGS: When using a rear-facing infant-safety seat or a front-facing child seat, always set the passenger seat air bag deactivation switch to OFF position, an infant or child is in serious danger of being injured or killed if front passenger air bag is deployed

If you install a front-facing child-seat, put it in the outboard seat and slide it all the way rearward, set passenger air bag deactivation switch to OFF position

For Cab-Plus vehicles, do not put child restraints in the center facing jump seats, for complete details see Owner's Manual

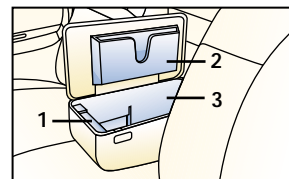

Console (Split bench)

 
- 1. Coin tray**
- 2. Map storage**
- 3. Storage compartment**

*Denotes optional equipment


Always check the Owner's Manual for more operating information and safety features

Audio
Systems

AM/FM STEREO/COMPACT DISC

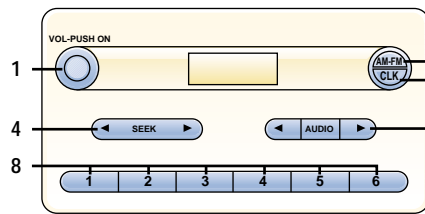

AM/FM Stereo

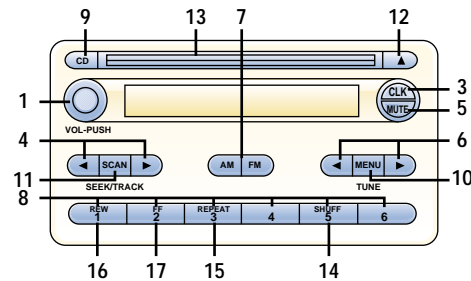 

AM/FM Stereo/CD

1. Power/Volume

Press to turn on/off; turn clockwise/counterclockwise to increase/decrease volume

2. AUDIO

Press to select Bass, Treble, or Balance; then press ◀ AUDIO ▶ to adjust

3. Clock

Press Clock to set time; adjust hour up/down by pressing ◀ / ▶ (2), (6); press Clock again to select minutes, adjust minutes up/down by pressing ◀ / ▶ (2), (6); press Clock again to exit

4. SEEK/TRACK

Radio: Press and release ◀ / ▶ for next strong station down/up; press and hold to skip stations
CD: Press and release ◀ / ▶ to select previous/next track

5. MUTE

Press to mute playing media; press again for normal volume

6. Tune

Press ◀ / ▶ to change frequency down/up
Press and hold to move down/up quickly

7. AM/FM

Press to select AM/FM1/FM2 frequency bands

8. Memory preset buttons

To set: Tune to station, press and hold until sound returns

9. CD

Press to select CD

10. MENU

Press MENU to toggle through following modes: Autoset, Bass, Treble, Balance, and Fade; press ◀ / ▶ to adjust

Autoset

Press ◀ / ▶ to set 6 strongest stations into AM, FM1, or FM2 memory buttons; press again to return to normal stations

11. SCAN

Press to briefly sample next listenable selections, press again to cancel; functions in all modes

12. Eject

Press to eject CD; radio resumes playing

13. CD slot**14. Shuffle**

Press to play CD changer* single disc tracks in random order

15. REPEAT

Press to repeat current CD track

16. REW

Reverse in CD track

17. FF

Advance in CD track

 
*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Audio
Systems

Audio
Systems

AM/FM STEREO/COMPACT DISC

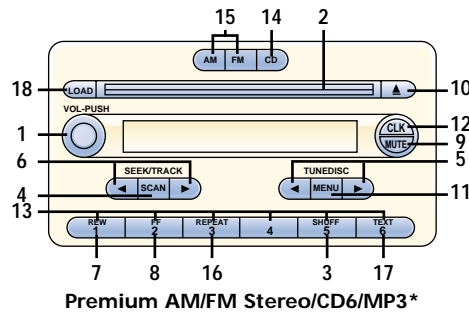**1. Volume Push On**

Press to turn on/off; turn clockwise/counterclockwise to increase/decrease volume

2. CD slot

Tip: Insert CD with label side up

3. Shuffle

Press to select SHUFFLE which plays random tracks from CD/MP3 discs

4. Scan

Radio: Press to briefly sample listenable stations
CD/MP3: Press to briefly sample tracks
Press again to stop

10. Eject

Press once to eject current CD
Press and hold to eject all stored discs one at a time
Press once, then press desired number 1-6 (13) to eject a specific CD

12. Clock

Press Clock to set time; adjust hour up/down by pressing ◀/▶ (5); press Clock again to select minutes, adjust minutes up/down by pressing ◀/▶ (5); press Clock again to exit

5. TUNE/DISC

Radio: Press ◀/▶ to change frequency down/up
CD: Press ◀/▶ to select previous/next disc
Hold for rapid movement
MP3: Access previous/next directory

6. SEEK/TRACK

Radio: Press ◀/▶ for next listenable station down/up
CD: Press ◀/▶ to select previous/next track

7. REW

Press and hold to play previous disc tracks

8. FF

Press and hold to play next disc tracks

9. MUTE

Press to mute playing media; press again for normal volume

11. MENU

Press MENU to toggle through following modes: Autoset, Bass, Treble, Balance, and Fade; press ◀/▶ to adjust
Autoset
Press ◀/▶ to set 6 strongest stations into AM, FM1, or FM2 memory buttons; press again to return to normal stations
Next/previous directory
Previous or next MP3 directory; Press ◀/▶
Flat file/directory mode
To select; press ◀/▶
Track number/normal music name/file name
Press ◀/▶

13. Memory preset buttons 1-6

To set: Tune to station, press and hold until sound returns

14. CD

Press to select CD mode or play CD

15. AM/FM

Press to select radio and alternate among AM/ FM1/ FM2 bands; works with (19)

16. REPEAT

Press to repeat CD/MP3 track

17. TEXT

Press to view next 12 characters in MP3 music name/file name of current MP3 track and directory

18. LOAD

 
Press to load one CD or auto load up to six discs

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Transmission

TRANSMISSION

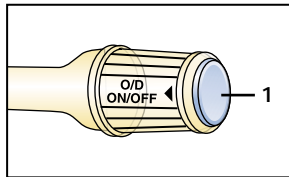**Automatic transmission***

Gearshift must be in Park or Neutral to start engine; it must be in Park to remove ignition key

P = Park

To move gearshift from Park: You **MUST** press firmly on the brake pedal and the ignition must be in the ON position. Never put moving vehicle in Park.

Always apply parking brake when exiting the vehicle.

R = Reverse

Do not engage Reverse when vehicle is moving forward.

N = Neutral

No gear is engaged; vehicle can roll freely, even on a slight incline, unless the brakes are applied.

D (Overdrive)

For normal driving: Shifts through all forward gears automatically for more relaxed highway driving and optimum fuel economy.

Tip: Torque converter lock-up improves fuel economy and can feel like an additional gear.

D (Overdrive Off)

Press (1) to disengage overdrive; an indicator light on the instrument cluster will illuminate.

Driving without overdrive provides a lower gear for climbing hills and engine braking when descending hills; you can depress (1) at any speed.

To re-engage overdrive, press (1) again and the instrument cluster light will go out.

 
Tip: A flashing Overdrive Off light indicates a system malfunction; dealer inspection required.

2 = Second

Place the gearshift lever in second when accelerating on slippery roads or to provide additional engine braking on downgrades.

1 = Low


Low provides maximum engine braking on steep downgrades.

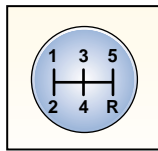**Manual transmission**

Depress clutch pedal completely to start engine and change gears; stop

truck completely before shifting into reverse.

 Tip: Extended use of other than manufacturer's specified tires on a limited-slip rear axle* may result in damage, this may not affect normal driving and may not be noticeable by the driver.

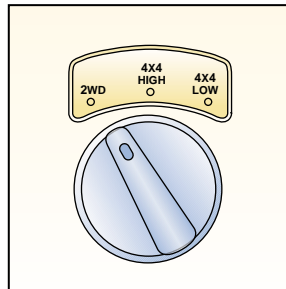**4-wheel drive system***

2WD = Two-wheel drive
Power to rear axle only, 4X4 indicator lights off

4x4 HIGH = Four-wheel drive
Power to front and rear axles at normal speed, 4X4 light on

4x4 LOW = Four-wheel drive (low range)

Power to front and rear axles at reduced speed, 4X4 LOW light on

To shift from 2WD to 4x4 HIGH: Rotate switch from 2WD to 4x4 HIGH.

To shift from 4x4 HIGH to 2WD: Rotate switch from 4x4 HIGH to 2WD.

Tip: You do not need to shift into reverse to disengage front hubs.

To shift into/out of 4x4 LOW: Stop vehicle, depress brake, place automatic transmission in neutral (with manual transmission, depress clutch pedal); rotate switch to desired setting.

Tip: Pulsation may occur during cornering in 4X4 mode.

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Transmission

Climate Control

CLIMATE CONTROL


1. Fan control

To increase speed and flow:
Rotate knob clockwise


2. Temperature selection


Cooler/warmer = rotate
knob counterclockwise/
clockwise

3. Air flow selections


 = air to dash vents,
A/C compressor* off

 
OFF = system off, no air flow

 = air to dash/floor vents,
A/C compressor* on

 = air to floor,
A/C compressor* on

 = air to floor and windshield,
A/C compressor* on


 = defrost, air to windshield,
A/C compressor* on

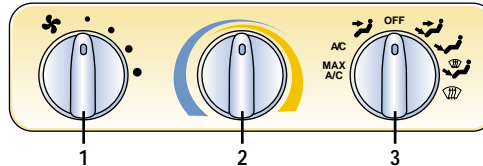


**Air conditioning system***

MAX A/C = cooling with inside
air, air to dash only

 A/C = cooling with outside air,
air to dash only

**Control positions for
maximum defrost**


Fan to maximum, temperature
to maximum hot, air flow
selector knob to 

 **Tips: To prevent moisture
buildup, never drive with
system off**
When  , or  selected,
air is dried when temperature
is above 50° F
A/C compressor* is on in
defrost position

Break-in period

First 1,000 miles: Avoid heavy
repeated brake use; avoid full
throttle, rapid acceleration or
kick-down of transmission; drive
at varying road and engine speeds
Do not tow a trailer for first
500 miles


Do not use special "break-in" oils

 **Tip: Follow the same break-in
period procedures with newly
overhauled engine or when
brakes are replaced**

**4-wheel Anti-lock Braking
System (ABS)**

ABS automatically reduces
hydraulic pressure to all four
wheels (4-wheel ABS) on the
verge of locking up

You may feel a slight pulsing
of the brake pedal and hear a
clicking noise, this tells you the
ABS is functioning properly

 **Tips: Maintain constant
pressure on the brake pedal
Do not pump the brakes**

ABS self test

A self-diagnostic test is
performed when the engine is
started; you may feel some
pulsation and hear some
noise; this is normal

Tire economy and tips


Check pressure monthly when
tires are cold
Check for unusual wear and
overall condition, do not exceed
weight limit on tires and axles
Maintain correct front-end alignment
and tire balance; see Owner's
Manual for rotation chart

Tire pressure

Decal on the edge of the
driver's door provides tire
size and pressure information

Tire chains*†

Tire chains can damage aluminum
wheels; use on steel wheels only

 **Tips: Use only SAE class "S"
chains, install only on rear tires;
install as tightly as possible
and retighten periodically
Never exceed 30 mph with
tire chains**

 
* Denotes optional equipment
† See Owner's Manual

Always check the Owner's Manual for more operating information and safety features

Driving
Tips

Under Hood

UNDER HOOD

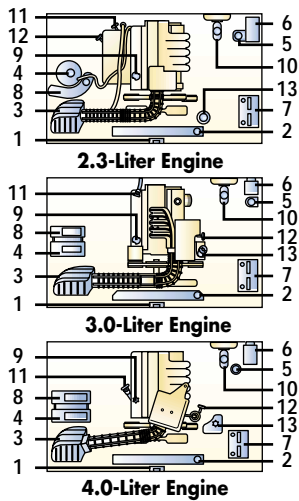

- 1. Hood latch**
Pull inside hood release handle, hood pops up slightly; while applying upward pressure on hood, lift auxiliary latch handle and raise hood
- 2. Radiator cap**
Remove cap only when safe and engine is cool
- 3. Air filter**
- 4. Engine coolant reservoir**
Level should be at fill line indicator mark; remove cap only when safe and engine is cool
⚠️WARNING: Never remove coolant reserve tank cap while engine is running or hot; you could get burned
- 5. Clutch fluid reservoir**
With cap on, check that fluid level is at ridge in reservoir body, use DOT 3 brake fluid
- 6. Fuse block**
- 7. Battery**
- 8. Windshield washer reservoir**
Fill with windshield washer fluid, not water; use fluids containing non-methanol antifreeze agents only, they will not damage paint, wiper blades and washer system
- 9. Engine oil filler cap**
Use SAE 5W-20 (2.3L, 3.0L) 5W-30 (4.0L) oil for all temperatures; use only oils displaying American Petroleum Institute Certified for Gasoline Engines
- 10. Brake fluid reservoir**
Clean filler cap before removing; use only DOT 3 fluid from a sealed container
If brake fluid level is low, have vehicle inspected by your closest Mazda Dealer

- 11. Automatic transmission fluid dipstick***
Check with engine on at normal operating temperature; fluid should be within crosshatched area on dipstick

	NORMAL	SPECIAL
5,000 miles		G
15,000 miles	A	H
30,000 miles	A B	I J
45,000 miles	A C	
60,000 miles	A B D	K L
75,000 miles	A C	
90,000 miles	A B	
100,000 miles	E F	

*Denotes optional equipment
**Special operating conditions

- 12. Engine oil dipstick**
Check with engine off and at normal temperature; fluid should be within crosshatched area on dipstick; do not fill above MAX/FULL line

Change engine oil/replace filter every 3,000*/5,000 miles; rotate tires every 7,500 miles or sooner

Normal operating conditions

- A.** Inspect: Engine cooling system, hoses and clamps, automatic transmission fluid level, steering linkage, suspension, brake system
Inspect/lubricate: 4x2 ball joints
- B.** Replace: Air filter/fuel filter
- C.** Change: Green engine coolant
- D.** Lubricate: 4x2 wheel bearings
Replace: Manual transmission fluid
- E.** Inspect: Accessory drive belt(s)
Replace: Spark plugs
Replace: PCV valve (2.3L/3.0L/4.0L)

- 13. Power steering fluid reservoir**
Check with engine off and at normal temperature; fluid level on dipstick should be between arrows in FULL HOT range

Special operating conditions
Towing, extensive idling, low speed driving, dusty conditions and off-road operation, see Owner's Manual

- F.** Change: Yellow engine coolant
 - G.** Inspect: Brake system
 - H.** Replace: Fuel filter
 - I.** Change: Automatic transmission fluid
 - J.** Lubricate: Front wheel bearings (4x2)
 - K.** Change: Transfer case fluid (4x4)
 - L.** Replace: Spark plugs
- Perform maintenance as required**
Inspect/lubricate: U-joints
Replace: Engine air filter
Change: Manual transmission fluid

Always check the Owner's Manual for more operating information and safety features