

Scheduled Maintenance (North America)

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply.

If any do apply, follow Schedule 2 (Canada and Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates

| |
|---|
| NOTE |
| After the prescribed period, continue to follow the described maintenance at the recommended intervals. |

Mazda3 - Maintenance Schedule

Maintenance and Care

▼ Schedule 1

I : Inspect and repair, clean, adjust, or replace if necessary.

R : Replace

L : Lubricate

| Maintenance Interval (Number of months or kilometers (miles), whichever comes first) | Months | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 |
|---|-------------|-----|----|------|----|------|----|------|----|
| | ×1000 km | 12 | 24 | 36 | 48 | 60 | 72 | 84 | 96 |
| | ×1000 miles | 7.5 | 15 | 22.5 | 30 | 37.5 | 45 | 52.5 | 60 |

ENGINE

| | | | | | | | | | |
|------------------------|--|---|---|---|---|---|---|---|---|
| Engine valve clearance | Audible inspect every 120,000km (75,000miles), if noisy, adjust | | | | | | | | |
| Drive belts (tension) | | | | | | I | | | |
| Engine oil | R | R | R | R | R | R | R | R | R |
| Engine oil filter | R | R | R | R | R | R | R | R | R |

COOLING SYSTEM

| | | | | | | | | | |
|----------------|---|--|--|--|---|--|--|--|---|
| Cooling system | | | | | I | | | | I |
| Engine coolant | Replace at first 96,000 km (60,000 miles) or 4 years ; after that, every 2 years | | | | | | | | |

FUEL SYSTEM

| | | | | | | | | | |
|--|--|--|--|--|---|---|--|--|---|
| Air filter | | | | | | R | | | |
| Fuel lines and hoses* ¹ | | | | | I | | | | I |
| Hoses and tubes for emission* ¹ | | | | | | | | | I |

IGNITION SYSTEM

| | | | | | | | | | |
|-------------|--|--|--|--|--|--|--|--|--|
| Spark plugs | Replace every 120,000km (75,000miles) | | | | | | | | |
|-------------|--|--|--|--|--|--|--|--|--|

CHASSIS and BODY

| | | | | | | | | | |
|---|--|---|---|---|---|---|---|---|---|
| Brake lines, hoses and connections | | | | | I | | | | I |
| Disc brakes | | I | | | I | | I | | I |
| Tire (Rotation) | Rotate every 12,000km (7,500miles) | | | | | | | | |
| Steering operation and linkages | | | | | I | | | | I |
| Front and rear suspension and ball joints | | | | | I | | | | I |
| Driveshaft dust boots | | | | | I | | | | I |
| Exhaust system and heat shields | Inspect every 72,000km (45,000miles) or 60 months | | | | | | | | |
| All locks and hinges | L | L | L | L | L | L | L | L | L |

*1: According to state / provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage / kilometer period to ensure long-term reliability.

▼ Schedule 2

I : Inspect and repair, clean, adjust, or replace if necessary.

R: Replace

L: Lubricate

| | | | | | | | | | | | | | |
|---|-------------|---|----|----|----|----|----|----|----|----|----|----|----|
| Maintenance Interval (Number of months or kilometers (miles), whichever comes first) | Months | 4 | 8 | 12 | 16 | 20 | 24 | 28 | 32 | 36 | 40 | 44 | 48 |
| | ×1000 km | 8 | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 |
| | ×1000 miles | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 |

ENGINE

| | | | | | | | | | | | | | |
|------------------------|---|--|---|---|---|---|---|---|---|---|---|---|---|
| Engine valve clearance | Audible inspect every 120,000km (75,000miles), if noisy, adjust | | | | | | | | | | | | |
| Drive belts (tension) | | | | | | | | I | | | | | |
| Engine oil | Puerto Rico | Replace every 5,000 km (3,000 miles) or 3 months | | | | | | | | | | | |
| | Others | R | R | R | R | R | R | R | R | R | R | R | R |
| Engine oil filter | R | R | R | R | R | R | R | R | R | R | R | R | R |

COOLING SYSTEM

| | | | | | | | | | | | | | |
|----------------------|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Cooling system | | | | | | | I | | | | | | I |
| Engine coolant | Replace at first 96,000 km (60,000 miles) or 4 years ; after that, every 2 years | | | | | | | | | | | | |
| Engine coolant level | I | I | I | I | I | I | I | I | I | I | I | I | I |

FUEL SYSTEM

| | | | | | | | | | | | | | |
|---------------------------------|-------------|--|--|--|--|--|---|---|--|--|--|--|---|
| Air filter | Puerto Rico | | | | | | R | | | | | | R |
| | Others | | | | | | | R | | | | | |
| Fuel lines and hoses *1 | | | | | | | I | | | | | | I |
| Hoses and tubes for emission *1 | | | | | | | | | | | | | I |

IGNITION SYSTEM

| | | | | | | | | | | | | | |
|-------------|---------------------------------------|--|--|--|--|--|--|--|--|--|--|--|--|
| Spark plugs | Replace every 120,000km (75,000miles) | | | | | | | | | | | | |
|-------------|---------------------------------------|--|--|--|--|--|--|--|--|--|--|--|--|

ELECTRICAL SYSTEM

| | | | | | | | | | | | | | |
|------------------------|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Function of all lights | I | I | I | I | I | I | I | I | I | I | I | I | I |
|------------------------|---|---|---|---|---|---|---|---|---|---|---|---|---|

*1: According to state / provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage / kilometer period to ensure long-term reliability.

