

DRIVER ASSURANCE

**Mazda Drivers Assurance Plan**  
Check out [www.mymazda.com](http://www.mymazda.com), the website dedicated to you.

Manage your maintenance records, receive valuable offers, see the latest accessories, and much more!

**Mazda Roadside Assistance**  
Exhilaration, liberation and inspiration, are great reasons to drive a Mazda car, truck, SUV or minivan. In addition to all the other great standard features, you also get peace of mind, our Emergency Roadside Assistance Plan, it's just a phone call away, 24 hours a day, 365 days a year, call **1-800-866-1998**

**Mazda "bumper-to-bumper" Limited Warranty**

We design and build every Mazda to give you driving pleasure now and far down the road. We're so confident in our quality that we cover the entire vehicle against defects in materials and workmanship

for 48 months or 50,000 miles, whichever comes first

**Mazda Service Transportation Solution**

Being without your Mazda may put a crimp in your day, if you do ever have to take your Mazda in for repairs don't worry, you're covered. With the Mazda Transportation Solution, you will be given a loaner car at no charge when your Mazda vehicle is in for warranty repairs.

For all the details, see your Mazda Dealer

 
This Quick Tips® guide is provided by Mazda North American Operations to make your Mazda ownership experience more convenient. It is not intended to replace your Owner's Manual.

If you have any questions about your vehicle, you are invited to contact your local dealer.

Or if you need additional help, feel free to call our

**Customer Assistance Center at 1-800-222-5500**

Monday through Friday,  
9 a.m.- 4:45 p.m., Pacific  
9 a.m.-5:45 p.m., Eastern/Central

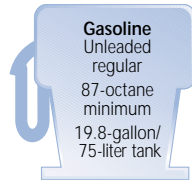

©2003 Calcar. Quick Tips® is a trademark of Calcar, made in USA 6/03 38.657 DOT Mazda North American Operations reserves the right to change product specifications at any time without incurring obligations. 9999-95-029C-04QT


**2004**

 **MAZDA MPV**

Quick Tips®

Reference  
Guide for  
Controls and  
Functions

## DRIVER'S VIEW

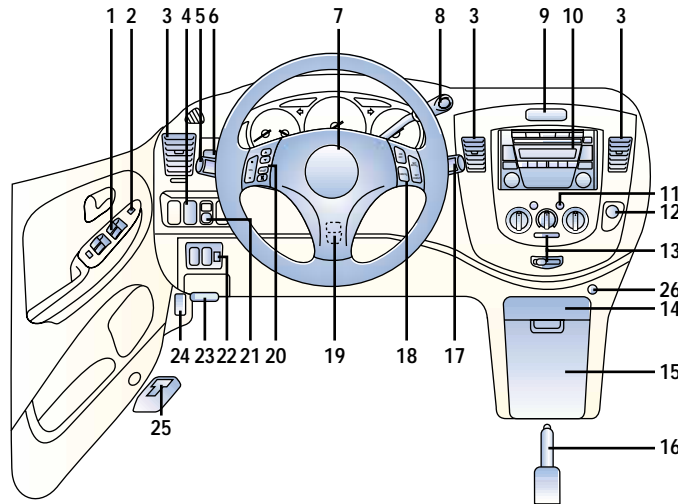
















## Getting Started

MPV Quick Tips® are designed to quickly familiarize you with some important features of your MPV

This Driver's View tab is your index to the Quick Tips®, locate the item you would like to learn more about and then turn to the listed tab

Be sure to see the tab called Getting Started, this section contains important operating tips about your MPV

Items identified with this symbol  call out important information

 
- |  |   |  |
|--|---|--|
| <p> <b>1. Power window switches*</b>, see Switches/Locks</p> <p> <b>2. Power door locks*</b>, see Switches/Locks</p> <p><b>3. Air vents</b></p> <p><b>4. <sup>TCS OFF</sup> Traction control system*</b></p> <p> <b>5. Turn signal/lighting control lever</b>, see Getting Started</p> <p><b>6. Power outside mirror switch*</b>, see Switches/Locks</p> <p><b>7. Horn and driver's air bag</b></p> <p> <b>8. Gear selector lever</b>, see Transaxle</p> | <p><b>9. Hazard warning switch</b>  Push on/off</p> <p> <b>10. Audio system</b>, see Audio Systems</p> <p><b>11. Rear window defroster switch</b></p> <p><b>12. Lighter/12V powerpoint</b></p> <p> <b>13. Climate control panel</b>, see Climate Controls</p> <p><b>14. Cup holder/ashtray</b></p> <p><b>15. Front console</b></p> <p><b>16. Parking brake lever</b></p> <p> <b>17. Wiper/washer lever</b>, see Getting Started</p> <p> <b>18. Cruise control*</b>, see Getting Started</p> <p><b>19. Tilt steering-wheel lever</b><br/>Pull lever down, position wheel; push lever up</p> | <p> <b>20. Audio control switches</b>, see Getting Started</p> <p><b>21.  Instrument panel lighting</b><br/>Headlights on: To brighten/dim, turn thumb-wheel up/down</p> <p> <b>22. Power sliding door switches*</b>, see Getting Started</p> <p><b>23.  Hood release handle</b></p> <p><b>24. Fuse panel</b></p> <p><b>25. Remote fuel door release</b></p> <p> <b>26. Passenger air bag deactivation indicator light</b>, see Getting Started</p> |
|--|---|--|

\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Driver's  
View


GETTING STARTED

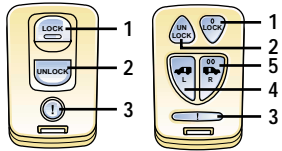

**Remote Keyless Entry System\***

To lock doors: Press LOCK button (1); pressing again within 5 seconds causes doors to relock and horn to beep  
 To unlock: Press UNLOCK button (2) for driver's door; press again within 5 seconds to unlock other doors

 
Panic alarm: Press ! button (3); horn sounds, hazard warning lamps flash; to stop press any button on the transmitter  
 Sliding doors: Press (4/5) for 1 second to open/close left/right doors

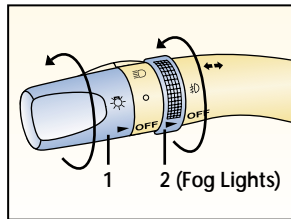

**Turn signal/lighting control lever**

OFF = Lights off  
 ○ = Tail, parking and dashboard lights on: Rotate knob (1) to first detent  
 ☰ = Tail, parking, dashboard and headlights on: Rotate knob (1) to second detent

 
High beams on/off: Push lever forward to detent/pull back to detent  
 To flash high beams: Pull lever back slightly and release  
 Turn signals right/left: Move lever up/down  
 ☸ = **Fog Lights On:** Rotate knob (2); functions only with headlight low beams on

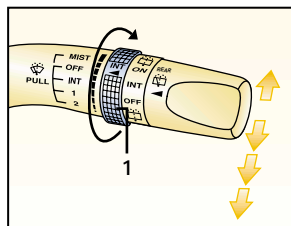

**Front wiper/washer control lever**

To activate interval wipers: Push lever down to first detent and rotate knob (1) to desired speed  
 To activate normal wiper speed: Push down to second detent  
 To activate high speed: Push lever down to third detent

 To activate washer: Pull lever back and release  
 To activate mist: Push lever up and release

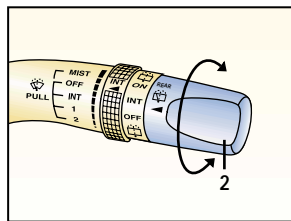


**Rear wiper/washer control lever**

To activate rear interval wiper: Rotate knob (2) up to INT  
 To activate rear normal speed wiper: Rotate knob (2) up to ON  
 To activate rear washer: Rotate knob (2) to ☸ and release

Always check the Owner's Manual for more operating information and safety features

## Getting Started
 
## GETTING STARTED

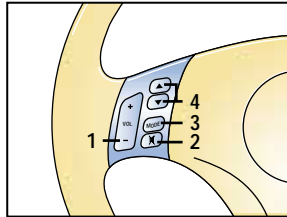
**Steering-wheel audio controls**
**1. Volume**

Increase/decrease volume: Press

**2. Mute**

Press to mute

**3. Mode**

 
Press to select FM1, FM2, AM1, CD, Sirius\*, Tape or MD\*

**4. ▲ / ▼ Seek**

Radio: Press to select preset stations

Press for about 2 seconds until beep sound is heard to seek higher or lower frequency

Cassette/CD/MD: Press (4) to select next selection/track

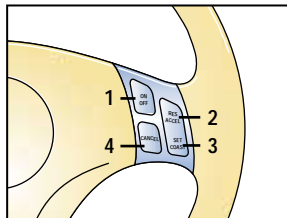
**Cruise control**

Operates above 25 mph

To activate: Press and release ON/OFF (1)

To set speed: Press and release SET/COAST (3) at desired speed

To accelerate: Press and hold RES/ACCEL (2); incremental acceleration: Press and release (2), each tap = plus 1 mph

To decelerate: Press and hold SET/COAST (3), release

 
at desired speed; or tap brake pedal, press and release (3) at desired speed; incremental deceleration: Press and release

(3), each tap = minus 1 mph

To cancel: Tap brake pedal, press CANCEL button (4) or ON/OFF (1)

Return to preset speed after CANCEL button or braking;

Press and release RES/ACCEL button (2)

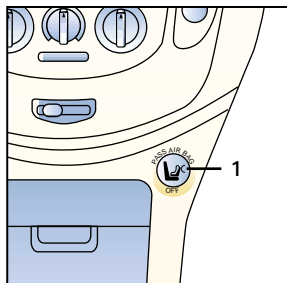
**Passenger air bag deactivation indicator light**

Front air bag deactivation indicator light (1) provides current status of front passenger air bag and pretensioner system

If total seated weight on front passenger seat is less than approximately 65 lb., front passenger air bag deactivation indicator light illuminates, air bag/pretensioner will not deploy/activate in an accident

If the total seated weight is greater than approximately 65 lb., light does not illuminate, and the air bag/pretensioner will deploy/activate in an appropriate accident, see Owner's Manual for additional information on this feature and the air bag system

\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Getting Started

 
 
 
Getting Started

GETTING STARTED

Power sliding doors\*

The power sliding doors can be opened/closed by using: Exterior/interior door handles, keyless remote, lower dashboard power sliding door switches and one switch on each sliding door post

WARNING: Read all information and warnings related to power sliding doors in Owner's Manual

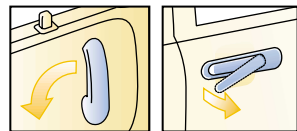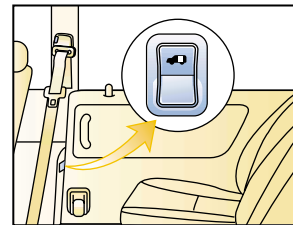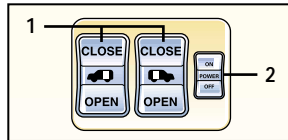

Opening/closing using door handles

Power sliding doors automatically open/close by sliding door approximately 2" in desired direction from fully opened/closed positions; buzzer will sound before door operates

Operation from driver's seat

Power sliding doors main switch: Press (2) to disable/enable system  
Opening/closing using switches: Stop vehicle, shift into park and apply parking brake; unlock sliding doors and press main switch (2) to ON position; press left/right switches (1) to open/close  
Press switch for 1 second, doors automatically open or close after buzzer sounds; press again to stop  
If power sliding doors malfunction and buzzer sounds continuously; press main switch to OFF position to disable, see your Mazda Dealer

Operation from rear seats

Press switch for 1 second, doors automatically open or close after buzzer sounds; press again to stop

 
Tips: The system operates only in PARK position

The system may not operate correctly if battery voltage is low

Tip: Each time switch is pressed, a beeper will sound, this is normal

Tip: If the system is completely inoperative, both sliding doors can be operated manually

Tip: Make sure MAIN SWITCH is in ON position

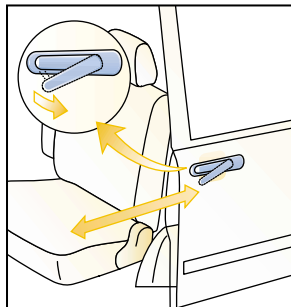


Manual sliding door

Closing/opening sliding door from the outside: Pull the door handle outward to release the lock, slide door front/rear

Closing/opening sliding door from inside: Pull door handle downward, open/close the door by sliding toward the front/rear

 Tip: Make sure fuel lid is closed before opening left side sliding door, fuel lid cannot be opened with left sliding door open

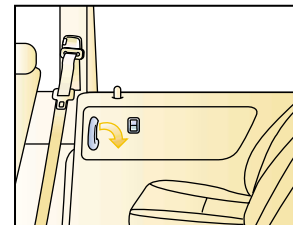


Always check the Owner's Manual for more operating information and safety features

Getting Started

## Instrument Cluster
 
## INSTRUMENT CLUSTER

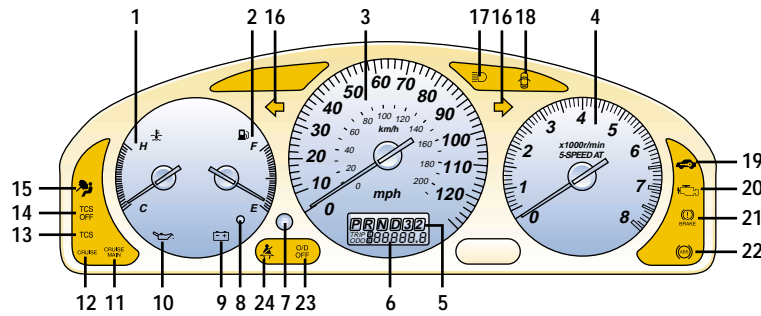

## GAUGES

**1. Engine coolant temperature gauge**

If above normal range, stop vehicle and turn off engine; check coolant level when safe

**2. Fuel gauge**

19.8-gallon/75-liter tank

**3. Speedometer****4. Tachometer****5. Gear indicator****6. Odometer/trip meter****7. Odometer/trip meter select button**

Press to select among trip A, trip B and odometer

Press and hold to reset selected trip odometer

**8. Low fuel level**

## WARNING LIGHTS

**9. Charging system warning light**

Dealer inspection required

**10. Low engine oil pressure warning light**

Stop vehicle and turn off engine; check oil level

**11. Cruise main indicator\***

System ON/OFF  
See Getting Started

**12. Cruise control\*, see Getting Started****13. TCS Traction Control System\***

Light flashes when in use; dealer inspection required if light remains on

**14. Traction Control System\* off**

System turned off manually or malfunctioning; dealer inspection required

**15. Air bag readiness**

Front or side air bag malfunction, warning light constantly flashes, stays on or never illuminates with ignition on, dealer inspection required

**16. Turn signals/hazard warning on****17. High beams on****18. Door ajar****19. Immobilizer system/security light\*****20. Check engine**

Possible faulty emission control, dealer inspection required, or fuel filler cap not tight

**21. Brake system**

Parking brake on/low fluid level

**22. Anti-lock Brake System (ABS)\***

ABS malfunction, normal brakes only, dealer inspection required

**23. Overdrive off indicator, see Transaxle**

Lights when the overdrive button is in the off position

**24. Always fasten safety belts**

 
\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features


Instrument Cluster

Interior Lights


INTERIOR LIGHTS



 
**1. Liftgate light**  
 OFF = Light always off  
 ON = Light on if door open



 
**2. Rear interior light**  
 ON = Light always on  
 DOOR = Light on if door open  
 OFF = Light always off

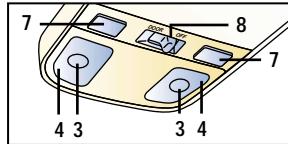

 **3. Map lights**  
 On/off: Press switches (7)  
**4. Interior lights**  
 Slide switch (8)  
 OFF = Lights always off  
 DOOR = Lights on if door open  
 Rotate switch (9) clockwise/  
 counterclockwise for DOOR/OFF

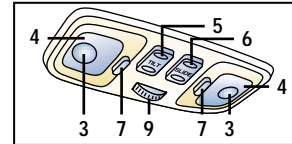

 **5. Sunroof tilt switch\***  
 Operates only with ignition on  
 To tilt/close: Press and hold rear/front of switch  
**6. Sunroof slide switch\***  
 Operates only with ignition on  
 To open: Press and hold rear of switch until panel is in desired position  
 To close: Press and hold front of switch

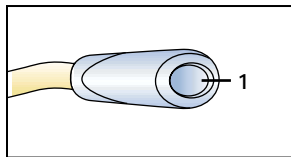

**Automatic transaxle**

 
**P = Park**  
 To move gear selector lever from Park: Press firmly on brake pedal

**Tip:** To shift from P smoothly, depress brake pedal firmly before moving shift lever, ignition switch must be in ACC or ON position

**R = Reverse**  
**N = Neutral**  
 No gear engaged

**D (Overdrive)**  
 For normal driving: Shifts through five forward gears automatically

**Tip:** Torque converter lock-up improves fuel economy and can feel like an additional gear

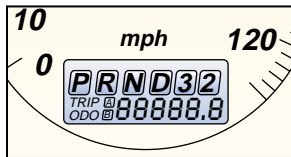

**D (Overdrive Off)**

Press overdrive off switch (1) to disengage/engage overdrive; indicator light on instrument panel will illuminate; shifts through four forward gears automatically  
 Provides extra power and increased engine braking

**3 = Third**  
 Provides extra power and increased engine braking  
 Use to reduce wheel spin when starting on slippery surfaces

**2 = Second**  
 Use for engine braking when 3rd is not sufficient

 
\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Transaxle

Switches/  
Locks

SWITCHES / LOCKS

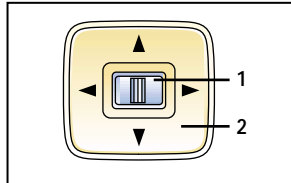


**Power remote outside mirrors\***

Ignition switch must be in ACC or ON position

To adjust left/right mirror: Slide selector switch (1) left/right, press perimeter switch (2) in direction of desired mirror movement

 **Tip:** To lock mirrors in place, move switch (1) to center position

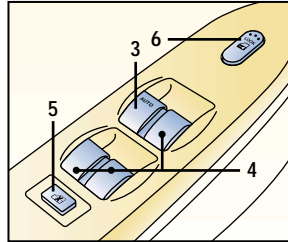

**Power window switches**

Ignition switch must be in ON position  
All windows controlled from the driver's armrest; passenger doors have separate switches

**Driver's window**

One-touch-down: Push down AUTO switch (3) firmly and release, window goes down all the way; pull switch back briefly to stop; press lightly and hold for normal operation

**Passenger window switches**

Push switch (4) down and hold to open; pull back and hold to close

**Power window lockout switch**

Press button (5) down until clicks, only driver's window operates; press again and passenger windows function again

 
**Master front door lock switch**

To lock/unlock all doors: Press front/rear of switch (6)

To lock doors without key: With door open, press front of switch (6), exit vehicle, close doors



To lock/unlock with key: Turn key in driver's door clockwise/ counterclockwise

**Tip:** Doors can be locked with key in ignition (chime sounds to alert you that key is in ignition)

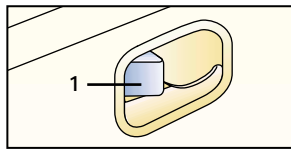

**Door lock buttons**

  1. Front door lock buttons  
To lock: Press front of lock button  
To unlock: Pull lock button out
2. Sliding door lock buttons  
To lock: Push button down  
To unlock: Pull button up

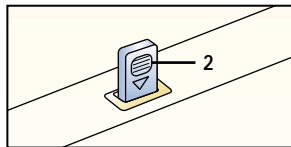

**Key**

Operates ignition and all locks

 
**Tip:** Use key number plate to purchase a new key; store in safe place separate from vehicle

**Immobilizer system\***

Prevents engine from starting unless coded key used; see Owner's Manual

**Remote Keyless Entry System\***

see Getting Started

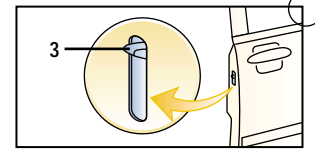

**Child-safety locks**

Located on the front edge of rear doors

To activate: Push tab (3) down; door opens from outside only  
To cancel: Pull tab up

**WARNING:** Since children may access either rear door, child-safety locks for both rear doors should be activated

\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

 
Locks



SEATS


**Manual seat controls**

- 1. Fore-aft adjustment**  
Lift lever, slide seat
- 2. Head restraint**  
To raise/lower: Pull up/push stop-catch (8) and push down
- 3. Seatback angle**  
To adjust: Lift and hold lever, lean forward or backward, release lever
- 4. Seat tilt (Driver's only)\***  
Rotate front/rear dial to change angle of seat front/rear
- 5. Lumbar adjustment**
- Power driver's seat controls**
- 6. Fore/aft adjustment**  
Slide switch horizontally
- Raise/lower seat cushion**  
Pull/push center vertically
- Raise/lower front of seat**  
Pull/push front vertically
- Raise/lower rear of seat**  
Pull/push rear vertically
- 7. Seatback angle**  
Press front/rear of switch

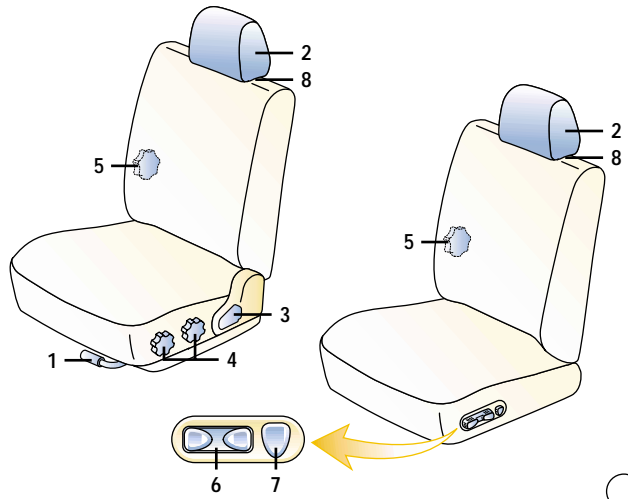


**Shoulder belt height adjustment**

 To raise/lower belt: Push button (1) and move belt to desired position

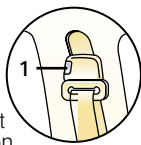

- WARNING:** Make sure adjuster locks in one of its positions
- Removing and reinstalling front seats for modification purposes is dangerous and may compromise the air bag system

 - WARNING:** Do not adjust seats while driving
- Safety belts must always be worn when vehicle is in motion
- All air bags are supplemental and do not replace safety belt usage
- Always wear your safety belt and properly secure children 12 and under in a rear seat
- Use age appropriate child restraints and safety seats, see Owner's Manual and state or province laws
- Never place rear-facing infant-safety seat in front of any air bag, an infant is in serious danger of being injured or killed
- If you must install a forward-facing child-safety seat in the front seating position, move vehicle seat as far back as possible

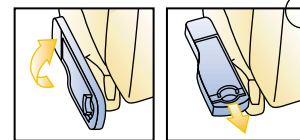


**Front passenger seat side table**

Pull up to locked position; push down to verify table is secure

Expand table rearward by pulling out the rear

 Lowering side table: Pull lever (2) under table frontal section and fold down completely

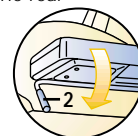



- WARNING:** Do not use front passenger seat side table while vehicle is in motion

\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features


Seats

  SEATS

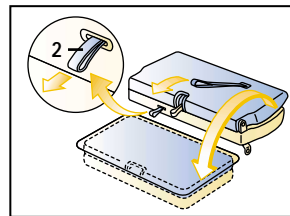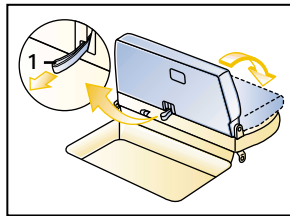

**Third-row seat**

 Insert seat belts in retainers; remove head restraints; pull strap (1), push seatback toward front of vehicle until it locks with a click. Pull strap (2); lift seatback and seat bottom up to vertical; gently lower the seat into seat well.

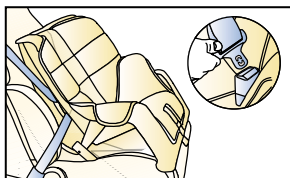

**Child-safety seat**

To install in rear outboard seats: Use dual locking mode retractor seat belts; see Owner's Manual for proper installation and child seat tether and LATCH system instructions.

**WARNING:** Read all information and warnings in Owner's Manual and attached to seat before using child-safety seat

**Dual locking mode lap/shoulder belt retractor (Front passenger and rear retractable safety belts only)**

Emergency locking mode: Belt locks only on hard braking/cornering or impacts of about 5 mph or more

Automatic locking mode: Must be used when installing child-safety seat

To activate: Pull webbing fully out of retractor until click is heard; belt will only tighten

To disengage: Unbuckle belt and allow webbing to retract fully

**WARNING:** Make sure all adjustable seats are properly latched, because during a sudden stop or collision the seat or seatback could move, causing injury

\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Child-safety Seats

Climate Controls

CLIMATE CONTROLS

**Front climate controls**

**1. Temperature control**

Rotate knob to blue for cool, red for warm

**Control positions for maximum defrost**

Fan to maximum, temperature to maximum hot, air flow selector knob to windshield

**2. Air Conditioning**

Press on/off

 
**3. Fan control**

Rotate knob

**4. Rear window defrost**

Press ON/OFF

Turns ON for approximately 15 minutes, after 15 minutes, cycles ON or OFF unless ignition is turned off

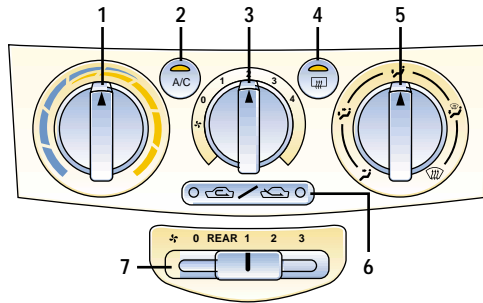

**Tip:** Indicator light stays on during defroster ON/OFF cycling

**5. Air flow selections**

- = air to dash
- = air to dash and floor
- = air to floor
- = air to floor and windshield
- = air to windshield

 
**6. Air intake selection switch**

Press for cooling with inside/outside air  
When or is selected, is automatically set so that windshield fogging is prevented, can not be selected

**7. Rear air conditioning switch\***

- 0 = fan off
- REAR = enables fan speed control from the rear
- 1 = low
- 2 = medium
- 3 = high

**Tip:** To help prevent windshield fogging in humid weather, select before starting engine  
To prevent moisture buildup, never drive with system off  
Objects placed under the front seats may interfere with air flow to the rear




**Rear climate controls**

**Rear heater type\***

Supplies only hot air via floor outlets

**Rear cooler type\***

 Supplies only cold air via roof outlets

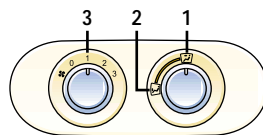

**Rear heater/cooler type\***

- 1. Cool air from roof vent
- 2. Warm air from floor vent
- 3. Fan control  
Rotate knob

 
\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Climate Controls

## Audio Systems

### RADIO/CASSETTE/COMPACT DISC/MD

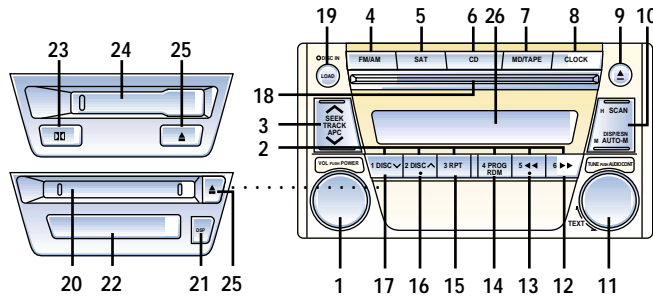

**Steering-wheel audio controls**, see Getting Started

#### Audio Systems

##### 1. Power/Volume

Press to turn on/off; rotate to increase/decrease volume

##### 2. Memory preset buttons

To set: Tune to station, press and hold until beep sound is heard

##### 3. SEEK/TRACK/APC

Radio: Press  $\wedge$  /  $\vee$  to automatically seek higher/lower frequency

CD: Press  $\wedge$  /  $\vee$  to select next/previous track

Tape: Press  $\wedge$  /  $\vee$  to automatically advance tape to beginning of next selection/replay selection; to stop this operation, press button again

##### 4. FM1/2/AM

Press to select between FM1/FM2/AM station preset buttons (2)

##### 5. SAT\*

If equipped with a separately sold Sirius digital satellite radio, refer to Sirius digital satellite radio manual

##### 6. CD

Press to play CD

##### 7. MD\*/Tape\*

Press to play Mini-disc Player/cassette tape

##### 8. Clock

To set: With ignition in ACC or ON position, press (CLOCK) and hold until beep sounds; rotate Audio Control dial (11) to switch between 12 Hr/24 Hr; selection will flash; press (CLOCK) again; Hr ADJ will be displayed next with hour flashing

##### 9. CD eject button

##### 10. Scan/Auto-Memory

Press to briefly sample next listenable selections

Radio: Press and hold until a beep sound is heard; system automatically scans and temporarily stores six strong stations in each band; press again to cancel

##### 11. Tuning/Audio Control

Tune: Rotate counterclockwise/clockwise for lower frequency/higher frequency  
Audio control: Press to select BASS/MID/TREBLE/FADE/BALANCE/BEEP; rotate right/left to adjust selected feature

Text dial: Use for MP3 CD Player\* or Sirius Radio\*  
**Tips: Rotate (11) to display complete song titles**  
Some song titles will not display, see Owner's Manual

##### 12. Fast forward $\blacktriangleright\blacktriangleright$

Press to fast forward through a track

##### 13. Reverse $\blacktriangleleft$

Press to reverse through a track

##### 14. Program Random†

Press to enable/cancel random play

##### 15. Repeat

Press to replay current CD/tape selection

##### 16. Disc up $\wedge$ †

Press to skip forward to beginning of next CD

##### 17. Disc down $\vee$ †

Press to skip back to beginning of previous CD

##### 18. CD slot\*

##### 19. LOAD\*

To load multiple discs: Press and hold LOAD (19) until beep sound is heard; insert CD when "In" is displayed  
To eject disc: Press Eject (9)  
To eject specific disc: Press and hold Eject (9) until beep sound is heard; within five seconds press the desired tray number 1-6 (2)

##### 20. Mini Disc slot\*

##### 21. DISP\*

Press: Changes display during MD play

##### 22. Mini Disc display\*

##### 23. Dolby® Noise Reduction\*

Reduces tape noise and hiss, press to activate/deactivate

##### 24. Cassette door\*

##### 25. Eject button\*

##### 26. Display

\*Denotes optional equipment

 
†For use with cassette tape player, MD player, or CD changer\*

Always check the Owner's Manual for more operating information and safety features

## Audio Systems

## Under Hood

## UNDER HOOD

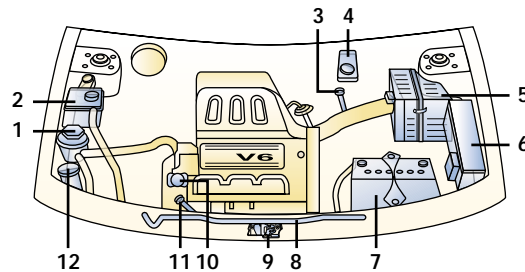

3.0-liter 24V V6

**1. Power steering fluid reservoir**

Check with engine off; fill to MAX mark

**2. Engine coolant reservoir**

Level should be between F and L lines when cold

**⚠ WARNING: Never remove coolant reservoir tank cap while engine is running or hot; you could get burned**

**3. Automatic transaxle fluid dipstick**

Check with engine running at operating temperature; fluid level should be within v-notches on dipstick

**4. Brake fluid reservoir**

Level should be kept at the MAX mark on reservoir; fill with DOT 3 brake fluid

**5. Air filter****6. Fuse box (fuses and relays)****7. Battery****8. Hood support rod****9. Hood latch**

Pull hood latch up, open hood

**10. Engine oil filler cap**

SAE 5W-20 recommended for all temperatures

**11. Engine oil dipstick**

Check with engine cold or 5 minutes after shutting engine off; do not fill above MAX line

**12. Windshield washer reservoir**

Fill with windshield washer fluid

Always check the Owner's Manual for more operating information and safety features

Under Hood

Driving Tips


DRIVING TIPS

**Break-in period**

First 600 miles: Avoid heavy braking and acceleration; drive at varying road and engine speeds

**Anti-lock Brake System (ABS)\***

When brake pedal is pressed, ABS automatically reduces hydraulic pressure to any wheel on the verge of locking up. You may feel a slight pulsing of the brake pedal and hear a clicking noise; this tells you the ABS is functioning properly; increase pressure on pedal for maximum braking

 **Tips: Maintain constant pressure on the brake pedal. Do not pump the brakes**

**Traction Control System\***

Automatically applies and releases brakes to prevent excessive wheel spin at all speeds, especially when accelerating on slippery surfaces

**Tire economy and tips**


Check pressure at least monthly when tires are cold. Maintain correct front-end alignment and tire balance; rotate tires at 7,500-mile intervals; see Owner's Manual for rotation chart

**Tire pressure**

Decal on the edge of the driver's door provides tire pressure information

**Tire chains\*†**

Tire chains can damage aluminum wheels; use on steel wheels only

 **Tips: Use only SAE class "S" chains, install only on front tires; install as tightly as possible and retighten after driving 1/4-1/2 miles; chains may affect handling. Never exceed 30 mph with tire chains**

**Unique driving conditions†**

Every 5,000 miles change oil/filter, inspect coolant level, lights, brake/clutch fluid, tire pressure/wear, power steering fluid, locks/hinges, washer fluid and rotate tires

**Maintenance notes:**

Rotate tires every 7,500 miles or sooner if needed

Replace cabin air filter once every 2 years or 25,000 miles†

Replace spark plugs every 100,000 miles (or 60,000 miles if following the Unique driving conditions†)

NORMAL SERVICE INTERVALS

7,500 miles	A
15,000 miles	A B
22,500 miles	A
30,000 miles	A B C
37,500 miles	A D
45,000 miles	A B E
52,500 miles	A
60,000 miles	A B C F
67,500 miles	A
75,000 miles	A B D
82,500 miles	A
90,000 miles	A B C E

- A.** Change: Engine oil/replace filter  
Lubricate: All locks and hinges
- B.** Inspect: Disc brakes
- C.** Inspect: Drive belts, fuel lines and hoses, cooling system, brake lines, hoses and connections, drum brakes, steering operation and linkages, front suspension ball joints, driveshaft dust boots
- D.** Replace: Air filter
- E.** Inspect: Exhaust system and heat shields
- F.** Inspect: PCV valve  
Change: Engine coolant

\*Denotes optional equipment  
†See Owner's Manual

Always check the Owner's Manual for more operating information and safety features