

Maintenance and Specifications

SCHEDULED MAINTENANCE

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply.

If any do apply, follow Schedule 2 (Canada and Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving with an extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates
- Towing a trailer or using a car-top carrier

NOTE:After the described period, continue to follow the described maintenance at the recommended intervals.

Maintenance and Specifications

SCHEDULE 1

I: Inspect and repair, clean, adjust, or replace if necessary
(Oil-permeated air filter cannot be cleaned using the air-blow method)

R: Replace

L: Lubricate

Maintenance Item	Maintenance Interval (Number of months or km (miles), whichever comes first)												
	Months	6	12	18	24	30	36	42	48	54	60	66	72
	x 1000 Km	12	24	36	48	60	72	84	96	108	120	132	144
	(x 1000 Miles)	(7.5)	(15)	(22.5)	(30)	(37.5)	(45)	(52.5)	(60)	(67.5)	(75)	(82.5)	(90)
ENGINE													
Engine valve clearance (for 2.0L engine)									I				
Engine timing belt (for 2.0L engine)	Replace every 144,000 km (90,000 miles)												
Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	R
Oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R
Drive belts				I					I				I
PCV valve (for 2.0L engine) *1	Replace every 96,000 km (60,000 miles)												
PCV valve (for 3.0L engine) *1	Replace every 160,000 km (100,000 miles)												
Hoses and tubes for emission *1									I				
IGNITION SYSTEM													
Spark plugs (PLATINUM-TIPPED type)	Replace every 160,000 km (100,000 miles)												
FUEL SYSTEM													
Air cleaner filter					R				R				R
Fuel filter *1					R				R				R
Fuel lines and hoses *1					I				I				I
COOLING SYSTEM													
Cooling system					I				I				I
Engine coolant (green)	Replace at first 72,000 km (45,000 miles) or 36 months; after that, every 48,000 km (30,000 miles) or 24 months												
Engine coolant (yellow)	Replace at first 160,000 km (100,000 miles) or 60 months; after that, every 80,000 km (50,000 miles) or 36 months												

Maintenance and Specifications

Maintenance Item	Maintenance Interval (Number of months or km (miles), whichever comes first)												
	Months	6	12	18	24	30	36	42	48	54	60	66	72
	x 1000 Km	12	24	36	48	60	72	84	96	108	120	132	144
	(x 1000 Miles)	(7.5)	(15)	(22.5)	(30)	(37.5)	(45)	(52.5)	(60)	(67.5)	(75)	(82.5)	(90)
CHASSIS and BODY													
Brake lines, hoses and connections					I				I				I
Disc brakes					I				I				I
Drum brakes					I				I				I
Steering operation and linkages					I				I				I
Rear differential oil (for 4WD)	*2	Replace every 160,000 km (100,000 miles)											
Front and rear suspension ball joints					I				I				I
Driveshaft dust boots					I				I				I
Bolts and nuts on chassis and body					I				I				I
Exhaust system heat shields					I				I				I
All locks and hinges		L	L	L	L	L	L	L	L	L	L	L	L
AIR CONDITIONER SYSTEM (if equipped)													
Refrigerant amount		I			I				I				I
Compressor operation		I			I				I				I

*1 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage (kilometrage) period to ensure long-term reliability.

*2 If this component has been submerged in water, the oil should be changed.

Maintenance and Specifications

SCHEDULE 2

I: Inspect and repair, clean, adjust, or replace if necessary
(Oil-permeated air filter cannot be cleaned using the air-blow method)

R: Replace

L: Lubricate

Maintenance Item	Maintenance Interval (Number of months or km (miles), whichever comes first)														
	Months	4	8	12	16	20	24	28	32	36	40	44	48		
	x 1000 Km	8	16	24	32	40	48	56	64	72	80	88	96		
	(x 1000 Miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)		
ENGINE															
Engine valve clearance (for 2.0L engine)														I	
Engine timing belt (for 2.0L engine)	Replace every 144,000 km (90,000 miles)														
Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
Engine oil (for Puerto Rico)	Replace every 4,800 km (3,000 miles) (or 3 months)														
Oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
Drive belts							I							I	
PCV valve (for 2.0L engine)	*1	Replace every 96,000 km (60,000 miles)													
PCV valve (for 3.0L engine)	*1	Replace every 160,000 km (100,000 miles)													
Hoses and tubes for emission	*1													I	
IGNITION SYSTEM															
Spark plugs (PLATINUM TIPPED type)	Replace every 160,000 km (100,000 miles)														
FUEL SYSTEM															
Air cleaner filter			I				R			I				R	
Fuel filter	*1						R							R	
Fuel lines & hoses	*1						I							I	
COOLING SYSTEM															
Cooling system							I							I	
Engine coolant (green)	Replace at first 72,000 km (45,000 miles) or 36 months; after that, every 48,000 km (30,000 miles) or 24 months														

Maintenance and Specifications

Maintenance Item	Maintenance Interval (Number of months or km (miles), whichever comes first)													
	Months	4	8	12	16	20	24	28	32	36	40	44	48	
	x 1000 Km	8	16	24	32	40	48	56	64	72	80	88	96	
	(x 1000 Miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)	
Engine coolant (yellow)	Replace at first 160,000 km (100,000 miles) or 60 months; after that, every 80,000 km (50,000 miles) or 36 months													
Engine coolant level	I	I	I	I	I	I	I	I	I	I	I	I	I	
ELECTRICAL SYSTEM														
Function of all lights	I	I	I	I	I	I	I	I	I	I	I	I	I	
CHASSIS and BODY														
Brake lines, hoses and connections							I						I	
Brake fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I	
Disc brakes			I				I			I			I	
Drum brakes							I						I	
Tire inflation pressure and tire wear	I	I	I	I	I	I	I	I	I	I	I	I	I	
Steering operation and linkages							I						I	
Power steering fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I	
Manual transaxle oil	Replace every 48,000 km (30,000 miles)													
Automatic transaxle fluid	Replace every 48,000 km (30,000 miles)													
Rear differential oil (for 4WD) *2	Replace every 160,000 km (100,000 miles)													
Transfer oil (for 4WD) *2	Replace every 48,000 km (30,000 miles)													
Front and rear suspension ball joints							I						I	
Driveshaft dust boots							I						I	
Bolts and nuts on chassis and body			I				I			I			I	
Exhaust system heat shields							I						I	
All locks and hinges	L	L	L	L	L	L	L	L	L	L	L	L	L	
Washer fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I	
AIR CONDITIONER SYSTEM (if equipped)														
Refrigerant amount			I				I			I			I	
Compressor operation			I				I			I			I	

*1 According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed