

DRIVER ASSURANCE

**Mazda Driver's Assurance Plan**  
Check out [www.mymazda.com](http://www.mymazda.com), the website dedicated to you.

Manage your maintenance records, receive valuable offers, see the latest accessories, and much more!

**Mazda Roadside Assistance**  
Exhilaration, liberation and inspiration, are great reasons to drive a Mazda car, truck, SUV or minivan. In addition to all the other great standard features, you also get peace of mind, our Emergency Roadside Assistance Plan, it's just a phone call away, 24 hours a day, 365 days a year, call **1-800-866-1998**

**Mazda "bumper-to-bumper" Limited Warranty**

We design and build every Mazda to give you driving pleasure now and far down the road. We're so confident in our quality that we cover the entire vehicle against defects in materials and workmanship

for 48 months or 50,000 miles, whichever comes first

**Mazda Service Transportation Solution**

Being without your Mazda may put a crimp in your day, if you do ever have to take your Mazda in for repairs don't worry, you're covered. With the Mazda Transportation Solution, you will be given a loaner car at no charge when your Mazda vehicle is in for warranty repairs.

 
For all the details, see your Mazda Dealer

This Quick Tips® guide is provided by Mazda North American Operations to make your Mazda ownership experience more convenient. It is not intended to replace your Owner's Manual.

If you have any questions about your vehicle, you are invited to contact your local dealer. Or if you need additional help, feel free to call our

**Customer Assistance Center at 1-800-222-5500**

Monday through Friday,  
9 a.m.- 4:45 p.m., Pacific  
9 a.m.-5:45 p.m., Eastern/Central

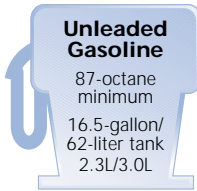

©2003 Calcar, Quick Tips® is a trademark of Calcar, made in USA 11/03 37.716M CG Mazda North American Operations reserves the right to change product specifications at any time without incurring obligations. 9999-95-014C-05QT

**2005**

 
**MAZDA TRIBUTE**

Quick Tips®

Reference  
Guide for  
Controls and  
Functions

**mazda®**

## DRIVER'S VIEW

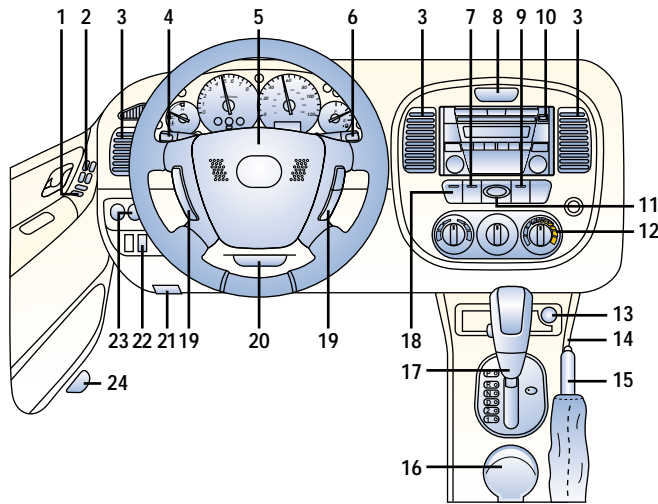










 

 

## Getting Started

Tribute Quick Tips® are designed to quickly familiarize you with some important features of your Tribute

This Driver's View tab is your index to the Quick Tips®, locate the item you would like to learn more about and then turn to the listed tab

Be sure to see the tab called Getting Started, this section contains important operating tips about your Tribute

Items identified with this symbol  call out important information


- |   |  |   |
|---|--|---|
| 1. Power door locks, see Locks  | 10. Audio system, see Audio Systems  |  20. Tilt steering-wheel lever<br>Push release lever down, tilt wheel up or down, pull lever up to lock                                  |
| 2. Power window switches, see Mirrors/Windows   |  11. Passenger airbag off indicator, see Getting Started                  |  21.  Hood release handle<br>Pull to open partially |
| 3. Air vents  | 12. Climate control panel, see Climate Controls  | 22.  Instrument panel lighting<br>To brighten/dim: Press and hold top/bottom of switch   |
|  4. Turn signals/lighting control lever, see Getting Started |  13. Auxiliary power point  | 23. Dual power mirrors, see Mirrors/Windows   |
| 5. Horn/Air bag   | 14. Fuse panel   | 24. Fuel filler door release  |
|  6. Wiper/washer control lever, see Getting Started          | 15. Parking brake lever  |   |
| 7.  Rear window defogger, see Climate Controls               | 16. Cupholder  |   |
| 8.  Hazard warning switch<br>Push on/off                     | 17. Gearshift lever (A/T)*, see Transaxle  |   |
| 9. Air conditioning, see Climate Controls   | 18.  Fog lamp switch*<br>Press on/off; on with low beams or parking lamps |   |
|   |  19. Cruise control*, see Getting Started                                 |   |

\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Driver's  
View

 
GETTING STARTED

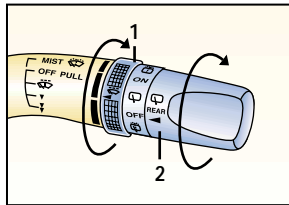

**Wiper/washer control lever**

Ignition switch must be in ACC or ON position  
 To activate interval wipers: Push lever down to first detent and rotate knob (1) to desired speed  
 To activate wiper normal or low speed: Push down to second detent  
 To activate high speed: Push lever down to third detent

 
To activate washer: Pull lever toward you  
 To activate mist: Push lever up and release  
 To activate rear interval wiper: Rotate knob (2) up to   
 To activate rear normal speed wipe: Rotate knob (2) up to ON  
 To activate rear wash: Rotate knob (2) to and release

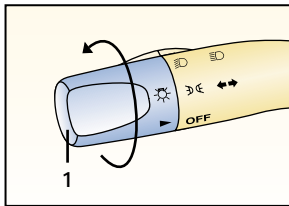

**Turn signal/lighting control lever**

OFF = Lights off  
 = Tail, side marker, instrument, license plate and parking lights on: Rotate knob (1) to first notch  
 = Tail, parking, instrument, license plate and headlights on: Rotate knob (1) to second notch

 High beams on/off: Push lever forward to detent/pull back to detent  
 To flash high beams: Pull lever back slightly and release  
 Turn signals right/left: Move lever up/down

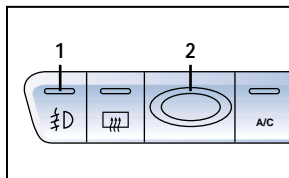


**Fog lamp control\***

Press (1) to activate/deactivate fog lamps, headlamp control must be in low beam or parking lamp position and Ignition must be in ON position, fog lamps deactivate when ignition is in OFF position

frontal air bag when a small occupant is detected, a person of adult size that is sitting properly in the passenger front seat will enable passenger frontal air bag  
 PASS AIRBAG OFF indicator (2) will be illuminated to remind you the passenger air bag is deactivated  
 See Owner's Manual for complete details and warnings

**Passenger Airbag Off indicator**

 Front passenger sensing system is designed to turn off passenger

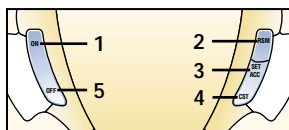

**Cruise control\***

Operates above 30 mph  
 Press and release ON (1)  
 To set speed: Press and release SET (2)  
 SET ACC (3) at desired speed; hold (3) to accelerate  
 To decelerate: Press and hold CST (4), release at desired speed; or tap brake pedal, press and release (3) at desired speed

 
Incremental deceleration: Press and release (4), each tap = minus 1 mph  
 Incremental acceleration: Press and release (3), each tap = plus 1 mph  
 To cancel: Tap brake/clutch\* pedal or press OFF button (5)  
 Return to preset speed (after braking): Press and release RSM button (2)

\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

## Instrument Cluster

## INSTRUMENT CLUSTER

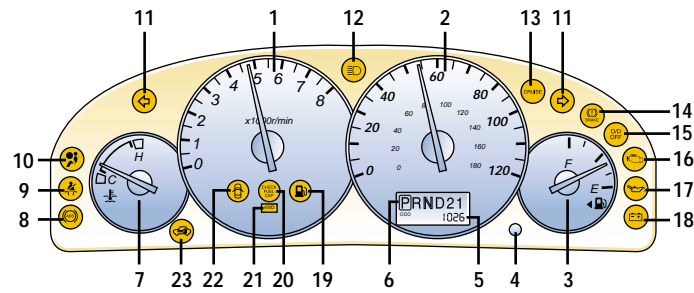

## GAUGES

- |  |   |   |
|--|---|---|
| <p><b>1. Tachometer</b></p> <p><b>2. Speedometer</b></p> <p><b>3. Fuel gauge</b><br/>16.5-gallon/62-liter tank<br/>(2.3L and 3.0L)</p> | <p><b>4. Odometer/trip odometer selector</b><br/>Press to toggle between odometer and trip odometer</p> <p><b>5. Odometer</b></p> | <p><b>6. Gearshift indicator (A/T)*</b></p> <p><b>7. Coolant temperature gauge</b><br/>If above normal range, stop vehicle and turn off engine, check coolant level when safe</p> |
|--|---|---|
- Tip:** Press and hold for more than 1 second to reset trip odometer

## WARNING LIGHTS

- |  |   |   |
|--|---|---|
| <p><b>8.  Anti-lock Brake System (ABS)</b><br/>ABS malfunction, normal brakes only, dealer inspection required</p> <p><b>9.  Always fasten safety belts</b></p> <p><b>10.  Air bag readiness</b><br/>Front or side air bag malfunction, dealer inspection required</p> <p><b>11.  Turn signals/hazard warning on</b></p> <p><b>12.  High beams on</b></p> <p><b>13.  Cruise control on*</b>, see Getting Started</p> | <p><b>14.  Brake system</b><br/>Parking brake on/low brake fluid</p> <p><b>15.  Overdrive off indicator*</b>, see Transaxle</p> <p><b>16.  Service engine soon</b><br/>Dealer inspection required</p> <p><b>17.  Engine oil pressure warning light</b></p> <p><b>18.  Charging system warning light</b><br/>Dealer inspection required</p> <p><b>19.  Low fuel</b><br/>Refuel as soon as possible</p> | <p><b>20.  Check fuel cap</b><br/>Fuel filler cap not properly installed</p> <p><b>21.  4WD Four wheel drive indicator*</b><br/>Solid light indicates 4WD in heat protection mode<br/>Flashing light indicates 4WD system disabled<br/>Dealer inspection required</p> <p><b>22.  Door ajar</b></p> <p><b>23.  Anti-theft on</b></p> |
|--|---|---|

 
\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

## Instrument Cluster


## Locks

## LOCKS

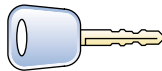

**Key**  
Operates ignition and all locks  
**SecuriLock™ passive anti-theft key**  
Coded transistor in key activates ignition

 **Tip:** Use key number plate to purchase a new key; store in safe place

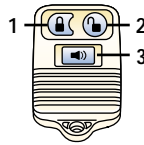
**Remote keyless entry system**

Functions only with ignition in LOCK OR ACC position

- 1. Lock**  
Press button; pressing again within 3 seconds causes doors to relock, horn to beep
- 2. Unlock**  
Press to open driver's door; press again within 3 seconds to open other doors
- 3. Panic alarm**  
Press horn sounds; press again to stop, or turn ignition to ON position

**Illuminated entry system\***  
Press UNLOCK or PANIC button on remote entry transmitter, interior lights come on; lights turn off after 30 seconds or with ignition in ON or ACC position


**Liftgate**

 To lock/unlock: Press power door lock button or lock/unlock buttons on Remote Keyless Entry System

To open liftgate window: Pull up on right side lever, located above license plate holder

To open liftgate: Pull up on left side lever


**WARNING:** Cargo and load capacity limited by weight and distribution

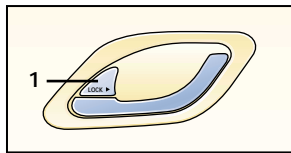**Manual door locks****1. Lock tab**

To lock: Press lock tab toward front  
To unlock front doors: Pull inside door handle or press lock tab toward back  
To unlock rear doors: Press lock tab toward back

**Smart unlocking system**

 Prevents locking yourself out of vehicle with key in any ignition position; driver's door will automatically unlock if locked using power lock control on driver's door panel when door is open

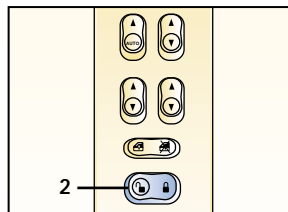**Power door locks**  
**2. Master front door lock switch**

To unlock/lock all doors: Press / on driver's door switch  
To lock doors without key: With door open, press on driver's door switch, exit vehicle, close doors  
Manual locks override power locks

**Child-safety locks**

Located at the edge of rear doors  
To activate: Rotate knob to **L**  
To cancel: Rotate knob in opposite direction

**WARNING:** Since children may access either rear door, child-safety locks for both rear doors should be activated

 
\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

## Locks


Mirrors/  
Windows

## MIRRORS / WINDOWS

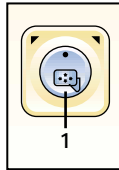**Dual power mirrors**

To adjust left/right mirror: Rotate control switch (1) left/right, tilt in direction of desired mirror movement

**Tip: To lock mirrors in place, move control switch to center position**

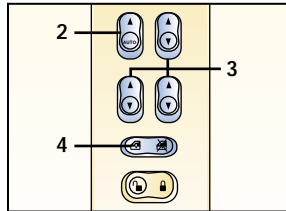 **Power windows**

Operate with ignition in ON position

All windows may be controlled from driver's door; each passenger door has a separate switch

**2. Driver's window**

One-touch-down: Press rear of switch firmly and release, window goes down all the way; tap switch again to stop; press and hold for

normal operation; press and hold front of switch to close

 
**3. Passenger window switches**

Press rear/front of switch to open/close

**4. Power window lockout switch**

Press right side of switch: only driver's switches control windows; press left side of switch and passenger controls function again

**Tip: Power windows and moonroof can be operated for 10 minutes after ignition key is turned off and with doors closed, opening door will completely cancel this function**

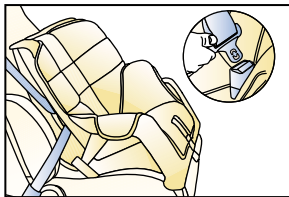**Child-safety seat**

To install in rear outboard passenger seat positions using dual-locking mode retractor safety belts; see Owner's Manual for proper installation and seat tether and LATCH system instructions

**Passenger airbag sensing system**, see Getting Started

**WARNINGS: Use age appropriate child restraints, see Owner's Manual and state or province laws. Never place rear-facing infant-safety seat in front passenger seat in front of any air bag, an infant is in serious danger of being injured or killed. If you must install a forward-facing child-safety seat in the front seating position, move vehicle seat as far back as possible. It is strongly recommended that you install front facing child-safety seats in rear seating area.**

**Rear child-safety seat anchors**

Anchors located on rear seat cushion for securing child-safety seat (see Owner's Manual)

**Dual locking mode lap/shoulder belt retractor**

(front passenger and all rear belts only)

Emergency locking mode: Belt locks only on hard braking/cornering or impacts of about 5 mph or higher

Automatic locking mode must be used when installing child-safety seat

To activate: Pull webbing fully out of retractor until click is heard; belt will only tighten

To disengage: Unbuckle belt and allow webbing to retract fully; for complete details see Owner's Manual

\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

 
Child-Safety  
Seats

## Seats

## SEATS


**Beltminder**

Intermittently sounds chime and illuminates safety belt warning lamp when driver's safety belt is unbuckled and occupied

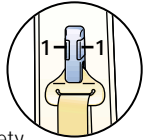**Front seat shoulder belt height adjustment**

To raise/lower belt: Squeeze and hold release buttons (1) and slide up/down

**⚠ WARNING: Make sure adjuster locks in one of its positions**

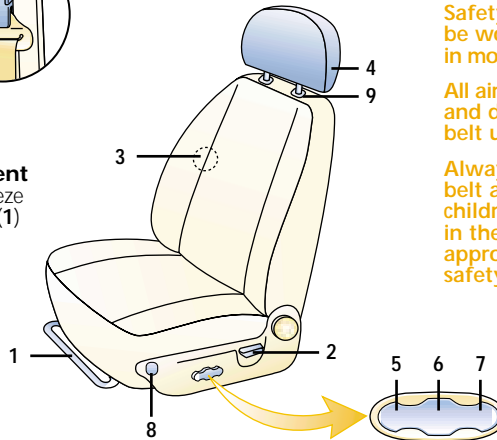 

**⚠ WARNINGS: Do not adjust seats while driving**

**Safety belts must always be worn when vehicle is in motion**

**All air bags are supplemental and do not replace safety belt usage**

**Always wear your safety belt and properly secure children 12 and under in the rear seat, and in appropriate child safety seats**

**Manual controls****1. Fore/aft adjustment**

Raise lever and hold, slide seat, release lever

**2. Seatback angle/tilt slide seats**

To adjust seatback: Lift and hold lever, lean forward or backward to tilt seat, release lever

To slide unoccupied seat: Lift lever to unlock, fold seatback down and slide seat forward

To lock seat: Move to desired position and raise seatback to upright position

**3. Manual lumbar adjustment\***

Rotate clockwise/counterclockwise to increase/decrease firmness

**4. Head restraint**

To raise/lower: Pull up/hold release button (9) and push down

**Power driver's seat\***

**5. Raise/lower front of seat**  
Pull/push front of switch up/down

**6. Fore/aft adjustment**  
Slide entire switch horizontally

**Raise/lower seat cushion**  
Pull/push entire switch vertically

**7. Raise/lower rear of seat**

Pull/push back of switch up/down

**8. Heated seats\***

Press to activate/deactivate

**Folding rear seat,**  
see Owner's Manual

**⚠ WARNING: Never drive with any seat in a reclined position because you will not get the full protection from safety belts**

 
\*Denotes optional equipment

*Always check the Owner's Manual for more operating information and safety features*

## Seats

## Climate Controls

## CLIMATE CONTROLS

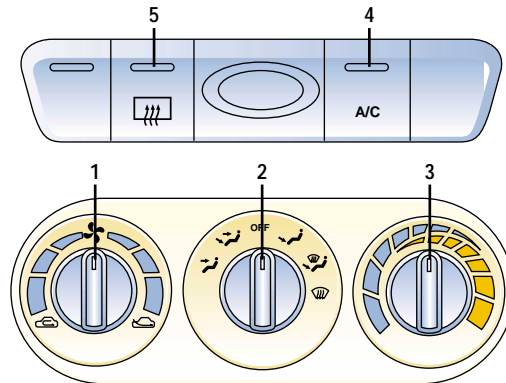**1. Fan speed/recirculated/outside air control**

Rotate knob right: Controls air volume in outside air mode  
 Rotate knob left: Controls air volume in recirculated air mode

**2. Air flow selections**

- = air to dash
- = air to dash and floor
- OFF = system off, no air flow
- = air to floor
- = air to floor and windshield
- = defrost, air to windshield

**3. Temperature selection**

Cooler/warmer = rotate knob counterclockwise/clockwise

**4. A/C**

Air conditioning ON/OFF

**5. Rear defrost**

Press to activate/deactivate, stays on for 15 minutes or until turned off

**Heated outside mirrors\***

Automatically heated to remove ice, mist and fog when rear defroster is activated

**Control positions for maximum defrost**

Fan to maximum, temperature to maximum hot, air flow selector knob to

**Tips: To prevent moisture buildup, never drive with system off**

**To help prevent windshield fogging in humid weather, select defrost before starting engine**

\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Climate Controls



Audio  
Systems

## RADIO/COMPACT DISC

**1. Power/Volume**

Press to turn on/off; rotate to increase/decrease volume

**2. Disc up ^ †**

Press to skip forward to beginning of next CD

**3. Disc down v †**

Press to skip back to beginning of previous CD

**4. Memory preset buttons**

 
To set: Tune to station, press and hold until a beep sound is heard

**5. SEEK/TRACK/APC**

Radio: Press ^ / v to automatically seek higher/lower frequency

CD: Press ^ / v to select next/previous track

Tape: Press ^ / v to automatically advance tape to beginning of next selection/replay selection; to stop this operation, press button again

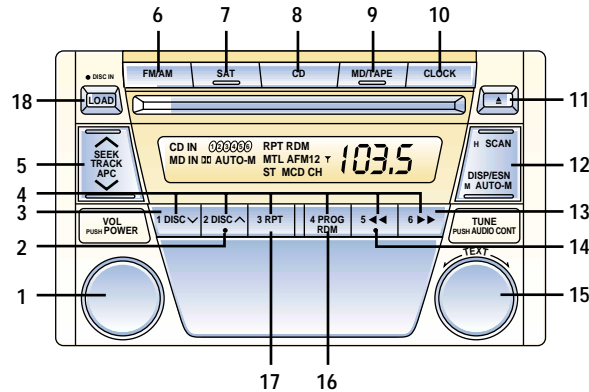

AM/FM/CD Player/Changer\*

**6. FM/AM**

Press to select between FM1/FM2/AM station preset buttons (4)

**7. SAT\***

Satellite ready capability

**8. CD:** Press to play CD**9. MD\*/Tape\***

Press to play Mini-disc Player/cassette tape

**10. Clock**

Press and hold (10) until beep sound is heard

Press SCAN (12) to adjust the hour

Press Auto-M (12) to adjust the minute

Press (10) again to set

**11. CD eject button****12. DISP/ESN, Scan/Auto-Memory**

SCAN: Press to briefly sample next listenable selections

DISP/ESN: MP3/Satellite\* ready capability, view song titles, artist, etc.

Auto Memory: Press and hold until a beep sound is heard; system automatically scans and temporarily stores six strong stations in each band; press again to cancel

**13. Fast forward ▶▶**

In CD mode: Press to fast forward through a track

**14. Reverse ◀◀**

In CD mode: Press to reverse through a track

**15. Tuning/Audio Control**

Tune: Rotate counterclockwise/clockwise for lower frequency/higher frequency  
Audio control: Press to select BASS/MID/TREBLE/FADE/BALANCE/BEEP ON/OFF; rotate right/left to adjust selected feature

**16. Program Random†**

In CD mode: Press to enable/cancel random play

**17. Repeat**

Press to replay current CD/tape selection

**18. LOAD\***

Press to load single CD, press and hold to load multiple CD's

\* Denotes optional equipment

 
† For use with cassette tape player, MD player, or CD changer\*

Always check the Owner's Manual for more operating information and safety features


Audio  
Systems

Overhead  
Console

## OVERHEAD CONSOLE

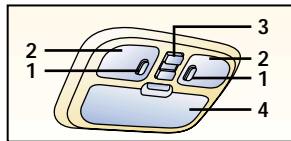

With moonroof

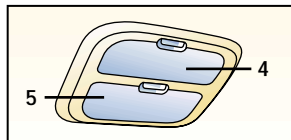 

Without moonroof

**Overhead console\*****1. Map/reading light switches**

To turn on/off: Press switch

**2. Map/reading light**

Illuminates whenever any door is opened

**3. Moonroof switch\***

To open: Press and hold rear of switch

To close: Press and hold front of switch

To tilt (panel closed): Press and hold front/rear of switch to open/close

**4. Storage compartment\***

To open: Press button, then pull to full open position

**5. Garage door opener button/compartment\***


See Owner's Manual for installation

**Break-in period**

First 1,000 miles: Avoid heavy repeated brake use; avoid full throttle, rapid acceleration or kick-down of transaxle; drive at varying road and engine speeds

Do not tow a trailer for first 500 miles


Do not use special break-in oils

 **Tip: Follow the same procedures with newly overhauled engine or when brakes are replaced**

**Anti-lock Braking System (ABS)**

ABS automatically reduces hydraulic pressure to any wheel on the verge of locking up. You may feel a slight pulsing of the brake pedal and hear a clicking noise; this tells you the

ABS is functioning properly; increase pressure on pedal for maximum braking

 **Tips: Maintain constant pressure on the brake pedal. Do not pump the brakes**

 **Tire economy and tips**

Check pressure monthly when tires are cold


See Owner's Manual for rotation schedule and chart

 **Tire pressure**

Decal on driver's door latch pillar provides tire size and pressure information

 
**Tire chains\*†**

Tire chains can damage aluminum wheels; use on steel wheels only


 **Tips: Use only SAE class "S" chains, install only on front axles (with P235/70R16 tires), install as tightly as possible and retighten periodically**

**Never exceed 30 mph with tire chains****Spare tire†**

Stored underneath the vehicle

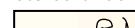 **Jack handle†**

 Stored on right rear of cargo area

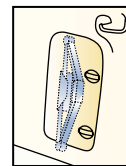


\* Denotes optional equipment  
† See Owner's Manual

Always check the Owner's Manual for more operating information and safety features

Driving  
Tips

## Transaxle
 
## TRANSAXLE

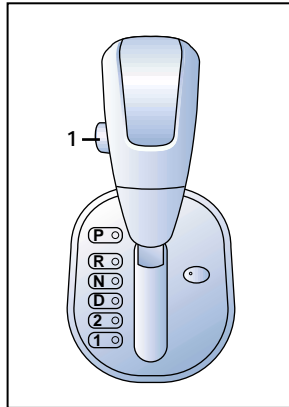**Automatic transaxle\***

Gearshift must be in Park or Neutral to start engine; it must be in Park to remove ignition key

**P = Park**

To move gearshift from Park: You must press firmly on the brake pedal and the ignition must be in the ON position

**R = Reverse**


Never engage Reverse when vehicle is moving

**N = Neutral**

No gear is engaged; vehicle can roll freely, even on a slight incline, unless the brakes are applied

**D (Overdrive)**

For normal driving: Transaxle shifts through four forward gears

 **Tip: Torque converter lock-up improves fuel economy and can feel like an additional gear**

**D (Overdrive Off)**

 
Press the overdrive switch (1) to disengage overdrive; an indicator light on the instrument panel will illuminate

**2 = Second**

Place the gearshift lever in second when accelerating on slippery roads or to provide additional engine braking on downgrades

**1 = First**

Provides maximum engine braking on steep downgrades

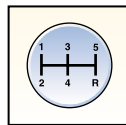**Manual transaxle**

Depress clutch pedal completely to start engine and change gears

Stop vehicle completely before shifting into reverse

**Four wheel drive (4X4) system\*†**

Your Tribute is equipped with a 4WD system that is always active and requires no driver input. Tribute's intelligent 4WD system monitors vehicle conditions and will automatically adjust power distribution between front and rear wheels, the 4WD system is capable of highway, off-road and winter road conditions

During some extreme off-road events the 4WD system may go into heat protection mode (locked mode), this will help protect the system, to exit heat protection mode, stop vehicle and let it cool down

 
\*Denotes optional equipment  
† See Owner's Manual

Always check the Owner's Manual for more operating information and safety features


## Transaxle

Under Hood

UNDER HOOD

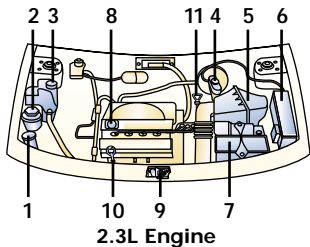

 2.3L Engine

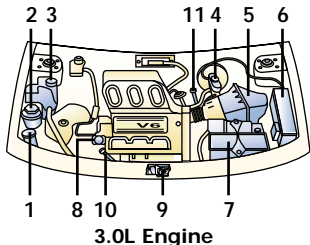

3.0L Engine

- 1. Windshield washer reservoir**  
Fill with windshield washer fluid, not water
- 2. Power steering fluid reservoir**  
Check with engine off and at normal temperature; fluid level should be within MIN and MAX lines
- 3. Engine coolant reservoir**  
Level should be at cold fill level or within the cold fill range when cold  
**⚠ WARNING: Never remove coolant reserve tank cap while engine is running or hot; you could get burned**
- 4. Brake/clutch fluid reservoir**  
Fill to MAX mark with DOT 3 fluid, check with cap on
- 5. Air filter**
- 6. Power distribution box**
- 7. Battery**
- 8. Engine oil filler cap**
- 9. Hood latch**
- 10. Engine oil dipstick**  
Check with engine off and at normal temperature; oil level should be within crosshatched area of dipstick
- 11. Automatic transaxle fluid dipstick\*\***  
Check with engine on at operating temperature; fluid level should be within crosshatched area

NORMAL SERVICE INTERVALS


5,000 miles*	A
7,500 miles	A
15,000 miles	A B
22,500 miles	A
30,000 miles	A B C
37,500 miles	A D
45,000 miles	A
52,500 miles	A
60,000 miles	A B C E
67,500 miles	A
75,000 miles	A D F
82,500 miles	A
90,000 miles	A C
97,500 miles	A
100,000 miles	G

\* Special operating conditions  
\*\* Denotes optional equipment

**Normal maintenance notes**  
Rotate tires every 7,500 miles or sooner if needed; replace cabin air filter every 25,000 miles or 24 months

**☀ Tip: For additional service details, see Owner's Manual**

 - A.** Change: Engine oil/replace filter  
Inspect: Engine coolant level, brake fluid level, tire inflation pressure and tire wear, power steering fluid level, washer fluid level  
Lube: Locks and hinges
- B.** Inspect: Disc brakes
- C.** Inspect: Drive belts (3.0 liter), fuel lines and hoses, brake lines, hoses and connections, steering operation and linkages, front and rear suspension ball joints, driveshaft dust boots, exhaust system heat shields, chassis/body bolts and nuts, cooling system and hoses  
Replace: Fuel filter
- D.** Inspect: Drive belts (2.3 liter)  
Replace: Air filter
- E.** Inspect: Hoses and tubes for emission system
- F.** Replace: Spark plugs  
Inspect: Engine valve clearance (2.3 liter), adjust if noisy
- G.** Replace: PCV valve (3.0 liter), engine coolant (yellow)

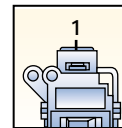

**Fuel pump shutoff**

Disables fuel pump after a substantial jolt; located in front passenger's footwell, by kick panel access cover  
To reset: Press down top of exposed red reset button (1)

**⚠ WARNING: Do not reset shutoff switch if you see or smell fuel**

Always check the Owner's Manual for more operating information and safety features