

## DRIVER ASSURANCE

### **Mazda Driver's Assurance Plan**

Check out [www.mymazda.com](http://www.mymazda.com), the website dedicated to you. Manage your maintenance records, receive valuable offers, see the latest accessories and much more!

### **Mazda Roadside Assistance**

Exhilaration, liberation and inspiration are great reasons to drive a Mazda car, truck, SUV or minivan. In addition to all the other great standard features, you also get peace of mind, our Emergency Roadside Assistance Plan, it's just a phone call away, 24 hours a day, 365 days a year, call **1-800-866-1998**


### **Mazda "bumper-to-bumper" Limited Warranty**

We design and build every Mazda to give you driving pleasure now and far down the road. We're so confident in our quality that we cover the entire vehicle against defects in materials and workmanship

for 48 months or 50,000 miles, whichever comes first

### **Mazda Service Transportation Solution**

Being without your Mazda may put a crimp in your day. If you do ever have to take your Mazda in for repairs don't worry, you're covered. With the Mazda Transportation Solution, you will be given a loaner car at no charge when your Mazda vehicle is in for warranty repairs. For all the details, see your Mazda Dealer

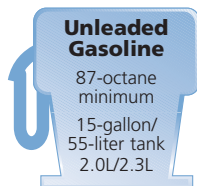

This Quick Tips® guide is provided by Mazda North American Operations to make your Mazda ownership experience more convenient. It is not intended to replace your Owner's Manual.

If you have any questions about your vehicle, you are invited to contact your local dealer.

Or if you need additional help, feel free to call our **Customer Assistance Center at 1-800-222-5500**

Monday through Friday,  
8 a.m.-4:45 p.m., Pacific  
9 a.m.-5:45 p.m., Eastern/Central



©2005 Calcar, Quick Tips® is a trademark of Calcar, made in USA 5/05 97.859M DOT Mazda North American Operations reserves the right to change product specifications at any time without incurring obligations. 9999-95-038C-06QT

2006




# MAZDA3

## Quick Tips®

Reference  
Guide for  
Controls and  
Functions



## DRIVER'S VIEW

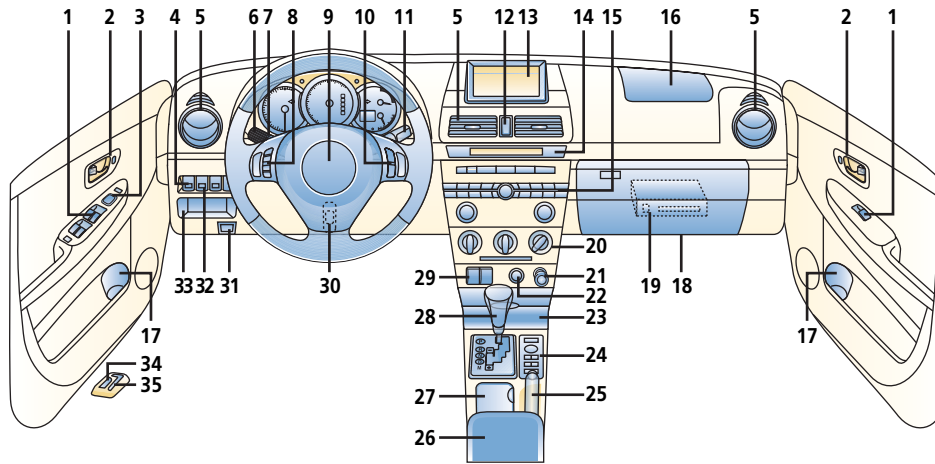

- 1. **Power window switches\***, see Switches
- 2. **Door locks\***, see Locks
- 3. **Mirror controls\***, see Switches
- 4. **Xenon headlight leveling switch\***, see Getting Started
- 5. **Air vents**
- 6. **Turn signal/lighting control lever**, see Getting Started
- 7. **Fog light switch\***, see Getting Started
- 8. **Audio control switches\***, see Getting Started
- 9. **Horn/Air bag**  
To beep: Press
- 10. **Cruise control\***, see Getting Started
- 11. **Wiper/washer control lever**, see Getting Started
- 12. **Hazard warning switch**  
Push to activate/deactivate
- 13. **NAVI display\***, see Owner's Manual

- 14. **Information display**, see Information Display
- 15. **Audio system**, see Audio Systems
- 16. **Passenger air bag**
- 17. **Bottle holder**  
**CAUTION: Use plastic bottles with caps, cups may spill when door is closed**
- 18. **Passenger junction box**
- 19. **NAVI DVD\***
- 20. **Climate control panel**, see Climate Controls
- 21. **Cigarette lighter**
- 22. **Passenger air bag off indicator**, see Getting Started
- 23. **Ashtray**
- 24. **NAVI remote control\***
- 25. **Parking-brake lever**  
To engage: Pull up  
To release: Pull up slightly, while depressing button at front of lever, lower parking brake lever

- 26. **Center console**
- 27. **Cup holder**
- 28. **Gearshift lever**, see Transaxle
- 29. **Heated seats\***, Press on/off
- 30. **Tilt/telescopic steering wheel lever**, see Getting Started
- 31. **Hood release handle**  
Pull release handle to unlock
- 32. **Instrument cluster lighting**, see Getting Started
- 33. **Storage**
- 34. **Fuel-filler lid release**  
To open: Pull lever up
- 35. **Remote trunk-lid release (4-Door only)**  
To open: Pull lever up

\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Driver's  
View

## GETTING STARTED

 
**Getting Started**

MAZDA3 Quick Tips® are designed to quickly familiarize you with some important features of your MAZDA3

The Driver's View tab is your index to the Quick Tips®, locate the item you would like to learn more about and then turn to the listed tab

This Getting Started section contains important operating tips about your MAZDA3

Items identified in blue text call out important information

**Remote entry system\***

Functions only with ignition key not inserted

To lock doors: Press LOCK (1); pressing again within 5 seconds causes doors/liftgate to re-lock, horn to beep once and hazard warning lights to flash once if doors/liftgate properly closed  
To unlock: Press UNLOCK (2) for driver's door, hazard warning lights will flash twice, press again within 5 seconds for all other doors  
Panic alarm: Press ! (3); horn sounds, parking lights flash; press any button on transmitter to stop  
After unlocking with the transmitter, all doors or the liftgate will automatically lock if a door or the liftgate is not opened within about 30 seconds

**Instrument panel lighting**

*With headlights ON:*  
To brighten/dim turn thumbwheel up/down




*Headlights/parking lights ON, ignition key must be ON:* Illumination changes brightness when dimmer switch (4) is pressed (if equipped with black-out meter)

*With headlights OFF†, key ON:* Press instrument cluster dimmer select button (4) to select between 5 brightness settings for instrument cluster

**HID headlights leveling switch**

Adjusts headlight angle to compensate for weight of passengers and cargo, see Owner's Manual

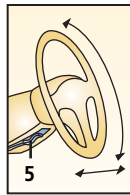**Tilt/telescopic steering-wheel lever**

Pull lever (5) down to unlock column, position tilt angle and length of steering column position

**Tip:** Telescopic function allows steering wheel to be adjusted closer or farther according to driver's reach

**WARNING:** Do not adjust steering-wheel while driving

**Passenger air bag deactivation indicator light**

Front air bag deactivation indicator light provides current status of front passenger air bag and pretensioner system  
If total seated weight on front passenger seat is less than

approximately 66 lb., front passenger air bag deactivation indicator light illuminates, air bag/pretensioner will not deploy/activate in an accident  
If the total seated weight is greater than approximately 93 lb., light does not illuminate, and the air bag/pretensioner will deploy/activate in an appropriate accident, see Owner's Manual for additional information on this feature and the air bag system

**Passenger sensing operation**

See Driver's View  
PAD indicator on dash will illuminate when passenger air bag is deactivated, child-restraint seat with child that weighs a combined total of 66 lbs. or less will deactivate front passenger air bag/pretensioner

See Owner's Manual

**WARNING:** Never place rear-facing infant-safety seat in front of any air bag, an infant is in serious danger of being injured or killed  
If you must install a forward-facing child-safety seat in the front seating position, move vehicle seat as far back as possible

**Tire Pressure Monitoring System (TPMS)\***


Warning light illuminates for a few seconds with ignition on  
If tire pressure is low, warning light illuminates with audible beep sound, adjust tire pressure to correct specifications, perform tire pressure adjustment before driving, a digital tire pressure gauge is recommended  
Flashing warning light may indicate malfunction, dealer inspection required

\*Denotes optional equipment

† See Owner's Manual

Always check the Owner's Manual for more operating information and safety features

GETTING STARTED

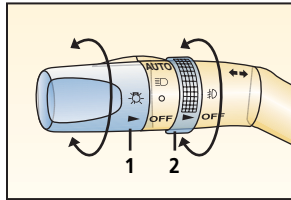

**Turn signal/lighting control lever**

**OFF** = Lights off

○ = Tail, parking and dashboard lights on: Rotate knob (1) to first notch

☰ = Tail, parking, dashboard and headlights on: Rotate knob (1) to second notch

**AUTO\*** = With ignition switch in ON position; headlights and exterior lights automatically turn ON/OFF depending on surrounding darkness/lightness; rotate knob (1) to third notch


High beams on/off: Push forward/pull back to detent

To flash high beams: Pull back slightly and release

Turn signals right/left: Move lever up/down

☰ = Fog lights\* on: Rotate (2); functions only with headlight low beams on

**Tip: Headlights switch off, parking lights remain on, if lights are left on and switch is in lock position or key removed**

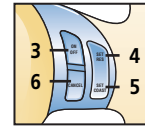

**Cruise control\***

Operates above 19 mph

Press **MAIN (3)** to turn system on/off

To set speed: Accelerate to desired speed and press **SET/COAST (5)**


To accelerate: Press and hold **RES/ACCEL (4)**; release button at desired speed

To decelerate: Press and hold **SET/COAST (5)**; release button at desired speed

Incremental acceleration: Press and release (4); each tap = plus 1 mph

Incremental deceleration: Press and release (5); each tap = minus 1 mph

To cancel: Press **CANCEL (6)** or **MAIN (3)**; tap brake pedal or depress clutch pedal\*

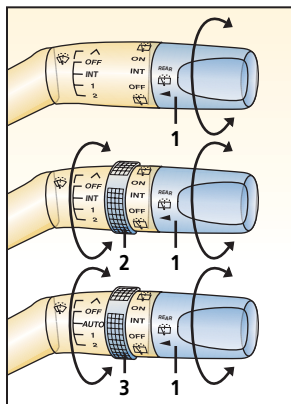

**Wiper/washer control lever**

Single wipe: Push lever up

Washer: Pull back, also operates wipers

Intermittent wiper: One click down  
To change interval speed: Rotate inner ring\* (2)

Normal wiper speed: Two clicks down

High-speed wiper: Three clicks down

Auto\*: One click down

Rain sensor senses rain amount on windshield, then controls wiper automatically


Rain sensor sensitivity is adjusted from high sensitivity (+) to less sensitivity (-) by rotating ring (3)

**Rear window wiper/washer (5-Door only)**

To activate rear interval wiper: Rotate knob (1) up to INT

To activate rear normal speed wiper: Rotate knob (1) up to ON

To activate rear washer: Rotate knob (1) to and release

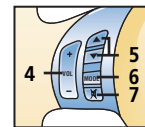

**Steering-wheel audio controls\***

To increase/decrease volume: Press (4)

Radio: Press **▲ / ▼ (5)** less than one second to select next/previous preset station, press **▲ / ▼ (5)** more than one second until beep sound is heard to seek next/previous station

Cassette\*/CD: Press **▲ (5)** to select next selection/track, press **▼ (5)** to repeat current selection/track

Press (6) to select FM1, FM2, AM, SAT 1\*, 2\*, 3\*, CD and Cassette\*

Press (7) to mute audio/NAVI system



**Fuel filler door**


Located on passenger side

\* Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

## Instrument Cluster

### INSTRUMENT CLUSTER

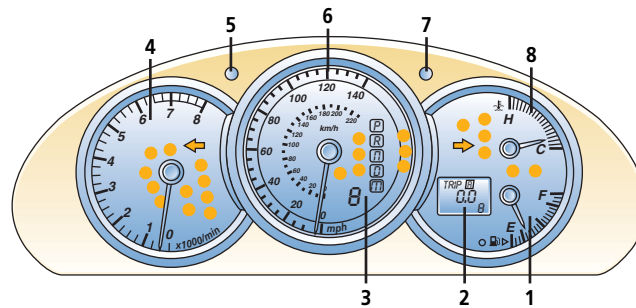

#### GAUGES

- 1. Fuel gauge**  
15-gallon/55-liter tank (2.0L and 2.3L engines)
- 2. Odometer/Trip meter**
- 3. Gear indicator (A/T only)\***  
Displays current gear position
- 4. Tachometer**
- 5. Instrument cluster dimmer select button\*,**  
see Getting Started
- 6. Speedometer**
- 7. Odometer/Trip meter selector**  
Press to view odometer; press again to reset trip odometer A/B settings
- 8. Engine coolant temperature gauge**  
Stop car if above normal range, turn off engine, let vehicle cool; check coolant level when safe

#### WARNING LIGHTS

- **CRUISE** Cruise control on\*, see Getting Started
- **CRUISE MAIN** Cruise control main power on\*, see Getting Started
- **Tire Pressure Monitoring System (TPMS)\***, see Getting Started
- **Turn signals/hazard warning on**
- **High beams on**
- **Engine oil-pressure warning light**  
Stop car when safe and turn off engine; check oil level
- **Brake system**  
Parking brake on/low brake fluid
- **Always fasten seat belts**
- **Security indicator light\***
- **Lights on**
- **Charging system warning light**  
Charging system malfunction; dealer inspection required
- **Air bag/front seat belt pretensioner system**  
If light flashes or stays on, the air bags/front seat belt pretensioners may not operate in an accident; dealer inspection required
- **Door ajar**
- **Power steering malfunction**  
Dealer inspection required if light remains on
- **Check engine**  
Dealer inspection required
- **Low fuel**
- **AT Automatic transaxle warning light\***  
Automatic transaxle malfunction; dealer inspection required
- **Anti-lock Brake System (ABS)\***  
ABS malfunction, normal brakes only; dealer inspection required  
When brake pedal is pressed, ABS automatically reduces hydraulic pressure to any wheel on the verge of locking up  
You may feel a slight pulsing of the brake pedal and hear a clicking noise; this tells you the ABS is functioning properly; increase pressure on pedal for maximum braking

**Tips: Maintain constant pressure on the brake pedal. Do not pump the brakes.**

 
\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

## Instrument Cluster

## Locks

### LOCKS



**Key**  
Operates ignition and all locks


**Tip:** Use key number plate to purchase a new key; store in safe place separate from vehicle



**Remote entry system\***, see Getting Started

#### **Illuminated entry system**

Activates interior lights when dome light switch set to DOOR position; lights off after driver's door is locked or ignition in ON position

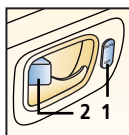

#### **Power door locks\* Master front door locks switches**

To lock/unlock all doors: Press bottom/top of switch (1)


To lock doors without key: With door open, press bottom of door lock switch, exit car, close doors

To unlock: Use key to unlock driver's front door, rotate key to counterclockwise position for more than one second to unlock other doors

#### **Manual door locks Lock button**

To lock: Press front of button (2) toward door handle

To unlock: Pull front of button away from door handle

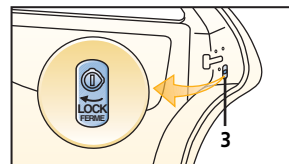


#### **Child-safety locks**

Located at the edge of rear doors

To activate: Rotate childproof lock (3) in direction of arrow using key tip (doors open from outside only); rotate in opposite direction to deactivate

**WARNINGS:** Since children may access either rear door, child-safety locks for both rear doors should be activated. Never leave a child in car with key in ignition

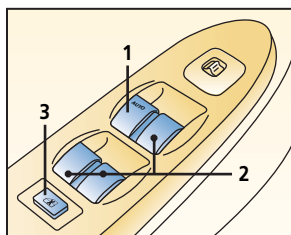

#### **Power windows\***


Ignition must be on

All windows controlled from the driver's armrest; passenger doors have separate switches

**1.** Driver's window: One-touch-down; push down firmly and release, window goes down all the way; pull switch back briefly to stop; press lightly and hold for normal operation

**2.** Passenger window switches: Push down and hold to open, pull back and hold to close

**3.** Power window lockout switch: Press down until it clicks, only driver's window operates; press again and passenger window switches function again

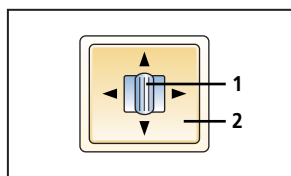


#### **Dual power mirrors\***

Ignition must be in ACC or ON

To adjust left/right mirror: Press control switch (1) left/right, press switch (2) in direction of desired mirror movement

**Tip:** To lock mirrors in place, move control switch to center position

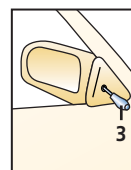

#### **Manual mirrors**

To adjust: Move knob (3) on door

\*Denotes optional equipment


Always check the Owner's Manual for more operating information and safety features

## Switches




## Interior Lights


### INTERIOR LIGHTS

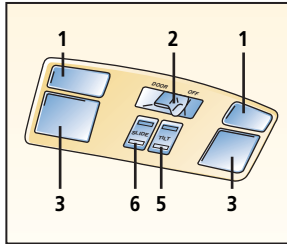


- 1. Map/reading light switch\***  
Press on/off
- 2. Interior light switch**  
DOOR = light on when door open  
ON = light always on  
OFF = light always off
- 3. Front interior light**
- 4. Rear interior light**

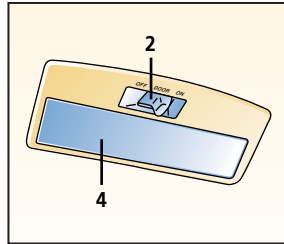

- 5. Sunroof tilt switch\***  
Press rear of switch to tilt rear of sunroof  
Press front of switch to close
- 6. Sunroof slide switch\***  
Press rear of switch to open sunroof  
Press front of switch to close

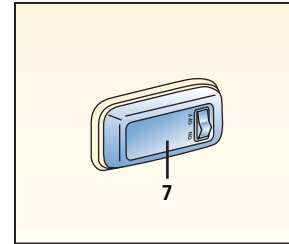

- 7. Cargo light\* (5-Door)**  
ON = Light always on  
OFF = Light always off
- Cargo light\* (4-Door)**  
Light on with trunk open  
See Trunk/Cargo Area
- Driver/passenger covered visor mirrors**  
To access mirror: Lower visor

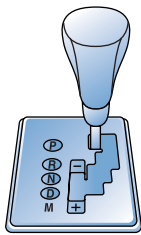

**Automatic Transaxle\***  
Gearshift must be in Park or Neutral to start engine; it must be in Park to remove ignition key


- P = Park**  
To move gearshift from Park: Press firmly on brake pedal then move the shift lever out of P
- R = Reverse**
- N = Neutral**  
No gear engaged
- D Drive (Overdrive)**  
For normal driving: Shifts through all forward gears automatically




**M (Sport A/T manual shift mode)**  
Move shifter from D to M to engage manual shift mode, M will be illuminated for manual mode on

shift position indicator located in the instrument panel  
Manual shifting of transmission is achieved by moving shifter back to upshift and forward to downshift, move shifter from M to D to engage automatic shift mode

**Gear indicator (A/T only)\***  
Illuminated numeral of gear indicator located in the instrument panel displays current gear in Automatic and Manual shift modes

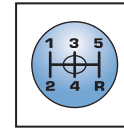

 **Manual transaxle**  
Depress clutch pedal to start engine and change gears



**Ignition key release button (M/T only)**  
Press button (1) to remove key from ignition

**Tips: Do not shift into 1st above 20 mph or clutch failure could occur**  
**Resting your foot on clutch pedal while driving or using the clutch to hold your vehicle at a standstill while waiting on a hill may reduce clutch life**

\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Transaxle

## Seats



### SEATS

#### Shoulder belt height adjustment

To raise:  
Push adjuster upward

To lower:  
Pull button (1) and slide downward

**⚠ WARNING: Make sure adjuster locks in one of its positions**

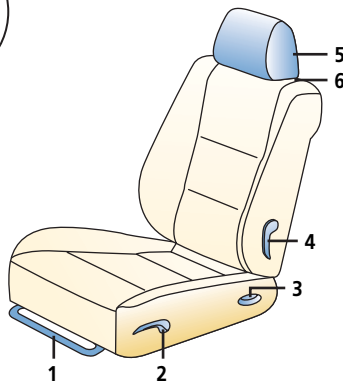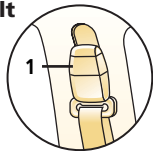

#### Seat controls

##### 1. Fore-aft adjustment

Lift lever and hold, slide seat, release lever

##### 2. Raise/lower seat (Driver's seat only)

Pull/push lever and release

##### 3. Seat back angle

To adjust: Lift and hold lever, lean forward or backward to tilt seat, release lever

##### 4. Lumbar support adjustment\* (Driver's seat only)

Pull lever forward

##### 5. Head restraint

To raise/lower: Pull up/hold release button (6) and push down

**☀ Tip: Side-impact air bags\* deploy from outboard side of front seatbacks**

**⚠ WARNINGS: Do not adjust seats while driving**

**Safety belts must always be worn when vehicle is in motion**

**Air bags are supplemental and do not replace safety belt usage**

**Always wear your safety belt and properly secure children 12 and under in the rear seat**

**Never place rear-facing infant-safety seat in front of any air bag, an infant is in serious danger of being injured or killed**

**If you must install a forward-facing child-safety seat in the front seating position, move vehicle seat as far back as possible**

**Use age appropriate child restraints, see Owner's Manual and state or province laws**

#### Child-safety seat

To install in rear outboard seats: Use dual locking mode retractor seat belts; see Owner's Manual for proper installation and child seat tether and LATCH system instructions

#### Safety belt emergency locking mode


Belts lock only on hard acceleration, braking, cornering or impacts of about 5 mph or more

#### Automatic locking mode (front passenger and all rear safety belts only)

Must be used when installing child-safety seat

To activate: Pull belt fully out of retractor, allow belt to retract until click is heard; belt will only tighten

To disengage: Unbuckle belt and allow belt to retract fully

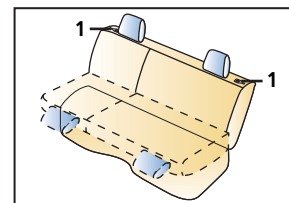

#### Split fold-down rear seatbacks

To fold: Push release knob (1), push seatback down

To return and lock: Push seatback firmly until latched, make sure seatbelts are returned to original positions

**☀ Tip: 4-Door has seatback locks as part of trunk security**

**⚠ WARNING: Lower seatback slowly using both hands, seatback is heavy and could cause personal injury**


\*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features


Seats



CLIMATE CONTROLS

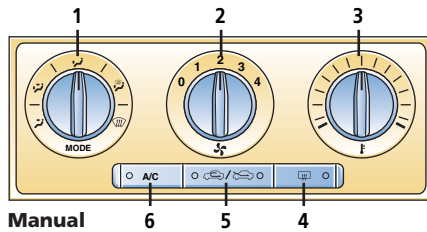

Manual

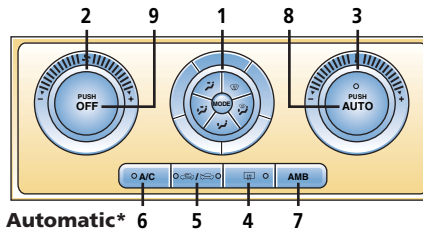

Automatic\*

**1. Air flow selections**

- = air to dash
- = air to dash and floor
- = air to floor
- = air to floor and windshield
- = defrost, air to windshield

**2. Fan control**

Rotate knob right/left to increase/decrease fan speed

**⚠ WARNING: Do not use position in cold weather; windows will fog and hamper vision**

**6. Air Conditioning\***

Press to activate/deactivate

**☀ Tip: Floor position and both defrost positions / : A/C turns ON, air intake switches to fresh air**

**8. AUTO**

Press for automatic operation; rotate dial to set temperature, see Owner's Manual

**☀ Tip: Automatic climate control display viewed via information display, see below**

**9. OFF**

Press (9) to turn system off (Automatic System), rotate knob (2) to 0 (Manual System)

**3. Temperature control**

Rotate knob to blue for cool, red for warm

**4. Rear window defogger**

Press to activate/deactivate

**5. Air Intake Control**

Push switch to select

- = recirculate inside air; use for maximum heating/cooling or to keep odors out
- = fresh air

**7. AMB\***


Press to display ambient temperature, press again to temperature set for air conditioner

**☀ Tip: With audio system ON, temperature display can be switched between Centigrade and Fahrenheit or vice versa by pressing audio POWER button and holding both for five seconds or more**

**Control positions for maximum defrost**

Fan to maximum, temperature to maximum hot, air flow selector knob to

**☀ Tips: To help prevent windshield fogging in humid weather, select before starting engine. To prevent moisture buildup, never drive with system off. Objects placed under the front seats may interfere with air flow to the rear**

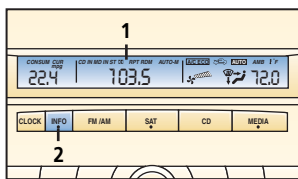

**Information display**

Information display (1) has the following functions: Clock, ambient temperature display\* (AMB), automatic climate control display, audio display and trip computer\*

\*Denotes optional equipment

Trip computer\* can display current fuel economy, average fuel economy, approximate distance you can travel on available fuel and average vehicle speed. Ignition must be in ON position, press INFO button\* (2) to change display mode

Always check the Owner's Manual for more operating information and safety features

Information Display

RADIO/COMPACT DISC

Audio systems

**1. Power/Volume**

Press to turn on/off; rotate to increase/decrease volume

**2. Program Random†**

Press to enable/cancel random play

**3. Tune/Auto-Memory/Display**


Radio: Press and hold until a beep sound is heard; system automatically scans and temporarily stores up to six strong stations in each band; press again to switch to another preset station  
Tune: Rotate counterclockwise/clockwise for lower frequency/higher frequency

**4. Program**

Press to change cassette tape-play direction

**5. SEEK/TRACK/APC**

Radio: Press ▲ / ▼ to automatically seek higher/lower frequency

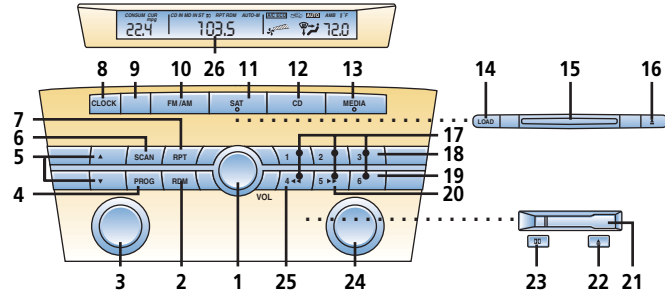

**9. SET or INFO\***

Clock setting button, see Clock (8)

See Information Display

**10. FM/AM**

Press to turn radio on and select between FM1/FM2/AM station preset buttons (17)

**18. Disc up ^ †**

Press to skip forward to beginning of next CD

**19. Disc down v †**

Press to skip back to beginning of previous CD

**20. Fast forward ►►**

Press to fast forward through a track

CD: Press ▲ / ▼ to select next/beginning of current track  
Tape: Press ▲ / ▼ to automatically advance tape to beginning of next selection/replay selection; to stop this operation, press button again

**6. Scan**

Press to briefly sample next listenable selections; functions in all modes

**7. RPT**

Press to replay current selection

**8. Clock**

To set: With ignition in ACC or ON position, press (8) and hold until beep sounds; 12 hr/24 hr will be displayed; press (9) to select; press (8) again while selection is flashing: Hr ADJUST displays; press (9) to select hr; press (8) when done, do the same to set minutes

**11. SAT\***

Satellite ready capability

**12. CD**

Press to play CD

**13. MEDIA\***

Press to play cassette tape

**14. LOAD\***

To load multiple discs: Press and hold LOAD (14) until beep sound is heard; insert CD when "In" is displayed

To eject disc: Press Eject (16)

To eject specific disc: Press and hold Eject (16) until beep sound is heard; within five seconds press the desired tray number 1-6 (17)

**15. CD slot**

**16. CD eject button**

**17. Memory preset buttons**  
To set: Tune to station, press and hold until beep sound is heard

**21. Cassette door\***

**22. Eject button\***

**23. Dolby® Noise Reduction\***

Reduces tape noise and hiss; press to activate/deactivate

**24. Text/Audio Control**

Audio control: Press to select ALC/BASS/TREBLE/FADE/BAL/BEEP ON/LLM ON  
Rotate right/left to adjust selected feature

**Tip: Automatic Level Control (ALC) automatically adjusts audio volume depending on vehicle speed**

**25. Reverse ◀◀**

Press to reverse through a track


**26. Display, see Information Display**

\*Denotes optional equipment  
†For use with CD, or CD changer\*

Always check the Owner's Manual for more operating information and safety features

Trunk/  
Cargo Area

TRUNK / CARGO AREA

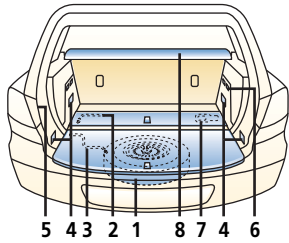

**MAZDA3 5-Door**

**1. Temporary spare tire**

Stored under panel in trunk; to change flat tire: Follow instructions in Owner's Manual

**⚠ WARNING: Do not exceed 50 mph with temporary spare**

**💡 Tip: For instructions and restrictions on use of temporary spare tire, see Owner's Manual**

**2. Lug wrench**

**3. Jack handle**


**4. Cargo securing loops**

**5. Jack**

**6. Cargo light**

**7. Front tiedown eyelet**

**8. Cargo area cover**

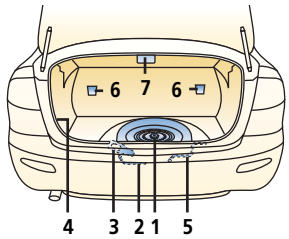

**MAZDA3 4-Door**

**1. Temporary spare tire**

Stored under panel in trunk; to change flat tire: Follow instructions in Owner's Manual

**⚠ WARNING: Do not exceed 50 mph with temporary spare**

**💡 Tip: For instructions and restrictions on use of temporary spare tire, see Owner's Manual**

**2. Lug wrench**

**3. Front tiedown eyelet**

**4. Jack**

**5. Jack handle**

**6. Rear seatback lock (4-Door only)**

Lock or unlock: Move lever

**7. Cargo light**

**Tire economy and tips**

Check pressure at least monthly when tires are cold

Tires should be of the same make, kind and dimension

Maintain correct front-end alignment and tire balance; rotate tires at 7,500-mile intervals; see Owner's Manual for rotation chart

**Tire pressure**

Decal on driver's door provides tire pressure information

**Tire chains\*†**

Use only SAE Class "S" chains; install on front tires as tightly as possible and re-tighten periodically; do not use chains on dry roads, aluminum wheels, or with tire pressure monitor system, damage may occur, use on steel wheels only



**Luggage compartment internal safety release**

Allows you to escape should you become locked in trunk. Slide illuminated release lever in direction of arrow; lever will glow if it has been exposed to light. Located on interior trunk lid.

\*Denotes optional equipment


† See Owner's Manual

Always check the Owner's Manual for more operating information and safety features

Trunk/  
Cargo Area

## Under Hood

### UNDER HOOD

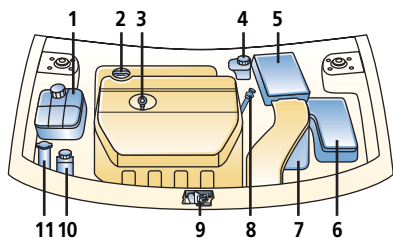

2.0/2.3-liter Engine

**1. Engine coolant reservoir**

Level should be between COLD FILL RANGE indicator marks

**⚠️ WARNING: Never remove coolant reservoir cap while engine is running or hot; remove only when safe**

**2. Engine oil filler cap**

See Owner's Manual for recommended engine oil viscosity

**3. Engine oil dipstick**

Fluid should be between F and L on dipstick; do not fill above F

**4. Brake/clutch fluid reservoir**

Fill to MAX mark with DOT 3 fluid; check with cap on

**☀️ Tip: Clutch uses same reservoir as brakes**

**5. Battery**

**6. Fuse panel**

Push latch in, lift cover must be between the indicator marks on the dipstick

**7. Air filter**

**8. Automatic transaxle fluid dipstick\***

Check with transaxle in park, engine on and at operating temperature

**9. Hood latch**

Pull up to release hood

**10. Power steering fluid reservoir**

Level should be between MIN and MAX lines

**11. Windshield washer reservoir**

Fill with windshield washer fluid

**☀️ Tip: Check all fluids with vehicle parked on a level surface and engine off unless otherwise stated**

**Break-in period**

First 600 miles: Avoid heavy braking and acceleration; drive at varying road and engine speeds

**☀️ Tip: Follow the same procedures with newly overhauled engine or when brakes are replaced**

**Maintenance notes:**

Rotate tires every 7,500 miles or sooner if needed  
 Replace cabin air filter every 25,000 miles or 24 months  
 Replace (FL22)\* engine coolant at 120,000 miles

**☀️ Tip: For severe driving conditions, Owner's Manual recommends changing oil and filter at 5,000<sup>†</sup> miles**

**NORMAL SERVICE INTERVALS**

7,500 miles	A		
15,000 miles	A		F
22,500 miles	A		
30,000 miles	A B		F
37,500 miles	A	C	
45,000 miles	A		F G
52,500 miles	A		
60,000 miles	A B	D	F
67,500 miles	A		
75,000 miles	A	C	E F
82,500 miles	A		
90,000 miles	A B		F G

**☀️ Tip: For additional service intervals and complete details, see Owner's Manual**

**A.** Replace: Engine oil/filter  
 Lubricate: All locks and hinges

**B.** Inspect: Cooling system, fuel lines and hoses, brake lines, hoses and connections, steering operation and linkages, front and rear suspension and ball joints, drive-shaft dust boots

**C.** Inspect: Drive belts (tension)  
 Replace: Air filter

**D.** Inspect: Hoses and tubes for emission system  
 Replace: Engine coolant (Other than FL22)

**E.** Inspect: Engine valve clearance  
 Replace: Spark plugs

**F.** Inspect: Disc brakes

**G.** Inspect: Exhaust system and heat shields

\*Denotes optional equipment  
<sup>†</sup>See Owner's Manual

Always check the Owner's Manual for more operating information and safety features