 
 
 
 
 
 
 


NAVIGATION SYSTEM

Preparation See page 4 for specific information.	Before Use
Immediate use See page 4 for specific information.	Getting started
	Routing
Advanced use See page 5 for specific information.	Address Book
	Voice Recognition
	Volume Adjustment
If necessary See page 5 for specific information.	If necessary
Audio System See page 65 for specific information.	Audio Operation
Others use See page 85 for specific information.	Bluetooth Hands-Free
	Steering Switch





Before Use



Before Use

Accessories

 
 
 
 
 
 
Please contact an Authorised Mazda Dealer if you are missing any of the following accessories.

 
 


- Map Disc
- Owner's Manual

CAUTION:
THIS PRODUCT IS A CLASS I LASER PRODUCT.
HOWEVER THIS PRODUCT USES A VISIBLE/INVISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED.
BE SURE TO OPERATE THIS PRODUCT CORRECTLY AS INSTRUCTED.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

Laser products:
Wave length: 650 nm
Laser power: No hazardous radiation is emitted with safety protection.









MEMO



    Before Use



Contents

Before Use

Preparation

- Before Use
 - Accessories 2
 - Laser products 2
 - Contents 4
 - Safety Information 6
 - Introduction 8
 - (Use This Product Safety), (Navigation System), (Beep sound and voice guidance restrictions while using Bluetooth Hands-Free), (Screens), (LCD (Liquid crystal display))
 - Names and Functions 9

Immediate use

- Getting started
 - Activation 12
 - (Removing the Map Disc), (On-screen Buttons)
 - Menu 14
 - Set Clock 15
 - Navigation Set Up 16
 - (User Setting), (Quick POI Selection), (Language), (Map Configuration), (Calibration), (Restore System Defaults)
 - Screen Names and Functions 25
 - (Screens Before Setting Route), (Screens During Route Guidance), (Screen adjustments, beep alert and other settings)
 - Screen change 28
 - (Map orientation), (Map scale)
- Routing
 - Destination Entry and Route Search 30
 - (Change (Change Search Area)), (Address), (Point of interest), (Emergency), (Memory Point), (Home), (Preset Destination), (Previous Destination), (Freeway On/Off Ramp), (Coordinates), (Select from map)
 - Quick POI 38
 - (Displaying POI(s) on a Map), (Local Search), (Deleting POI Markers), (Showing POI Data)
 - Character Entry 39
 - (Street name, town name, and other input)
 - (House phone number, and other input)
 - Direct Destination Input 40
 - (Direct Destination Input), (Selecting Route)
 - POI Icons on Maps / Delete Destination 41
 - (POI (Point of Interest) Icons), (Delete destination)
 - Route Options 42
 - (Route Preferences), (Modification of Destination or Way Point Positions), (Deletion of Destination or Way Points), (Detour), (Turn List), (Display Route), (Route Preview), (Setting the conditions for simulation run)

Advanced use

- Address Book
 - Address Book 46
(Memory Point Storage), (Memory Point Confirmation and Modification),
(Preset Destinations or Home storage), (Memory Point Deletion),
(All Memory Point Deletion), (Displays Icons at Memory Points),
(Avoid Area Storage), (Avoid Area Confirmation and Modification),
(Avoid Area Deletion), (All Avoid Area Deletion),
(Category Name Modification), (Previous Destination Deletion),
(All Previous Destination Deletion)
- Voice Recognition
 - Voice Recognition 50
(Voice Recognition Structure), (Select the Language),
(Voice Recognition Basic Usage Pattern), (Cancel Voice Recognition),
(Switch Operation List), (Voice Recognition Command)
- Volume Adjustment
 - Volume Adjustment 55

If necessary

- If necessary
 - Precautions/System Performance 56
(Voice Guidance), (GPS), (Map Matching), (Positioning Accuracy),
(Route Guide), (Route Search)
 - Troubleshooting 60
(Verification First), (Error Messages)
 - Maintenance 63
(Care of the Product), (Handling and Care of Map Discs)
-

Before Use





Safety Information






Before Use

- Read this owner's manual for your Navigation System carefully before using the system. It contains instructions about how to use the system in a safe and effective manner. Mazda assumes no responsibility for any problems resulting from failure to observe the instructions given in this manual.
- This manual uses pictographs to show you how to use the product safely and to alert you to potential dangers resulting from improper connections and operation. The meanings of the pictographs are explained below. It is important that you fully understand the pictographs and explanations in order to use this manual and the system properly.

 Warning	Warning	The presence of this Warning symbol in the text is intended to alert you to the importance of heeding the operation instructions. Failure to heed the instructions may result in severe injury or death.
--	----------------	--

 Warnings	<ul style="list-style-type: none"> ■ Do not keep your eyes fixed on the monitor screen or operate the system while driving. Do not change the settings and destination locations while driving. Minimize the time spent on viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and can cause accidents. Always stop the vehicle in a safe location and use the parking brake before operating the system. ■ Always obey local traffic regulations. Your guided route may include roads that are not open to vehicles or are closed due to traffic regulations. Comply with the local traffic regulations and take another route. ■ Do not use the unit when it is out of order. If the unit is out of order (no image, no sound) or in an abnormal state (has foreign matter in it, is exposed to water, is smoking, or smells), then turn it off immediately and consult with an Expert dealer, we recommend an Authorized Mazda Dealer. Using the unit in an out-of-order condition may lead to accidents, fires, or electric shocks. ■ Use the proper power supply. This product is designed for operation with a negative grounded 12 V DC battery system. ■ Do not disassemble. Do not disassemble the product or attempt to repair it yourself. If the product needs to be repaired, take it to an Authorized dealer, we recommend an Authorized Mazda Dealer.
---	--

   



Caution

Caution

The presence of this Caution symbol in the text is intended to alert you to the importance of heeding the operation instructions. Failure to heed the instructions may result in injury or material damage.



Cautions

- **Do not use the product where it is exposed to water, moisture, or dust.**
Exposure to water, moisture, or dust may lead to smoke, fire, or other damage to the unit. Make especially sure that the unit does not get wet in car washes or on rainy days.
- **Keep the voice guidance volume at an appropriate level.**
Keep the volume level low enough to be aware of road and traffic conditions while driving.
- **Protect the Deck Mechanism.**
Do not insert any foreign objects into the slot of this unit.
- **This navigation system is designed exclusively for use in automobiles.**
This navigation system should only be installed in an automobile. Do not install it in a ship, aircraft, or any other vehicles except an automobile. Do not use it detached from the vehicle.
- **Do not insert or allow your hand or fingers to be caught in the unit.**
To prevent injury, do not get your hand or fingers caught in moving parts or in the disc slot. Especially watch out for infants.

Operation is subject to the following two conditions;
(1) this device may not cause interference, and
(2) this device must accept any interference,
including interference that may cause undesired operation of the device.

Before Use



Introduction

Before Use

Use This Product Safety

■ Extremely low or high temperatures may interfere with normal operation

The inside of the vehicle can become very hot or cold when it is parked for extended periods in direct sunlight or in cold places with the engine turned off. The navigation system may not operate normally under such circumstances. Turn off the navigation system until the inside of the vehicle has cooled down or warmed up. If the system does not operate thereafter, consult an Authorized Dealer, we recommend an Authorized Mazda Dealer.

Navigation System

This navigation system utilizes GPS* satellite signals, a speed sensor and gyrosensor to track and display your vehicle's current position, and to guide you from your starting point to your destination along a calculated route.

* : GPS (Global Positioning System) is a position detecting system utilizing the signals from GPS satellites deployed by the U.S. Defense Department.

Beep sound and voice guidance restrictions while using Bluetooth Hands-Free

 
 
 
The beep sound and voice guidance related to the navigation system operation are not heard while a Bluetooth Hands-Free is being used.

Screens



Screens displayed in this manual may differ from those on the actual display.

LCD (Liquid crystal display)

Direct sunlight or other outside light sources makes it difficult to view the images on the display. For moonroof-equipped vehicles, close the sunshade to better view the display.




8

  

Names and Functions

The navigation system can be operated by pressing a button on the panel (panel button) or selecting a button displayed on the screen (on-screen button).

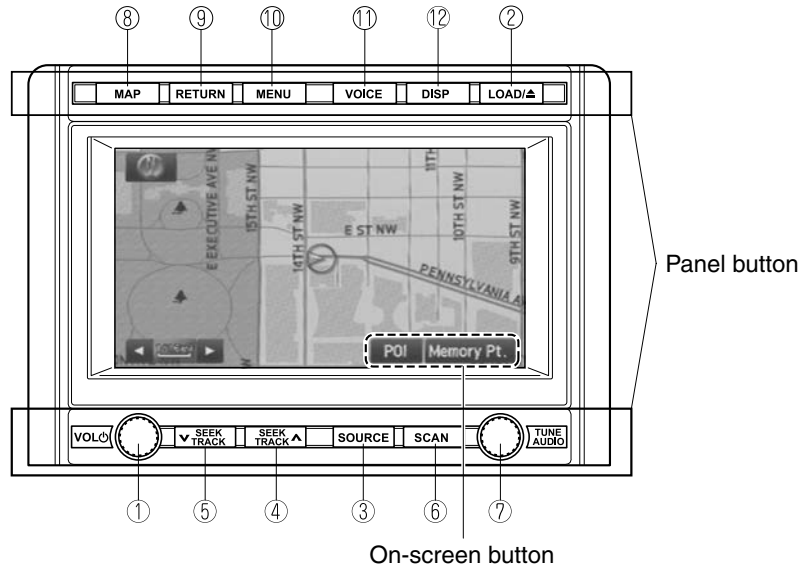

1. **POWER/VOLUME dial:** The volume can be adjusted by turning the dial. Turn the audio unit off by pressing the dial.
2. **LOAD/EJECT button:** CD loading and ejection. If the display is left in the lowered position for a certain period of time, a beep sound is heard and the display closes automatically.
3. **SOURCE button:** Used to change the audio source.
 - and on-screen buttons : FM/AM broadcast reception.
 - on-screen button : CD mode
 - on-screen button : Satellite radio
 - and on-screen buttons : Image and Sound playback is possible using a portable video player connected to an external input terminal.*1
Sound playback is possible using an audio player connected to an external input terminal.*1
AUX1: External sound
AUX2: External image (If equipped)
4. **SEEK/TRACK button:** Performs tuning (short press) and searching (long press) in FM/AM mode.
5. **SEEK/TRACK button:** Performs track skip (short press) and fast-forward/reverse (long press) in CD mode.
6. **SCAN button:** Performs scanning operation in FM/AM and CD modes.



Before Use

- 7. TUNE AUDIO dial: The audio display screen can be switched on or off by pressing the dial. Turning the dial changes the radio station frequency.
- 8. MAP button*² : Used to display a map of the current location while in navigation mode.
- 9. RETURN button*² : Button used to return to the previous screen.
- 10. MENU button*² : Menu screen display (various settings).
- 11. VOICE button: Used to replay a voice navigation assist from the navigation system.
- 12. DISP button: Screen brightness/contrast mode selection and adjustment display.

*¹ :The external input terminal is not equipped on your vehicle because it is not standard equipment.

 
 
 
*² : For navigation unit operation

Note

- If there is no response after selecting the on-screen button, remove your finger from the screen and select it again.
- On-screen buttons that cannot be operated are not illuminated.



Select the on-screen button lightly with your finger. Selecting the on-screen buttons using objects that have a hard or sharp end such as a ball point pen or mechanical pencil could cause a malfunction.










MEMO



     Before Use



Activation

Insert the map disc into the unit to start the Mobile Navigation System.



Map Disc


- Refer to "Handling and Care of Map Discs" to know how to handle a map disc (page 63).

Note

- The map disc cannot be inserted or ejected while the ignition switch is in the OFF position.
- Remember that the battery can run down if the ignition switch is kept in the ACC or ON position for a long time while the engine not running.

Getting started

- 1 Switch the ignition switch to the ON position and press **LOAD / ▲**.

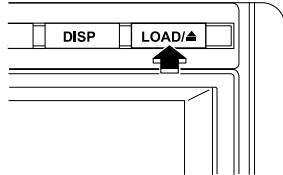


- 2 Select the **MAP** on-screen button to open the display.



MAP on-screen button

- 3 Insert the map disc with the printed side facing up.

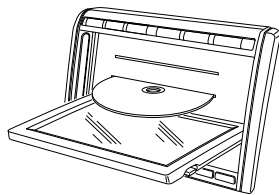

Note

- Condensation may form on the optical lens or the map disc inside the unit when the temperature in the vehicle increases in a short time such as when heating the car on a cold day. This condensation may cause malfunctions. If so, unload the map disc and do not operate the unit for approximately 1 hour. Wipe the condensation off the map disc with a soft cloth. If the unit does not operate correctly after 1 hour, consult an Authorised Mazda Dealer.



(CAUTION) screen

Note

- When the ignition switch is in the ACC or ON position, the screen changes as follows to activate the navigation system.
- The screen (audio or navigation) that was displayed prior to the engine being turned off is displayed. Before the navigation screen is displayed, the CAUTION screen will be displayed.



4 Read the CAUTION carefully, and select the **Agree** on-screen button.



Most functions are inhibited while the vehicle is in motion. Please read the handbook for operation instructions. Always obey traffic regulations.

- The Current Position screen appears.

Note

- You can select the language by selecting the  on-screen button. You can also change the selected language using Language Selection. ( page 20)
- The CAUTION screen remains on the display unless you select the **Agree** on-screen button.

If the mobile telephone is programmed to the hands-free unit for use with the Bluetooth hands-free telephone, the Bluetooth hands-free information is displayed on the screen momentarily. While this information is displayed, the **Agree** on-screen button cannot be selected. Select the **Agree** on-screen button after the display is cleared.

Getting started

Removing the Map Disc

Press the **LOAD/▲** and **MAP** on-screen button with the ignition switch in the **ACC** position.



MAP on-screen button



Do not get your hand or fingers caught in moving parts or in the disc slot. This can cause injuries. Children are inquisitive, try to install or remove the map disc without infants looking on.

On-screen Buttons

Select the on-screen button lightly with your finger. Colors for unavailable buttons will be pale.

Menu

Menu appears when pressing **MENU**.

Getting started



- Destination Entry and Route Search (page 30)
- Address Book (page 46)
- Cancel Guidance (page 41)
- Route Options (page 42)
- Volume (page 55)
- Set Clock (page 15)



- Navigation Set Up (page 16)

Set Clock

The current time is set using this function. Since time notification is provided by a GPS satellite.



Before Steps



MENU


→ select  Set Clock

Open the [SET CLOCK] screen

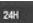

Select  if you prefer 24-hour display;
 for 12-hour display.

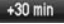Select  to move the setting ahead by 30 minutes, and similarly, select  to move it back by 30 minutes.

How to exit .

Note

Minutes and seconds are adjusted by the GPS, however, it is necessary to adjust hours under the following conditions:

- Driving across different time zones
- Daylight saving time start and end

Getting started

Navigation Set Up

- You can alter the map display conditions, the route guidance conditions and show the system information.



Warning

■ Stop your vehicle before the following operations.


Do not change the settings and destination locations while driving. Minimize the time spent viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and may cause an accident. Always stop the vehicle in a safe location and put the parking brake on before operating the system.









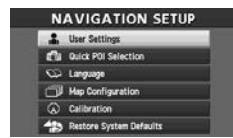


 
Getting started

Before Steps **MENU** → select  Navigation Setup

Open

[NAVIGATION SETUP]



-  User Settings ( page 17)
-  Quick POI Selection ( page 19)
-  Language ( page 20)
-  Map Configuration ( page 21)
-  Calibration ( page 22)
-  Restore System Defaults ( page 24)

Navigation Set Up

User Setting

Before Steps


MENU → select  Navigation Setup

→ select  User Settings








Getting started

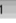


Open the [USER SETTINGS] screen





- Map Colour**

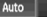

Map Colour   


Select a screen color from the  to  options.
- MAP Mode**

Map Mode   





 - Auto : The display will automatically switch between Day and Night illumination mode when the headlights are turned off and on respectively.
 - Day : The display will be presented in Day illumination mode regardless of whether the headlights are on or off.
 - Night : The display will be presented in Night illumination mode regardless of whether the headlights are on or off.
- Distance**



Distance  

Select the distance unit from  or .
- Average speed**

Average speed 

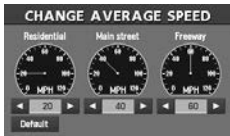Set the average speed for each road to be driven.
(This function sets the standard speed (average vehicle speed for each route) used for calculating the estimated arrival time when calculating the route time.)


 -   Average speed setting
 -  :Changes back to default
- Road Restriction Warnings**

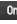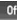Road Restriction Warnings  

The display of warnings during route guidance when passing through areas with traffic restrictions can be turned on or off.

Navigation Set Up

User Setting

Getting started

Before Steps

MENU → select  Navigation Setup

→ select  User Settings



Open the [USERSETTINGS] screen



■ Arrival Time





The time which is displayed until reaching the destination or a way point can be set as an estimated arrival time or the remaining time.

Select  to display the estimated arrival time, or  to display the remaining time.

■ Keyboard layout



The layout of input keys can be selected as  or .

■ Clock



Allows selection of whether clock is to be displayed.

When the time display setting is switched on in the "USER SETTINGS" screen on the navigation screen, the time will be displayed on the navigation, SETTINGS, SOUND, LOAD/EJECT, and DISPLAY MODE screens.

Even if the display of the clock on the navigation is not set, the clock on the information display remains displayed.

Navigation Set Up


Quick POI Selection

This function allows you set the categories on the area displayed when the (Point of Interest) menu is selected on the map. Quick POI enables you store up to six different kinds of categories which you use most regularly.



Getting started

Open the [QUICK POI SELECTION] screen

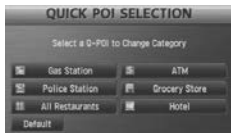

Select the button for Quick POI storage.

Note

- Select the category to be changed

Default : This button allows you to restore the factory settings.



Select a category.

Once selected, subcategories will be displayed.

List All Categories : Subcategories from all of the individual categories will be displayed together.



Select the subcategories to be displayed on the map.

Repeat the above steps to add further POI markers displayed on the menu.



Navigation Set Up

Language

You can change the language of the menu and the voice guidance.



Getting started

Before Steps



MENU → select  Navigation Setup

 
 
 
→ select  Language

Open the [LANGUAGE] screen



Select your preferred language from the list.

 : Select the language when using voice activate.
( page 51)



Navigation Set Up

Map Configuration

Before Steps

MENU → select Navigation Setup


→ select Map Configuration

Open the [MAP CONFIGURATION] screen



MAP Screen

Select single, dual map display or current position.

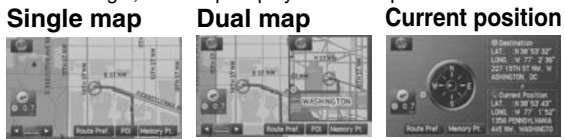

Turn Guidance



Turn Arrow (on first screen)



While using route guidance, the directions for the next junction where you have to turn are shown as Turn Arrow in the upper right.

Turn List



While using route guidance, the directions for the next junction where you have to turn are shown as Turn List.

Turn Arrow (on second screen)



While using route guidance, the directions for the next junction where you have to turn are shown as Turn Arrow.

Note

Before a fork in the road, an enlarged diagram of the junction automatically appears in a second screen. This is to make route guidance even clearer.

Intersection Detail



Select whether the Enlarged Junction diagram screen is displayed automatically.

Freeway Information



Allows selection of whether the guidance screen is to be displayed while driving on a Motorway.

Getting started

Navigation Set Up

Calibration

This function allows you to correct any error in the position or direction of your vehicle display.

Before Steps **MENU** → select  Navigation Setup


Getting started

Adjusting Current Position and Direction



select **Position / Direction**

Open the [Calibrate Position] screen



Move  to the correct position and select **OK**.



Use  or  to adjust the direction in which you are heading, and select **OK**.

Distance

This function automatically corrects any error in the display of the current position that might occur after tire replacement.

select **Distance**

You will have to drive about 6 miles (10 km) before distance correction is complete.

 
Map Vers

The map a

select

Map and s





select  Calibration

Map Version

 
 
 
 
 
The map and software version numbers can be confirmed using this function.

select 

Map and software versions are now displayed.



Getting started



Navigation Set Up

Restore System Defaults

This function replaces all the settings in the mobile navigation system with the initial default settings.



Getting started

Before Steps

MENU → select Navigation Setup

→ select Restore System Defaults

Open the [SYSTEM DEFAULTS] screen

Select .

SYSTEM DEFAULTS

System defaults will be restored.
Please see handbook for more information on System defaults.

If you execute Restore System Defaults, all of your stored setting data will be deleted.


[Default List]

Item	Initial condition
USER SETTING	
Map Colour	1
MAP Mode	Auto
Distance	Miles
Average speed (Urban road)	20 MPH(30 KPH)
Average speed (Country road)	40 MPH(60 KPH)
Average speed (Motorway)	60 MPH(100 KPH)
Notify traffic restriction	On
Arrival Time	Time
Keyboard layout	ABC
Clock	On
QUICK-POI SELECTION	
Quick-POI Selection	A : Gas station B : ATM C : Police Station D : Grocery store E : All Restaurant F : Hotel
LANGUAGE	
Display guidance language	English
VOICE RECOGNITION	
Speech recognition Language	English
MAP CONFIGURATION	
Map Screen	Single-screen display
Turn Guidance Screen	Turn List Mode
Intersection Detail	On
Freeway Information	Off
SET CLOCK	
	Display type 24h

Item	Initial condition
ROUTE PREFERENCES	
Allow Toll Road	Avoid
Allow Major roads	Prefer
Allow Ferry	Avoid
Allow Restricted Road	Avoid
Border Crossing	Prefer

Screen Names and Functions

Screens Before Setting Route

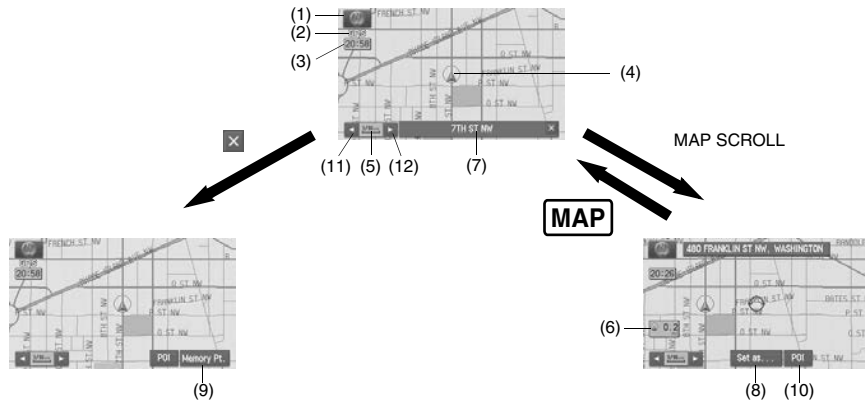

Getting started

- | | |
|---|--|
| <ul style="list-style-type: none"> (1) Map Orientation control
(☞ page 28) (2) GPS (Global Positioning System) marker
(☞ page 57) (3) Clock
Clock will be displayed when you set up Clock on Navigation Set Up On. (4) Vehicle marker
Shows the current position and direction of your vehicle. (5) Scale display
Displays the scale of the map. (6) Distance from current position
Displays the distance from the current position to the position pointed by Ⓞ. | <ul style="list-style-type: none"> (7) Current Road Name
Shows the name of the road you are currently driving on. (8) Set Destination button
The position indicated by the mark “Ⓞ” in the scroll map is used as destination, memory point or way point. (9) Store Memory Point button
Stores markers on the map. (10) POI (Point of Interest) Display button
(☞ page 38) (11) Zoom in
(☞ page 28) (12) Zoom out
(☞ page 28) |
|---|--|

Screens During Route Guidance



- | | |
|---|---|
| <ul style="list-style-type: none"> (1) Distance and Time to Destination display
Displays the time* and distance to the destination or way point.
Selecting this will display the next and further information on the way point or time and distance to the destination.
(* Either required time or estimated time arrival) (2) Route display
Shows the provided route as a thick blue line. | <ul style="list-style-type: none"> (3) Turn Arrow display
Shows the direction to turn at the next junction and the distance to the junction. (4) Route Preferences button
(☞ page 42) |
|---|---|

Screen adjustments, beep alert and other settings

Display menu screen will be shown when you press the disp button (DISP). Press the disp button (DISP) to display the display menu.



Getting started

■ Adjusting the screen quality

● Screen brightness

Press the **+** on-screen button to brighten the screen, or **-** to darken.

● Screen contrast

Press the **+** on-screen button to increase contrast, **-** to decrease.

Note

- Select the **RESET** on-screen button to restore the adjustment values to the default settings.
- The screen changes to **SETTINGS** when the **SETTINGS** on-screen button is selected.

■ Turning off the display

Select the **DISP OFF** on-screen button to turn off the display.

Press the **MAP** or **MENU** button to turn on the display.

Press the **RETURN** button to return to the display previously shown.

■ Tilt display operation

Select the **↔** on-screen button to tilt the display, **↔** to close it.

The display angle can be adjusted in three stages.

 
When opening, the display angle changes one stage at a time each time the **↔** on-screen button is pressed.

When closing, the display angle changes one stage at a time each time the **↔** on-screen button is pressed.

■ Daytime/Night screen

When the headlights are on, daytime mode can also be selected (if a brighter screen is needed at night). This selection can only be done when the headlights are on.

- The screen can be returned to the daytime screen while the headlights or running lights are on by rotating the dashboard illumination knob clockwise fully. You will hear a beep sound and the illumination dimmer will be canceled.



Press the disp button (DISP) followed by the **SETTINGS** on-screen button to display the settings menu.



■ **Returning to the navigation screen from the audio unit screen**

 
 
 
 
 
- Select the **MANUAL** on-screen button to set the function to return to the navigation screen from the audio unit screen by operation of the button only.
- Select the **AUTO** on-screen button to set the function to return to the navigation screen from the audio unit screen automatically after 20 seconds.

■ **Beep sound settings**

- Select the **ON** on-screen button to activate the operation beep sound.
- Select the **OFF** on-screen button to deactivate the operation beep sound.



Getting started



Screen change

Getting started



Warning

■ **Do not keep your eyes fixed on the monitor screen or operate the system while driving**

Do not change the settings and destination locations while driving. Minimize the time spent viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and may cause an accident. Always stop the vehicle in a safe location and use the parking brake before operating the system.

Map orientation

1 Select , on-screen button.

● North Up: Geographic north is up.



● Head Up: The direction you are heading is up.



Map scale

1 Select or on-screen button.

● The map can be displayed in 14 steps with scales from to .



● ZOOM OUT



● ZOOM IN (more detail.)








<Scale bar>	
Imperial display	1/32 mi (mile) 1/4 mi (mile) 2 mi (mile) 16 mi (mile) 128 mi (mile)
Metric display	50 m 500 m 4 km 32 km 256 km



MEMO



     Getting started



Destination Entry and Route Search

- You can set the destination using various methods provided by the system.

Before Steps **MENU** → select  Destination Entry

Routing

Open the
[DESTINATION
ENTRY] Menu



Select **Change**

Change
(Change
Search Area)



Warnings

- **Do not keep your eyes fixed on the monitor screen or operate the system while driving.** Do not change the settings and destination locations while driving. Minimize the time spent viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and may cause an accident. Always stop the vehicle in a safe location before operating the system.
- Route searches with the navigation system can include roads that you cannot drive on and roads that you are prohibited from driving on due to traffic regulations. Please comply with the traffic regulations.

Select the desired Search Area

AL : ALABAMA	MO : MISSOURI	WA : WASHINGTON
AZ : ARIZONA	MT : MONTANA	WV : WEST VIRGINIA
AR : ARKANSAS	NE : NEBRASKA	WI : WISCONSIN
CA : CALIFORNIA	NV : NEVADA	WY : WYOMING
CO : COLORAD	NH : NEW HAMPSHIRE	DC : WASHINGTON, D.C.
CT : CONNECTICUT	NJ : NEW JERSEY	AB : ALBERTA
DE : DELAWARE	NM : NEW MEXICO	ON : ONTARIO
FL : FLORIDA	NY : NEW YORK	QC : QUEBEC
GA : GEORGIA	NC : NORTH CAROLINA	SK : SASKATCHEWAN
ID : IDAHO	ND : NORTH DAKOTA	NL : NEWFOUNDLAND AND LABRADOR
IL : ILLINOIS	OH : OHIO	NB : NEW BRUNSWICK
IN : INDIANA	OK : OKLAHOMA	NS : NOVA SCOTIA
IA : IOWA	OR : OREGON	NU : NUNAVUT
KS : KANSAS	PA : PENNSYLVANIA	BC : BRITISH COLUMBIA
KY : KENTUCKY	RI : RHODE ISLAND	PE : PRINCE EDWARD ISLAND
LA : LOUISIANA	SC : SOUTH CAROLINA	MB : MANITOBA
ME : MAINE	SD : SOUTH DAKOTA	NT : NORTHWEST TERRITORIES
MD : MARYLAND	TN : TENNESSEE	YT : YUKON
MA : MASSACHUSETTS	TX : TEXAS	
MI : MICHIGAN	UT : UTAH	
MN : MINNESOTA	VT : VERMONT	
MS : MISSISSIPPI	VA : VIRGINIA	

The information for these countries and regions is recorded on three separate CDs.

- For Character Entry, please refer to page 39.

Routing

Destination Entry and Route Search

Routing

Address

Open the [DESTINATION ENTRY] Menu



Select



When narrowing down to city name



Any City : Cancel the city selection.

5 Nearest Cities : Displays list of city names nearest the current position.

Input City Name : Displays the city name input screen.

When narrowing down to street name




Enter the street name and select [List]

When narrowing down to house no.



Enter the house no. and select [OK]

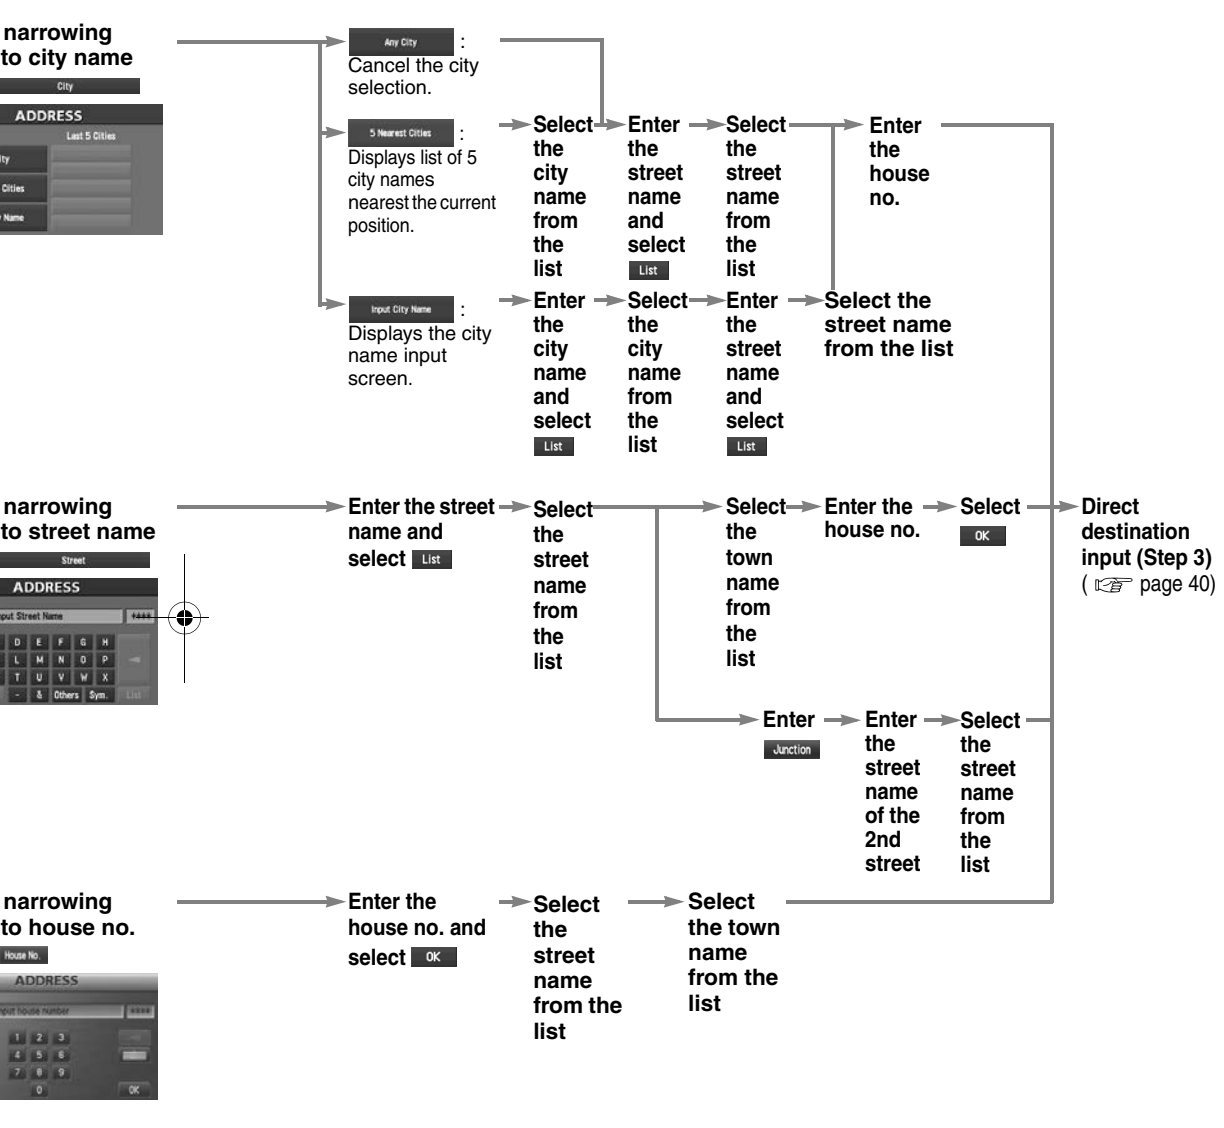


● For Character Entry, please refer to page 39.




Routing

Destination Entry and Route Search

Routing

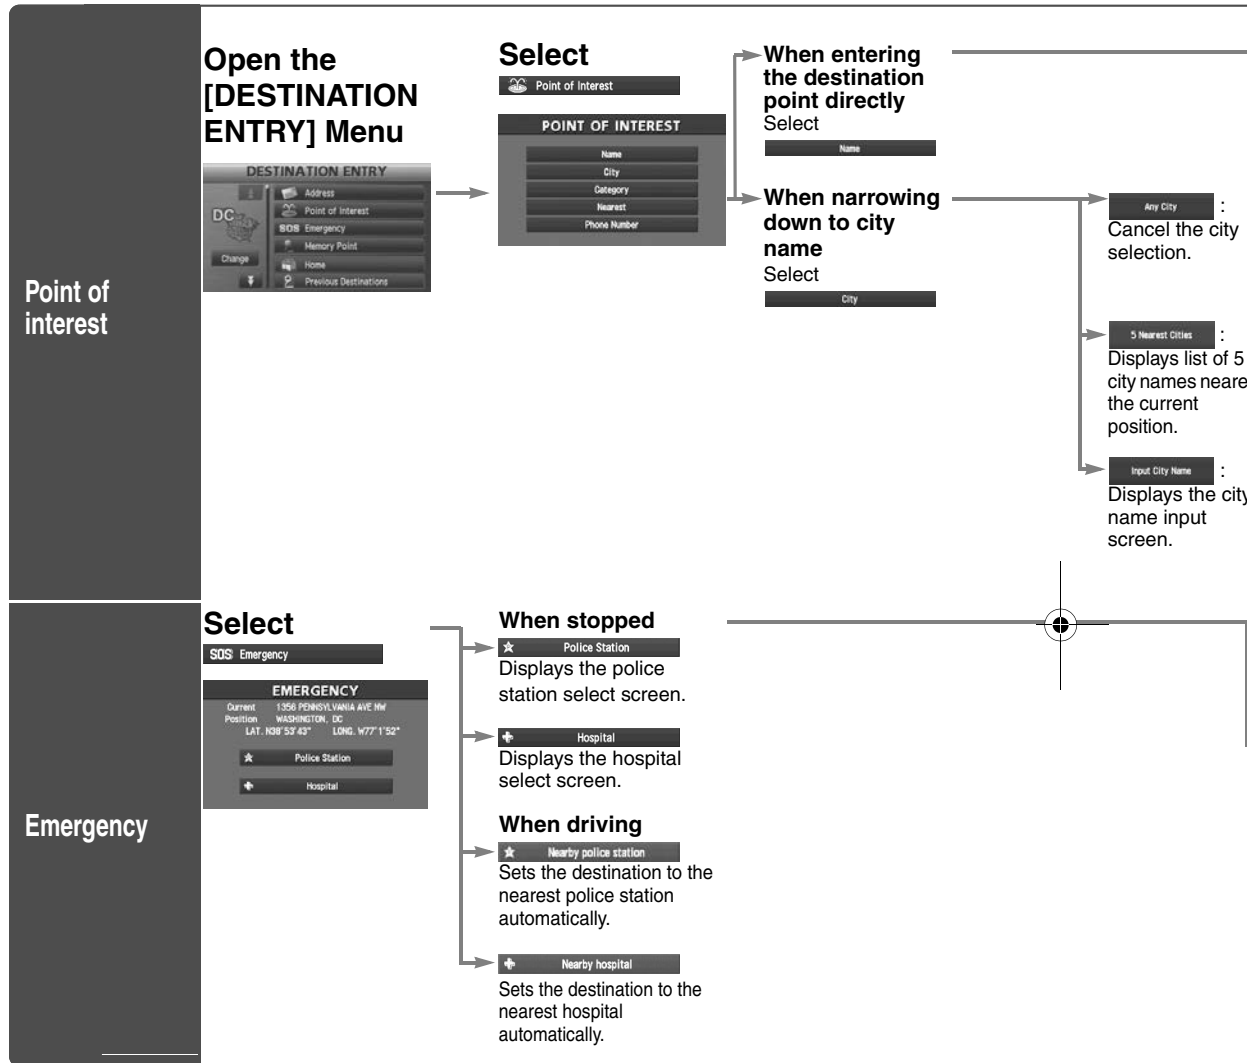

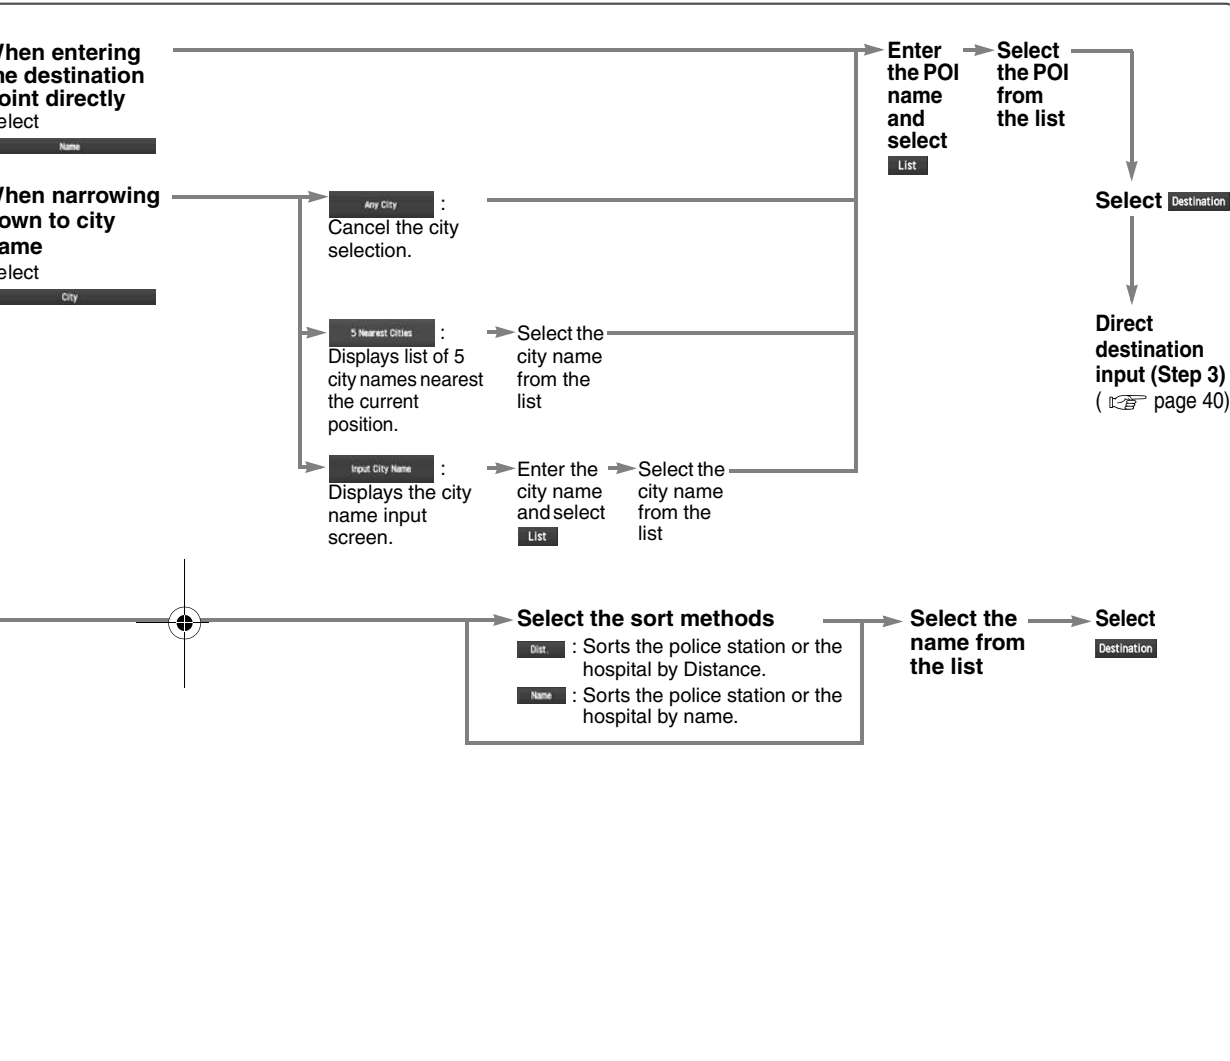

Routing

● For Character Entry, please refer to page 39.

Destination Entry and Route Search

Before Steps **MENU** → select Destination Entry

Routing

- Memory Point
- Home
- Preset Destination
- Previous Destination
- Freeway On/Off Ramp
- Coordinates
- Select from map

Open the [DESTINATION ENTRY] Menu



Select Memory Point



Select the : Display U
 : Display
 Sort : The order

Select Home

Select Preset Destinations

Select Previous Destinations

Select Freeway On Ramp / Off Ramp




Select the Select the name of the freeway

Select Coordinates




Enter the latitude
 :degrees
 :minutes
 :seconds




Select Select from Map

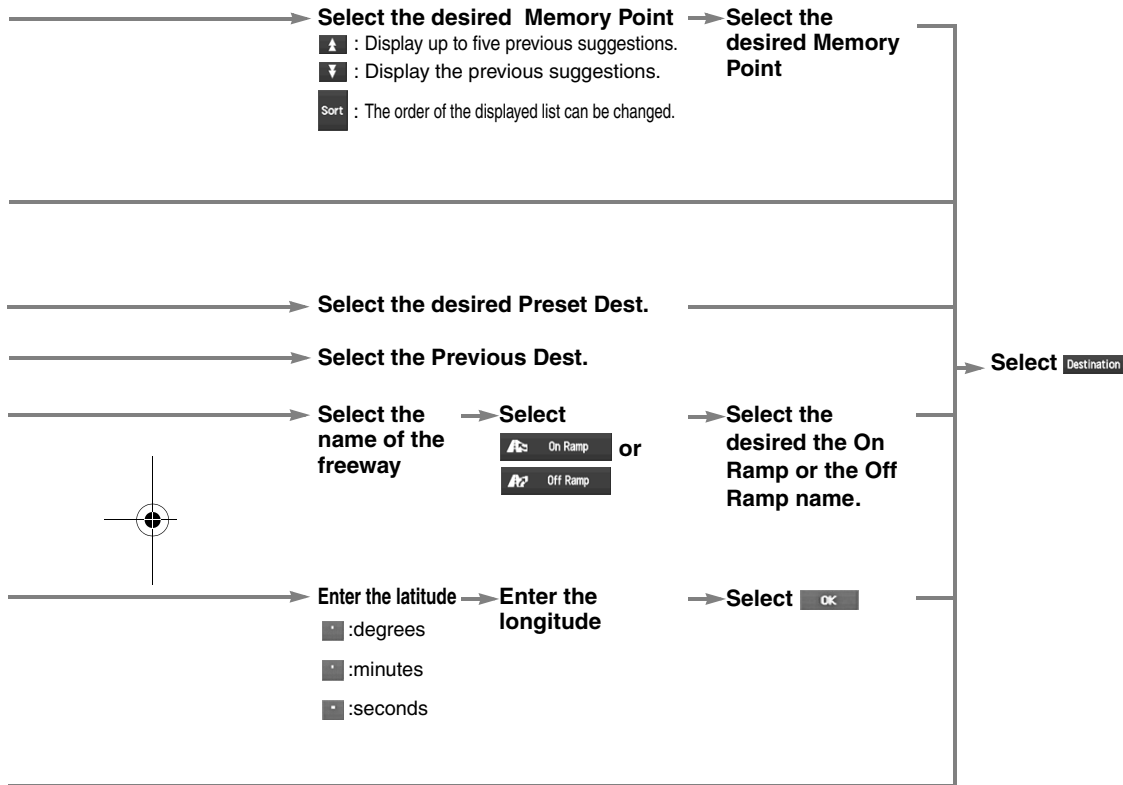

Routing

 

   ● For Character Entry, please refer to page 39.





Quick POI


- You can select one of the Six Categories on the menu or List Categories and then select the POI(s) to be displayed on the map.

Before Steps Select **POI**

Routing

Displaying POI(s) on a Map

Open the [QUICK POI]

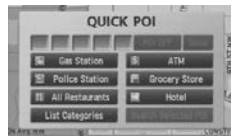

Select the categories to be displayed up to a maximum of five.

→ Show

- POI icon chart (☞ page 41)

For categories other than the six displayed, select **List Categories** and select them from the list shown.

→ Search Selected POI

→ Select the POI you want to find from the listed facilities.

After you make a selection, the point of interest you selected appears on the map.

Route: Search POI along the route during the guidance and show the list.

→ POI Off

Local Search

Deleting POI Markers

Before Steps Displaying POI(s) on a Map (☞ above)

Showing POI Data

Display the POI.



→ Select the desired POI by moving on top of the POI icon.

The name of the selected POI appears.

If no data is stored for the selected POI, the POI name is not displayed.

→ Select **Info** (Information)

The POI(s) data is displayed.

Character Entry

Street name, town name, and other input

Select the first several characters on the screen. (Step 1)

Select **A-Z**

Select **Sym.**

Select **Others**

Select **Others**

Select **Others**

← : Move the cursor to the previous position and delete a character.

List : The list appears.

Select your target in the list. (Step 2)

Names of which spelling starts with the entered character appear.

● If a desired name is not in the list, go back to Step 1, and try fewer characters.

▲ : Display up to five previous suggestions.

▼ : Display the previous suggestions.

▶ : Text flow (Right)

◀ : Text flow (Left)

Sort : The order of the displayed list can be changed. (Displayed list varies or **Sort** may not be displayed depending on what was input.)

Input Name : Additional text can be input. (Use when inputting additional characters after the list is displayed.)

● Examples

Street: CANAL
 Enter by selecting characters:
C A

Street: MAIN STREET
 Enter by selecting characters:
M A I N S



Routing

House phone number, and other input

Select the characters on the screen. → Select **OK**

← : Move the cursor to the previous position and delete a character.

Direct Destination Input

Routing

Direct Destination Input

1 Touch the map to set the cursor to the desired destination. The map scrolls faster the further away the touched location is from the cursor.



Scroll the map and change the map scale if necessary.

2 Select **Set as...**



3 Select **Destination**.

Route calculation will be carried out and the entire route will be displayed on the map.

Select **Way Point** (Way point) to set the address as a way point on your route (page 25). You can set up to 5 way-points per trip.

4 Select **Guide**.

Route guidance begins using displayed route.

Note

- If your desired route cannot be found, **Route Opt.** (Route Options) allows the route option settings to be changed. (page 42)
- Selecting **Guide** for five seconds or more will launch the Demo mode.

Operate after Step 3 of [Direct Destination Input]

Selecting Route

4 The calculation route can be selected from one of three types namely, Quick (the fastest route), Short (the shortest route), or Altern (the standard route).

5 Select **Info. (Information)**. Details regarding the individual routes (i.e., required time, total distance, roads used, etc.)

Select either **Quick**, **Altern.**, or **Short**, and then select **Guide** when you have decided on the route to be used.

INFO FOR 3 ROUTES			
	Quick	Altern.	Short
	0h 3m	0h 4m	0h 3m
	1.7 miles	2.1 miles	1.7 miles
	0.0 miles	0.0 miles	0.0 miles
	0.0 miles	0.0 miles	0.0 miles
	0.0 miles	0.0 miles	0.0 miles
	0.0 miles	0.0 miles	0.0 miles

POI Icons on Maps / Delete Destination

POI (Point of Interest) Icons

The following are POI icons shown on maps.

<ul style="list-style-type: none"> Restaurant <ul style="list-style-type: none"> All restaurants American Chinese Continental Fast Food French Italian Japanese Mexican Other Restaurants Seafood Thai Shopping <ul style="list-style-type: none"> Grocery Store Shopping Mall Automotive <ul style="list-style-type: none"> Automobile Club Auto Service & Maintenance Gas Station Parking 	<ul style="list-style-type: none"> Travel <ul style="list-style-type: none"> Airport (All Search Areas) Bus Station Ferry Terminal Hotel Rental Car Agency Rest Area Train Station Recreation <ul style="list-style-type: none"> Amusement Park (All Search Areas) Casino Golf Course Historical Monument Marina Museum Performing Arts Ski Resort Sports Complex Tourist Attraction (All Search Areas) Tourist Information Winery 	<ul style="list-style-type: none"> Community <ul style="list-style-type: none"> City Center Convention Center Court House Government Offices Hamlet Higher Education Hospital Library Park & Recreation (All Search Areas) Police Office School Banking <ul style="list-style-type: none"> ATM Bank Other <ul style="list-style-type: none"> Business Facility
--	---	---

Routing

Delete destination

MENU

→

Select

Cancel Guidance

→

Select

Yes

41

Route Options

- During route guidance you can change the route options, stop or check the route.

Before Steps **MENU** → select Route Options

Routing

- Route Preferences
- Modification of Destination or Way Point Positions
- Deletion of Destination or Way Points
- Detour
- Turn List


Open the [ROUTE OPTIONS] Menu



Select



Select

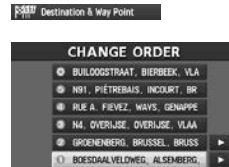

Select the button for the location to be modified.

Select (Change Location). Shows the map of the destination way points.

Select the way points to change the order. Change the destination and the passing order of the destination and way points.

Press to change order.

Select the button corresponding to the destination or way point to be deleted.

Select .

Select



Select . Searches for 50 miles/80 km around the selected route. Select Whole Route to see the whole route.

Select



The Enter Route screen appears.

Select . Select Avoid Street to avoid streets.




Do not keep your eyes fixed on the monitor screen or operate the system while driving


Do not change the settings and destination locations while driving. Minimize the time spent viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and may cause an accident. Always stop the vehicle in a safe location and use the parking brake before operating the system.



Routing

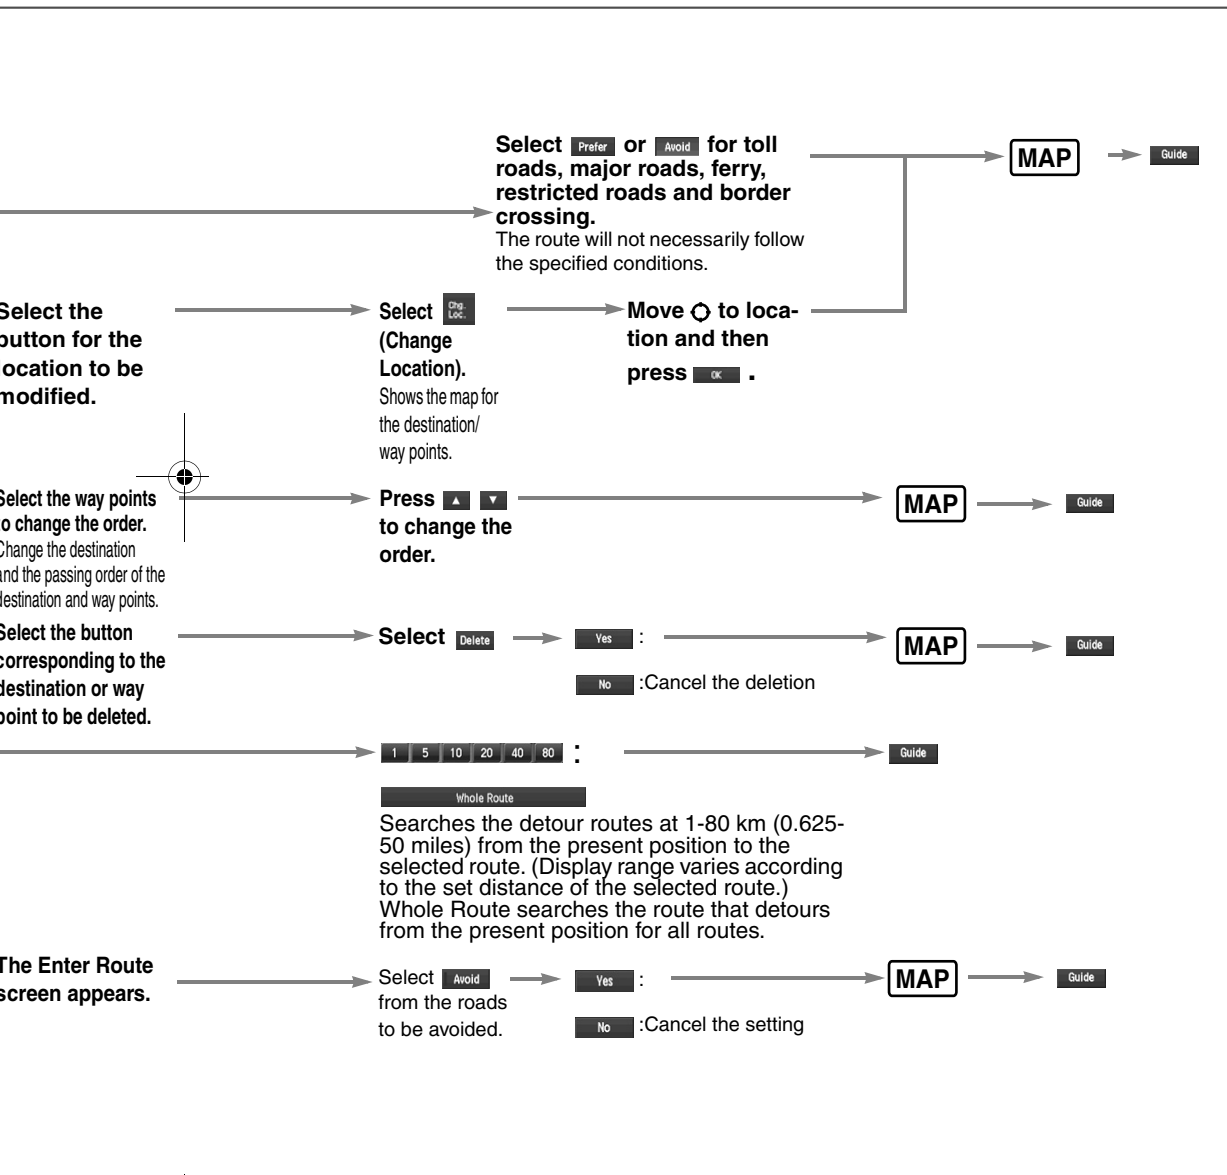

Route Options

Before Steps **MENU** → select  Route Options



Routing

Display Route

Open the [ROUTE OPTIONS] Menu



Select  Display Route








Select  Route Preview



Route Preview

Setting the conditions for simulation run

Use the but








-  : Move
-  : Carry o
- will be
-  : Stop t
-  : Carry o
- button
-  : Move

Edit : Displa





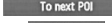

POIs: D
it will be
display


Use the buttons displayed on screen to carry out a simulation run.

-  : Move to the start point.
-  : Carry out a simulation run in the direction of the start point. When the run has been started, this button will be displayed as , and when selected, it will cause to take place at high speed.
-  : Stop the simulation run.
-  : Carry out a simulation run in the direction of the destination. When the run has been started, this button will be displayed as , and when selected, it will cause to take place at high speed.
-  : Move to the destination.

Edit : Displays the [EDIT ROUTE PREVIEW] screen.

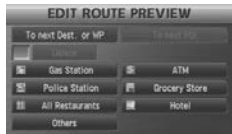

-  : Stops at the destination or the next way point.
-  : Stops at a point of interest which has been set up on the route.
-  : Delete the POI which has been selected.

POIs: Display the six POIs from Quick-POI storage. When one of these is selected, it will be displayed on the map; furthermore,  can be selected to display items other than shown here. For more details, refer to page 19.

RETURN

Address Book


● You can, edit, or delete any marked point.

Before Steps **MENU** → select  Address Book

- Memory Point Storage
- Memory Point Confirmation and Modification
- Preset Destinations or Home storage
- Memory Point Deletion
- All Memory Point Deletion
- Displays Icons at Memory Points

Address Book

Open the [ADDRESS BOOK]

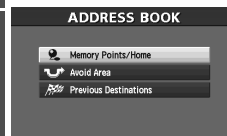

Select



Add

Set a memory point using preferred n

List

Select a memory point to be r

Delete

Select a memory point to be s Preset Desti or Home.

Delete all


Select a memory point to be deleted.

Show all icon

On or Off

Sort : The order displayed can be chan

Yes No : Ca

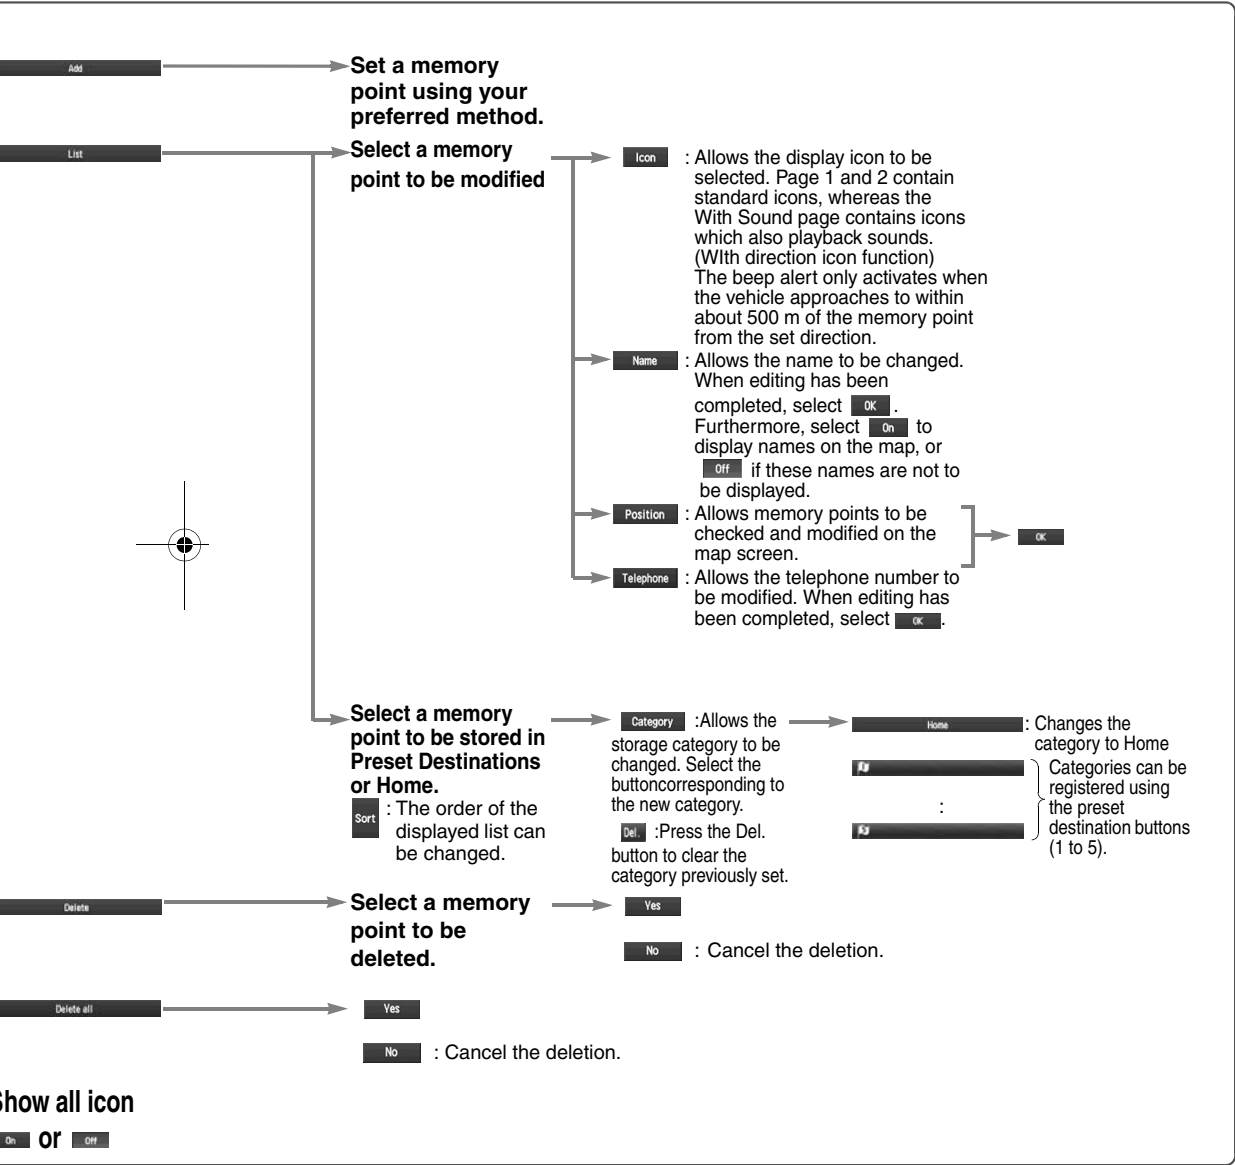



Address Book

Before Steps **MENU** → select  Address Book

Address Book

- Avoid Area Storage
- Avoid Area Confirmation and Modification
- Avoid Area Deletion
- All Avoid Area Deletion
- Category Name Modification
- Previous Destination Deletion
- All Previous Destination Deletion



 

 
Select  Avoid Area

Select  Previous Destinations

- Add
- List
- Delete
- Delete a
- Delete
- Delete a



Address Book

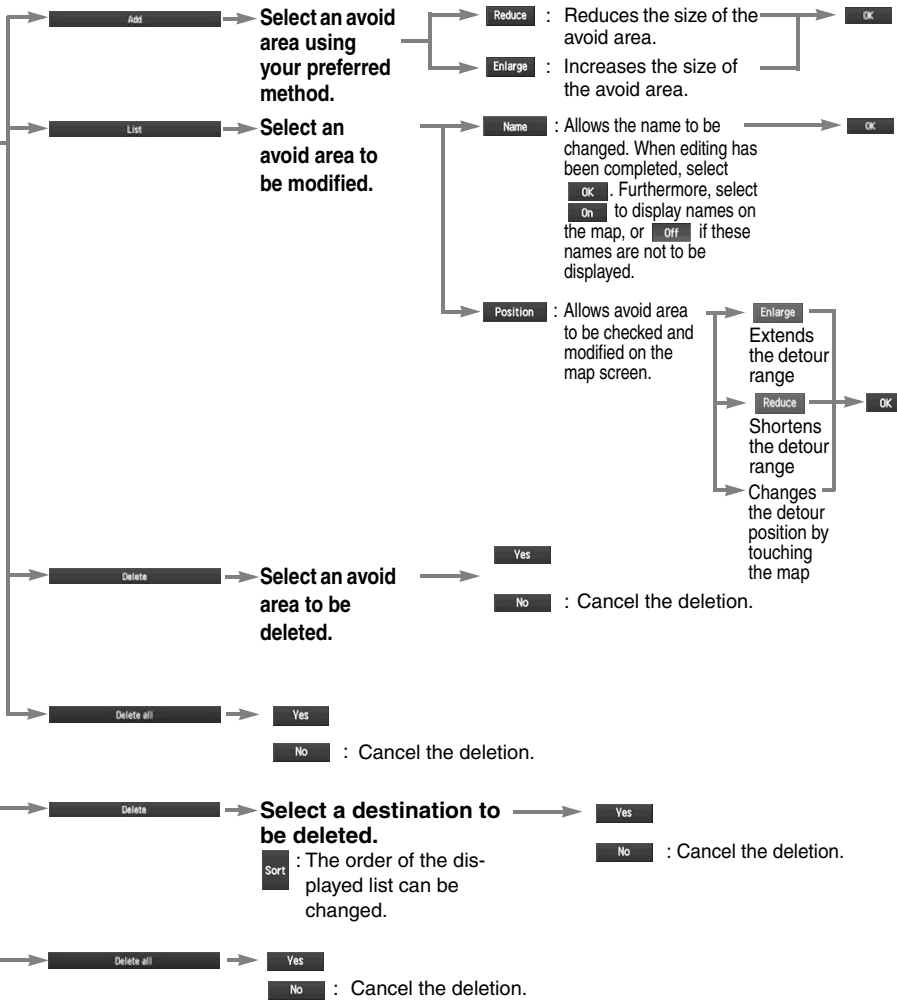

Voice Recognition

The voice recognition or the Bluetooth Hands-free system can be activated by pressing the voice recognition/hands free switch (with Bluetooth Hands-Free) or the voice recognition switch (without Bluetooth Hands-Free) on the steering wheel. The target operation in each mode (status) differs depending on whether the switch is pressed with a short or long press. For details, refer to the following switch operation list. (☞ page 52)

● Bluetooth Hands-Free Outline

By connecting a Bluetooth equipped mobile telephone to the hands-free unit equipped on the vehicle, making and receiving calls are possible.

For details, refer to the "Bluetooth Hands-Free" in the owner's manual.


● Voice Recognition Outline

Voice control can be carried out by simply pressing the voice recognition/hands free switch (with Bluetooth Hands-Free) or the voice recognition switch (without Bluetooth Hands-Free) and using a voice command (☞ page 53) spoken into the microphone.

Voice Recognition Structure

● Microphone surface Voice entry recognition.


Microphone

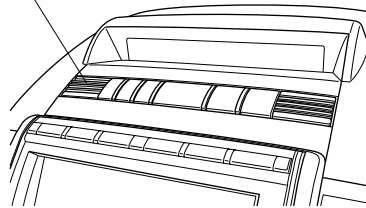

● Voice recognition/hands free switch (with Bluetooth Hands-Free) or the voice recognition switch (without Bluetooth Hands-Free) on the steering wheel switch Use for switching to voice recognition or Bluetooth Hands-free.

With Bluetooth Hands-free

Without Bluetooth Hands-free

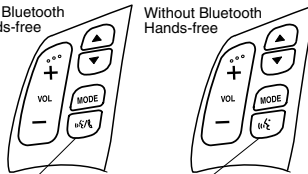

Voice recognition/hands free switch




Voice recognition switch

Note

If there is no setting for the Bluetooth Hands-Free system, the TEL commands (Phone/ Telephone) are not available.

Select the Language

Set up the language in advance.
Voice entry recognition.

- 1 Press **MENU**
- 2 select  Navigation Setup →
select  Language → select 
- 3 Select your preferred language from the list.

Note

To return to current position screen, press **MAP**.

Voice Recognition Basic Usage Pattern

- 1 Press the voice recognition/hands free switch (with Bluetooth Hands-Free) or the voice recognition switch (without Bluetooth Hands-Free) on the steering wheel switch with a short press while the system is in standby mode.
- 2 Speak the desired voice command.

Cancel Voice Recognition

- 1 Long press the voice recognition/hands free switch (with Bluetooth Hands-Free) or the voice recognition switch (without Bluetooth Hands-Free) on the steering wheel switch during navigation voice recognition.

Note

After the navigation system has been set, voice recognition needs approximately 2 minutes for activation on preparation. Wait momentarily.

Switch Operation List

Mode (status)	Switch operation	Target operation
Standby	Short press	Voice recognition activated (All command-waiting)
	Long press	Bluetooth hands-free voice recognition activated (Short-cut operation). For details, refer to the "Bluetooth Hands Free" in the owner's manual.
During navigation voice recognition	Short press	(No operation.)
	Long press	Voice recognition ended.
During TEL voice recognition (No call)	Short press	Voice recognition interrupted.
	Long press	Voice recognition ended.
During TEL voice recognition (During a call)	Short press	Voice recognition interrupted.
	Long press	Voice recognition stopped, returns to call.
During call	Short press	Call ended.
	Long press	Call ended.
Call received from user A	Short press	Call accepted.
	Long press	Call rejected.
During call with user A	Short press	Voice recognition interrupted.
	Long press	Call ended.
Call received from user B during call with user A	Short press	User B call accepted, user A put on hold.
	Long press	User B call rejected.
During call with user A and user B on hold	Short press	Switches to user B, user A put on hold.
	Long press	Switches to user B, call with user A ended.
During call with user B and user A on hold	Short press	Switches to user A, user B put on hold.
	Long press	Switches to user A, user B call ended.

Voice Recognition

Avoiding Voice Recognition Errors.

Read the notes listed below to allow the Voice Recognition function to recognize your voice properly.

- Speak a voice command clearly.
- Keep yourself in a safe driving position. Do not face or approach the microphone to make a voice command recognizable.

Voice recognition may fail to recognize your command due to voice tone. If this happens, change the tone of your voice by speaking more loudly and clearly.

- Keep the inside of the vehicle quiet when making a voice command. Your command may be compromised by noises made by people, blinkers, the horn, vehicle vibration, and noises from outside the vehicle.
- Use the language you selected in voice recognition.

Voice Recognition Command

The following voice commands can be used with voice control.

SHORTCUT COMMANDS	LIBRARY	DESTINATION OPERATION COMMANDS
[Show] CURRENT (Position/Location)	(Park / Parks) and RECREATION	[Go] HOME
[Show] MAP	POLICE STATION	ENTER DESTINATION
REPEAT [Voice] [Guidance]	SCHOOL	ADD TO WAYPOINT
CANCEL	AMUSEMENT PARK	[Go to/Previous] STARTING POINT
MAP OPERATION COMMANDS	CASINO	[Go to] PREVIOUS DESTINATION
ZOOM IN	GOLF COURSE	[Go to] PRESET DESTINATION [Number] 1
ZOOM OUT	HISTORICAL MONUMENT	[Go to] PRESET DESTINATION [Number] 2
ZOOM IN MAXIMUM	MARINA	[Go to] PRESET DESTINATION [Number] 3
ZOOM OUT MAXIMUM	MUSEUM	[Go to] PRESET DESTINATION [Number] 4
RIGHT MAP ZOOM IN	(Ski Resort / Skiing)	[Go to] PRESET DESTINATION [Number] 5
RIGHT MAP ZOOM OUT	(Sports Complex / Stadium)	CANCEL
RIGHT MAP (Zoom In Maximum/Minimum Scale)	PERFORMING ARTS	GUIDANCE COMMANDS
RIGHT MAP (Zoom Out Maximum/Maximum Scale)	TOURIST ATTRACTION	LOUDER
[Change to/Show] NORTH UP [Mode]	TOURIST INFORMATION	SOFTER
[Change to/Show] HEADING UP [Mode]	WINERY	[Show] (Whole/Entire) ROUTE [Map]
[Change] MAP DIRECTION	(([Show] Restaurant / I'm Hungry)	[Show] NEXT WAY POINT [Map]
RIGHT MAP [Show] NORTH UP [Mode]	AMERICAN (Restaurant / Food)	SHOW FIRST WAY POINT [Map]
RIGHT MAP [Show] HEADING UP [Mode]	CHINESE (Restaurant / Food)	SHOW SECOND WAY POINT [Map]
RIGHT MAP [Change] MAP DIRECTION	CONTINENTAL (Restaurant / Food)	SHOW THIRD WAY POINT [Map]
[Show/Change to] DUAL MAP [Mode]	FAST FOOD [Restaurant]	SHOW FOURTH WAY POINT [Map]
[Show/Change to] SINGLE MAP [Mode]	FRENCH (Restaurant / Food)	SHOW FIFTH WAY POINT [Map]
(Store/Mark) [This point]	ITALIAN (Restaurant / Food)	SHOW DESTINATION [Map]
POI DISPLAY COMMANDS	JAPANESE (Restaurant / Food)	(Delete/Cancel) NEXT WAY POINT
(Automobile Club / Triple A)	MEXICAN (Restaurant / Food)	YES
GAS [Station]	SEAFOOD [Restaurant]	NO
(Car Park / Parking [Lot / Garage])	THAI (Restaurant / Food)	(Delete/Cancel) DESTINATION
AUTO SERVICE [and Maintenance]	OTHER (Restaurant / Food)	(Delete/Cancel) ALL WAY POINTS AND DESTINATION
ATM	GROCERY STORE	VOICE GUIDANCE OFF
BANK	SHOPPING MALL	VOICE GUIDANCE ON
(Town / City) CENTER	AIRPORT	QUICK
(Convention / Exhibition) CENTER	BUS STATION	ALTERNATIVE
COURT HOUSE	FERRY TERMINAL	SHORT
GOVERNMENT (Offices / Office)	HOTEL	DETOUR
(University / Higher Education / College)	RENTAL CAR AGENCY	DETOUR ENTIRE ROUTE
HOSPITAL	REST AREA	[Change to] ARROW (Guide/Guidance)
	TRAIN STATION	[Change to] TURN LIST (Guide/Guidance)
	BUSINESS FACILITY	
	HAMLET	

- (): Indicates the commands to be the object of “/”
 []: Recognizes without saying the command in “[]”
 “/”: Recognizes when saying either commands before and after “/”

GUIDANCE COMMAND
[Change to] Compass Mode
[Change to] Mini Arrow [Mode]
[Change to] MOTORWAY [information] On
[Change to] MOTORWAY [information] Off
[Change to] Junction Detail On
[Change to] Junction Detail Off
NEAREST POI DISPLAY COMMANDS
Nearest (Automobile Club / Triple A)
Nearest Gas [Station]
Nearest (Car Park / Parking [Lot / Garage])
Nearest Auto Service [and Maintenance]
Nearest ATM
Nearest Bank
Nearest (Town Center / City Center)
Nearest (Exhibition / Convention) Center
Nearest Court House
Nearest Government offices
Nearest (University / Higher Education [Institute] / College)
Nearest Hospital
Nearest Library
Nearest (Park / Parks) and Recreation [Facility]
Nearest Police Station
Nearest School
Nearest Amusement Park
Nearest Casino
Nearest Golf course
Nearest Historical Monument
Nearest Marina
Nearest Museum
Nearest (Ski resort / Skiing facility)
Nearest (Sports Complex / Stadium)
Nearest (Performing Arts [Venue] / Theater)
Nearest Tourist attraction
Nearest Tourist information
Nearest Winery
Nearest Restaurant
Nearest American (Restaurant / Food)
Nearest Chinese (Restaurant / Food)
Nearest Continental (Restaurant / Food)
Nearest Fast Food [Restaurant]

Nearest French (Restaurant / Food)
Nearest Italian (Restaurant / Food)
Nearest Japanese (Restaurant / Food)
Nearest Mexican (Restaurant / Food)
Nearest Seafood [Restaurant]
Nearest Thai (Restaurant / Food)
Nearest Other (Restaurant / Food)
Nearest Grocery Store
Nearest Shopping Mall
Nearest Airport
Nearest Bus station
Nearest Ferry Terminal
Nearest Hotel
Nearest Rental Car Agency
Nearest Rest Area
Nearest Train Station
Nearest Business Facility
Nearest Hamlet
DISPLAY COMMANDS
DISPLAY [set] DAY [mode]
DISPLAY [set] NIGHT [mode]
DISPLAY [set] AUTO [mode]

AUDIO COMMANDS
radio
AM[radio]
FM [radio]
SIRIUS Satellite
(Disc CD CD changer)
Audio [on off]
AUX1 Auxiliary1
AUX2 Auxiliary2
Seek up
Seek down
Type up
Type down
Track up Next track
Track down
Previous track
Folder up
Folder down
Disc up Next disc
Disc down Previous disc
TEL COMMANDS
(Phone / Telephone)

(): Indicates the commands to be the object of “/”
 []: Recognizes without saying the command in “[]”
 “/”: Recognizes when saying either commands before and after “/”

Volume Adjustment

You can adjust the volume control for the voice guidance.

Before Steps

MENU

→ select

Volume

Open the [VOLUME] screen



1 Select the appropriate button to set the volume to between **1** (minimum) and **7** (maximum).

Off : Sound output will be muted.

2 Press the **MAP** button to return to the current vehicle position screen.

Volume Adjustment

Precautions/System Performance

Voice Guidance



Warnings


- The navigation system is just a support system for the driver. The driver should always pay attention to the traffic situation to safely make decisions. You may be unable at times to arrive at your destination due to out-of-date information on a map disc. You should be especially careful when selecting an urgent destination such as a hospital or a police station.
- Your route may sometimes include roads that are not open to vehicles or are closed due to traffic regulations. Please comply with the local traffic regulations.
- Do not change the settings and destination locations while driving. Minimize the time spent viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and may cause an accident. Always stop the vehicle in a safe location and use the parking brake before operating the system.

Voice guidance has the following functions:


■ Intersection guidance

- The system voice announces the distance to an upcoming turn and the turning direction.
 - This guidance function is automatic. Therefore, you do not have to set it, and it cannot be disabled.
- The system vocally announces the distance to an upcoming highway branching point or junction.

If necessary

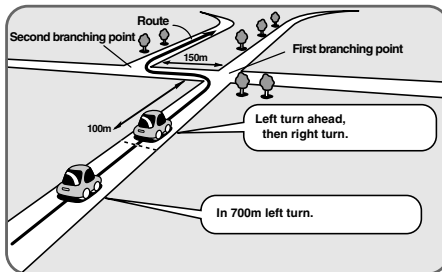


When two intersections are close together, the voice guidance may be late.

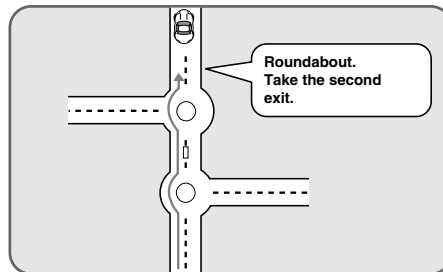

When two roundabouts are close together, the voice guidance for the second may be late.


GPS

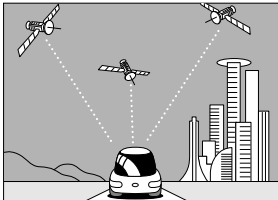


GPS is a position detecting system utilizing the signals from GPS satellites deployed by the U.S. Department of Defense. The Mobile Navigation System uses input from three or more satellites and calculates the vehicle position based on the principle of triangulation. The positioning accuracy of the system corresponds to the error display of the GPS which is from about 30 to 200 meters.

- If you are using the system for the first time, or if you have not used it for some time, it takes about 5 minutes (or about 2 minutes in open areas) to calculate your vehicle's position.


■ GPS signal reception is poor in the following places

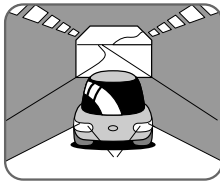


In tunnels

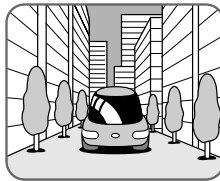

Among high-rise buildings

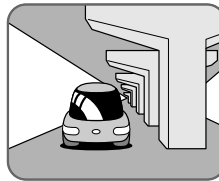

Under elevated roads

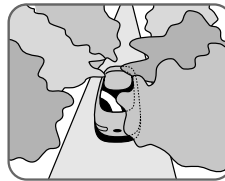


In wooded areas

- The GPS satellites are controlled by the U.S. Defense Department, which may intentionally lower positioning accuracy. In such cases, there may be vehicle position deviations.
- There may be vehicle position deviations for some time until GPS signals are received after switching on the ignition.

Map Matching

This function compares your vehicle's tracking data with the road data on the map disc, applies dead reckoning to determine the road you are driving on, and displays your vehicle on that road on the map.

- Intelligent map matching addresses the following problems to achieve high accuracy in vehicle positioning.

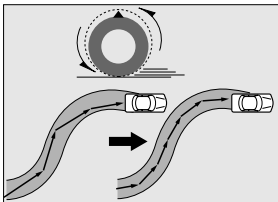

Position Correction for Elevated Roads

Position accuracy is improved by detecting if the vehicle is running on or under an elevated road.

Position Correction for Parking Garages

Position accuracy is improved by detecting if the vehicle is driving in an elevated or underground parking garage.

High-precision Gyro sensor


A gyro detects turns with an accuracy of 0.05° per second. Combined with a speed sensor, it enables the system to display the current vehicle position even where GPS signals may be blocked.

- Using a spare tire in place of the regular one may cause vehicle position deviations.
- Any difference between the direction which your vehicle actually travels and that shown on the map is automatically eliminated by azimuth correction.


Precautions/System Performance

Positioning Accuracy

In the following situations, your vehicle position may not be displayed correctly on the map. But, as you keep driving, your vehicle position will be automatically corrected utilizing map matching and GPS data.

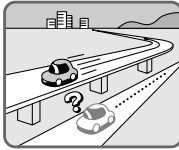


Running on an elevated road

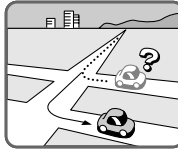


Making a turn after driving on a long straight road




Running on a steep mountain road

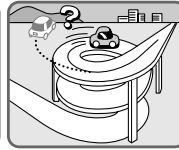

Running on a spiral road

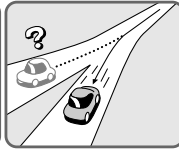


Entering an intersection where a road branches off at a small angle

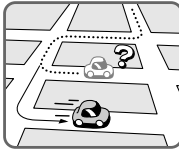


Running on gridiron layout of roads



Running on a slippery road with tire chains

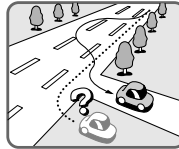

Snaking on a wide road

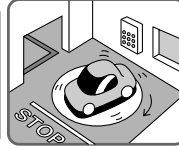

When your vehicle is on a turntable with the ignition switched off




After getting off a ferryboat or vehicle train


If necessary

Route Guide


Although you may encounter the following problems in route guide, there is nothing wrong with the system.

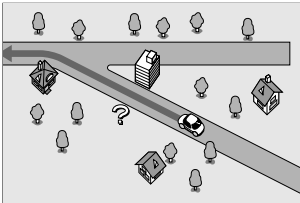


For certain intersection shapes, the upcoming turn or the name of the intersection may not be announced.

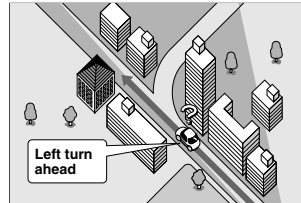


For certain intersection shapes, you may be prompted to turn right or left. When you should actually stay on the same road.

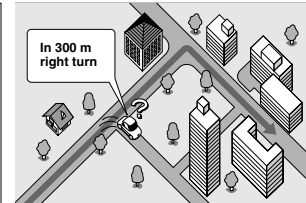


Voice guidance for the planned route may continue even after you have deviated from that route such as having turned too early.

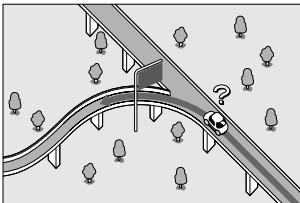

Some points where the road divides on highways or toll roads may not be displayed or announced.

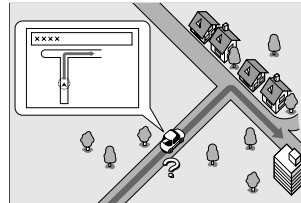

The Intersection Zoom Map may not always agree with the actual shape of the intersection.

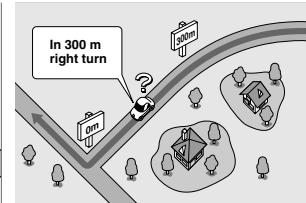


The announced distance to an upcoming turn may differ slightly from reality.



The navigation system is just a support system for the driver. The driver should always pay attention to the traffic situation to safely make decisions. You may be unable to arrive at your destination due to out-of-date information on a map disc. You should be especially careful when selecting an urgent destination such as a hospital or a police station.

Route Search

Although you may encounter the following problems in a route search, there is nothing wrong with the system.

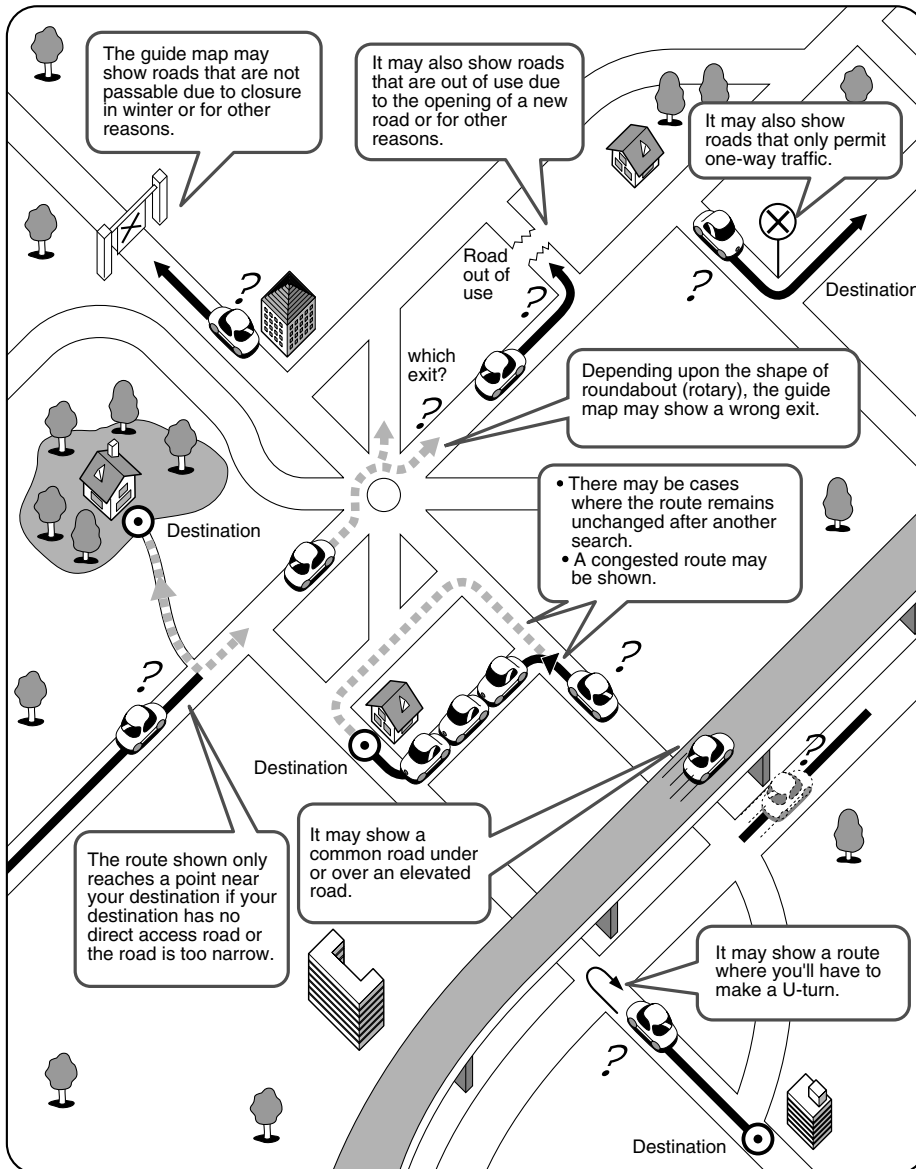

If necessary

Troubleshooting

Verification First


Note

There may be some problems due to operational errors or mistakes. Please read this manual again and verify that there really is a problem before calling an Expert Dealer, we recommend an Authorized Mazda Dealer to ask for repair services.

Symptom	Check point
No picture	<ul style="list-style-type: none"> ● Check if a fuse has blown. <ul style="list-style-type: none"> ➔ Consult an Expert Dealer, we recommend an Authorized Mazda Dealer.
Display does not open or close	<ul style="list-style-type: none"> ● Check if the voltage level of the vehicle battery is low. <ul style="list-style-type: none"> ➔ Recharge the battery or change batteries.
The vehicle position is not correct	<ul style="list-style-type: none"> ● Check if the vehicle position changed when ACC was set to OFF. <p>When, for example,</p> <ul style="list-style-type: none"> • The vehicle was transported by a ferry boat. • The vehicle was rotated on a turn table in a parking lot. • The vehicle was transported by a tow track or other such vehicle. <ul style="list-style-type: none"> ➔ Drive the vehicle for a while where you are receiving GPS signals.

If necessary

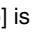

Symptom	Check point
<p>No GPS symbols are displayed</p>	<ul style="list-style-type: none"> ● GPS signals may not be received because of obstructions. After moving the vehicle away from obstructions, the GPS signals can be received.
<p>The vehicle position is not displayed</p>	<ul style="list-style-type: none"> ● Check if the mode is set to the current position screen. <ul style="list-style-type: none"> ➔ Press MAP
<p>No voice guidance</p>	<ul style="list-style-type: none"> ● Check if the volume control for the voice guidance has been turned off. ● Check if the vehicle is off the route. <ul style="list-style-type: none"> ➔ Repeat the route search while checking the route guide screen. ● Check if you are driving the vehicle in the wrong direction on the route. <ul style="list-style-type: none"> ➔ Repeat the route search checking the direction of the destination.
<p>Buttons on the remote control do not beep</p>	<ul style="list-style-type: none"> ● Check if [Beep] is set to [Off] ( page 27).



If necessary



Troubleshooting

Error Messages

Error message	Solution
Please insert a MAP DVD.	<ul style="list-style-type: none">● The disc is not installed.<ul style="list-style-type: none">➔ Check if the disc is installed. If installed, check if the installed disc is correct.
MAP DVD-Read Error	<ul style="list-style-type: none">● The disc is wet, dirty, scratched, or upside down, or the disc cannot be played with this unit or the incorrect disc is installed.<ul style="list-style-type: none">➔ Eject the disc and check it.
The disc installed is not a MAP DVD.	

If necessary



Maintenance

Care of the Product

■ Cleaning this product

Use a dry, soft cloth to wipe it.

■ Cautions for cleaning

Never use solvents such as benzene and thinners, they could mar the surface of the unit.

■ Map disc

If you require the latest map disc, consult an Expert Dealer, we recommend an Authorized Mazda Dealer.

Handling and Care of Map Discs

■ How to hold the disc

- Do not touch the underside of the disc.
- Do not scratch the disc.
- Do not bend the disc.
- When not in use, keep the disc in the case.

Label side

 


■ Disc Cleaning

- Use a dry, soft cloth to wipe from the center outward.



<Right>








<Wrong>


■ Do not leave discs in the following places:

- Direct sunlight
- Near car heaters
- In dirty, dusty and damp areas
- On seats and dashboards




      If necessary







MEMO

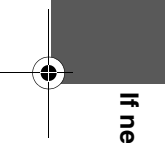

If necessary

 
 







Contents

Audio system

  - Audio Operation
 - Operating Tips for Audio system 66
(Radio Reception), (Operating Tips for In-Dash CD Changer),
(Operating tips for MP3), (CD-TEXT)
 - Operating Tips for Display 72
 - Beep sound and voice guidance restrictions while using Bluetooth
Hands-Free 72
 - Power/Volume/Sound Controls 73
(Power ON/OFF), (Volume adjustment), (Audio sound adjustment),
(Sound quality adjustment), (Volume balance adjustment),
(Automatic Level Control (ALC))
 - Operating the Radio 76
(Radio ON), (Band selection), (Tuning), (Manual tuning), (Seek tuning),
(Scan tuning), (Preset channel tuning), (Auto memory tuning),
(Audio Sound Adjustment)
 - Operating the In-Dash CD Changer 79
(Inserting the CD), (During CD playback), (During MP3 CD playback),
(Normal insertion), (Inserting CDs into desired tray number),
(Multiple insertion), (Normal ejection),
(Ejecting CDs from desired tray number), (Multiple ejection),
(Playing), (Fast-forward/Reverse), (Track search), (Disc search),
(Folder search (during MP3 CD playback)), (Music scan), (Repeat play),
(Audio sound adjustment)



Audio Operation

   


Audio Operation

Operating Tips for Audio system

■ Radio Reception


AM characteristics

AM signals bend around such things as buildings or mountains and bounce off the ionosphere. Therefore, they can reach longer distances than FM signals. Because of this, two stations may sometimes be picked up on the same frequency at the same time.

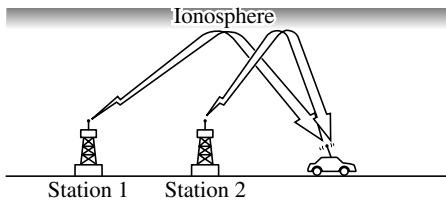


FM characteristics

An FM broadcast range is usually about 40–50 km (25–30 miles) from the source. Because of extra coding needed to break the sound into two channels, stereo FM has even less range than monaural (non-stereo) FM.

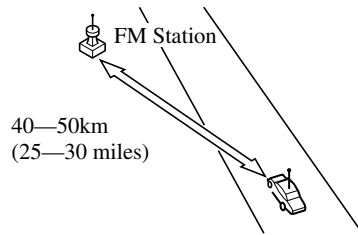

Signals from an FM transmitter are similar to beams of light because they do not bend around corners, but they do reflect.


Unlike AM signals, FM signals cannot travel beyond the horizon. Therefore, FM stations cannot be received at the great distances possible with AM reception.

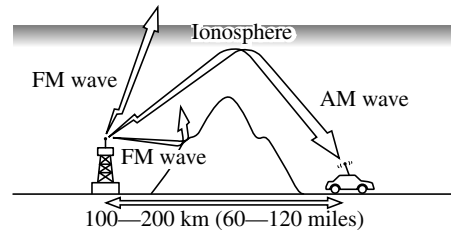

Atmospheric conditions can also affect FM reception. High humidity will cause poor reception. However, cloudy days may provide better reception than clear days.

Multipath noise


Since FM signals can be reflected by obstructions, it is possible to receive both the direct signal and the reflected signal at the same time. This causes a slight delay in reception and may be heard as a broken sound or a distortion. This problem may also be encountered when in close proximity to the transmitter.

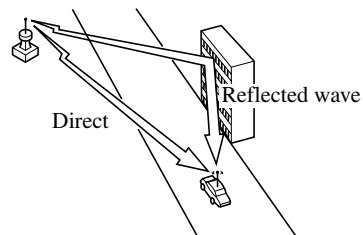




Flutter/Skip noise

Signals from an FM transmitter move in straight lines and become weak in valleys between tall buildings, mountains, and other obstacles. When a vehicle passes through such an area, the reception conditions may change suddenly, resulting in annoying noise.

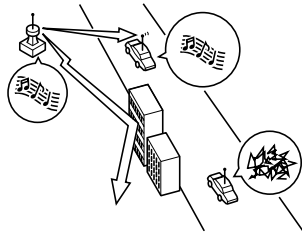


Weak signal noise

In suburban areas, broadcast signals become weak because of distance from the transmitter. Reception in such fringe areas is characterized by sound breakup.

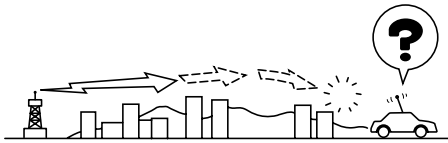


Strong signal noise

This occurs very close to a transmitter tower. The broadcast signals are extremely strong, so the result is noise and sound breakup at the radio receiver.

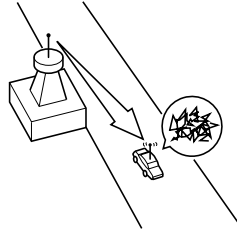

Station drift noise

When a vehicle reaches the area of two strong stations broadcasting at similar frequencies, the original station may be temporarily lost and the second station picked up. At this time there will be some noise from this disturbance.

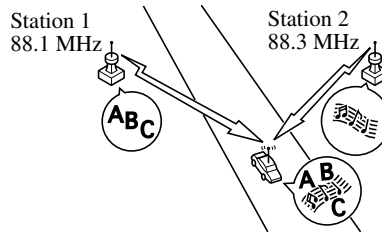

■ Operating Tips for In-Dash CD Changer


Condensation phenomenon

Immediately after turning on the heater when the vehicle is cold, the CD or optical components (prism and lens) in the In-dash CD changer may become clouded with condensation. At this time, the CD will eject immediately when placed in the unit. A clouded CD can be corrected simply by wiping it with a soft cloth. Clouded optical components will clear naturally in about an hour. Wait for normal operation to return before attempting to use the unit.


Handling the In-dash CD changer

The following precautions should be observed.


- Do not spill any liquid on the audio system.

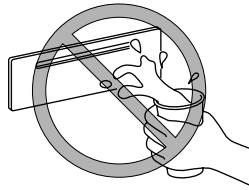


- Do not insert any objects, other than CDs, into the slot.

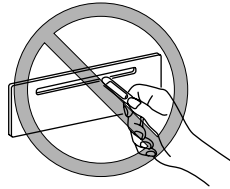


- The CD revolves at high speed within the unit. Defective (cracked or badly bent) CDs should never be used.

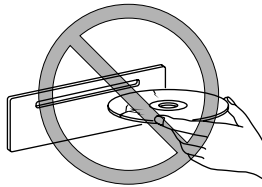

- Do not use non-conventional discs such as heart-shaped, octagonal discs, etc. The disc may not eject resulting in a malfunction.

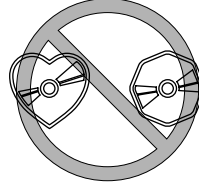


 - If the memory portion of the CD is transparent or translucent, do not use the disc.




Transparent


- A new CD may have rough edges on its inner and outer perimeters. If a disc with rough edges is used, proper setting will not be possible and the In-dash CD changer will not play the CD. In addition, the disc may not eject resulting in a malfunction. Remove the rough edges in advance by using a ball-point pen or pencil as shown below. To remove the rough edges, rub the side of the pen or pencil against the inner and outer perimeter of the CD.

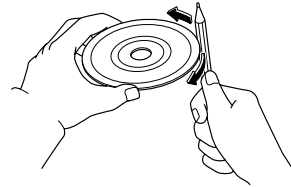

- When driving over uneven surfaces, the sound may jump.

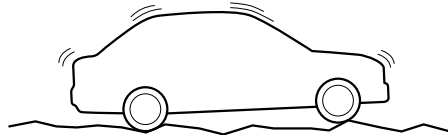

- Use discs that have been legitimately produced. If illegally-copied discs such as pirated discs are used, the system may not operate properly.
- Be sure never to touch the signal surface when handling the CDs. Pick up a CD by grasping the outer edge or the edge of the hole and the outer edge.

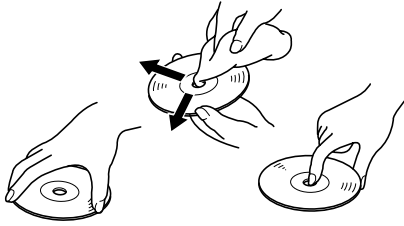

- Do not stick paper or tape on the CD. Avoid scratching the reverse side (the side without a label). The disc may not eject resulting in a malfunction.
- Dust, finger smudges, and dirt can decrease the amount of light reflected from the signal surface, thus affecting sound quality. If the CD should become soiled, gently wipe it with a soft cloth from the center of the CD to the edge.
- Do not use record sprays, antistatic agents, or household spray cleaners. Volatile chemicals such as benzine and thinner can also damage the surface of the CD and must not be used. Anything that can damage, warp, or fog plastic should never be used to clean CDs.
- Insert discs one by one. If two discs are inserted at the same time, the system may not operate properly.
- The In-dash CD changer ejects the CD if the CD is inserted upside down. Also dirty and/or defective CDs may be ejected.
- Do not insert any disc with a peel-off seal affixed to it.

Handling the In-dash CD changer

- This unit may not be able to play certain CD-R/CD-RWs made using a computer or music CD recorder due to disc characteristics, scratches, smudges, dirt, etc., or due to dust or condensation on the lens inside the unit.
- Storing CDs in the vehicle exposed to direct sunlight or high temperature may damage the CD-R/CD-RWs, and make them unplayable.
- CD-R/CD-RW exceeding 700 MB cannot be played.
- This unit may not be able to play certain discs made using a computer due to the application (writing software) setting used. (For details, consult the store where the application was purchased.)
- It is possible that certain text data, such as titles, recorded on a CD-R/CD-RW may not be displayed when musical data (CD-DA) is playing.
- The period from when a CD-RW is inserted to when it begins playing is longer than a normal CD or CD-R.
- Completely read the instruction manual and cautions for CD-R/CD-RWs.
- Do not use discs with cellophane tape adhering, partially peeled off labels, or adhesive material exuding from the edges of the CD label. Also, do not use discs with a commercially-available CD-R label affixed. The disc may not eject resulting in a malfunction.

■ Operating tips for MP3

NOTE

Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via the Internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>.

- This audio system handles MP3 files that have been recorded on CD-R/CD-RW/CD-ROMs. Discs that have been recorded using the following formats can be played:
 - ISO 9660 level 1
 - ISO 9660 level 2
 - Joliet extended format
 - Romeo extended format
- This unit handles MP3 files conforming to the MP3 format containing both header frames and data frames.
- If a disc has both music data (CD-DA) and MP3 files, playback of the two file types differs depending on how the disc was recorded.
- Packet written discs cannot be played on this unit.
- This unit does not play CDs recorded using MP3i (MP3 interactive), MP3 PRO and RIFF MP3 formats.

⚠ CAUTION

This unit can only play MP3 files that have an MP3 file extension (.mp3) attached. Do not attach an MP3 file extension to any other type file as it could cause noise to be emitted or a malfunction in the unit.

Specialized glossary

MP3

Abbreviation for “MPEG Audio Layer 3”. A technical standard for audio compression as decided by an ISO (International Organization for Standardization) MPEG working group.

Use of MP3 allows for audio data to be compressed to approximately a tenth of the source data size.

ISO 9660

An international standard for logical formatting of CD-ROM files and folders. It is divided into three separate levels based on differences in file naming procedures, data configuration and other characteristics.

Bit rate

Refers to the volume of data per second, expressed in bps (bits per second). Generally, the larger the number of the transfer bit rate when compressing an MP3 file, the more information regarding musical reproduction it carries, and therefore the better the sound quality.

Packet writing

A general term for the method, similar to that used for floppy discs or hard drives, of recording the required file in a single increment on a CD-R and similar.


■ CD-TEXT

Music CDs are available in which separate music data including album/title names, music name, artist name, and other textual information can be recorded. The data standard for recording textual information to these kinds of music CDs is termed CD-TEXT.

There are two regions of a CD where textual information can be recorded which include regions related to the entire CD (Attributes recorded for the entire CD) and individual track regions (Attributes recorded for individual tracks).

As for this audio unit, textual information (Track/artist information), which can be recorded on individual track regions, appears on the display. Textual information (Album/artist and other information), which can be recorded to regions related to the entire CD, does not appear on the display.

Unless all the textual information is input in one-byte characters, a dotted line (----) will appear in place of the textual information, even if one of the characters is not a one-byte character (Two-byte character).

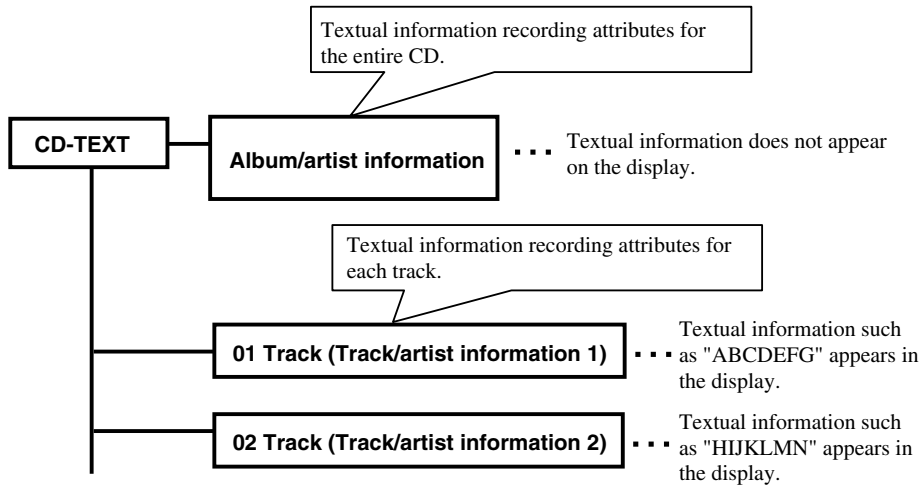



Operating Tips for Display

- Do not place any objects on the dashboard. If you drop any objects onto the dashboard or spill liquid on it, it may result in system malfunction.
- Be careful not to pinch your hands or fingers when the liquid crystal display is closed.
- Do not open/close the liquid crystal display manually. It may damage the equipment.

 
- The liquid crystal display may not open if the power supply had been interrupted due to the vehicle battery being disconnected.
- If the liquid crystal display stays open/closed (or partly opened) and does not move when the liquid crystal display is pressed, switch the ignition switch and then on again. Then try the open/close operation again. If the liquid crystal display still does not move, contact an Authorized Mazda Dealer.

Beep sound and voice guidance restrictions while using Bluetooth Hands-Free


The beep sound and voice guidance related to the audio operation are not heard while a Bluetooth Hands-Free is being used.



Audio Operation



Power/Volume/Sound Controls

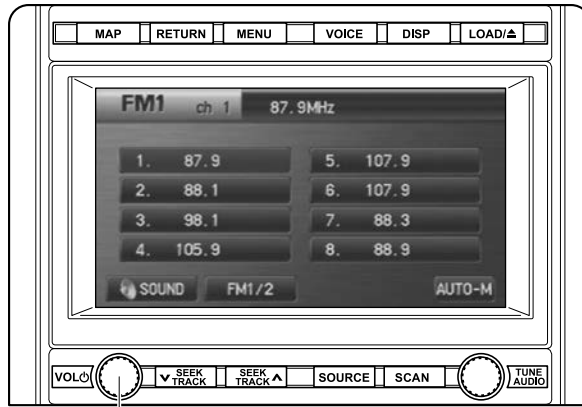

Power / Volume dial

■ Power ON/OFF

Switch the ignition switch to the ACC or ON position.
Press the power/volume dial to turn the audio system on.
Press the power/volume dial again to turn the audio system off.

Note

To prevent the battery from being discharged, do not leave the audio system on for a long period of time when the engine is not running.

■ Volume adjustment

To adjust the volume, turn the power/volume dial.
Turn the power/volume dial to the right to increase volume, to the left to decrease it.

■ Audio sound adjustment

1. Press the SOURCE button.
2. Select the desired on-screen button corresponding to one of the following modes.



- on-screen button : Audio mode (AM band)
- on-screen button : Audio mode (FM band)
- on-screen button : Satellite radio
- on-screen button : CD mode
- , on-screen button : Image and Sound playback is possible using a portable video player connected to an external input terminal.*

*The external input terminal is not equipped on your vehicle because it is not standard equipment.

3. Press the TUNE AUDIO dial to display the sound adjustment screen.
4. Select the on -screen button to display the sound adjustment screen.



■ Sound quality adjustment

TREB (treble sound)

Select the on-screen button to increase treble, and to decrease.

BASS (low pitch sound)

Select the on-screen button to increase bass, and to decrease.

■ Volume balance adjustment

Front/back volume balance

Select the **FRONT** on-screen button to increase the volume at the front, and **REAR** on-screen button to increase the volume to the back.

Left/right volume balance

Select the **R** on-screen button to increase the volume to the right, and **L** on-screen button to increase the volume to the left.

Note

- Pressing an on-screen adjustment button for 0.5 seconds or more progressively changes the adjustment range towards +/-, up/down, or left/right.
- While an adjustment button is selected in this manner, the level indicator will momentarily stop at the medium range position and a beep sound will be heard before proceeding.
- Select the **RESET** on-screen button to reset bass, treble, and balance.
- To return to the previous screen, select the **OK** on-screen button.

■ Automatic Level Control (ALC)


The automatic level control is a feature that automatically adjusts audio volume and sound quality according to the vehicle speed.

The volume increases in accordance with the increase in vehicle speed, and decreases as vehicle speed decreases.

The following four modes are available. Select the desired mode.

Indication	Enhance change
ALC OFF	No change
ALC LEVEL 1	Minimum
ALC LEVEL 2	Medium
ALC LEVEL 3	Maximum

Operating the Radio

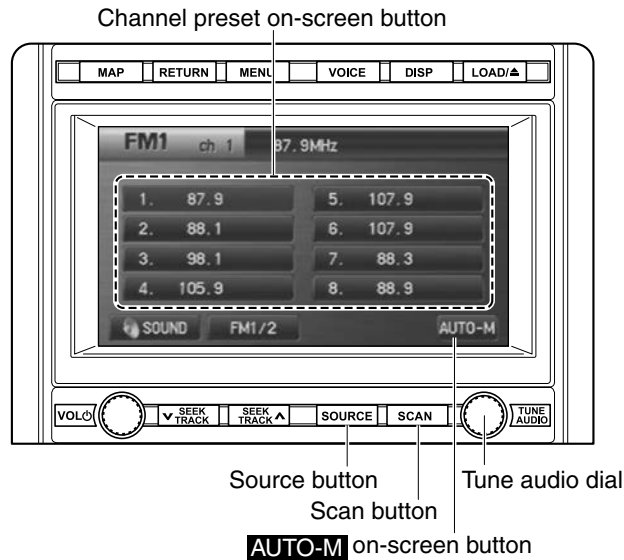

■ Radio ON

1. Press the SOURCE button.
2. Select the or on-screen button to turn the radio on.

■ Band selection

Choose AM by pressing the on-screen button and FM by pressing the on-screen button.

The selected mode will be indicated. If FM stereo is being received, STEREO will be displayed.

■ Tuning

 
The radio has the following tuning methods: Manual, Seek, Scan, Preset channel, and Auto memory tuning. The easiest way to tune stations is to set them on preset channels.

Note

- If the FM broadcast signal becomes weak, reception automatically changes from STEREO to MONO for reduced noise, and the STEREO indicator will go out.
- To clear the information, press the MAP button.
- If the power supply is interrupted (fuse blows or the battery is disconnected), the preset channels will be canceled.

■ Manual tuning

Turning the TUNE AUDIO dial will change the frequency higher or lower.



■ Seek tuning

Pressing and holding the SEEK/TRACK button (∧, ∨) will cause the tuner to seek a higher or lower frequency automatically.

Note

If you continue to press and hold the button, the frequency will continue changing without stopping.

■ Scan tuning

Press the SCAN button to automatically sample strong stations. Scanning stops at each station for about 5 seconds. To hold a station, press the SCAN button again during this interval.

■ Preset channel tuning

The 8 preset channels can be used to store 8 AM and 16 FM stations.

1. To set a channel first select AM, FM1, or FM2. Tune to the desired station.
2. Press the TUNE AUDIO dial.
3. Select any channel preset on-screen button for about 2 seconds until a beep sound is heard. The selected preset channel number and station frequency will be displayed. The station is now held in the memory.
4. Repeat this operation for the other stations and bands you want to store. To tune one in the memory, select AM, FM1, or FM2 and then press its channel preset button. The station frequency and the channel number will be displayed.

Note

If the power supply is interrupted (fuse blows or the battery is disconnected), the preset channels will be canceled.

 
■ Auto memory tuning

This is especially useful when driving in an area where the local stations are not known. Additional AM stations can be stored without disturbing the previously set channels.

Select and hold the **AUTO-M** on-screen button for about 2 seconds until a beep sound is heard; the system will automatically scan and temporarily store up to 8 stations with the strongest frequencies in each selected band in that area.

■ Audio Sound Adjustment

Refer to "Power/Volume/Sound Controls" (☞ page 73).





■ Satellite Radio (SAT)

 
Vehicles equipped with the separately purchased SIRIUS digital satellite radio unit have the ability to receive channels of digital quality programming coast to coast via satellite. For information on use, read the Satellite Radio Kit manual accompanying the SIRIUS digital satellite radio unit. A subscription to SIRIUS digital satellite radio service is required (available in the U.S. - Except Alaska and Hawaii) to enable this feature once the separately purchased SIRIUS digital satellite radio unit has been installed. For subscription and channel information, or for digital satellite radio technical issues, contact SIRIUS directly at:

- Web: www.siriusradio.com
- Phone (24 hrs/day, 7 days/week): 888-539-SIRI (7474)
- E-mail: customercare@sirius-radio.com
- Mailing Address: Sirius Satellite Radio
1221 Avenue Of The Americas
New York, NY 10020
Attention: Customer Care


Include your Sirius Radio ESN (Electronic Serial Number) when subscribing or requesting technical assistance. See the Satellite Radio Kit manual accompanying the SIRIUS unit for complete satellite radio activation procedures and information on how to display the ESN#.



Audio Operation



Operating the In-Dash CD Changer

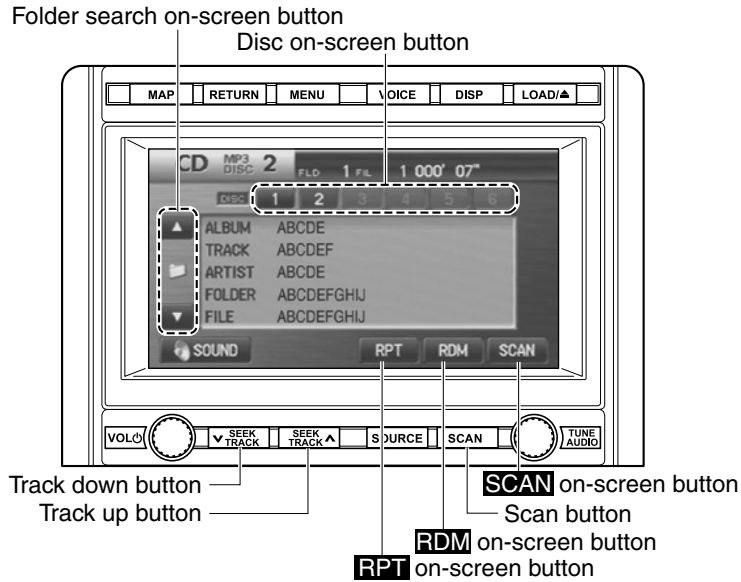

■ Inserting the CD

The display must be open (lowered) to insert the CD.

The CD must be label-side up when inserting. The auto-loading mechanism will set the CD and begin play. There will be a short lapse before play begins while the player reads the digital signals on the CD.

Note

"IN" is displayed on the tray number for a CD that is inserted.

■ During CD playback

The disc title, the track title, and the artist name will be displayed.

■ During MP3 CD playback

The album title, the track title, the folder name, the file number, and the artist name will be displayed.

Note

The CD will begin playback automatically after insertion. A CD cannot be inserted while the display reads "WAIT".



■ Normal insertion

1. Press the LOAD/▲ button.
2. Press the **LOAD** on-screen button lightly.
The display opens and "WAIT" is displayed.
3. Lightly insert the CD after "IN" is displayed. The CD will be inserted and played automatically after the display is closed.

Note

- A CD cannot be inserted while "WAIT" is displayed. Wait until "IN" is displayed.
- The CD loading operation cancels 15 seconds after "IN" is displayed or if the LOAD/▲ button is pressed again.

■ Inserting CDs into desired tray number

1. Press the LOAD/▲ button.
2. Press the desired tray number on-screen button, then press the **LOAD** on-screen button lightly.
The display opens and "WAIT" is displayed.

Note

- Selecting the tray number on-screen button twice cancels the indicated tray.
- The CD loading operation cancels if no button is pressed for about 30 seconds after the desired tray number is pressed, or if the LOAD/▲ button is pressed again.

3. Lightly insert the CD after "IN" is displayed. The CD will be inserted and played automatically after the display is closed

Note

- The CD loading operation cancels 15 seconds after the **LOAD** on-screen button is pressed or the LOAD/▲ button is pressed again.
- The CD cannot be inserted to the desired tray number if it is already occupied.

■ Multiple insertion

1. Press the LOAD/▲ button.
2. Press the **LOAD** on-screen button for 1.5 seconds or more.
The display opens and "WAIT" is displayed.
3. Lightly insert the CD after "IN" is displayed.
4. When "IN" is displayed again, insert the next CD.
Repeat this procedure for the number of CDs to be inserted (maximum of 6 including the CD in the tray).
The CD will begin playback automatically after insertion and the display closes.

Note

The CD loading operation cancels 15 seconds after "IN" is displayed, or the LOAD/▲ button is pressed again.

■ Normal ejection

1. Press the LOAD/▲ button.
2. Press the **EJECT** on-screen button lightly.
3. The CD ejects after the display is opened and the desired tray number flashes.
4. The display closes automatically after the ejection is fully completed.

Note

If the CD is not removed from the slot within 15 seconds, it will be re-inserted. When this happens, or if the LOAD/▲ button is pressed again, the CD ejecting operation will be canceled.

■ Ejecting CDs from desired tray number

1. Press the LOAD/▲ button.
2. Press the desired CD tray number, then press **EJECT** on-screen button lightly.

Note

The CD ejecting operation cancels if the **EJECT** on-screen button is not pressed for about 30 seconds after the desired tray number is pressed, or if the LOAD/▲ button is pressed again.

3. The CD will be ejected automatically after the display is opened and the desired tray number flashes.

Note

- If only one CD is inserted in the tray, the display opens and the CD is ejected without pressing **EJECT** on-screen button.
- If the CD is not removed from the slot within 15 seconds or if the LOAD/▲ button is pressed, the CD ejecting operation will be canceled.

4. The display closes after the CD is ejected.

■ Multiple ejection

1. Press the LOAD/▲ button.
2. Press the **EJECT** on-screen button for 1.5 seconds or more.
The CD ejects after the display is opened and the desired tray number flashes.
3. Pull out the CD.
4. The next CD will be ejected automatically.
This operation repeats until all the CDs are taken out.

Note

If the CD is not removed from the slot within 15 seconds or if the LOAD/▲ button is pressed, the CD ejecting operation will be canceled.

■ Playing

1. Press the SOURCE button.
2. Select the **CD** on -screen button.
3. Select the tray number on-screen button for the CD you want to play.
The song information will be displayed during playback.

Note

Press the tune audio dial if the following screen is not displayed.

Music CD



MP3 CD




Audio Operation


Note

- "-----" will be displayed for files without a file, track or other name input.
- This unit can read English (including numerals), French, and Spanish one-byte characters.
- The displayable number of characters on each title is a maximum of 64.


(Music CDs)


- Although textual information (Track/artist information) recorded to each track appears in the display, textual information (Album/artist information) recorded for the entire CD does not appear in the display.

For details, refer to "CD-TEXT" ( page 71).


Select the  on-screen button if the whole title cannot be displayed at one time. The screen changes to display the rest of the characters.


■ Fast-forward/Reverse


Press the SEEK/TRACK up button () to advance through a track at high speed until a beep sound is heard.

Press the SEEK/TRACK down button () to reverse through a track at high speed until a beep sound is heard.

■ Track search

Press the SEEK/TRACK up button () once to skip forward to the beginning of the next track.

Press the SEEK/TRACK down button () once to skip back to the beginning of the current track.

Press the SEEK/TRACK down button () during track search to skip back to the beginning of the previous track.

■ Disc search


To change the disc, press any DISC on-screen button during playback.

■ Folder search (during MP3 CD playback)

To change to the previous folder, select the  on-screen button, or select the  on-screen button to advance to the next folder.

■ Music scan

 
This feature helps to find a program by playing about the first 10 seconds of each track.

Press the  on-screen button or the SCAN button during play to start scan play operation (the track number will flash).

Press the  on-screen button or the SCAN button once again to cancel scan play.

Note

If the unit is left in scan, normal play will resume where scan was selected.



■ Repeat play

During music CD playback

1. Select the **RPT** on-screen button during playback to play the current track repeatedly.
2. Select the button again to cancel the repeat play.

During MP3 CD playback

(Track repeat)

1. Select the **RPT** on-screen button during playback to play the current track repeatedly.
2. To cancel the repeat play, select the button again after 3 seconds.

(Folder repeat)

1. Select the **RPT** on-screen button during playback, and then select the button again within 3 seconds to play the tracks in the current folder repeatedly.
2. Select the button again to cancel the repeat play.

Random play

Tracks are randomly selected and played.

During music CD playback

1. Select the **RDM** on-screen button during playback to play the tracks on the CD randomly.
2. Select the button again to cancel the random play.

During MP3 CD playback

(Folder random)

1. Select the **RDM** on-screen button during playback to play the tracks in the folder randomly.
2. To cancel the random play, press the button again after 3 seconds.

(DISC random)

1. Select the **RDM** on-screen button during playback, and then select the button again within 3 seconds to play the tracks on the CD randomly.
2. Select the button again to cancel the random play.

■ Audio sound adjustment

Refer to "Power/Volume/Sound Controls".





 
Contents

Others use

- Bluetooth Hands-Free
 - Screen display of Bluetooth Hands-Free information 86
 - Steering Switch
 - Operating the Steering Switch..... 87
(Adjusting the Volume), (Changing the Source), (Seek Switch)
-




Bluetooth Hands-Free



Bluetooth Hands-Free

Screen display of Bluetooth Hands-Free information

If the Bluetooth Hands-Free is operated, information such as radio wave reception conditions of the Bluetooth Hands-Free are displayed on the screen. For details, refer to the "Bluetooth Hands-Free" in the owner's manual.

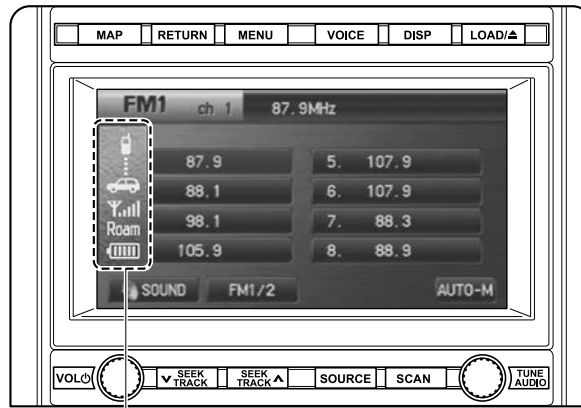

Bluetooth Hands-Free information

Bluetooth Hands-Free

Steering Switch

Operating the Steering Switch

■ Adjusting the Volume


To increase the volume, pull up the volume switch.

To decrease the volume, press down the volume switch.




■ Changing the Source

Press the mode switch (MODE) to change the audio source (FM1 radio > FM2 radio > AM radio > CD changer > SIRIUS > AUX1 > AUX2 > OFF > cyclical).

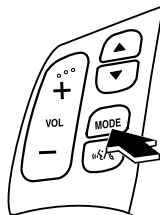

■ Seek Switch

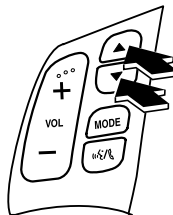

When listening to the radio

Pull up or press down the seek switch, the radio switches to the next/previous stored station in the order that it was stored (1-6).

Pull up or press down the seek switch for about 2 seconds until a beep sound is heard to seek all usable stations at a higher or lower frequency whether programmed or not.

When playing a CD

Pull up the seek switch to skip to the next track.

Press down the seek switch to repeat the current track.

Steering Switch



■ Safety Certification

This CD player is made and tested to meet exacting safety standards. It meets FCC requirements and complies with safety performance standards of the U.S. Department of Health and Human Services.



- This CD player should not be adjusted or repaired by anyone except qualified service personnel. If servicing is required, contact an Authorized Mazda Dealer.
- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser exposure. Never operate the CD player with the top case of the unit removed.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

 
 
Note

For CD player section:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.



Steering Switch

