

'08

MAZDA5

Quick Tips®

Reference


Guide for

Controls and

Functions



mazda®

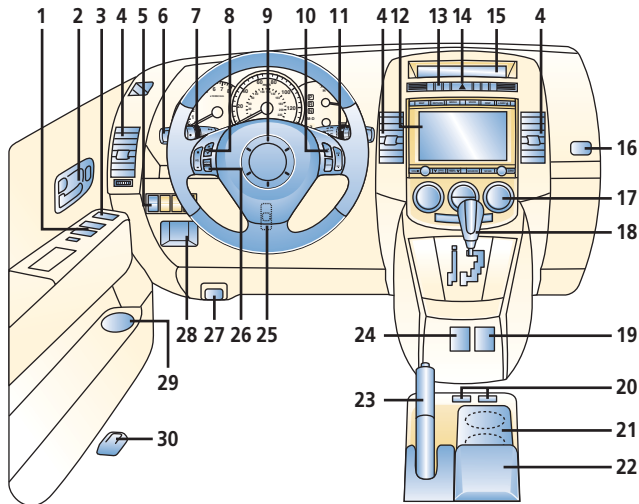

Getting Started

MAZDA5 Quick Tips® are designed to quickly familiarize you with some important features of your MAZDA5.

This Driver's View tab is your index to the Quick Tips®, locate the item you would like to learn more about and then turn to the listed tab.

Be sure to see the tab called Getting Started, this section contains important operating tips about your MAZDA5.

Items identified in blue text call out unique features.

 
1. **Power window switches**, see Switches/Clock
2. **Door locks**, see Locks
3. **Mirror controls**, see Switches/Clock
4. **Air vents**
5. **HID headlight leveling switch***, see Getting Started
6. **Turn signal/lighting control lever**, see Getting Started
7. **Fog light switch***, see Getting Started
8. **Audio control switches**, see Audio Systems
9. **Horn/Air bag**
To beep: Press.
10. **Cruise control**, see Getting Started
11. **Wiper/washer control lever**, see Getting Started
12. **NAVI display***, see Owner's Manual
13. **Audio system**, see Audio Systems
14. **Hazard warning switch/light**
Push to activate/deactivate.
15. **Information display**, see Audio Systems
16. **Passenger air bag off indicator**, see Getting Started
17. **Climate control panel**, see Climate Controls
18. **Gearshift lever**, see Transaxle
19. **Accessory socket**
12V power outlet.
20. **Seat warmer***
Press on/off.
21. **Cup holders**
22. **Center console storage**

23. **Parking-brake lever**
To engage: Pull up.
To release: Pull up slightly, while depressing button at front of lever, lower parking brake lever.
24. **Auxiliary jack**
Connect portable music device to vehicle audio system.
25. **Tilt/telescopic steering wheel lever**, see Getting Started
26. **Voice recognition/Bluetooth hands-free switch***, see Getting Started
27. **Hood release handle**
Pull release handle to unlock.
28. **Storage**
29. **Bottle holder**
⚠ **CAUTION: Use plastic bottles with caps, cups may spill when door is closed.**
30. **Fuel-filler lid release**
To open: Pull lever upward.

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

GETTING STARTED

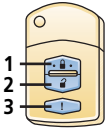

Remote entry system

Functions only with ignition key not inserted.

To lock doors and liftgate: Press **1**; pressing again within a few seconds causes doors/liftgate to re-lock, horn to beep once and hazard warning lights to flash once if doors/liftgate properly closed. To unlock: Press **2** for driver's door, hazard warning lights will flash twice, press again within a few seconds for all other doors/liftgate. Panic alarm: Press **3** for a few seconds; horn sounds, hazard warning lights flash; press any button on transmitter to stop. After unlocking with the transmitter, all doors or the liftgate will automatically lock if a door or the liftgate is not opened within about 30 seconds.



Passenger air bag deactivation indicator light

Front air bag deactivation indicator light **(4)** provides current status of front passenger air bag and pretensioner system.


If total seated weight on front passenger seat is less than approximately 66 lb., front passenger air bag deactivation indicator light illuminates, front passenger and side air bags/pretensioner will not deploy/activate in an accident. If the total seated weight is greater than approximately 93 lb., light does not illuminate, and the front passenger and side air bags/pretensioner will deploy/activate in an appropriate accident.

See Owner's Manual for additional information on this feature and the air bag system.

Passenger sensing operation

Passenger air bag deactivation indicator on dash will illuminate when front passenger air bag is deactivated, child-restraint seat with child that weighs a combined total of 66 lbs. or less will deactivate front passenger air bag, see Owner's Manual.

⚠ WARNINGS: Even with a deactivation system, never place rear-facing infant-safety seat in front of any air bag, an infant is in serious danger of being injured or killed. If you must install a forward-facing child-safety seat in the front seating position, move vehicle seat as far back as possible.

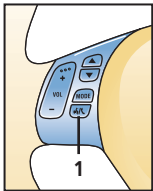

Bluetooth Hands-Free System*

System consists of Voice recognition/hands-free switch* **(1)** located on steering-wheel, information

display, microphone and audio/navigation system*; system only functions with a Bluetooth type mobile telephone, a mobile telephone can be programmed only when vehicle is parked.

Hands-Free Telephone setup

Pair a phone

1. Press switch **(1)**; say "setup."
2. System prompts you with available options; say "pairing options."

3. After prompts, say "pair a phone."
4. System will request a 4-digit PIN of your choice (record PIN number for future phone pairing procedure), slowly say your 4-digit PIN and confirm.
5. After prompt, follow phone manufacturer's instructions to search for Bluetooth device.
6. Once device is found, select "Mazda," enter your selected 4-digit PIN on phone's numeric keypad when requested.
7. System prompts you to name the phone.
8. System will ask for a phone priority number between 1-7, 1 being highest.
9. When programming is complete, system will indicate "pairing complete."

Language

Press switch **(1)**; say "setup" after beep, say "language" after beep, say "English," "French" or "Spanish," you will be asked "is this correct," say "yes" after the beep, then follow any additional prompts.

Dialing a phone number

Press switch **(1)**; say "dial" after beep, slowly say phone number after the prompt, system verifies number is correct; then connects your call.

Redialing last-called number


Press switch **(1)**; say "redial" after beep, system will redial last dialed phone number.

See Owner's Manual for complete operating instructions and warnings.

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

GETTING STARTED

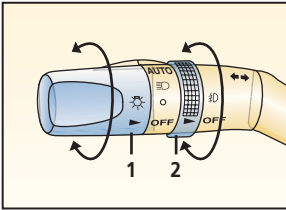

Turn signal/lighting control lever

OFF = Lights off

○ = Tail, parking and dashboard lights on: Rotate knob (1) to first notch

☰ = Tail, parking, dashboard and headlights on: Rotate knob (1) to second notch

AUTO* = With ignition switch in ON position; headlights and exterior lights automatically turn ON/OFF depending on surrounding darkness/lightness; rotate knob (1) to third notch

High beams on/off: Push forward/pull back to detent.

To flash high beams: Pull back slightly and release.


☰ = Fog lights* on: Rotate (2); functions only with low beams on

Turn signals right/left: Move lever up/down.



HID headlights leveling switch*

Adjusts headlight angle to compensate for weight of passengers and cargo, see Owner's Manual.

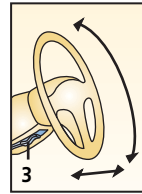


Tilt/telescopic steering-wheel lever

Pull lever (3) up to unlock column, position tilt angle and length of steering column position.

⚠ WARNING: Do not adjust steering-wheel while driving.

Tire Pressure Monitoring System (TPMS)

Warning light illuminates for a few seconds after ignition is on. If tire pressure is too low in one or more tires, warning light will illuminate and beeper will sound; flashing warning light indicates possible malfunction; dealer inspection required.

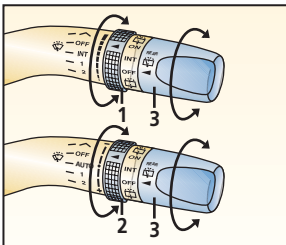

Wiper/washer lever

Single wipe: Push lever up.

Washer: Pull back, also operates wipers.

Intermittent wiper: One click down, to change interval speed rotate ring (1).


Auto*: One click down, rain sensor senses rain amount on windshield, then controls wiper automatically. Rain sensor sensitivity is adjusted from high sensitivity (+) to less sensitivity (-) by rotating ring (2).


Normal wiper speed: Two clicks down. High-speed wiper: Three clicks down.

Rear window wiper/washer

To activate rear interval wiper: Rotate knob (3) up to INT.


To activate rear normal speed wiper: Rotate knob (3) up to ON.

To activate rear washer: Rotate knob (3) to  and release.

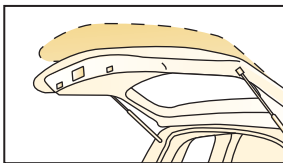

Liftgate

Liftgate opens in 2 positions, first position is slightly lower than fully open position, do not use excessive force while pushing liftgate to fully open position.

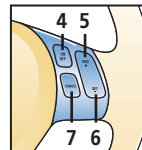

Cruise control

Operates above 19 mph. Press Main switch (4) to turn system on/off.

To set speed: Accelerate to desired speed and press SET- (6).

To accelerate: Press and hold RES+ (5); release button at desired speed.

To decelerate: Press and hold SET- (6); release button at desired speed.

Incremental acceleration: Press and release (5); each tap = plus 1 mph.

Incremental deceleration: Press and release (6); each tap = minus 1 mph.


To cancel: Press CANCEL (7) or Main switch (4); tap brake pedal or depress clutch pedal*.

Return to preset speed after CANCEL button or braking: Press and release RES+ button (5).

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

INSTRUMENT CLUSTER

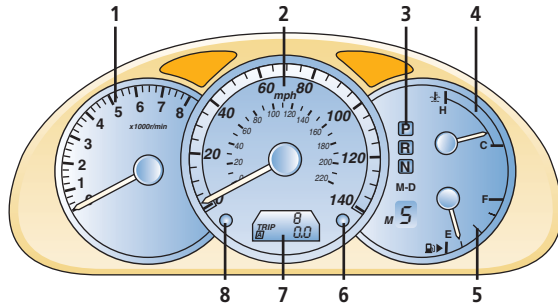

GAUGES

- 1. Tachometer**
- 2. Speedometer**
- 3. Gear indicator (A/T only)***
Displays current gear position.
- 4. Engine coolant temperature gauge**
Stop car if above normal range, turn off engine, let vehicle cool; check coolant level when safe.
- 5. Fuel gauge**
16-gallon/60-liter tank
- 6. Odometer/Trip meter selector**
Press to view odometer; press again to reset trip odometer A/B settings.
- 7. Odometer/Trip meter dimmer select button***
- 8. Instrument cluster dimmer select button***

 
WARNING LIGHTS

- **CRUISE Cruise control on**
Amber light: Cruise control system activated; Green light: Cruising speed set; see Getting Started
- **Tire Pressure Monitoring System (TPMS),**
see Getting Started
- **Turn signals/hazard warning on**
- **High beams on**
- **Engine oil-pressure warning light**
Stop car when safe and turn off engine; check oil level
- **Always fasten seat belts**
- **Security indicator light (immobilizer system)/ Theft-deterrent system***
- **Door ajar**
- **Charging system warning light**
Charging system malfunction; dealer inspection required
- **Air bag/front seat belt pretensioner system**
If light flashes or stays on, the air bags/front seat belt pretensioners may not operate in an accident; dealer inspection required
- **Power steering malfunction**
Dealer inspection required if light remains on
- **Check engine**
Dealer inspection required if light remains on, see Owner's Manual
- **Low fuel**
- **AT Automatic transaxle warning light***
Automatic transaxle malfunction; dealer inspection required
- **Brake system**
Parking brake on/low brake fluid
- **Anti-lock Brake System (ABS)**
ABS malfunction, normal brakes only; dealer inspection required
- **Electronic brake force distribution system warning**
Brake system warning light and ABS warning light on simultaneously may indicate a problem with electronic brake force distribution system; dealer inspection required

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

LOCKS

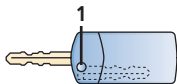**Key**

Operates ignition and all locks.

Tip: Use key number plate to purchase a new key; store in safe place separate from vehicle.

Retractable Key

To fold/unfold press release button (1).


WARNING: Never leave a child in car with key in the vehicle.

**Remote entry system**

See Getting Started

Illuminated entry system

Activates interior lights when dome light switch set to DOOR position; lights off after driver's door is locked or ignition in ON position.

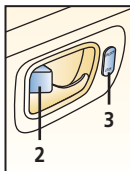**Manual door locks**

To lock: Press front of button (2) toward door handle.

To unlock: Pull front of button away from door handle.


Power door locks

To lock/unlock all doors from inside vehicle: Press bottom/top of switch (3).

To lock doors without key:

With door open, press bottom of door lock switch, exit car, close doors.

To unlock: Use key to unlock driver's front door, rotate key to counter-clockwise position for more than one second to unlock other doors.

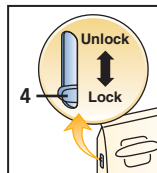**Child-safety locks**

Located at edge of rear doors. To activate: Pull tab (4) down; door opens from outside only.


To cancel: Push tab (4) up.

WARNING: Since children may access either rear door, child-safety locks for both rear doors should be activated.

**Sliding doors**

Lock/unlock from interior: Slide door-lock knob (5) toward front/toward back.

Locking from exterior: Slide door-lock knob toward front and close door.

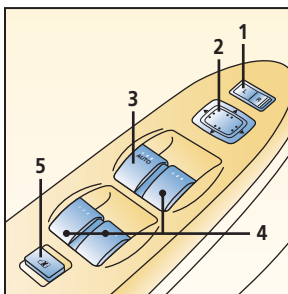**Dual power mirrors**

Ignition must be in ACC or ON.

To adjust left/right mirror:

Press control switch (1) left/right, press switch (2) in direction of desired mirror movement.

Tip: To lock mirrors in place, move control switch to center position.

Power windows


Ignition must be on.

All windows controlled from the driver's armrest; passenger doors have separate switches.

Driver's window: One-touch-down; push (3) down firmly and release, window goes down all the way; pull switch back briefly to stop; press lightly and hold for normal operation.

Passenger window switches: Push down (4) and hold to open, pull back and hold to close.

Power window lockout switch: Press down (5) until it clicks, only driver's window operates; press again and passenger window switches function again.

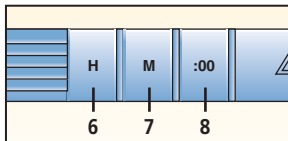**Clock**


To set: With ignition in ACC or ON position, press H (6) or M (7) to advance hours/minutes.

To set 12/24-hour format: Press H/M buttons simultaneously for 1.5 seconds or more; 12h/24h will be displayed; selected format will be displayed within 3 seconds.


Time resetting: Press :00 button (8) for 1.5 seconds or more, displayed time flashes; when :00 button is released, time will be reset to nearest hour.

Always check the Owner's Manual for more operating information and safety features


INTERIOR LIGHTS

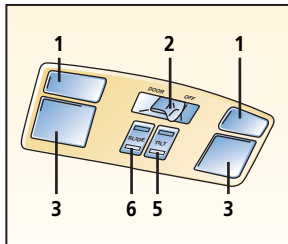


- 1. Map/reading light switch**
Press on/off.
- 2. Interior light switch**
DOOR = light on when door open
ON = light always on
OFF = light always off
- 3. Front interior light**
- 4. Rear interior light**

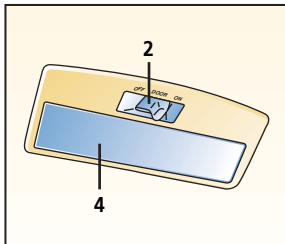

- 5. Moonroof tilt switch***
Press rear of switch to tilt rear of moonroof.
Press front of switch to close.
- 6. Moonroof slide switch***
Press rear of switch to open moonroof.
Press front of switch to close.

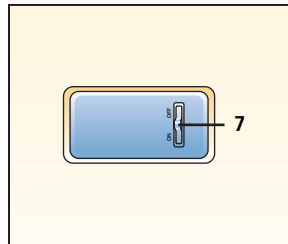

- 7. Cargo light**
ON = Light always on
OFF = Light always off
- Driver/passenger covered visor mirrors**
To access mirror: Lower visor.

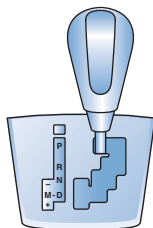

Automatic transaxle*

Gearshift must be in Park or Neutral to start engine; it must be in Park to remove ignition key.

P = Park

To move gearshift from Park: Press firmly on brake pedal then move the shift lever out of P.

R = Reverse

No gear engaged.

D Drive (Overdrive)

 
For normal driving: Shifts through all forward gears automatically.



M (Sport A/T manual shift mode)


Move shifter from D to M to engage manual shift mode, M will be illuminated for manual mode on

shift position indicator located in the instrument panel. Manual shifting of transmission is achieved by moving shifter back to upshift and forward to downshift, move shifter from M to D to engage automatic shift mode.

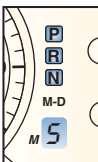


Gear indicator (A/T only)*

Illuminated gear indicator located in the instrument panel displays current gear in Manual mode or D in Automatic mode.

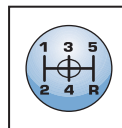

Manual transaxle

Depress clutch pedal to start engine and change gears.

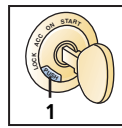

Ignition key release button (M/T only)

Press button (1) to remove key from ignition.

Tips: Do not shift into 1st above 20 mph or clutch failure could occur.

Resting your foot on clutch pedal while driving or using the clutch to hold your vehicle at a standstill while waiting on a hill may reduce clutch life.

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

CLIMATE CONTROLS

1. Temperature control

Cooler/warmer = rotate knob counterclockwise/clockwise

2. Windshield defroster

Press: Fresh air position is automatically selected, A/C automatically turns ON.

3. Air flow selections

= air to dash

= air to dash and floor


= air to floor

= air to floor and windshield

= air to windshield (defrost)

4. Fan control

Rotate knob clockwise/ counterclockwise to increase/ decrease fan speed.

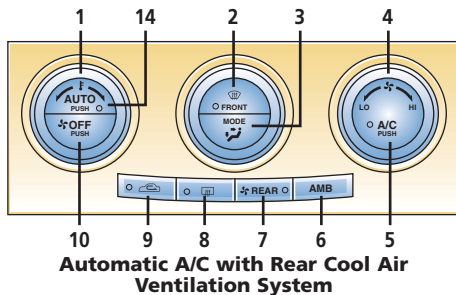

8. Rear window defogger/ heated outside mirrors*

Press on/off; shuts off with ignition or automatically after 15 minutes of operation.

Tip: Rear window defogger also operates heated outside mirrors*.

Automatic operation

Press AUTO (14) for automatic operation; rotate outer dial to set temperature, see Owner's Manual.

Tip: Automatic climate control display viewed via information display, see Audio Systems.

5. A/C = air conditioner

Press to turn on/off. A/C indicator light will illuminate only when fan is operating.

6. AMB

Press to view ambient temperature.

Tip: Press AMB (6) for 2 seconds or more to switch display from Fahrenheit to Centigrade and vice versa.

7. Rear control switch

Press to turn rear (cool) air ventilation system on.

9. Air intake control

Press switch to alternate between recirculated (Indicator light on) or outside (Indicator light off) air mode.

= recirculate inside air; use for maximum cooling

WARNING: Do not use position in cold weather, windows may fog and hamper vision.

10. OFF


Press to turn system OFF.

Control positions for maximum defrost

Fan to maximum, temperature to maximum hot, selected.

Tips: To help prevent windshield fogging in humid weather, select before starting engine.

To prevent moisture buildup, never drive with system off. Objects placed under the front seats may interfere with air flow to the rear.

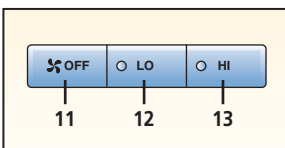

Rear cool air ventilation system

When front climate control panel is on, the following settings can be controlled from the rear area controls located on rear of center console, even if (7) is not turned on.

11. OFF = Fan off

12. LO = Low speed

13. HI = High speed

Tip: Rear ventilation system will only control cool air flow.

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features


SEATS

Shoulder belt height adjustment

To raise: Push adjuster up.
To lower: Pull button (1), slide down; release button.



⚠️ WARNING: Make sure adjuster locks in one of its positions.

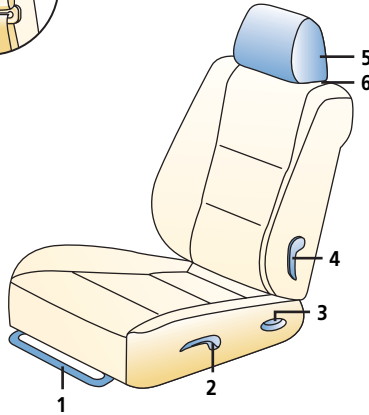**Seat controls**


- 1. Fore-aft adjustment**
Lift lever and hold, slide seat, release lever.
- 2. Raise/lower seat (Driver's seat only)**
Pull/push lever and release.
- 3. Seat back angle**
To adjust: Lift and hold lever, lean forward or backward to tilt seat, release lever.
- 4. Lumbar support adjustment* (Driver's seat only)**
Pull lever forward.
- 5. Head restraint**
To raise/lower: Pull up/press and hold release button (6) and push down.

☀️ Tip: Side-impact air bags* deploy from outboard side of front seatbacks.

⚠️ WARNINGS: Do not adjust seats while driving.
Seat belts must always be worn when vehicle is in motion.
Air bags are supplemental and do not replace seat belt usage.

Always wear your seat belt and properly secure children 12 and under in the rear seat.
Even with a deactivation system, never place rear-facing infant-safety seat in front of any air bag, an infant is in serious danger of being injured or killed.

If you must install a forward-facing child-safety seat in the front seating position, move vehicle seat as far back as possible.

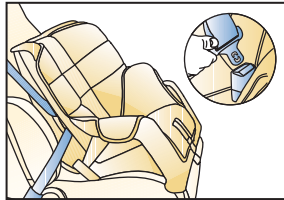**Child-safety seat**

To install in rear outboard seats: Use dual locking mode retractor seat belts; see Owner's Manual for proper installation and child seat tether and LATCH system instructions.

⚠️ WARNING: Use age appropriate child restraints, see Owner's Manual and state or province laws.

Seat belt emergency locking mode

Belts lock only on hard acceleration, braking, cornering or impacts of about 5 mph or more.

Automatic locking mode (all seat belts except driver's seat belt)

Must be used when installing child-safety seat.


To activate: Pull webbing fully out of retractor, allow belt to retract until click is heard; belt will only tighten.

To disengage: Unbuckle belt and allow webbing to retract fully.

*Denotes optional equipment


Always check the Owner's Manual for more operating information and safety features

REAR SEATS/CARGO AREA

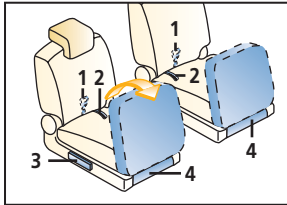

Third-row seat passenger exiting

Pull (1) and fold seatback forward.

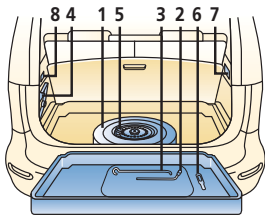


Folding second-row seats

Insert second-row outboard seat belts in retainers; lower head restraint; pull strap (2) and lift seat-bottom forward; raise lever (3) and fold seatback forward.

Tip: Second-row under seat storage bin* (4).

Returning seatbacks to original positions

Raise lever (3) and return seatback to upward locked position; return seat-bottom to original locked position.

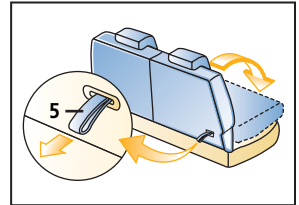

Third-row seat (50/50 split)

To fold down: Pull (5), then fold seatback down.

Cargo area

1. Temporary spare tire

Stored under panel in trunk; to change flat tire: Follow instructions in Owner's Manual.

WARNING: Do not exceed 50 mph with temporary spare.

Tip: For instructions and restrictions on use of temporary spare tire, see Owner's Manual.

2. Lug wrench

3. Jack handle

4. Jack

5. Flat tire belt storage bag

6. Tie down eyelet

7. Cargo light

8. Accessory socket

Tire economy and tips

Check tire pressure monthly when tires are cold, use a digital tire pressure gauge for accurate tire pressure measurement.

Tires should be of the same type and size.

Maintain correct front-end alignment and tire balance; rotate tires at 5,000 or 7,500 mile intervals; see Owner's Manual for rotation chart.

Tire pressure

Decal on Driver's B-pillar provides tire pressure information.

Tire chains*†

Use only SAE Class "S" chains; install on front tires as tightly as possible and re-tighten periodically; do not use chains on dry roads, aluminum wheels, or with tire pressure monitor system, damage may occur, use on steel wheels only.

Anti-lock Braking System (ABS)

 
ABS automatically reduces hydraulic pressure to any wheel on the verge of locking up.

You may feel a slight pulsing of the brake pedal and hear a clicking noise; this tells you the ABS is functioning properly; increase pressure on pedal for maximum braking.

Tips: Maintain constant pressure on the brake pedal. Do not pump the brakes.

ABS self test

A self-diagnostic test is performed when starting; you may feel some brake pedal pulsation and hear some noise, this is normal.

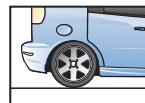

Fuel filler door

Located on passenger side.

Gas cap

After filling vehicle with gasoline, fully reinstall gas cap by turning clockwise until a clicking sound is heard, if gas cap is not fully installed, Check Engine light may come on.

For more information on Check Engine light, see Owner's Manual.

Trailer towing

Never tow a trailer with your MAZDA5.

*Denotes optional equipment

† See Owner's Manual

Always check the Owner's Manual for more operating information and safety features

1. Power/Volume

Press to turn on/off; rotate to increase/decrease volume.

2. Disc ^ / v *

Press to skip to next/previous CD.

3. Memory preset buttons

To set: Tune to station, press and hold until beep sound is heard.

4. LOAD *

To load multiple discs: Press and hold LOAD (4) until beep sound is heard; insert CD when "In" is displayed.



To eject disc: Press Eject (10).

To eject specific disc: Press and hold Eject (10) until beep sound is heard; within five seconds press the desired tray number 1-6 (3).

5. CD slot

6. FM/AM

Press to turn radio on and select between FM1/FM2/AM.

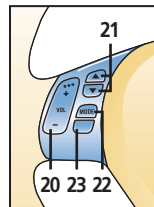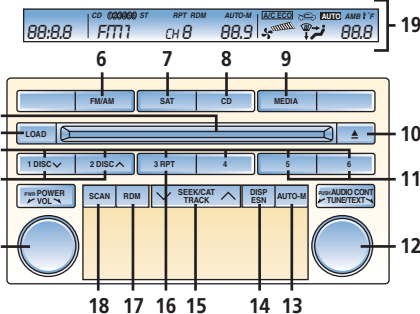

13. Auto-Memory

Press and hold until a beep sound is heard; system automatically scans and temporarily stores six strong stations in each band; press to switch between these stored preset stations.

19. Information display

Has following functions: Clock, audio display, automatic climate control display* and ambient temperature display (AMB).

7. SAT*, Satellite ready capability.

8. CD, Press to play CD.

9. Media

Select external audio devices.

10. CD eject button

11. Reverse/Fast forward


Press to reverse/fast forward through a track.

12. Tune/Text/Audio control

Radio: Rotate counter clockwise/clockwise for lower/higher frequency.

Audio: To select ALC/BASS/TREB/FADE/BAL/BEEP. Rotate right/left to adjust selected feature.

Text*(MP3*): Rotate right/left to display titles.

 **Tip: Automatic Level Control (ALC) automatically adjusts audio volume depending on vehicle speed.**

14. DISP

CD/MP3*: Press repeatedly to scroll through displays.

15. SEEK/CAT/TRACK

Radio: Press ▲ / ▼ to automatically seek higher/lower frequency.

CD/MP3*: Press ▲ / ▼ to select next track/beginning of current track.

16. RPT

Press to replay current CD/MP3* selection.

17. Random

Press to play CD/MP3* selections in random order, press again to cancel.

18. Scan

Radio: Press to sample strong stations, press again to stop at current station.
CD/MP3*: Press to play first few seconds of each selection, press again to stop at current selection.

Steering-wheel audio controls

To increase/decrease volume: Press (20).

Radio: Press ▲ / ▼ (21) less than one second to select next/previous preset station, press ▲ / ▼ (21) more than one second until beep sound is heard to seek next/previous station.

CD: Press ▲ (21) to select next track, press ▼ (21) to repeat current track. Press (22) to select AM, FM 1, FM 2, CD and external audio devices.


Press (23) to mute Audio system, activate Navigation Voice Command* or for Bluetooth hands-free system*, see Getting Started.

Navigation/Audio system*

Press TUNE/AUDIO dial to display audio system screen on NAVI system, see Navigation Owner's Manual.

*Denotes optional equipment

UNDER HOOD

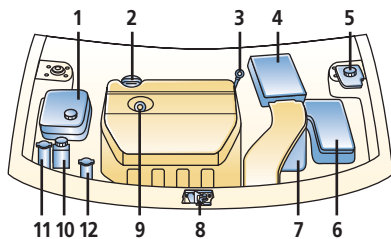

2.3-liter Engine

1. Engine coolant reservoir

Level should be between COLD FILL RANGE indicator marks.

⚠ WARNING: Never remove coolant reservoir cap while engine is running or hot; remove only when system is cool.

2. Engine oil filler cap

Use 5W-20 engine oil.

3. Automatic transaxle fluid dipstick*

Check with transaxle in park, engine on and at operating temperature; fluid level must be between the indicator marks on the dipstick.

4. Battery**5. Brake/clutch fluid reservoir**

Fill to MAX mark with DOT 3 fluid; check with cap on.

☀ Tip: Clutch uses same reservoir as brakes.

6. Fuse block

Push latch in; lift cover.

7. Air filter**8. Hood latch**

Pull up to release hood.

9. Engine oil dipstick

Fluid should be between Full and Low on dipstick; do not fill above Full.

10. Power steering fluid reservoir

Level should be between MIN and MAX lines.

11. Windshield washer reservoir

Fill with windshield washer fluid.

12. Cooling system cap

☀ Tip: Check all fluids with vehicle parked on a level surface and engine off unless otherwise stated.

Break-in period

First 600 miles: Avoid heavy braking and acceleration; drive at varying road and engine speeds.

☀ Tip: Follow similar procedures with newly overhauled engine or when brakes are replaced.

Maintenance notes:

Rotate tires every 7,500 miles or sooner if needed.

Replace cabin air filter every 25,000 miles or 24 months.

Replace (FL22)* engine coolant at 120,000 miles.

⚠ WARNING: Using coolant other than FL22 requires more frequent maintenance intervals.

☀ Tip: For severe driving conditions, Owner's Manual recommends changing oil and filter at 5,000[†] miles.

☀ Tip: For additional service intervals and complete details, see Owner's Manual.

NORMAL SERVICE INTERVALS

7,500 miles	A	
15,000 miles	A	F
22,500 miles	A	
30,000 miles	A B	F
37,500 miles	A	C
45,000 miles	A	F G
52,500 miles	A	
60,000 miles	A B	D F
67,500 miles	A	
75,000 miles	A	C E F
82,500 miles	A	
90,000 miles	A B	F G

A. Replace: Engine oil and filter[†]

Lubricate: All locks and hinges

B. Inspect: Fuel lines and hoses, brake lines, hoses and connections, steering operation and linkages, front and rear suspension and ball joints, drive-shaft dust boots
Tighten: Bolts/nuts on chassis/body

C. Inspect: Drive belts (tension)
Replace: Air filter

D. Inspect: Hoses and tubes for emission system
Replace: Engine coolant (Other than FL22)

E. Inspect: Engine valve clearance
Replace: Spark plugs

F. Inspect: Disc brakes

G. Inspect: Exhaust system and heat shields

*Denotes optional equipment

[†]See Owner's Manual

ROADSIDE ASSISTANCE/WARRANTY


Mazda Roadside Assistance

Exhilaration, liberation and inspiration, are great reasons to drive a Mazda car, truck or SUV. In addition to all the other great standard features, you also get peace of mind with our basic warranty period Emergency Roadside Assistance Plan, it's just a phone call away, 24 hours a day, 365 days a year, call **1-800-866-1998**.

Mazda "bumper-to-bumper" Limited Warranty and Powertrain Warranty

Engineers design and build every Mazda to give you driving pleasure now and far down the road. We're so confident in our quality that we cover the entire vehicle against defects in materials and workmanship for 36 months/36,000 miles, whichever comes first, plus we provide a powertrain warranty for 60 months/60,000 miles, whichever comes first.

This Quick Tips® guide is provided by Mazda North American Operations to make your Mazda ownership experience more convenient. For complete details and operating instructions, see your Owner's Manual.

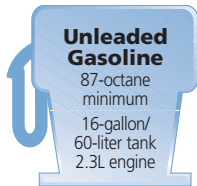

If you have any questions about your vehicle, you are invited to contact your local dealer.

Or if you need additional help, feel free to call our

Customer Assistance Center at 1-800-222-5500

Monday through Friday,

8 a.m.-4:45 p.m., Pacific

9 a.m.-5:45 p.m., Eastern/Central



www.mazdausa.com

©2007 Calcar, Quick Tips® is a trademark of Calcar, made in USA 9/07 23.9M DOT Mazda North American Operations reserves the right to change product specifications at any time without incurring obligations. 9999-95-005C-08QT