



2009 Mazda B-Series TRUCK

SMART START GUIDE





Optional equipment shown.





REMOTE ENTRY SYSTEM

Unlocking the Doors



- 1 Press the  button and release to unlock the driver's door; the interior lamps will illuminate.
- 2 Press the  button again and release within three seconds to unlock all of the doors.

Locking the Doors

- 1 Press the  button and release to lock all the doors; the park lamps will flash once to confirm lock.
- 2 Press the  button again and release within three seconds; the lamps will flash again and the horn will chirp to confirm all doors are locked and closed.


Note: If either door is not properly closed, the lamps will not flash.

Sounding the Panic Alarm

- 1 Press the  button to activate the alarm; the horn will sound and the park lamps will flash for approximately three minutes. Press the  button again or turn the ignition to the ON position to deactivate.

Power Door Lock

- Press the control button to unlock or lock all of the doors.

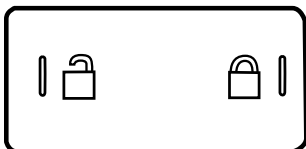

Auxiliary Key



MANUALLY OPERATED DRIVER SEAT



Front Seat Lever

Lift the release bar to slide the seat forward or backward. Ensure the seat is locked in place.



Side Seat Lever

Pull the lever located at the side of the seat cushion to adjust the tilt of the seatback forward or backward.



CENTER FACING JUMP SEAT

- To open, pull the seat assembly down, then raise the seatback.
- To stow the seat, fold the seatback down and raise the seat assembly to the fully upright position.



Driver's View



**INSTRUMENT
PANEL DIMMER**
(behind steering wheel)

**TURN SIGNAL/WIPER/
WASHER CONTROL**

DRIVER AIR BAG



HEADLAMP CONTROL


**PARKING BRAKE
RELEASE**
(behind steering wheel)

HOOD RELEASE



4X4 CONTROL

**PASSENGER AIR BAG
INDICATOR**

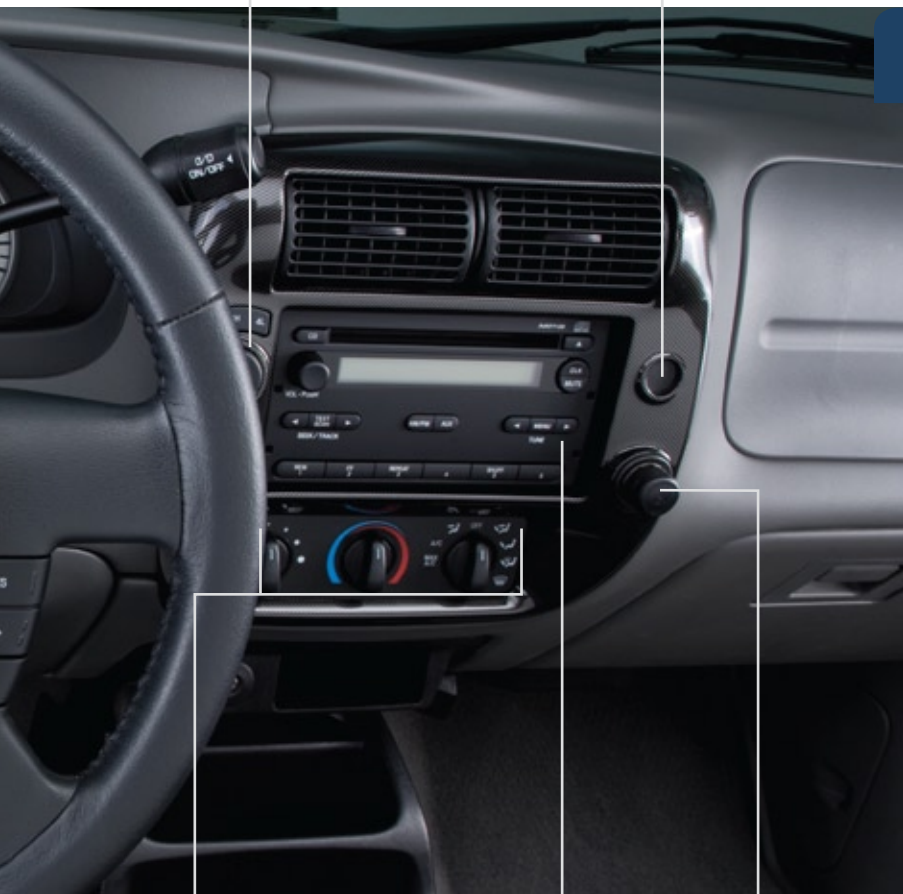

**CLIMATE
CONTROL**

AUDIO SYSTEM

**AUXILIARY
POWER POINT**

Instrument Cluster

See Owner's Manual for more details and explanations.



TACHOMETER

ODOMETER/
TRIP METER

TRIP ODOMETER
RESET BUTTON

ENGINE COOLANT
TEMPERATURE GAUGE

GLOSSARY OF WARNING AND INDICATOR LIGHTS

Please see Owner's Manual for more details and explanations



High Beams On



Tire Pressure Monitoring System (TPMS)



Engine Coolant Temperature



Fog Lamps On



Charging System



Check Engine



Cruise Control



Anti-lock Brake System (ABS)



Check Fuel Cap



Brake System



Low Fuel



FUEL GAUGE

SPEEDOMETER

GEARSHIFT
INDICATOR (AT)*

TURN SIGNAL/
HAZARD WARNING ON



Door Ajar



4X4 HIGH



Overdrive Off



4X4 LOW



Seat Belt



Air Bag Readiness



Anti-Theft On



Engine Oil Pressure



Turn Signal/
Hazard Warning



Feature Highlights



WINDSHIELD WIPER/WASHER

Windshield Wiper/Washer

- Rotate the end of the control away from you to increase the speed of the wipers; rotate toward you to decrease the speed of the wipers.
- Pushing the end of the stalk will dispense washer fluid and the wipers will make several passes across the windshield.







High Beam Operation

- To turn high beams ON, push the lever forward.
- To turn high beams OFF, pull the lever back one position.
- To flash high beams, pull the lever back all the way and release.


LIGHTING CONTROLS



Headlamp Control

-  Rotate the lighting control knob to turn all lights off.
-  Rotate the lighting control knob to the first position to turn on tail, parking and dashboard lights.
-  Rotate the lighting control knob to turn on tail, parking, dashboard and headlights.
-  Pull the lighting control knob to turn on foglamps; the indicator light will illuminate in the instrument cluster.

Panel Dimmer Control

-  Move the control up or down to adjust the intensity of the panel lighting.

Feature Highlights



AUTOMATIC TRANSMISSION

D (Overdrive)

This is the normal driving position for the best fuel economy. The transmission shifts through all forward gears.

D (Overdrive Off) ^{O/D} OFF

Press the **Overdrive Off** switch to disengage or re-engage overdrive. The indicator illuminates on the instrument cluster when overdrive is off.

Driving without overdrive provides a lower gear for city traffic where continuous shifting in and out of overdrive occurs, hilly terrain, heavy loads, trailer towing and when engine braking is required.



FOUR-WHEEL DRIVE (4WD)

Using the Electronic Shift 4WD System

2H (2WD High)

Use this position for street and highway driving.

4H (4WD High) ^{4x4} HIGH

Use this position for extra traction, such as on snow or icy roads or off-road situations. Not intended for use on dry pavement.

4L (4WD Low) ^{4x4} LOW

Use this position for extra gearing to provide maximum power to all four wheels. Intended only for off-road applications, such as deep sand, steep grades or pulling heavy objects. 4L (4WD Low) will not engage while the vehicle is moving; this is normal and should be no reason for concern. Refer to the Owner's Manual for further information.



Feature Highlights




MP3 PLAYER INTEGRATION USING THE AUX JACK

The AUX, or auxiliary jack, will allow you to play your MP3 player through the vehicle's audio system.

- 1 Plug your MP3 player into the AUX jack and turn it on.
- 2 Turn the vehicle audio system on.
- 3 Press AUX on the vehicle radio repeatedly until LINE IN appears in the display. You should hear audio from your portable music player although it may be low.

Note: Set the volume level on your player to the highest level before distortion starts. Then adjust volume in the vehicle using the audio system power/volume control.

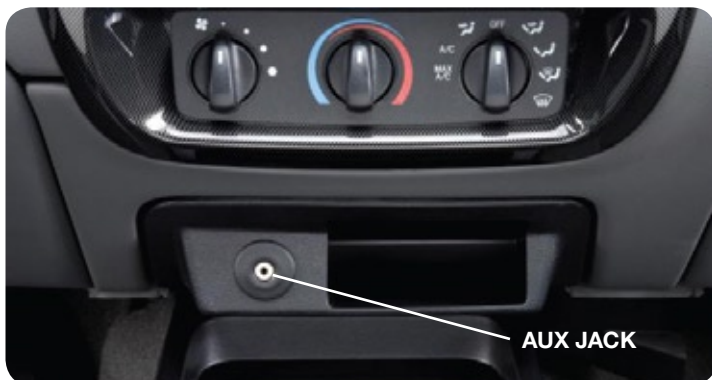

Manual Climate Control



Fan control dial

- Rotate the dial to set desired fan speed (1-4).

Temperature control dial

- Rotate the dial to select a warmer or cooler air temperature.


Mode selector dial

- Rotate the knob to select airflow mode.

MAX A/C Economically and efficiently cools the vehicle while recirculating cabin air to reduce exhaust odors.

A/C Uses outside air to cool the vehicle. Air flows from the instrument panel vents only.

 Dashboard vents

 Dashboard and floor vents

 
 Floor vents

 Defroster and floor vents

 Windshield Defroster



Audio Controls



Audio system on

- Press the POWER/VOLUME button to turn the radio on. Rotate the dial to increase or decrease volume.

Media selection

Press the appropriate button:

- AM/FM1/2
- CD
- AUX (to switch to AUX jack input)

Tuning

The radio has the following tuning controls:

- TUNE
- SEEK/TRACK
- SCAN
- PRESET CHANNEL

Manual tuning


- Pressing the TUNE (◀|▶) buttons will change the frequency higher or lower.

Seek tuning


- Pressing the SEEK/TRACK (◀▶) tuning buttons will seek a higher or lower frequency automatically.

Scan tuning

- Press the SCAN button to automatically sample strong stations.
- To hold a station, press the SCAN button again during this interval.

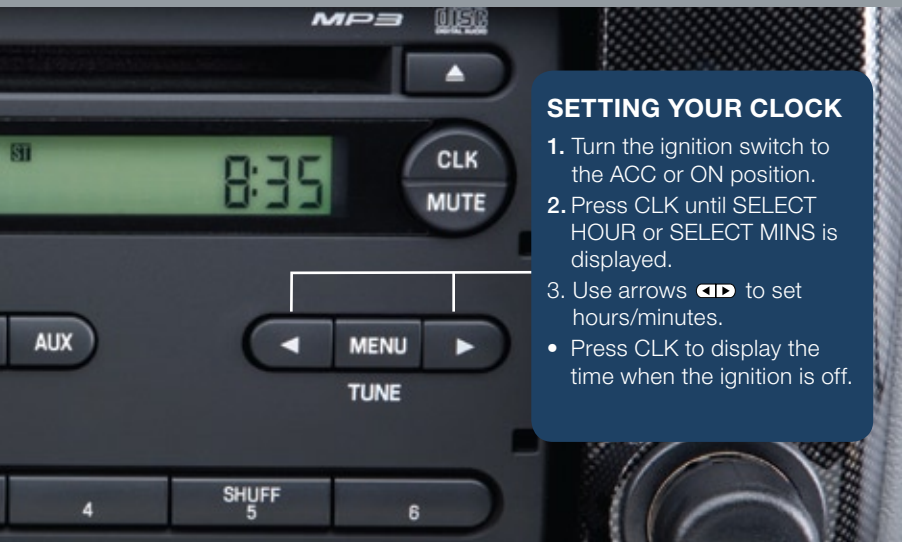

SETTING YOUR CLOCK


1. Turn the ignition switch to the ACC or ON position.
2. Press CLK until SELECT HOUR or SELECT MINS is displayed.
3. Use arrows  to set hours/minutes.
 - Press CLK to display the time when the ignition is off.

Preset channel tuning

The 6 preset channels can be used to store 6 AM and 12 FM stations.

- To set a channel, first select AM, FM1, or FM2.
- Tune to the desired station.
- Press and hold a preset button until a beep is heard.
- Repeat this operation for the other stations and bands you want to store.

Menu

- Press MENU to toggle through the following modes: Autoset, Bass, Treble, Balance, and Fade; press  to adjust.

Autoset tuning

- Press MENU to set the 6 strongest stations into AM, FM1, or FM2 memory buttons; press again to return to normal stations. Refer to your Owner's Manual for further information.

Mute

- Press to mute volume; press again for normal volume.



MYMAZDA.COM—THE OFFICIAL SITE FOR MAZDA OWNERS

Register today on MyMazda.com—the ultimate destination for Mazda Owners. Once registered, you'll be able to take advantage of benefits exclusively for Mazda owners:

- Insider access to exclusive events and promotions
- Personalized maintenance schedules
- Zoom-Zoom Owner Magazine
- Warranty information and on-line Owners' Manuals
- Wallpaper, videos and other fun stuff
- Accessories specifically designed for your vehicle
- Car Care Discount Coupons available from your Mazda Dealer

Visit and register at MyMazda.com today!

Customer Delivery Checklist

VEHICLE PRESENTATION:

Refer to the Smart Start Guide during presentation

Remote Entry 1

- Keyless Transmitter
- Power Door Lock



Seats 2-3

- Adjustment
- Rear Jump Seats

Driver's View 4-5

- Location of Switches and Controls

Instrument Cluster 6-7

- Review indicator light function and location

Wiper / Washer 8



Lights 9



All items in the Customer Delivery Checklist have been reviewed with the customer and the first maintenance appointment has been scheduled:

Transmission 10

- Overdrive OFF
- 4 Wheel Drive Operation

AUX Input 12

Climate Control 13



Audio Controls 14-15

Set Clock 15



	SALES CONSULTANT	CUSTOMER
Initials		

Signed copy must be placed in dealer jacket

**if equipped*

Customer Delivery Checklist

DEALERSHIP	DATE
SALES CONSULTANT	CUSTOMER'S NAME
VIN	E-MAIL

PRESENTATION OF OWNER'S MATERIALS:

Review the following items with the customer

Smart Start Guide

- Remove this checklist from Smart Start Guide

Warranty Information

- Basic Vehicle –
36 months/36,000 miles
- Roadside assistance program

SERVICE DEPARTMENT

- Introduce Service Manager;
Provide business cards
- Review Service and Parts Department
hours of operation
- Explain free Full Circle
Service Inspection
- Schedule first maintenance service

MyMazda.com

- Offer to register customer on MyMazda.com

Owner's Manual

*Scheduled Maintenance
Windshield Cling Reminder
Affix to inside windshield*

GENUINE MAZDA SERVICE

Because you and your Mazda deserve the best

Your new Mazda deserves nothing less than the very best. To keep it running like new for years to come, trust the experts at your local authorized Mazda Dealer. Simply bring your vehicle in for your scheduled maintenance and any needed repairs.*

At Mazda Full Circle Service Centers,** our technicians will automatically perform a complimentary Full Circle inspection on your vehicle and issue a detailed report card at every visit. This is designed to help you keep track of your Mazda's critical operating condition. Our factory-trained technicians know your vehicle inside out and use Genuine Mazda Parts, giving your vehicle the optimum care and maintenance it requires to run with flawless precision.

Remember, to further enhance your driving experience, visit your local Mazda Service Center for your scheduled maintenance. It's also the place where you can find a wide variety of tires, parts, and accessories that are just right for your vehicle.

* See vehicle's scheduled-maintenance program for details.

** Visit MyMazda.com/fullcircle for a list of Full Circle Service Centers

Customer Assistance Center: 1-800-222-5500

Roadside Assistance Contact: 1-800-866-1998



FREE FULL CIRCLE SERVICE INSPECTION

We're committed to providing expert Mazda service.

You love to drive your Mazda, and we love to service your Mazda. With our Full Circle Service, we'll give your vehicle a COMPLIMENTARY MULTI-POINT INSPECTION. Your Mazda will receive a thorough review of its most crucial components.

This easy-to-use Smart Start Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. Mazda reserves the right to change specifications or design without obligation.

© Mazda North American Operations
Printed in U.S.A. 07/08
9999 95 023C 09SS

