 
 
 
 
 
 


# NAVIGATION SYSTEM

<b>Preparation</b> See page 4 for specific information.	<b>Before Use</b>
<b>Immediate use</b> See page 4 for specific information.	<b>Getting started</b>
	<b>Routing</b>
<b>Advanced use</b> See page 5 for specific information.	<b>Address Book</b>
	<b>Voice Recognition</b>
	<b>Volume Adjustment</b>
<b>If necessary</b> See page 5 for specific information.	<b>If necessary</b>
<b>Audio System</b> See page 67 for specific information.	<b>Audio Operation</b>
<b>Rear View Monitor</b> See page 107 for specific information.	<b>Rear View Monitor</b>
<b>Others use</b> See page 113 for specific information.	<b>Bluetooth Hands-Free</b>
	<b>Steering Switch</b>





# Before Use



Before Use

## Accessories

Please contact an Authorized Mazda Dealer if you are missing any of the following accessories.



- Map Disc
- Owner's Manual

 
 
 
 
 
### CAUTION:

 
**THIS PRODUCT IS A CLASS I LASER PRODUCT. HOWEVER THIS PRODUCT USES A VISIBLE/INVISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THIS PRODUCT CORRECTLY AS INSTRUCTED. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.**

### Laser products:

Wave length: 650 nm

Laser power: No hazardous radiation is emitted with safety protection.









# MEMO



    **Before Use**



# Contents

Before Use

## Preparation

- Before Use
  - Accessories ..... 2
  - Laser products ..... 2
  - Contents ..... 4
  - Safety Information ..... 6
  - Introduction ..... 8
    - (Use This Product Safety), (Navigation System), (Beep sound and voice guidance restrictions while using Bluetooth Hands-Free), (Screens), (LCD (Liquid crystal display))
  - Names and Functions ..... 9

## Immediate use

- Getting started
  - Activation ..... 11
    - (Removing the Map Disc), (On-screen Buttons)
  - Menu ..... 14
  - Set Clock ..... 15
  - Navigation Set Up ..... 16
    - (User Setting), (Quick POI Selection), (Language), (Map Configuration), (Calibration), (Restore System Defaults)
  - Screen Names and Functions ..... 25
    - (Screens Before Setting Route), (Screens During Route Guidance), (Screen adjustments, beep alert and other settings)
  - Screen change ..... 28
    - (Map orientation), (Map scale)
- Routing
  - Destination Entry and Route Search ..... 30
    - (Change (Change Search Area)), (Address), (Point of interest), (Emergency), (Memory Point), (Home), (Preset Destination), (Previous Destination), (Freeway On/Off Ramp), (Coordinates), (Select from map)
  - Quick POI ..... 38
    - (Displaying POI(s) on a Map), (Local Search), (Deleting POI Markers), (Showing POI Data)
  - Character Entry ..... 39
    - (Street name, town name, and other input)
    - (House phone number, and other input)
  - Direct Destination Input ..... 40
    - (Direct Destination Input), (Selecting Route)
  - POI Icons on Maps / Delete Destination ..... 41
    - (POI (Point of Interest) Icons), (Delete destination)
  - Route Options ..... 42
    - (Route Preferences), (Modification of Destination or Way Point Positions), (Deletion of Destination or Way Points), (Detour), (Turn List), (Display Route), (Route Preview), (Setting the conditions for simulation run)



---

## Advanced use

- Address Book
  - Address Book ..... 46  
(Memory Point Storage), (Memory Point Confirmation and Modification),  
(Preset Destinations or Home storage), (Memory Point Deletion),  
(All Memory Point Deletion), (Displays Icons at Memory Points),  
(Avoid Area Storage), (Avoid Area Confirmation and Modification),  
(Avoid Area Deletion), (All Avoid Area Deletion),  
(Category Name Modification), (Previous Destination Deletion),  
(All Previous Destination Deletion)
- Voice Recognition ..... 50
  - Voice Recognition ..... 50  
(Voice Recognition Structure), (Select the Language),  
(Voice Recognition Basic Usage Pattern), (Cancel Voice Recognition),  
(Switch Operation List), (Voice Recognition Command)
- Volume Adjustment ..... 57
  - Volume Adjustment..... 57

 
 
 
 
 


Before Use

---

## If necessary

- If necessary ..... 58
    - Precautions/System Performance ..... 58  
(Voice Guidance), (GPS), (Map Matching), (Positioning Accuracy),  
(Route Guide), (Route Search)
    - Troubleshooting ..... 62  
(Verification First), (Error Messages)
    - Maintenance ..... 65  
(Care of the Product), (Handling and Care of Map Discs)
- 







# Safety Information

 
 
 


Before Use

- Read this owner's manual for your Navigation System carefully before using the system. It contains instructions about how to use the system in a safe and effective manner. Mazda assumes no responsibility for any problems resulting from failure to observe the instructions given in this manual.
- This manual uses pictographs to show you how to use the product safely and to alert you to potential dangers resulting from improper connections and operation. The meanings of the pictographs are explained below. It is important that you fully understand the pictographs and explanations in order to use this manual and the system properly.

 Warning	<b>Warning</b> The presence of this Warning symbol in the text is intended to alert you to the importance of heeding the operation instructions. Failure to heed the instructions may result in severe injury or death.
--	---

 Warnings	<ul style="list-style-type: none"> <li>■ <b>Do not keep your eyes fixed on the monitor screen or operate the system while driving.</b> Do not change the settings and destination locations while driving. Minimize the time spent on viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and can cause accidents. Always stop the vehicle in a safe location and use the parking brake before operating the system.</li> <li>■ <b>Always obey local traffic regulations.</b> Your guided route may include roads that are not open to vehicles or are closed due to traffic regulations. Comply with the local traffic regulations and take another route.</li> <li>■ <b>Do not use the unit when it is out of order.</b> If the unit is out of order (no image, no sound) or in an abnormal state (has foreign matter in it, is exposed to water, is smoking, or smells), then turn it off immediately and consult with an Expert dealer, we recommend an Authorized Mazda Dealer. Using the unit in an out-of-order condition may lead to accidents, fires, or electric shocks.</li> <li>■ <b>Use the proper power supply.</b> This product is designed for operation with a negative grounded 12 V DC battery system.</li> <li>■ <b>Do not disassemble.</b> Do not disassemble the product or attempt to repair it yourself. If the product needs to be repaired, take it to an Authorized dealer, we recommend an Authorized Mazda Dealer.</li> </ul>
---	--





Caution

## Caution

The presence of this Caution symbol in the text is intended to alert you to the importance of heeding the operation instructions. Failure to heed the instructions may result in injury or material damage.



Cautions

- **Do not use the product where it is exposed to water, moisture, or dust.**  
Exposure to water, moisture, or dust may lead to smoke, fire, or other damage to the unit. Make especially sure that the unit does not get wet in car washes or on rainy days.
- **Keep the voice guidance volume at an appropriate level.**  
Keep the volume level low enough to be aware of road and traffic conditions while driving.
- **Protect the Deck Mechanism.**  
Do not insert any foreign objects into the slot of this unit.
- **This navigation system is designed exclusively for use in automobiles.**  
This navigation system should only be installed in an automobile. Do not install it in a ship, aircraft, or any other vehicles except an automobile. Do not use it detached from the vehicle.
- **Do not insert or allow your hand or fingers to be caught in the unit.**  
To prevent injury, do not get your hand or fingers caught in moving parts or in the disc slot. Especially watch out for infants.

Before Use

Operation is subject to the following two conditions;  
 (1) this device may not cause interference, and  
 (2) this device must accept any interference,  
 including interference that may cause undesired operation of the device.





# Introduction

Before Use

## Use This Product Safety

### ■ Extremely low or high temperatures may interfere with normal operation

The inside of the vehicle can become very hot or cold when it is parked for extended periods in direct sunlight or in cold places with the engine turned off. The navigation system may not operate normally under such circumstances. Turn off the navigation system until the inside of the vehicle has cooled down or warmed up. If the system does not operate thereafter, consult an Authorized Dealer, we recommend an Authorized Mazda Dealer.

## Navigation System

This navigation system utilizes GPS\* satellite signals, a speed sensor and gyrosensor to track and display your vehicle's current position, and to guide you from your starting point to your destination along a calculated route.

\* : GPS (Global Positioning System) is a position detecting system utilizing the signals from GPS satellites deployed by the U.S. Defense Department.

## Beep sound and voice guidance restrictions while using Bluetooth Hands-Free

 
 
 
 
 
The beep sound and voice guidance related to the navigation system operation are not heard while a Bluetooth Hands-Free is being used.

## Screens

**Screens displayed in this manual may differ from those on the actual display.**

## LCD (Liquid crystal display)


Direct sunlight or other outside light sources makes it difficult to view the images on the display. For moonroof-equipped vehicles, close the sunshade to better view the display.






# Names and Functions

The navigation system can be operated by pressing a button on the panel (panel button) or selecting a button displayed on the screen (on-screen button).

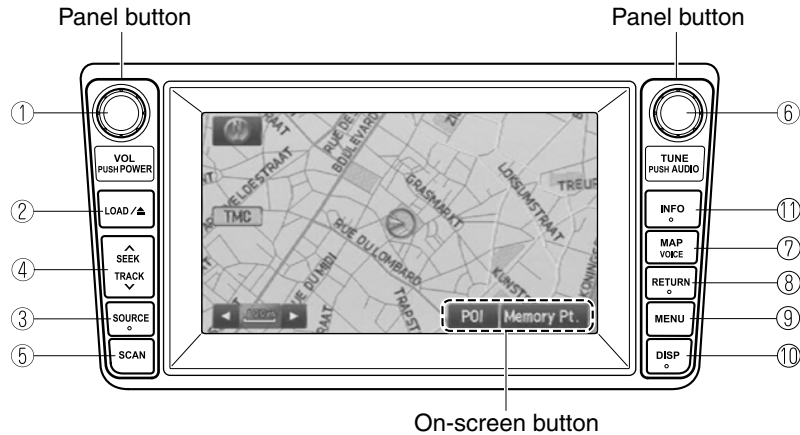

Before Use

 1. **POWER/VOLUME dial:** Turn the audio unit off by pressing the dial. The volume can be adjusted by turning the dial.
2. **LOAD/EJECT button:** CD loading and ejection. If the display is left in the lowered position for a certain period of time, a beep sound is heard and the display closes automatically.
3. **SOURCE button:** Used to change the audio source.
  - and on-screen buttons : FM/AM broadcast reception.
  - on-screen button : CD mode
  - on-screen button : Satellite radio
  - and on-screen buttons : Image and Sound playback is possible using a portable video player connected to an external input terminal.\*<sup>1</sup>  
Sound playback is possible using an audio player connected to an external input terminal.\*<sup>1</sup>  
AUX1: External sound  
AUX2: External image & sound (if equipped)
  - on-screen button: iPod mode
  - on-screen button : BT-Audio mode
4. **SEEK/TRACK button:** Performs tuning (short press) and searching (long press) in FM/AM mode, Performs track skip (short press) and fast-forward/reverse (long press) in CD mode.
5. **SCAN button:** Performs scanning operation in FM/AM, CD and Satellite radio modes.



Before Use

- 6. TUNE AUDIO dial: The audio display screen can be switched on or off by pressing the dial. Turning the dial changes the radio station frequency.
- 7. MAP/VOICE button<sup>\*2</sup> : Used to replay a voice navigation assist while in the navigation mode and to return to a map of the current location when the displayed area deviates from the current location by scrolling the screen.
- 8. RETURN button<sup>\*2</sup> : Button used to return to the previous navigation screen.
- 9. MENU button<sup>\*2</sup> : Menu screen display (various settings).
- 10. DISP button: Screen brightness/contrast mode selection and adjustment display.
- 11. INFO button: Changes the various indications on the information display.

\*1 :The external input terminal is not equipped on your vehicle because it is not standard equipment.

\*2 : For navigation unit operation






**Note**

     - If there is no response after selecting the on-screen button, remove your finger from the screen and select it again.
- On-screen buttons that cannot be operated are not illuminated.



Caution

Select the on-screen button lightly with your finger. Selecting the on-screen buttons using objects that have a hard or sharp end such as a ball point pen or mechanical pencil could cause a malfunction.




# Activation

Insert the map disc into the unit to start the Mobile Navigation System.

## ■ Data coverage area of map disc

Regarding the data coverage area, refer to the case of the navigation map disc.

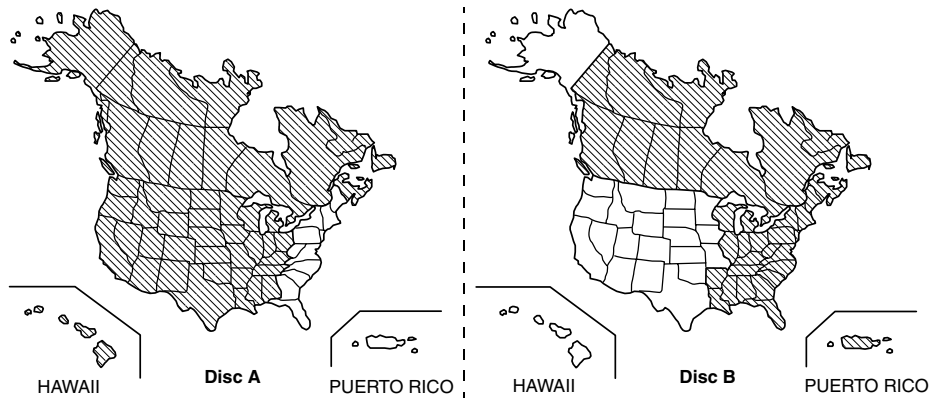

Getting started

The following function data are recorded in each area disc.

- Point of Interest search
- Address search
- Intersection search
- Freeway On Ramp / Off Ramp search
- Phone Number search




### ■ Map Disc

- Refer to "Handling and Care of Map Discs" to know how to handle a map disc (page 65).

### Note

- The map disc cannot be inserted or ejected while the ignition switch is in the OFF position.
- Remember that the battery can run down if the ignition switch is kept in the ACC or ON position for a long time while the engine not running.

**1** Switch the ignition to ACC or ON and press **LOAD / ▲**.

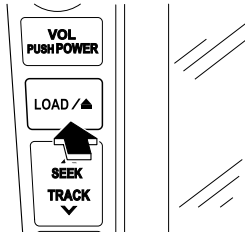


**2** Select the MAP on-screen button to open the display.



MAP on-screen button

**3** Insert the map disc with the printed side facing up.

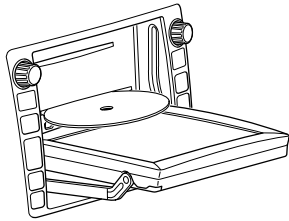

**Note**

- Condensation may form on the optical lens or the map disc inside the unit when the temperature in the vehicle increases in a short time such as when heating the car on a cold day. This condensation may cause malfunctions. If so, unload the map disc and do not operate the unit for approximately 1 hour. Wipe the condensation off the map disc with a soft cloth. If the unit does not operate correctly after 1 hour, consult an Authorised Mazda Dealer.



(CAUTION) screen

**Note**

- When the ignition switch is in the ACC or ON position, the screen changes as shown above to activate the navigation system.
- The screen (audio or navigation) that was displayed prior to the engine being turned off is displayed. Before the navigation screen is displayed, the CAUTION screen will be displayed.



**4** Read the **CAUTION** carefully, and select the **Agree** on-screen button.



Most functions are inhibited while the vehicle is in motion. Please read the handbook for operation instructions. Always obey traffic regulations.

- The Current Position screen appears.

**Note**

- You can select the language by selecting the  on-screen button. You can also change the selected language using Language Selection. (  page 20)
- The CAUTION screen remains on the display unless you select the **Agree** on-screen button.

Getting started

**Removing the Map Disc**

Press the **LOAD / ▲** and **MAP** on-screen button with the ignition switch in the **ACC** position.



MAP on-screen button



Do not get your hand or fingers caught in moving parts or in the disc slot. This can cause injuries. Children are inquisitive, try to install or remove the map disc without infants looking on.

**On-screen Buttons**

Select the on-screen button lightly with your finger. Colors for unavailable buttons will be pale.




# Menu



Menu appears when pressing **MENU**.



Getting started

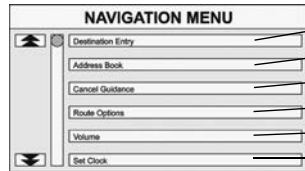

Destination Entry and Route Search ( page 30)


Address Book ( page 46)

Cancel Guidance ( page 41)

Route Options ( page 42)




Volume ( page 57)

Set Clock ( page 15)

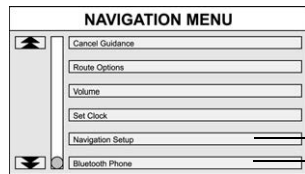

Navigation Set Up ( page 16)

   Bluetooth Phone ( page 114)



# Set Clock

The current time is set using this function. Since time notification is provided by a GPS satellite.



**Before Steps**



**MENU**



→ select  Set Clock

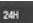
## Open the [SET CLOCK] screen



Select  if you prefer 24-hour display;  for 12-hour display.

Select  to move the setting ahead by 1 hour, and similarly, select  hour to move it back by 1 hour.

Select  to move the setting ahead by 1 minute, and similarly, select  min to move it back by 1 minute.

How to exit .

### Note

Clock time is adjusted by the GPS, however, it is necessary to adjust hours and / or minutes under the following conditions:

- Driving across different time zones
- Daylight saving time start and end

Getting started

# Navigation Set Up

- You can alter the map display conditions, the route guidance conditions and show the system information.



Warning

■ **Stop your vehicle before the following operations.**

Do not change the settings and destination locations while driving. Minimize the time spent viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and may cause an accident. Always stop the vehicle in a safe location and put the parking brake on before operating the system.












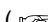
Getting started

Before Steps **MENU** → select  Navigation Setup

Open

[NAVIGATION SETUP]



-  User Settings (  page 17)
-  Quick POI Selection (  page 19)
-  Language (  page 20)
-  Map Configuration (  page 21)
-  Calibration (  page 22)
-  Restore System Defaults (  page 24)



# Navigation Set Up

## User Setting

**Before Steps**

**MENU** → select 

→ select 



Getting started

Open the [USER SETTINGS] screen



### Map Color



Select a screen color from the **1** to **3** options.

### MAP Mode



- **Auto** : The display will automatically switch between Day and Night illumination mode when the headlights are turned off and on respectively.
- **Day** : The display will be presented in Day illumination mode regardless of whether the headlights are on or off.
- **Night** : The display will be presented in Night illumination mode regardless of whether the headlights are on or off.

### Distance






Select the distance unit from **km** or **Miles**.

### Average speed



Set the average speed for each road to be driven. (This function sets the standard speed (average vehicle speed for each route) used for calculating the estimated arrival time when calculating the route time.)



  Average speed setting  
 :Changes back to default

### Road Restriction Warnings



The display of warnings during route guidance when passing through areas with traffic restrictions can be turned on or off.

# Navigation Set Up

## User Setting




Getting started

**Before Steps**

MENU → select Navigation Setup

→ select User Settings

**Open the [USERSETTINGS] screen**



- Arrival Time**

Arrival Time

The time which is displayed until reaching the destination or a way point can be set as an estimated arrival time or the remaining time.

Select to display the estimated arrival time, or to display the remaining time.
- Keyboard layout**

Keyboard layout

The layout of input keys can be selected as or .
- Clock**

Clock

Allows selection of whether clock is to be displayed. When the time display setting is switched on in the "USER SETTINGS" screen on the navigation screen, the time will be displayed on the navigation, SETTINGS, SOUND, LOAD/EJECT, and DISPLAY MODE screens. Even if the display of the clock on the navigation is not set, the clock on the information display remains displayed.

# Navigation Set Up


## Quick POI Selection

This function allows you set the categories on the area displayed when the (Point of Interest) menu is selected on the map. Quick POI enables you store up to six different kinds of categories which you use most regularly.



Getting started

### Open the [QUICK POI SELECTION] screen

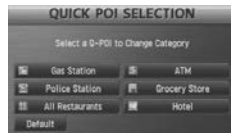

Select the button for Quick POI storage.

#### Note

● Select the category to be changed

**Default** : This button allows you to restore the factory settings.



Select a category.

Once selected, subcategories will be displayed.

**List All Categories** : Subcategories from all of the individual categories will be displayed together.



Select the subcategories to be displayed on the map.

Repeat the above steps to add further POI markers displayed on the menu.



# Navigation Set Up

## Language

You can change the language of the menu and the voice guidance.



Getting started

**Before Steps**

**MENU** → select Navigation Setup

→ select Language

 
 
 
### Open the [LANGUAGE] screen



Select your preferred language from the list.



: Select the language when using voice activate.  
( page 51)



# Navigation Set Up

## Map Configuration

**MENU** → select  Navigation Setup

**Before Steps**

→ select  Map Configuration

 
**Open the [MAP CONFIGURATION] screen**



### MAP Screen

Select single, dual map display or current position.

#### Single map



#### Dual map



#### Current position



### Turn Guidance

#### Turn Arrow (on first screen)



While using route guidance, the directions for the next junction where you have to turn are shown as Turn Arrow in the upper right.

#### Turn List



While using route guidance, the directions for the next junction where you have to turn are shown as Turn List.

#### Turn Arrow (on second screen)



While using route guidance, the directions for the next junction where you have to turn are shown as Turn Arrow.

### Note

Before a fork in the road, an enlarged diagram of the junction automatically appears in a second screen. This is to make route guidance even clearer.

### Intersection Detail

Intersection Detail  On  Off

Select whether the Enlarged Junction diagram screen is displayed automatically.

### Freeway Information

Freeway Information  On  Off

Allows selection of whether the guidance screen is to be displayed while driving on a Freeway.

Getting started



# Navigation Set Up

## Calibration



This function allows you to correct any error in the position or direction of your vehicle display.

Before Steps

**MENU**



select

Navigation Setup




Getting started

### Adjusting Current Position and Direction



select **Position / Direction**

Open the [Calibrate Position] screen



Move  to the correct position and select **OK**.



Use  or  to adjust the direction in which you are heading, and select **OK**.

### Map Vers

The map a

select

Map and s

 


 
### Distance

This function automatically corrects any error in the display of the current position that might occur after tire replacement.

select **Distance**

You will have to drive about 6 miles (10 km) before distance correction is complete.





select  Calibration

### Map Version

 
 
 
 
 
The map and software version numbers can be confirmed using this function.

select 

Map and software versions are now displayed.



Getting started



# Navigation Set Up

## Restore System Defaults

This function replaces all the settings in the mobile navigation system with the initial default settings.



Getting started

**Before Steps**

MENU → select Navigation Setup

→ select Restore System Defaults

**Open the [SYSTEM DEFAULTS] screen**

Select .

**SYSTEM DEFAULTS**

System defaults will be restored.  
Please see handbook for more information on System defaults.

If you execute Restore System Defaults, all of your stored setting data will be deleted.

### [Default List]

Item	Initial condition
<b>USER SETTING</b>	
Map Colour	1
MAP Mode	Auto
Distance	Miles
Average speed (Urban road)	20 MPH(30 KPH)
Average speed (Country road)	40 MPH(60 KPH)
Average speed (Freeway)	60 MPH(100 KPH)
Notify traffic restriction	On
Arrival Time	Time
Keyboard layout	ABC
Clock	On
<b>QUICK-POI SELECTION</b>	
Quick-POI Selection	A : Gas station B : ATM C : Police Station D : Grocery store E : All Restaurant F : Hotel
<b>LANGUAGE</b>	
Display guidance language	English
<b>VOICE RECOGNITION</b>	
Speech recognition Language	English
<b>MAP CONFIGURATION</b>	
Map Screen	Single-screen display
Turn Guidance Screen	Turn List Mode
Intersection Detail	On
Freeway Information	Off
<b>SET CLOCK</b>	
	Display type 12h


Item	Initial condition
<b>ROUTE PREFERENCES</b>	
Allow Toll Road	Avoid
Allow Major roads	Prefer
Allow Ferry	Avoid
Allow Restricted Road	Avoid
Border Crossing	Prefer





# Screen Names and Functions

## Screens Before Setting Route

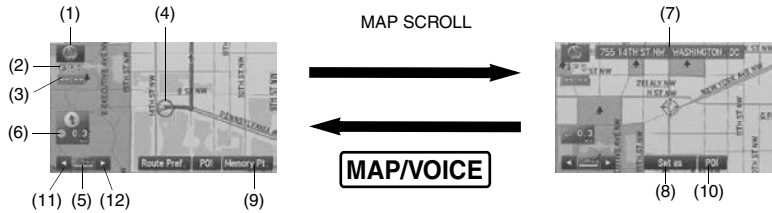

Getting started

- (1) **Map Orientation control**  
(☞ page 28)
- (2) **GPS (Global Positioning System) marker**  
(☞ page 59)
- (3) **Clock**  
Clock will be displayed when you set up Clock on Navigation Set Up On.
- (4) **Vehicle marker**  
Shows the current position and direction of your vehicle.
- (5) **Scale display**  
Displays the scale of the map.
- (6) **Distance from current position**  
Displays the distance from the current position to the position pointed by ○.
- (7) **Current Road Name**  
Shows the name of the road you are currently driving on.
- (8) **Set Destination button**  
The position indicated by the mark "○" in the scroll map is used as destination, memory point or way point.
- (9) **Store Memory Point button**  
Stores markers on the map.
- (10) **POI (Point of Interest) Display button**  
(☞ page 38)
- (11) **Zoom in**  
(☞ page 28)
- (12) **Zoom out**  
(☞ page 28)

## Screens During Route Guidance



- (1) **Distance and Time to Destination display**  
Displays the time\* and distance to the destination or way point. Selecting this will display the next and further information on the way point or time and distance to the destination. (\* Either required time or estimated time arrival)
- (2) **Route display**  
Shows the provided route as a thick blue line.
- (3) **Turn Arrow display**  
Shows the direction to turn at the next junction and the distance to the junction.
- (4) **Route Preferences button**  
(☞ page 42)

## Screen adjustments, beep alert and other settings

Display menu screen will be shown when you press the disp button (DISP). Press the disp button (DISP) to display the display menu.



### ■ Adjusting the screen quality

- Screen brightness  
Press the **+** on-screen button to brighten the screen, or **-** to darken.
- Screen contrast  
Press the **+** on-screen button to increase contrast, **-** to decrease.

#### Note

- Select the **RESET** on-screen button to restore the adjustment values to the default settings.
- The screen changes to **SETTINGS** when the **SETTINGS** on-screen button is selected.

### ■ Turning off the display

Select the **DISP OFF** on-screen button to turn off the display.  
Press the **MAP/VOICE** or **MENU** button to turn on the display.  
Press the **RETURN** button to return to the display previously shown.

### ■ Tilt display operation

Select the **TILT** on-screen button to tilt the display, **↖** to close it.  
The display angle can be adjusted in three stages.  
When opening, the display angle changes one stage at a time each time the **↗** on-screen button is pressed.  
When closing, the display angle changes one stage at a time each time the **↖** on-screen button is pressed.

### ■ Daytime/Night screen

- When the headlights are on, daytime mode can also be selected (if a brighter screen is needed at night). This selection can only be done when the headlights are on.
- The screen can be returned to the daytime screen while the headlights or running lights are on by rotating the dashboard illumination knob clockwise fully. You will hear a beep sound and the illumination dimmer will be canceled.



Press the disp button (DISP) followed by the **SETTINGS** on-screen button to display the settings menu.



■ **Returning to the navigation screen from the audio unit screen**

 
 
 
 
 
- Select the **MANUAL** on-screen button to set the function to return to the navigation screen from the audio unit screen by operation of the button only.
- Select the **AUTO** on-screen button to set the function to return to the navigation screen from the audio unit screen automatically after 20 seconds.

■ **Beep sound settings**

- Select the **ON** on-screen button to activate the operation beep sound.
- Select the **OFF** on-screen button to deactivate the operation beep sound.



Getting started





# Screen change



Getting started



## Do not keep your eyes fixed on the monitor screen or operate the system while driving

Warning

Do not change the settings and destination locations while driving. Minimize the time spent viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and may cause an accident. Always stop the vehicle in a safe location and use the parking brake before operating the system.

### Map orientation

1 Select , on-screen button.

● North Up: Geographic north is up.



● Head Up: The direction you are heading is up.



### Map scale

1 Select or on-screen button.

● The map can be displayed in 14 steps with scales from to .



● ZOOM OUT



● ZOOM IN (more detail.)



<Scale bar>

Imperial display	1/32 mi (mile)	1/4 mi (mile)	2 mi (mile)	16 mi (mile)	128 mi (mile)
Metric display	50 m	500 m	4 km	32 km	256 km

 
 
 




# MEMO



Getting started





# Destination Entry and Route Search

● You can set the destination using various methods provided by the system.

Before Steps **MENU** → select  Destination Entry



 
 
 
Routing

Open the  
[DESTINATION  
ENTRY] Menu



Select **Change**

Change  
(Change  
Search Area)





Warnings

- **Do not keep your eyes fixed on the monitor screen or operate the system while driving.** Do not change the settings and destination locations while driving. Minimize the time spent viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and may cause an accident. Always stop the vehicle in a safe location before operating the system.
- Route searches with the navigation system can include roads that you cannot drive on and roads that you are prohibited from driving on due to traffic regulations. Please comply with the traffic regulations.

### Select the desired Search Area

<b>AL</b> : ALABAMA	<b>MT</b> : MONTANA	<b>WI</b> : WISCONSIN
<b>AZ</b> : ARIZONA	<b>NE</b> : NEBRASKA	<b>WY</b> : WYOMING
<b>AR</b> : ARKANSAS	<b>NV</b> : NEVADA	<b>DC</b> : WASHINGTON, D.C.
<b>CA</b> : CALIFORNIA	<b>NH</b> : NEW HAMPSHIRE	<b>AB</b> : ALBERTA
<b>CO</b> : COLORADO	<b>NJ</b> : NEW JERSEY	<b>ON</b> : ONTARIO
<b>CT</b> : CONNECTICUT	<b>NM</b> : NEW MEXICO	<b>QC</b> : QUEBEC
<b>DE</b> : DELAWARE	<b>NY</b> : NEW YORK	<b>SK</b> : SASKATCHEWAN
<b>FL</b> : FLORIDA	<b>NC</b> : NORTH CAROLINA	<b>NL</b> : NEWFOUNDLAND AND LABRADOR
<b>GA</b> : GEORGIA	<b>ND</b> : NORTH DAKOTA	<b>NB</b> : NEW BRUNSWICK
<b>ID</b> : IDAHO	<b>OH</b> : OHIO	<b>NS</b> : NOVA SCOTIA
<b>IL</b> : ILLINOIS	<b>OK</b> : OKLAHOMA	<b>NU</b> : NUNAVUT
<b>IN</b> : INDIANA	<b>OR</b> : OREGON	<b>BC</b> : BRITISH COLUMBIA
<b>IA</b> : IOWA	<b>PA</b> : PENNSYLVANIA	<b>PE</b> : PRINCE EDWARD ISLAND
<b>KS</b> : KANSAS	<b>RI</b> : RHODE ISLAND	<b>MB</b> : MANITOBA
<b>KY</b> : KENTUCKY	<b>SC</b> : SOUTH CAROLINA	<b>NT</b> : NORTHWEST TERRITORIES
<b>LA</b> : LOUISIANA	<b>SD</b> : SOUTH DAKOTA	<b>YT</b> : YUKON
<b>ME</b> : MAINE	<b>TN</b> : TENNESSEE	<b>AK</b> : ALASKA
<b>MD</b> : MARYLAND	<b>TX</b> : TEXAS	<b>HI</b> : HAWAII
<b>MA</b> : MASSACHUSETTS	<b>UT</b> : UTAH	<b>PR</b> : PUERTO RICO
<b>MI</b> : MICHIGAN	<b>VT</b> : VERMONT	<b>VI</b> : VIRGIN ISLANDS OF THE U.S.
<b>MN</b> : MINNESOTA	<b>VA</b> : VIRGINIA	
<b>MS</b> : MISSISSIPPI	<b>WA</b> : WASHINGTON	
<b>MO</b> : MISSOURI	<b>WV</b> : WEST VIRGINIA	

The information for these countries and regions is recorded on a separate media.

- For Character Entry, please refer to page 39.

Routing

# Destination Entry and Route Search

Routing

Address

Open the [DESTINATION ENTRY] Menu



Select



When narrowing down to city name



Any City : Cancel the city selection.

5 Nearest Cities : Displays list of city names nearest the current position.

Input City Name : Displays the city name input screen.

When narrowing down to street name




Enter the street name and select List

When narrowing down to house no.



Enter the house no. and select OK



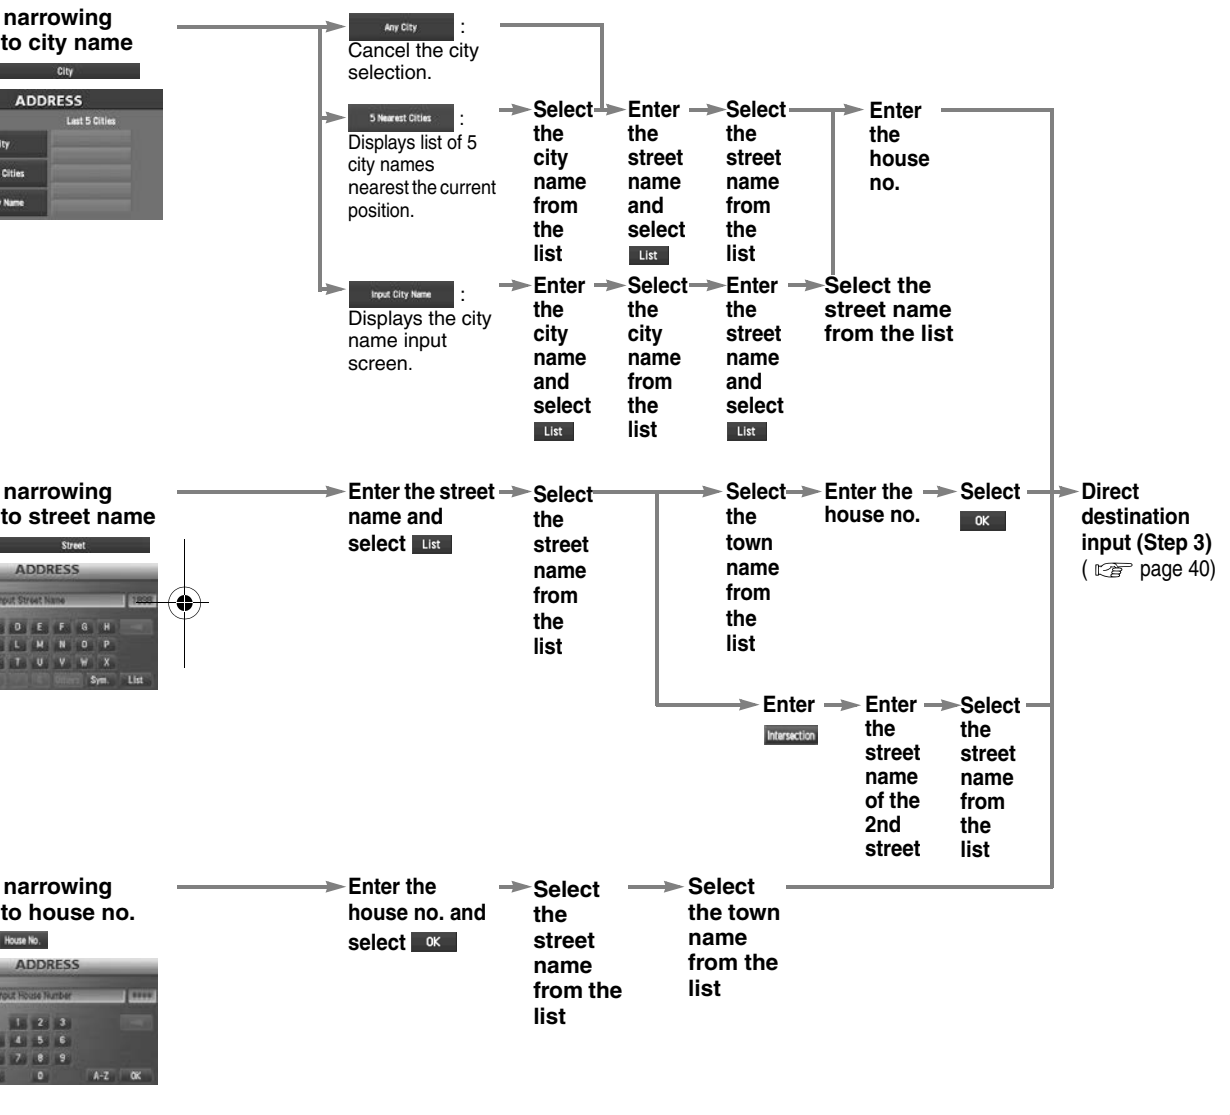


● For Character Entry, please refer to page 39.




**Routing**

# Destination Entry and Route Search

Routing

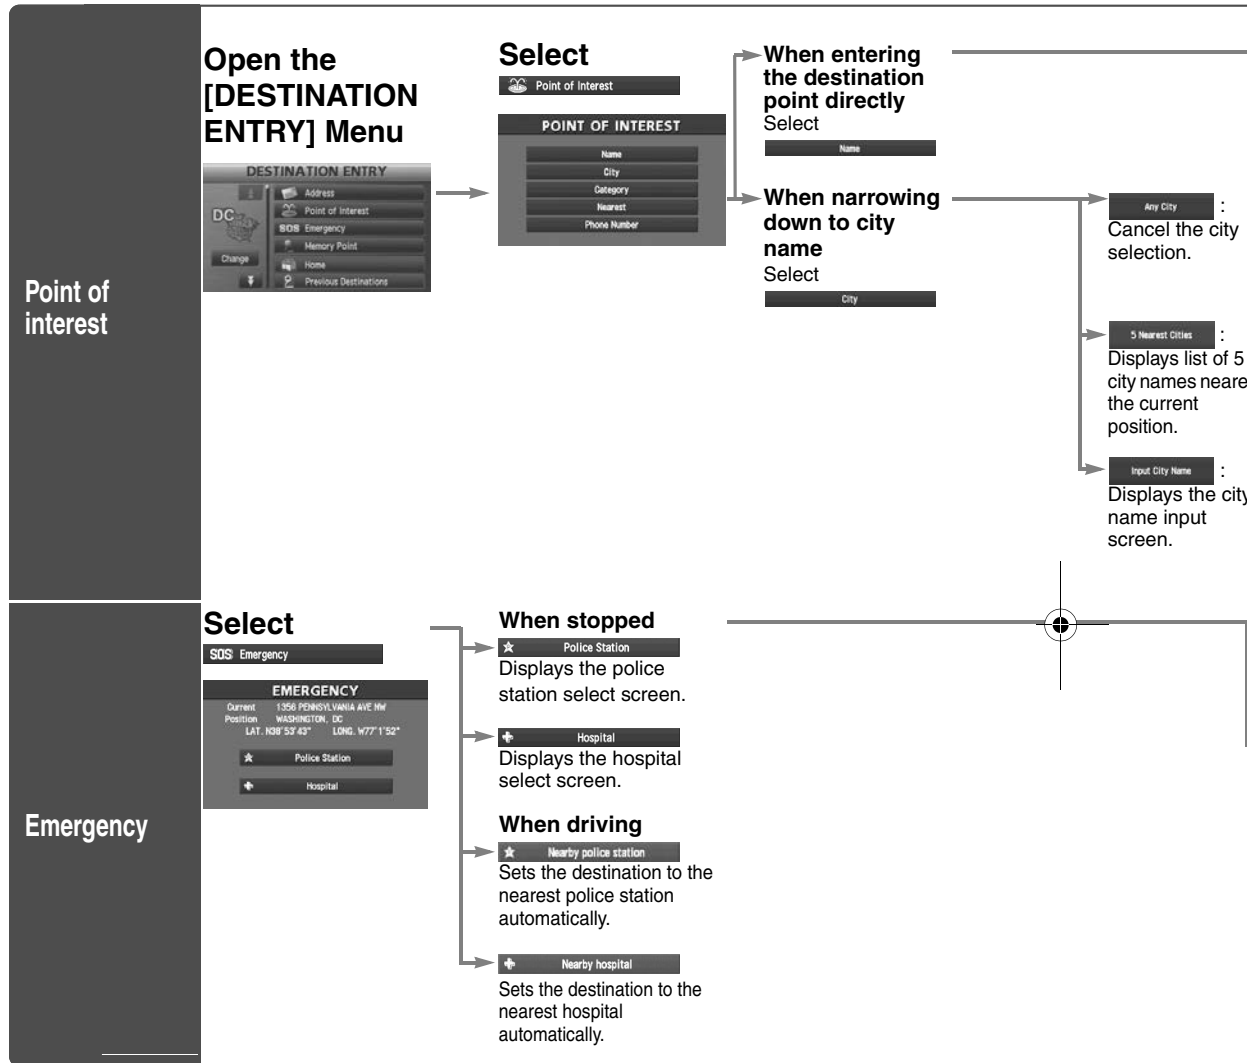

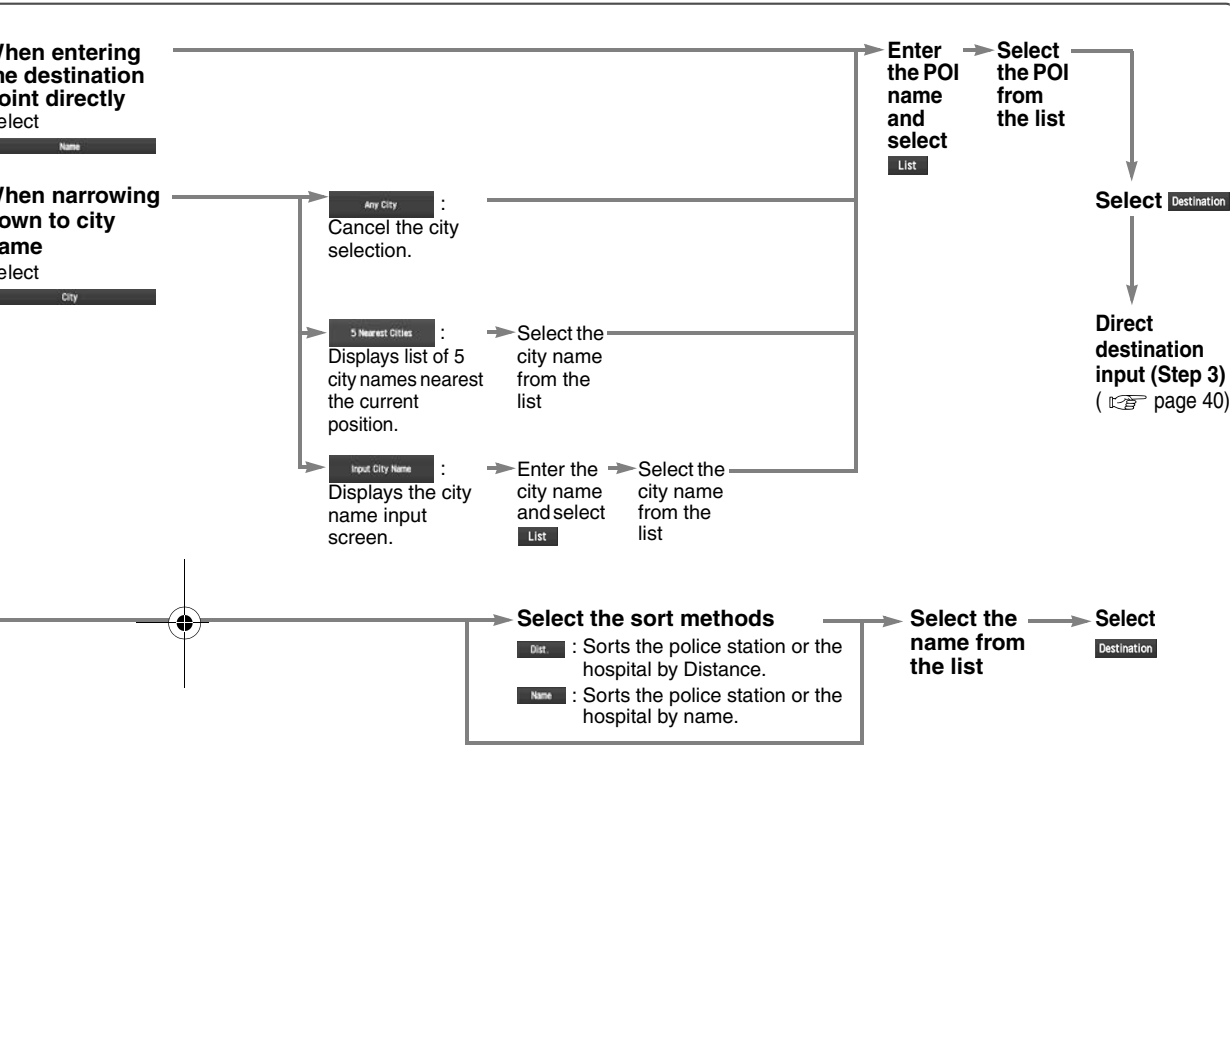

● For Character Entry, please refer to page 39.



# Destination Entry and Route Search

Before Steps **MENU** → select Destination Entry

Routing

- Memory Point
- Home
- Preset Destination
- Previous Destination
- Freeway On/Off Ramp
- Coordinates
- Select from map

Open the [DESTINATION ENTRY] Menu



Select Memory Point



Select the   
 ↑ : Display U  
 ↓ : Display  
 Sort : The order

Select Home

Select Preset Destinations

Select the

Select Previous Destinations

Select the

Select Freeway On Ramp / Off Ramp

Select the name of the freeway



Select Coordinates


 
Enter the latitude  
 :degrees  
 :minutes  
 :seconds






Select Select from Map



Routing

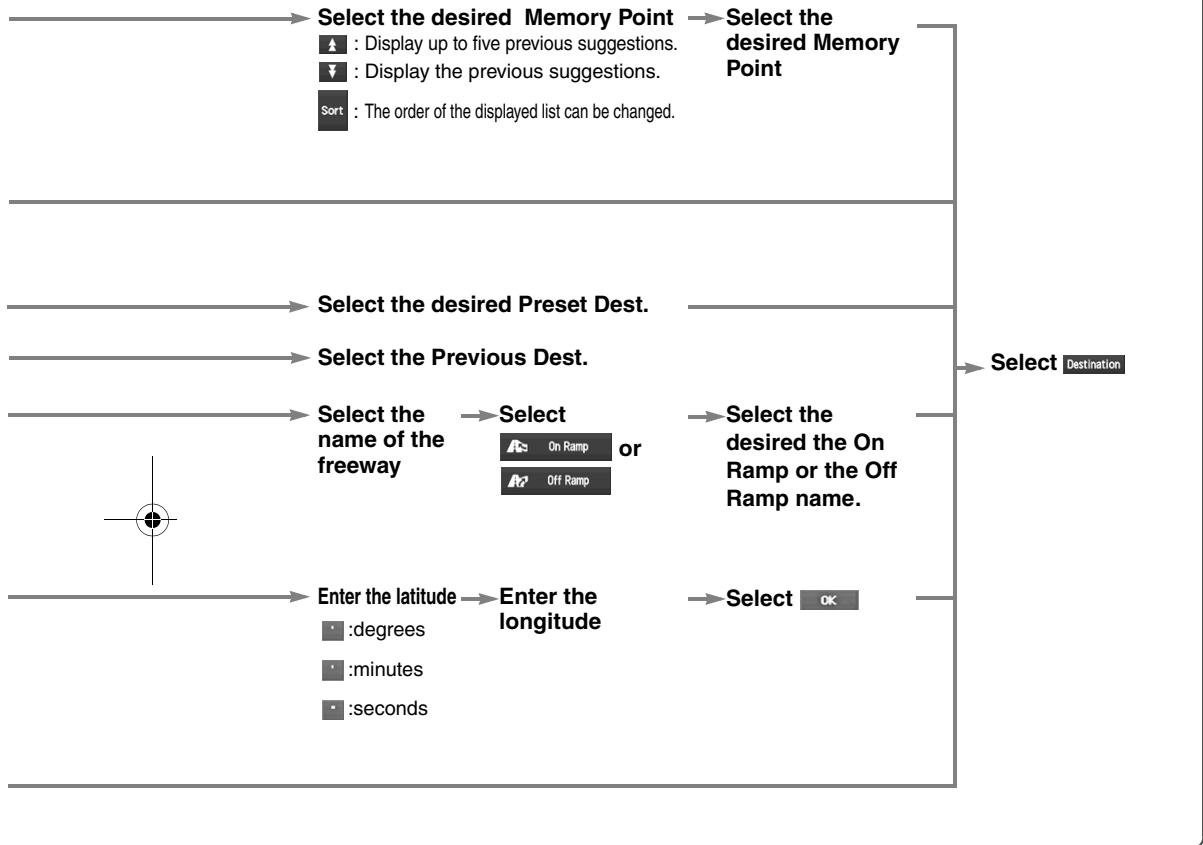

   ● For Character Entry, please refer to page 39.





# Quick POI

- You can select one of the Six Categories on the menu or List Categories and then select the POI(s) to be displayed on the map.


Before Steps Select **POI**



Routing

Displaying POI(s) on a Map

## Open the [QUICK POI]

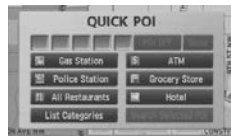

Select the categories to be displayed up to a maximum of five.

→ Show

● POI icon chart (☞ page 41)  
For categories other than the six displayed, select **List Categories** and select them from the list shown.

→ Search Selected POI

→ Select the POI you want to find from the listed facilities.

After you make a selection, the point of interest you selected appears on the map.

**Route**: Search POI along the route during the guidance and show the list.

→ POI Off

Local Search

Deleting POI Markers

Before Steps Displaying POI(s) on a Map (☞ above)

Showing POI Data

## Display the POI.



→ Select the desired POI by moving on top of the POI icon.

 
The name of the selected POI appears.

If no data is stored for the selected POI, the POI name is not displayed.

→ Select **Info**

(Information)

The POI(s) data is displayed.



# Character Entry

**Street name, town name, and other input**

**Select the first several characters on the screen. (Step 1)**

**Select** A-Z

**Select** Others

**Select** Sym.

**Select** Others

**Select** Others

← : Move the cursor to the previous position and delete a character.

List : The list appears.

● Examples

**Street: CANAL**  
Enter by selecting characters:  
C A [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ]

**Street: MAIN STREET**  
Enter by selecting characters:  
M A I N [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ]

**Select your target in the list. (Step 2)**

Names of which spelling starts with the entered character appear.

● If a desired name is not in the list, go back to Step 1, and try fewer characters.

↑ : Display up to five previous suggestions.

↓ : Display the previous suggestions.

▶ : Text flow (Right)

◀ : Text flow (Left)



**Routing**

**House phone number, and other input**

**Select the characters on the screen.**

**Select** OK

← : Move the cursor to the previous position and delete a character.



# Direct Destination Input



Routing

## Direct Destination Input

1

**Touch the map to set the cursor to the desired destination. The map scrolls faster the further away the touched location is from the cursor.**



Scroll the map and change the map scale if necessary.

2

**Select**



3

**Select**

Route calculation will be carried out and the entire route will be displayed on the map.

Select  (Way point) to set the address as a way point on your route ( page 25). You can set up to 5 way-points per trip.

4

**Select**

Route guidance begins using displayed route.

### Note

- If your desired route cannot be found,  (Route Options) allows the route option settings to be changed. ( page 42)
- Selecting  for five seconds or more will launch the Demo mode.

Operate after Step 3 of [Direct Destination Input]

## Selecting Route

4

The calculation route can be selected from one of three types namely, Quick (the fastest route), Short (the shortest route), or Altern (the standard route).

 
5

**Select**  (Information).

Details regarding the individual routes (i.e., required time, total distance, roads used, etc.)

**Select either** ,  , or  , and then select  when you have decided on the route to be used.

INFO FOR 3 ROUTES			
	Quick	Altern.	Short
	0h 3m	0h 4m	0h 3m
	1.7 miles	2.1 miles	1.7 miles
	0.0 miles	0.0 miles	0.0 miles
	0.0 miles	0.0 miles	0.0 miles
	0.0 miles	0.0 miles	0.0 miles
	0.0 miles	0.0 miles	0.0 miles





# POI Icons on Maps / Delete Destination

## POI (Point of Interest) Icons

The following are POI icons shown on maps.

<ul style="list-style-type: none"> <li><b>Restaurant</b> <ul style="list-style-type: none"> <li>All restaurants</li> <li>American</li> <li>Chinese</li> <li>Continental</li> <li>Fast Food</li> <li>French</li> <li>Italian</li> <li>Japanese</li> <li>Mexican</li> <li>Other Restaurants</li> <li>Seafood</li> <li>Thai</li> </ul> </li> <li><b>Shopping</b> <ul style="list-style-type: none"> <li>Grocery Store</li> <li>Shopping Mall</li> </ul> </li> <li><b>Automotive</b> <ul style="list-style-type: none"> <li>Automobile Club</li> <li>Auto Service &amp; Maintenance</li> <li>Gas Station</li> <li>Parking</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li><b>Travel</b> <ul style="list-style-type: none"> <li>Airport (All Search Areas)</li> <li>Bus Station</li> <li>Ferry Terminal</li> <li>Hotel</li> <li>Rental Car Agency</li> <li>Rest Area</li> <li>Train Station</li> </ul> </li> <li><b>Recreation</b> <ul style="list-style-type: none"> <li>Amusement Park (All Search Areas)</li> <li>Casino</li> <li>Golf Course</li> <li>Historical Monument</li> <li>Marina</li> <li>Museum</li> <li>Performing Arts</li> <li>Ski Resort</li> <li>Sports Complex</li> <li>Tourist Attraction (All Search Areas)</li> <li>Tourist Information</li> <li>Winery</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li><b>Community</b> <ul style="list-style-type: none"> <li>City Center</li> <li>Convention Center</li> <li>Court House</li> <li>Government Offices</li> <li>Hamlet</li> <li>Higher Education</li> <li>Hospital</li> <li>Library</li> <li>Park &amp; Recreation (All Search Areas)</li> <li>Police Station</li> <li>School</li> </ul> </li> <li><b>Banking</b> <ul style="list-style-type: none"> <li>ATM</li> <li>Bank</li> </ul> </li> <li><b>Other</b> <ul style="list-style-type: none"> <li>Business Facility</li> </ul> </li> </ul>
--	---	--

Routing

Delete destination

MENU

→

Select

Cancel Guidance

→

Select

Yes

41

# Route Options

- During route guidance you can change the route options, stop or check the route.

Before Steps **MENU** → select Route Options

Routing

## Route Preferences

Open the [ROUTE OPTIONS] Menu



Select




Select the button for the location to be modified.

Select (Change Location). Shows the map of the destination way points.

## Modification of Destination or Way Point Positions

Select

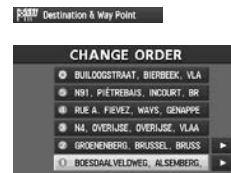

Select the way points to change the order. Change the destination and the passing order of the destination and way points.

Press to change order.

## Deletion of Destination or Way Points

Select the button corresponding to the destination or way point to be deleted.

Select

## Detour

Select



Searches 50 miles' selected to the search Whole Route from the

## Turn List

Select



The Enter Route screen appears.


Select from the route to be avoided



**Do not keep your eyes fixed on the monitor screen or operate the system while driving**  
 Do not change the settings and destination locations while driving. Minimize the time spent viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and may cause an accident. Always stop the vehicle in a safe location and use the parking brake before operating the system.



**Routing**

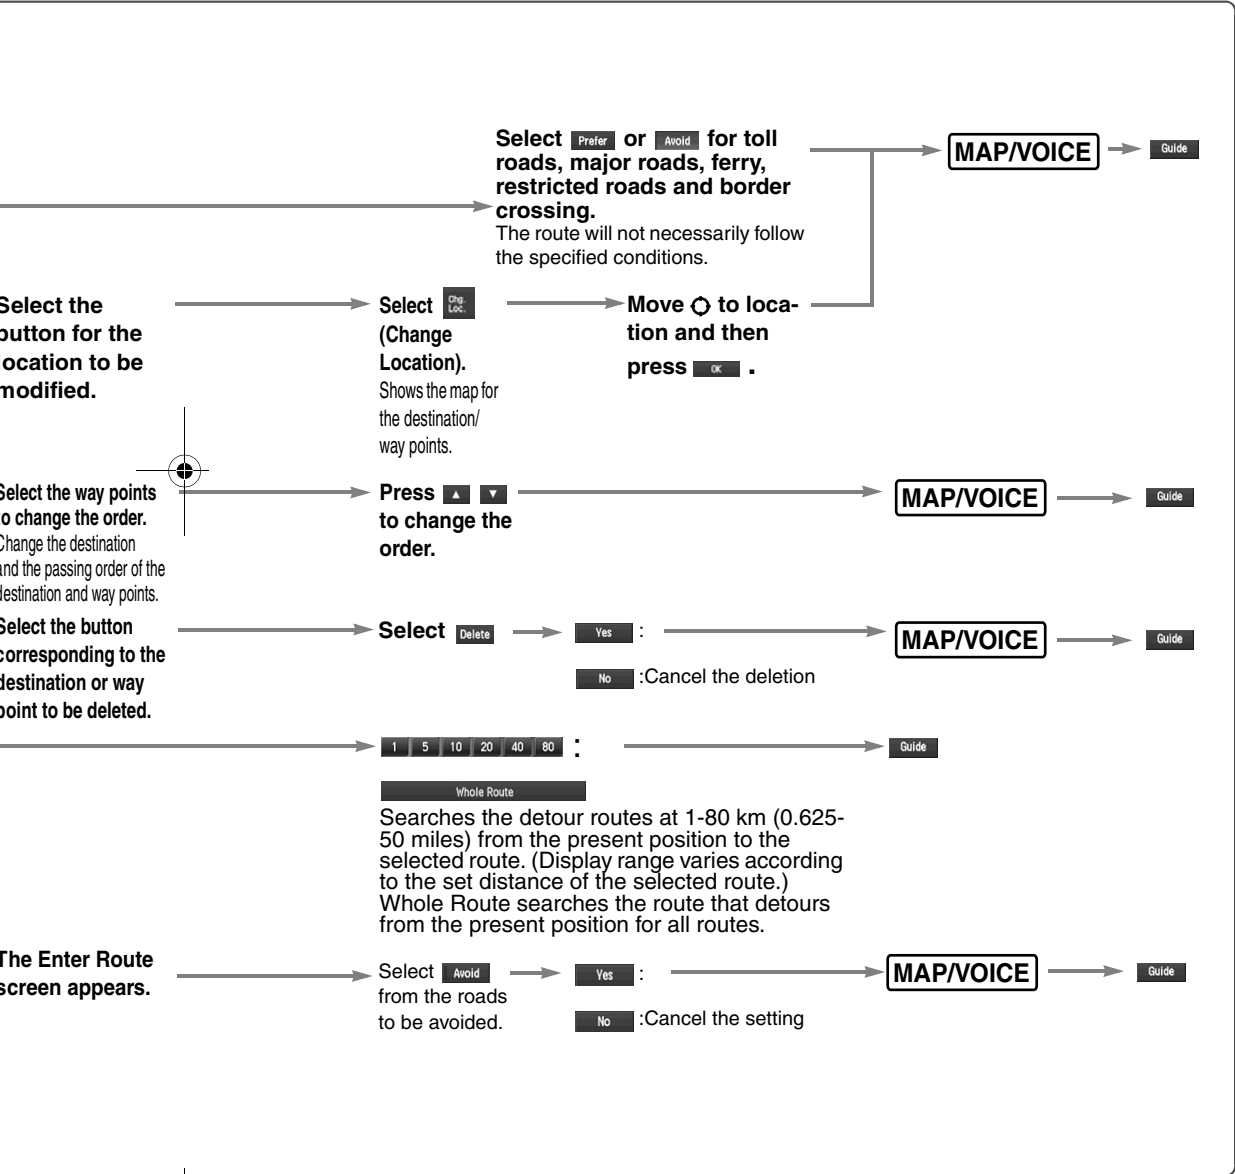



# Route Options



Before Steps **MENU** → select Route Options



Routing

Display Route

Open the [ROUTE OPTIONS] Menu



Select Display Route



Select Route Preview



Route Preview

Setting the conditions for simulation run

 
 
 
Use the but

- : Move
- : Carry o
- will be
- : Stop t
- : Carry o
- button
- : Move

Edit : Displa



POIs: D  
it will be  
display





**Use the buttons displayed on screen to carry out a simulation run.**

- : Move to the start point.
- : Carry out a simulation run in the direction of the start point. When the run has been started, this button will be displayed as , and when selected, it will cause to take place at high speed.
- : Stop the simulation run.
- : Carry out a simulation run in the direction of the destination. When the run has been started, this button will be displayed as , and when selected, it will cause to take place at high speed.
- : Move to the destination.

 
 
 
**Edit** : Displays the [EDIT ROUTE PREVIEW] screen.



- : Stops at the destination or the next way point.
- : Stops at a point of interest which has been set up on the route.
- : Delete the POI which has been selected.

POIs: Display the six POIs from Quick-POI storage. When one of these is selected, it will be displayed on the map; furthermore, can be selected to display items other than shown here. For more details, refer to page 19.

**RETURN**





# Address Book

● You can, edit, or delete any marked point.

Before Steps **MENU** → select Address Book



Address Book

Memory Point Storage

Open the [ADDRESS BOOK]

ADDRESS BOOK

- Memory Points/Home
- Avoid Area
- Previous Destinations

Select

Memory Points/Home

 

Memory Point Confirmation and Modification

Preset Destination s or Home storage

Memory Point Deletion


All Memory Point Deletion

Displays Icons at Memory Points

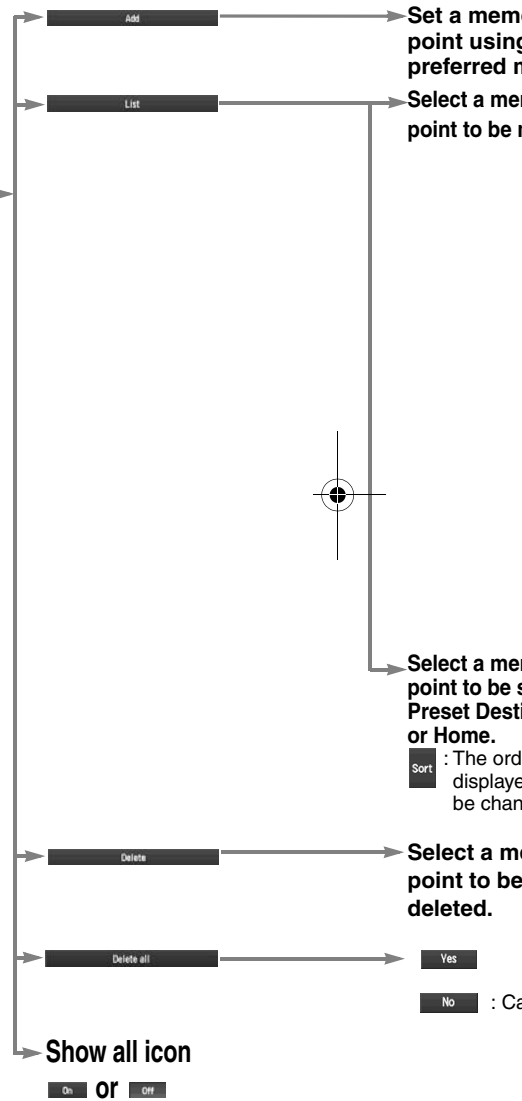



Address Book

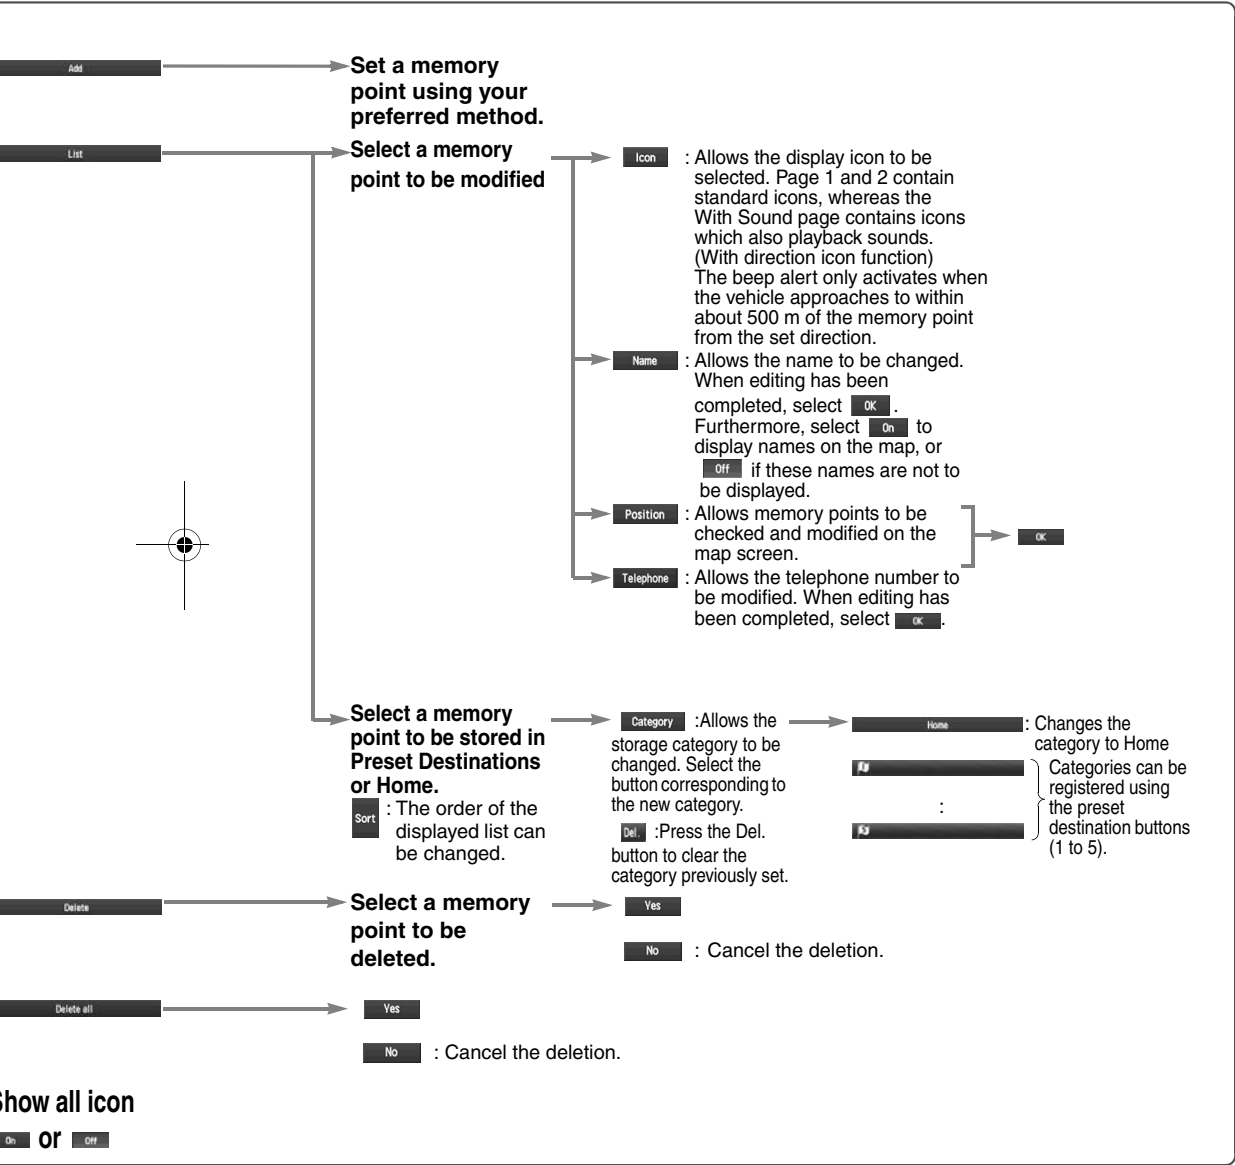



# Address Book



Before Steps **MENU** → select Address Book




Address Book

Avoid Area Storage

Open the [ADDRESS BOOK]

Avoid Area Confirmation and Modification

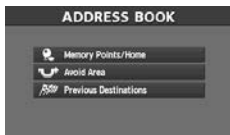

Avoid Area Deletion

Select



All Avoid Area Deletion

Category Name Modification

Select



Previous Destination Deletion

All Previous Destination Deletion

Add

 
List

Delete

Delete a

Delete




Delete a







Address Book

 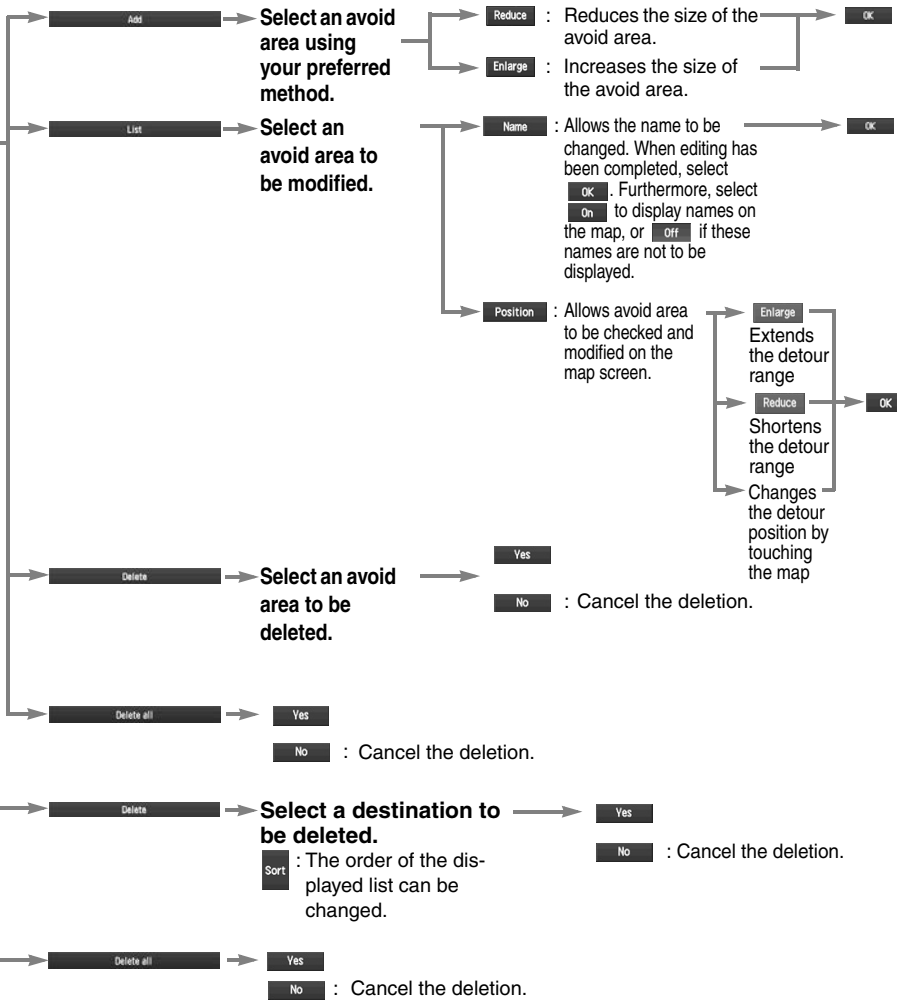 

# Voice Recognition

The voice recognition or the Bluetooth Hands-free system can be activated by pressing the talk button on the steering wheel. The target operation in each mode (status) differs depending on whether the switch is pressed with a short or long press. For details, refer to the following switch operation list. (☞ page 54)

- Bluetooth Hands-Free Outline


By connecting a Bluetooth equipped mobile telephone to the hands-free unit equipped on the vehicle, making and receiving calls are possible.

For details, refer to the "Bluetooth Hands-Free" in the owner's manual.

- Voice Recognition Outline


Voice control can be carried out by simply pressing the talk button and using a voice command (☞ page 55) spoken into the microphone.

- Microphone surface  
Voice entry recognition.

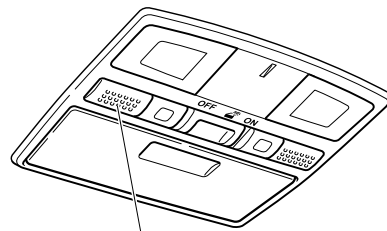

Microphone

- Talk button on the steering wheel switch  
Use for switching to voice recognition or Bluetooth Hands-free.

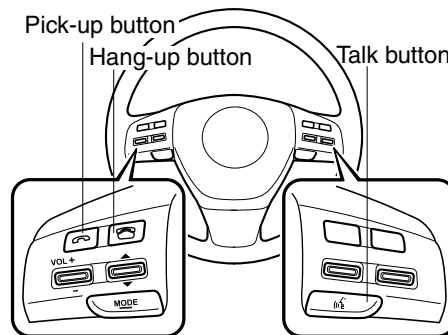




**Note**

If there is no setting for the Bluetooth Hands-Free system, the TEL commands (Phone/ Telephone) are not available.

**Select the Language**

Set up the language in advance.  
Voice entry recognition.

- 1 Press **MENU**
- 2 select  →  
select  → select 
- 3 Select your preferred language from the list.

**Note**

To return to current position screen, press **MAP/VOICE**.



Voice Recognition

**Voice Recognition Basic Usage Pattern**

- 1 Press the talk button on the steering wheel switch with a short press while the system is in standby mode.
- 2 Speak the desired voice command.

**Cancel Voice Recognition**

- 1 Long press the talk button on the steering wheel switch during navigation voice recognition.

**Note**

After the navigation system has been set, voice recognition needs approximately 2 minutes for activation on preparation. Wait momentarily.

## Switch Operation List

### Talk button

Mode (status)	Switch operation	Target operation
Standby	Short press	Activates voice recognition for navigation.
	Long press	Activates voice recognition for mobile phone.
During voice recognition for navigation	Short press	Repeats the previously transmitted audio guidance and then goes on standby awaiting user voice-command input.
	Long press	Ends voice recognition and returns to standby.
During voice recognition for mobile phone	Short press	Repeats the previously transmitted audio guidance and then goes on standby awaiting user voice-command input.
	Long press	Ends voice recognition and returns to standby.
Incoming user A	Short press	(No operation.)
	Long press	
Outgoing user A	Short press	(No operation.)
	Long press	
During call with user A or conference Call	Short press	Activates voice recognition for mobile phone.
	Long press	(No operation.)
During call with user A and incoming user B	Short press	(No operation.)
	Long press	
During call with user A while user B on hold	Short press	Activates voice recognition for mobile telephone.
	Long press	(No operation.)
During phone pairing process with voice recognition	Short press	Pairing mode is canceled.
	Long press	Ends voice recognition and returns to standby.

**Note**

Short pressing the talk button during transmission of the audio guidance will skip the audio guidance and put the system on standby awaiting voice-command input from the user.

Voice Recognition

 
 
 
 
 


**Pick-up button**

Mode (status)	Switch operation	Target operation
Standby	Short press	Activates voice recognition for mobile phone.
	Long press	
During voice recognition for navigation	Short press	(No operation.)
	Long press	
During voice recognition for mobile phone	Short press	(No operation.)
	Long press	
Incoming user A	Short press	Accepts user A.
	Long press	
Outgoing user A	Short press	(No operation.)
	Long press	
During call with user A or conference Call	Short press	If user A or a conference call is active, user A or the conference call is put on hold (toggle), and a tone is played.
	Long press	If user A or a conference call is on hold, switches to user A or the conference call.
During call with user A and incoming user B	Short press	Puts user A on hold and answers user B.
	Long press	
During call with user A while user B on hold	Short press	Puts user A on hold, switches to user B (toggle), and plays a tone.
	Long press	
During phone pairing process with voice recognition	Short press	Pairing mode is canceled.
	Long press	(No operation.)



Voice Recognition



**Hang-up button**

Mode (status)	Switch operation	Target operation
Standby	Short press	(No operation.)
	Long press	
During voice recognition for navigation	Short press	Ends voice recognition and returns to standby.
	Long press	
During voice recognition for mobile phone	Short press	Ends voice recognition and returns to standby.
	Long press	
Incoming user A	Short press	Rejects user A.
	Long press	
Outgoing user A	Short press	Hangs up user A.
	Long press	
During call with user A or conference Call	Short press	Hangs up user A or conference call.
	Long press	
During call with user A and incoming user B	Short press	Hangs up user A and answers user B.
	Long press	
During call with user A while user B on hold	Short press	Hangs up user A and switches to user B.
	Long press	
During phone pairing process with voice recognition	Short press	Pairing mode is canceled.
	Long press	(No operation.)

### Avoiding Voice Recognition Errors.

Read the notes listed below to allow the Voice Recognition function to recognize your voice properly.

- Speak a voice command clearly.
- Keep yourself in a safe driving position. Do not face or approach the microphone to make a voice command recognizable.  
Voice recognition may fail to recognize your command due to voice tone. If this happens, change the tone of your voice by speaking more loudly and clearly.
- Keep the inside of the vehicle quiet when making a voice command. Your command may be compromised by noises made by people, blinkers, the horn, vehicle vibration, and noises from outside the vehicle.
- Use the language you selected in voice recognition.

## Voice Recognition Command

The following voice commands can be used with voice control.

<b>SHORTCUT COMMANDS</b>	(Convention / Exhibition) CENTER	RENTAL CAR AGENCY
[Show] CURRENT (Position/Location)	COURT HOUSE	REST AREA
[Show] MAP	GOVERNMENT (Offices / Office)	TRAIN STATION
[Show] list	(University / Higher Education / College)	BUSINESS FACILITY
Set	HOSPITAL	HAMLET
Other	LIBRARY	<b>DESTINATION OPERATION COMMANDS</b>
REPEAT [Voice] [Guidance]	(Park / Parks) and RECREATION	[Go] HOME
CANCEL	POLICE STATION	[Enter] DESTINATION
<b>MAP OPERATION COMMANDS</b>	SCHOOL	[Add to] WAYPOINT
ZOOM IN	AMUSEMENT PARK	[Go to/Previous] STARTING POINT
ZOOM OUT	CASINO	[Go to] PREVIOUS DESTINATION
ZOOM IN MAXIMUM	GOLF COURSE	[Go to] PRESET DESTINATION [Number] 1
ZOOM OUT MAXIMUM	HISTORICAL MONUMENT	[Go to] PRESET DESTINATION [Number] 2
RIGHT [SCREEN] MAP ZOOM IN	MARINA	[Go to] PRESET DESTINATION [Number] 3
RIGHT [SCREEN] MAP ZOOM OUT	MUSEUM	[Go to] PRESET DESTINATION [Number] 4
RIGHT [Screen] MAP (Zoom In Maximum/Minimum Scale)	(Ski Resort / Skiing)	[Go to] PRESET DESTINATION [Number] 5
RIGHT [Screen] MAP (Zoom Out Maximum/Maximum Scale)	(Sports Complex / Stadium)	CANCEL
[Change to/Show] NORTH UP [Mode]	PERFORMING ARTS	<b>GUIDANCE COMMANDS</b>
[Change to/Show] HEADING UP [Mode]	TOURIST ATTRACTION	LOUDER
[Change] MAP DIRECTION	TOURIST INFORMATION	SOFTER
RIGHT [SCREEN] MAP [Change to / Show] NORTH UP [Mode]	WINERY	[Show] (Whole/Entire/Display) ROUTE [Map]
RIGHT [SCREEN] MAP [Change to / Show] HEADING UP [Mode]	((Show) Restaurant / I'm Hungry)	[Show] NEXT WAY POINT [Map]
RIGHT [SCREEN] MAP [Change to / Show] DIRECTION	AMERICAN (Restaurant / Food)	SHOW FIRST WAY POINT [Map]
[Change to] DUAL MAP [Mode]	CHINESE (Restaurant / Food)	SHOW SECOND WAY POINT [Map]
[Change to] SINGLE MAP [Mode]	CONTINENTAL (Restaurant / Food)	SHOW THIRD WAY POINT [Map]
(Store/Mark/Memory) [This Point]	FAST FOOD [Restaurant]	SHOW FOURTH WAY POINT [Map]
<b>POI DISPLAY COMMANDS</b>	FRENCH (Restaurant / Food)	SHOW FIFTH WAY POINT [Map]
POI OFF	ITALIAN (Restaurant / Food)	SHOW DESTINATION [Map]
(Automobile Club / *Triple A)	JAPANESE (Restaurant / Food)	(Delete/Cancel) NEXT WAY POINT
GAS [Station]	MEXICAN (Restaurant / Food)	YES
(Car Park / Parking [Lot / Garage])	SEAFOOD [Restaurant]	NO
AUTO SERVICE [and Maintenance]	THAI (Restaurant / Food)	(Delete/Cancel) DESTINATION
ATM	OTHER (Restaurant / Food)	(Delete/Cancel) ALL WAY POINTS AND DESTINATION
BANK	GROCERY STORE	VOICE GUIDANCE OFF
(Town / City) CENTER	SHOPPING MALL	VOICE GUIDANCE ON
	AIRPORT	QUICK
	BUS STATION	ALTERNATIVE
	FERRY TERMINAL	SHORT
	HOTEL	

( ): Say any one of the commands separated by a / (slash) within this type of parentheses.

[ ]: Recognizes without saying the command in "[ ]"

"/": Recognizes when saying either commands before and after "/"

\*Triple A stands for AAA. If the command is not spoken as indicated (Triple A), the system will not recognize the command.

Voice Recognition

DETOUR	Nearest Fast Food [Restaurant]
DETOUR (Entire/Whole) ROUTE	Nearest French (Restaurant / Food)
[Change to] ARROW (Guide/Guidance)	Nearest Italian (Restaurant / Food)
[Change to] TURN LIST [Guide/Guidance/Mode]	Nearest Japanese (Restaurant / Food)
<b>GUIDANCE COMMAND</b>	Nearest Mexican (Restaurant / Food)
[Change to] Mini Arrow [Guide/Guidance/Mode]	Nearest Seafood [Restaurant]
[Change to] Freeway [Information] On	Nearest Thai (Restaurant / Food)
[Change to] Freeway [Information] Off	Nearest Other (Restaurant / Food)
[Change to] Junction Detail On	Nearest Grocery Store
[Change to] Junction Detail Off	Nearest Shopping Mall
<b>NEAREST POI DISPLAY COMMANDS</b>	Nearest Airport
Nearest (Automobile Club / *Triple A)	Nearest Bus station
Nearest Gas [Station]	Nearest Ferry Terminal
Nearest (Car Park / Parking [Lot / Garage])	Nearest Hotel
Nearest Auto Service [and Maintenance]	Nearest Rental Car Agency
Nearest ATM	Nearest Rest Area
Nearest Bank	Nearest Train Station
Nearest (Town Center / City Center)	Nearest Business Facility
Nearest (Exhibition / Convention) Center	Nearest Hamlet
Nearest Court House	<b>AUDIO COMMANDS</b>
Nearest Government offices	Radio
Nearest (University / Higher Education [Institute] / College)	AM[ radio ]
Nearest Hospital	FM [ radio ]
Nearest Library	SIRIUS   Satellite
Nearest (Park / Parks) and Recreation [Facility]	(Disc   CD)
Nearest Police Station	Audio [ on   off ]
Nearest School	AUX1   Auxiliary1
Nearest Amusement Park	AUX2   Auxiliary2
Nearest Casino	Seek up
Nearest Golf course	Seek down
Nearest Historical Monument	Type up
Nearest Marina	Type down
Nearest Museum	Track up   Next track
Nearest (Ski resort / Skiing facility)	Track down
Nearest (Sports Complex / Stadium)	Previous track
Nearest (Performing Arts [Venue] / Theater)	Folder up
Nearest Tourist attraction	Folder down
Nearest Tourist information	<b>TEL COMMANDS</b>
Nearest Winery	(Phone / Telephone)
Nearest Restaurant	
Nearest American (Restaurant / Food)	
Nearest Chinese (Restaurant / Food)	
Nearest Continental (Restaurant / Food)	

( ): Say any one of the commands separated by a / (slash) within this type of parentheses.

[ ]: Recognizes without saying the command in "[ ]"

"p": Recognizes when saying either commands before and after "p"

\*Triple A stands for AAA. If the command is not spoken as indicated (Triple A), the system will not recognize the command.



# Volume Adjustment

You can adjust the volume control for the voice guidance.

Before Steps

**MENU**

→ select



## Open the [VOLUME] screen



**1** Select the appropriate button to set the volume to between **1** (minimum) and **7** (maximum).

**Off** : Sound output will be muted.

**2** Press the **MAP/VOICE** button to return to the current vehicle position screen.

Volume Adjustment



# Precautions/System Performance

## Voice Guidance



Warnings


- The navigation system is just a support system for the driver. The driver should always pay attention to the traffic situation to safely make decisions. You may be unable at times to arrive at your destination due to out-of-date information on a map disc. You should be especially careful when selecting an urgent destination such as a hospital or a police station.
- Your route may sometimes include roads that are not open to vehicles or are closed due to traffic regulations. Please comply with the local traffic regulations.
- Do not change the settings and destination locations while driving. Minimize the time spent viewing the monitor screen and listening to the voice guidance while driving. Operating the system will distract the driver from looking ahead of the vehicle and may cause an accident. Always stop the vehicle in a safe location and use the parking brake before operating the system.

Voice guidance has the following functions:


### ■ Intersection guidance

- The system voice announces the distance to an upcoming turn and the turning direction.
  - This guidance function is automatic. Therefore, you do not have to set it, and it cannot be disabled.
- The system vocally announces the distance to an upcoming highway branching point or junction.


If necessary

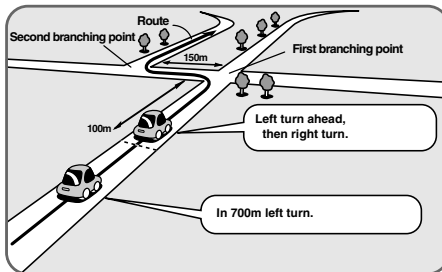


When two intersections are close together, the voice guidance may be late.

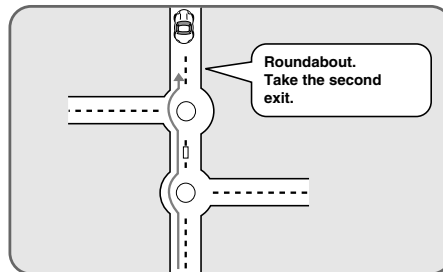

 When two roundabouts are close together, the voice guidance for the second may be late.




## GPS

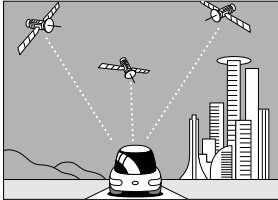


**GPS is a position detecting system utilizing the signals from GPS satellites deployed by the U.S. Department of Defense. The Mobile Navigation System uses input from three or more satellites and calculates the vehicle position based on the principle of triangulation. The positioning accuracy of the system corresponds to the error display of the GPS which is from about 30 to 200 meters.**

- If you are using the system for the first time, or if you have not used it for some time, it takes about 5 minutes (or about 2 minutes in open areas) to calculate your vehicle's position.


### ■ GPS signal reception is poor in the following places

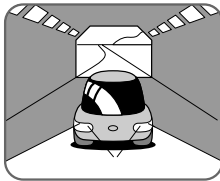


In tunnels

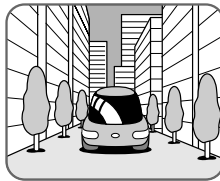

Among high-rise buildings

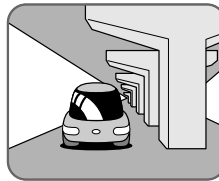

Under elevated roads

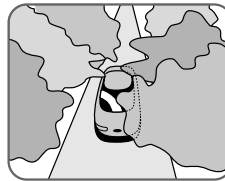

In wooded areas


- The GPS satellites are controlled by the U.S. Defense Department, which may intentionally lower positioning accuracy. In such cases, there may be vehicle position deviations.
- There may be vehicle position deviations for some time until GPS signals are received after switching on the ignition.

If necessary

## Map Matching

**This function compares your vehicle's tracking data with the road data on the map disc, applies dead reckoning to determine the road you are driving on, and displays your vehicle on that road on the map.**

- Intelligent map matching addresses the following problems to achieve high accuracy in vehicle positioning.

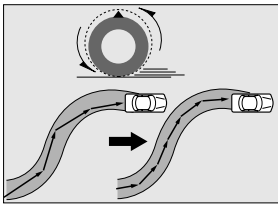

### **Position Correction for Elevated Roads**

Position accuracy is improved by detecting if the vehicle is running on or under an elevated road.

### **Position Correction for Parking Garages**

Position accuracy is improved by detecting if the vehicle is driving in an elevated or underground parking garage.

### **High-precision Gyrosensor**


A gyro detects turns with an accuracy of 0.05° per second. Combined with a speed sensor, it enables the system to display the current vehicle position even where GPS signals may be blocked.

- Using a spare tire in place of the regular one may cause vehicle position deviations.
- Any difference between the direction which your vehicle actually travels and that shown on the map is automatically eliminated by azimuth correction.


# Precautions/System Performance

## Positioning Accuracy

In the following situations, your vehicle position may not be displayed correctly on the map. But, as you keep driving, your vehicle position will be automatically corrected utilizing map matching and GPS data.

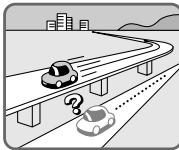


Running on an elevated road

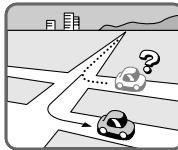


Making a turn after driving on a long straight road




Running on a steep mountain road

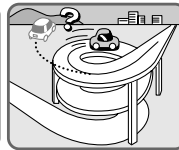

Running on a spiral road

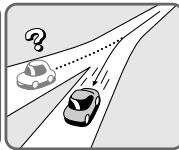


Entering an intersection where a road branches off at a small angle

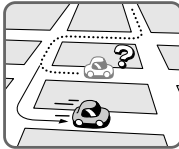


Running on gridiron layout of roads



Running on a slippery road with tire chains

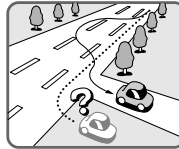

Snaking on a wide road

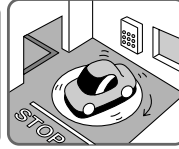

When your vehicle is on a turntable with the ignition switched off




After getting off a ferryboat or vehicle train


If necessary

## Route Guide


Although you may encounter the following problems in route guide, there is nothing wrong with the system.

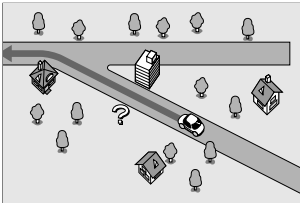


For certain intersection shapes, the upcoming turn or the name of the intersection may not be announced.

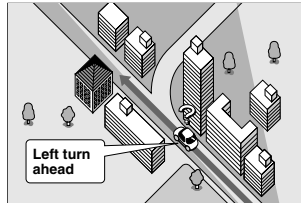


For certain intersection shapes, you may be prompted to turn right or left when you should actually stay on the same road.

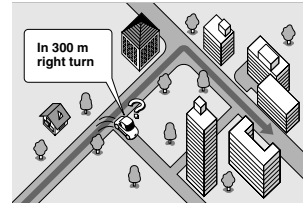


Voice guidance for the planned route may continue even after you have deviated from that route such as having turned too early.

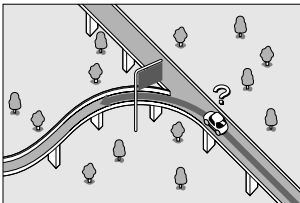

Some points where the road divides on highways or toll roads may not be displayed or announced.

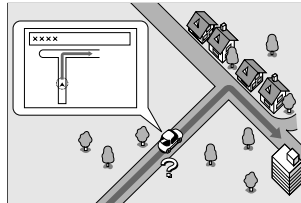

The Intersection Zoom Map may not always agree with the actual shape of the intersection.

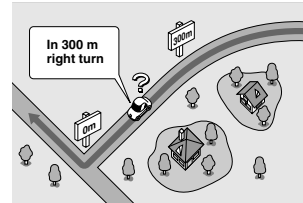


The announced distance to an upcoming turn may differ slightly from reality.



The navigation system is just a support system for the driver. The driver should always pay attention to the traffic situation to safely make decisions. You may be unable to arrive at your destination due to out-of-date information on a map disc. You should be especially careful when selecting an urgent destination such as a hospital or a police station.

## Route Search

Although you may encounter the following problems in a route search, there is nothing wrong with the system.

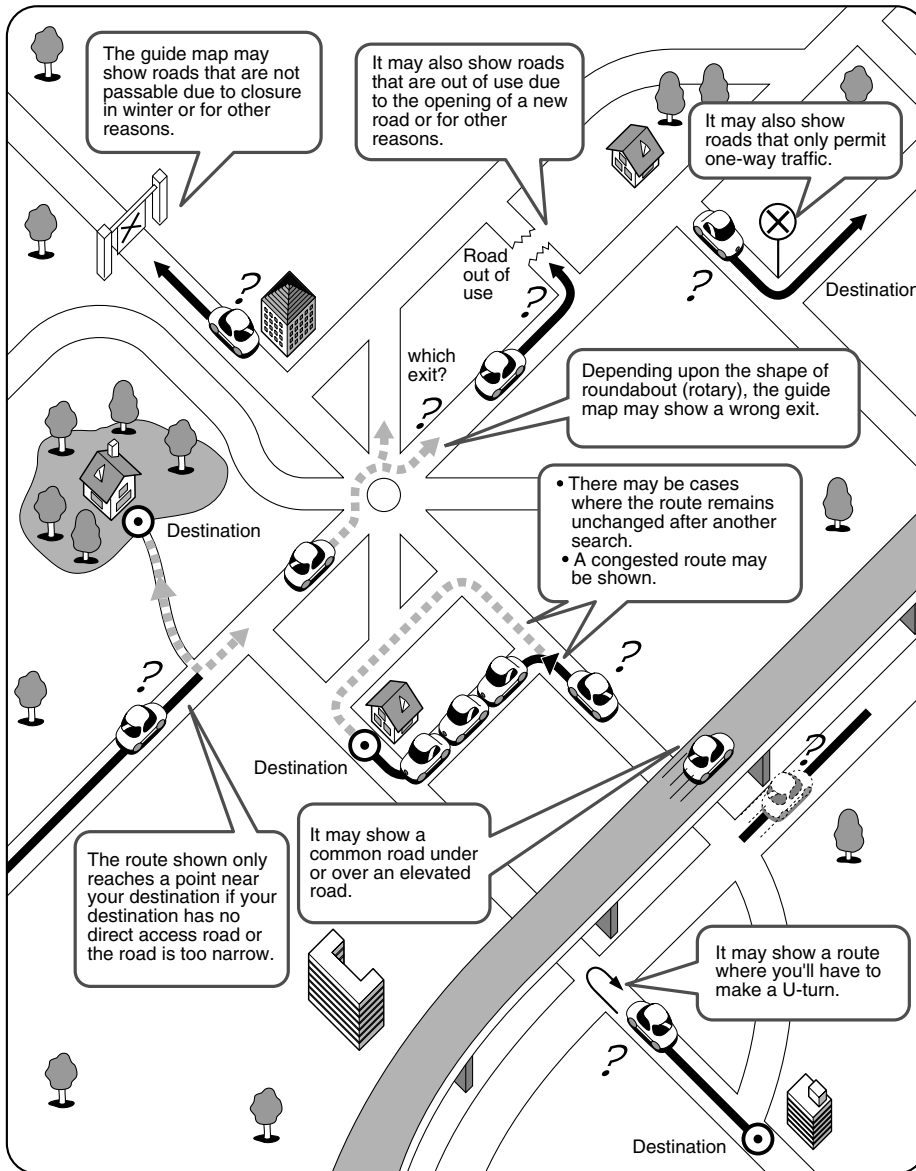

If necessary



# Troubleshooting

 
## Verification First

### Note


There may be some problems due to operational errors or mistakes. Please read this manual again and verify that there really is a problem before calling an Expert Dealer, we recommend an Authorized Mazda Dealer to ask for repair services.

Symptom	Check point
No picture	<ul style="list-style-type: none"> <li>● Check if a fuse has blown.               <ul style="list-style-type: none"> <li>➔ Consult an Expert Dealer, we recommend an Authorized Mazda Dealer.</li> </ul> </li> </ul>
Display does not open or close	<ul style="list-style-type: none"> <li>● Check if the voltage level of the vehicle battery is low.               <ul style="list-style-type: none"> <li>➔ Recharge the battery or change batteries.</li> </ul> </li> </ul>
<b>The vehicle position is not correct</b>	<ul style="list-style-type: none"> <li>● Check if the vehicle position changed when ACC was set to OFF.               <p>When, for example,</p> <ul style="list-style-type: none"> <li>• The vehicle was transported by a ferry boat.</li> <li>• The vehicle was rotated on a turn table in a parking lot.</li> <li>• The vehicle was transported by a tow track or other such vehicle.</li> </ul> <ul style="list-style-type: none"> <li>➔ Drive the vehicle for a while where you are receiving GPS signals.</li> </ul> </li> </ul>

If necessary




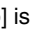

Symptom	Check point
<p><b>No GPS symbols are displayed</b></p>	<ul style="list-style-type: none"> <li>● GPS signals may not be received because of obstructions. After moving the vehicle away from obstructions, the GPS signals can be received.</li> </ul>
<p><b>The vehicle position is not displayed</b></p>	<ul style="list-style-type: none"> <li>● Check if the mode is set to the current position screen.               <ul style="list-style-type: none"> <li>➔ Press <b>MAP/VOICE</b></li> </ul> </li> </ul>
<p><b>No voice guidance</b></p>	<ul style="list-style-type: none"> <li>● Check if the volume control for the voice guidance has been turned off.</li> <li>● Check if the vehicle is off the route.               <ul style="list-style-type: none"> <li>➔ Repeat the route search while checking the route guide screen.</li> </ul> </li> <li>● Check if you are driving the vehicle in the wrong direction on the route.               <ul style="list-style-type: none"> <li>➔ Repeat the route search checking the direction of the destination.</li> </ul> </li> </ul>
<p><b>Buttons on the remote control do not beep</b></p>	<ul style="list-style-type: none"> <li>● Check if [Beep] is set to [Off] (  page 27).</li> </ul>



**If necessary**

 

# Troubleshooting

## Error Messages

Error message	Solution
<b>MAP DVD-Read Error</b>	<ul style="list-style-type: none"><li>● The disc is wet, dirty, scratched, or upside down, or the disc cannot be played with this unit or the incorrect disc is installed.<ul style="list-style-type: none"><li>➔ Eject the disc and check it.</li></ul></li></ul>
<b>The disc installed is not a MAP DVD.</b>	

If necessary



# Maintenance

## Care of the Product

### ■ Cleaning this product

Use a dry, soft cloth to wipe it.

### ■ Cautions for cleaning

Never use solvents such as benzene and thinners, they could mar the surface of the unit.


### ■ Map disc

If you require the latest map disc, consult an Expert Dealer, we recommend an Authorized Mazda Dealer.

## Handling and Care of Map Discs

### ■ How to hold the disc

- Do not touch the underside of the disc.
- Do not scratch the disc.
- Do not bend the disc.
- When not in use, keep the disc in the case.

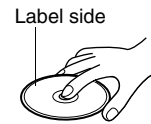

### ■ Disc Cleaning

- Use a dry, soft cloth to wipe from the center outward.



<Right>

 


<Wrong>


### ■ Do not leave discs in the following places:

- Direct sunlight
- Near car heaters
- In dirty, dusty and damp areas
- On seats and dashboards



If necessary



# MEMO

 

If necessary

  

# Contents

## Audio system

- Audio Operation
  - Operating Tips for Audio system ..... 68  
(Radio Reception), (Operating Tips for Single CD-MP3 Player),  
(Operating tips for MP3), (CD-TEXT)
  - Operating Tips for Display ..... 74
  - Beep sound and voice guidance restrictions while using Bluetooth  
Hands-Free ..... 74
  - Power/Volume/Sound Controls ..... 75  
(Power ON/OFF), (Volume adjustment), (Audio sound adjustment),  
(Sound quality adjustment), (Volume balance adjustment), (AudioPilot®),  
(Centerpoint®), (Rear seat-optimized (With Rear Entertainment System)),  
(Surround)
  - Operating the Radio ..... 78  
(Radio ON), (Band selection), (Tuning), (Manual tuning), (Seek tuning),  
(Scan tuning), (Preset channel tuning), (Auto memory tuning),  
(Audio Sound Adjustment), (Satellite Radio (SAT))
  - Operating the Satellite Radio ..... 81  
(What is satellite radio?), (How to subscribe to satellite radio),  
(Satellite Radio Activation), (Selecting Sirius Radio Mode),  
(Channel Selection), (Scanning for Subscribed Channels),  
(Unsubscribed Channels), (Invalid Channels), (Preset Channel Programming),  
(Preset Channel Call-up), (Category Mode On/Off), (Category Change),  
(Channel Selection Within a Category),  
(Channel Number, Channel Name, Category, Artist, Song Titles and Info Display),  
(Programming Your Favorites into Memory), (Seek Alert), (Instant Replay),  
(Displaying the SIRIUS ID (ESN)), (Initialization of ID Code),  
(Changing the PIN Code), (Individual Channel Locking), (Lock Cancellation),  
(Master Code), (Error Signs)
  - Operating the Bluetooth Audio ..... 93  
(What is Bluetooth Audio?), (Bluetooth audio device programming),  
(Deleting the link to a Bluetooth audio device),  
(Changing programmed Bluetooth device),  
(How to use the Bluetooth Audio system), (Setting the Passcode),  
(Setting the PIN code)
  - Operating Single CD-MP3 Player ..... 102  
(Inserting the CD), (During CD playback), (During MP3 CD playback),  
(Normal insertion), (Normal ejection), (Playing), (Fast-forward/Reverse),  
(Track search), (Folder search (during MP3 CD playback)), (Music scan),  
(Repeat play), (Random play), (Audio sound adjustment)

Audio Operation


# Audio Operation

## Operating Tips for Audio system

### Radio Reception


#### AM characteristics

AM signals bend around such things as buildings or mountains and bounce off the ionosphere. Therefore, they can reach longer distances than FM signals. Because of this, two stations may sometimes be picked up on the same frequency at the same time.

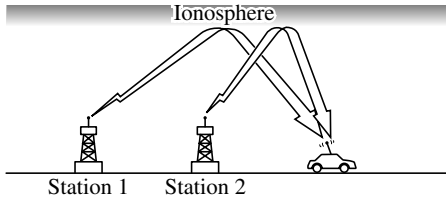


#### FM characteristics

An FM broadcast range is usually about 40–50 km (25–30 miles) from the source. Because of extra coding needed to break the sound into two channels, stereo FM has even less range than monaural (non-stereo) FM.

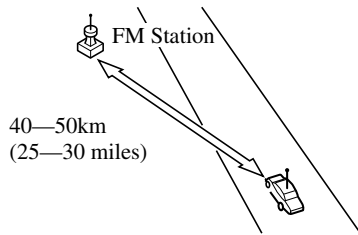

Signals from an FM transmitter are similar to beams of light because they do not bend around corners, but they do reflect.


Unlike AM signals, FM signals cannot travel beyond the horizon. Therefore, FM stations cannot be received at the great distances possible with AM reception.

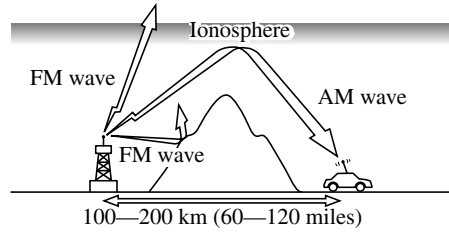

Atmospheric conditions can also affect FM reception. High humidity will cause poor reception. However, cloudy days may provide better reception than clear days.

#### Multipath noise


Since FM signals can be reflected by obstructions, it is possible to receive both the direct signal and the reflected signal at the same time. This causes a slight delay in reception and may be heard as a broken sound or a distortion. This problem may also be encountered when in close proximity to the transmitter.

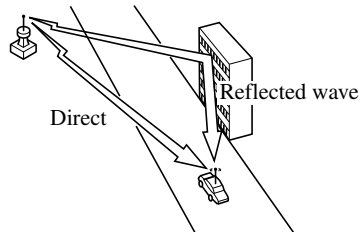




### Flutter/Skip noise

Signals from an FM transmitter move in straight lines and become weak in valleys between tall buildings, mountains, and other obstacles. When a vehicle passes through such an area, the reception conditions may change suddenly, resulting in annoying noise.

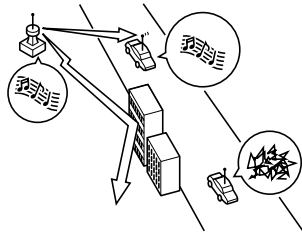


### Weak signal noise

In suburban areas, broadcast signals become weak because of distance from the transmitter. Reception in such fringe areas is characterized by sound breakup.

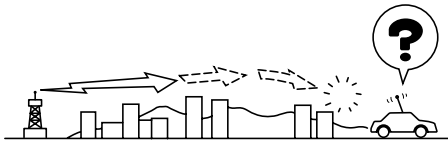



### Strong signal noise

This occurs very close to a transmitter tower. The broadcast signals are extremely strong, so the result is noise and sound breakup at the radio receiver.

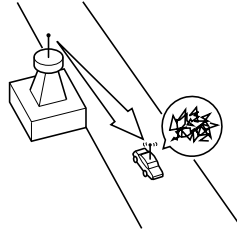

### Station drift noise

 When a vehicle reaches the area of two strong stations broadcasting at similar frequencies, the original station may be temporarily lost and the second station picked up. At this time there will be some noise from this disturbance.

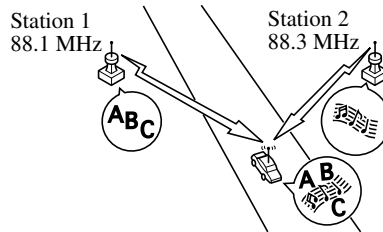

### ■ Operating Tips for Single CD-MP3 Player


#### Condensation phenomenon

Immediately after turning on the heater when the vehicle is cold, the CD or optical components (prism and lens) in Single CD-MP3 Player may become clouded with condensation. At this time, the CD will eject immediately when placed in the unit. A clouded CD can be corrected simply by wiping it with a soft cloth. Clouded optical components will clear naturally in about an hour. Wait for normal operation to return before attempting to use the unit.


#### Handling Single CD-MP3 Player

The following precautions should be observed.


- Do not spill any liquid on the audio system.

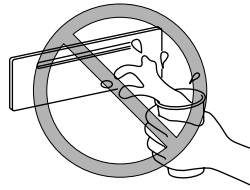


- Do not insert any objects, other than CDs, into the slot.

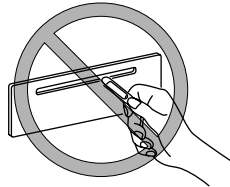


- The CD revolves at high speed within the unit. Defective (cracked or badly bent) CDs should never be used.

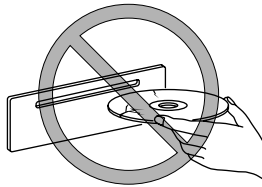

- Do not use non-conventional discs such as heart-shaped, octagonal discs, etc. The disc may not eject resulting in a malfunction.

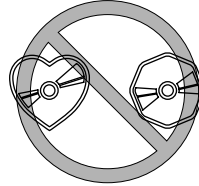


 - If the memory portion of the CD is transparent or translucent, do not use the disc.




Transparent

- A new CD may have rough edges on its inner and outer perimeters. If a disc with rough edges is used, proper setting will not be possible and Single CD-MP3 Player will not play the CD. In addition, the disc may not eject resulting in a malfunction. Remove the rough edges in advance by using a ball-point pen or pencil as shown below. To remove the rough edges, rub the side of the pen or pencil against the inner and outer perimeter of the CD.

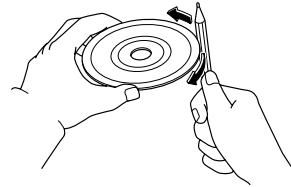


- When driving over uneven surfaces, the sound may jump.

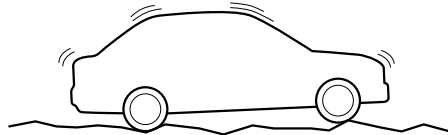






- Use discs that have been legitimately produced. If illegally-copied discs such as pirated discs are used, the system may not operate properly.
- Be sure never to touch the signal surface when handling the CDs. Pick up a CD by grasping the outer edge or the edge of the hole and the outer edge.

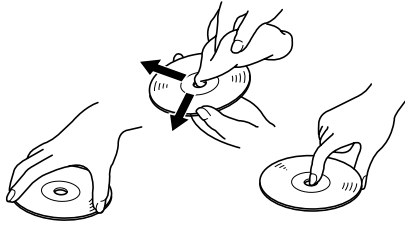

- Do not stick paper or tape on the CD. Avoid scratching the reverse side (the side without a label). The disc may not eject resulting in a malfunction.
- Dust, finger smudges, and dirt can decrease the amount of light reflected from the signal surface, thus affecting sound quality. If the CD should become soiled, gently wipe it with a soft cloth from the center of the CD to the edge.
- Do not use record sprays, antistatic agents, or household spray cleaners. Volatile chemicals such as benzine and thinner can also damage the surface of the CD and must not be used. Anything that can damage, warp, or fog plastic should never be used to clean CDs.
- Insert discs one by one. If two discs are inserted at the same time, the system may not operate properly.
- Single CD-MP3 Player ejects the CD if the CD is inserted upside down. Also dirty and/or defective CDs may be ejected.
- Do not insert any disc with a peel-off seal affixed to it.

### Handling Single CD-MP3 Player

   - This unit may not be able to play certain CD-R/CD-RWs made using a computer or music CD recorder due to disc characteristics, scratches, smudges, dirt, etc., or due to dust or condensation on the lens inside the unit.
- Storing CDs in the vehicle exposed to direct sunlight or high temperature may damage the CD-R/CD-RWs, and make them unplayable.
- CD-R/CD-RW exceeding 700 MB cannot be played.
- This unit may not be able to play certain discs made using a computer due to the application (writing software) setting used. (For details, consult the store where the application was purchased.)
- It is possible that certain text data, such as titles, recorded on a CD-R/CD-RW may not be displayed when musical data (CD-DA) is playing.
- The period from when a CD-RW is inserted to when it begins playing is longer than a normal CD or CD-R.
- Completely read the instruction manual and cautions for CD-R/CD-RWs.
- Do not use discs with cellophane tape adhering, partially peeled off labels, or adhesive material exuding from the edges of the CD label. Also, do not use discs with a commercially-available CD-R label affixed. The disc may not eject resulting in a malfunction.



## ■ Operating tips for MP3

### NOTE

Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via the Internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-ondemand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>.

- This audio system handles MP3 files that have been recorded on CD-R/CD-RW/CD-ROMs. Discs that have been recorded using the following formats can be played:

- ISO 9660 level 1
- ISO 9660 level 2
- Joliet extended format
- Romeo extended format

- This unit handles MP3 files conforming to the MP3 format containing both header frames and data frames.

- If a disc has both music data (CD-DA) and MP3 files, playback of the two file types differs depending on how the disc was recorded.

- Packet written discs cannot be played on this unit.

- This unit does not play CDs recorded using MP3i (MP3 interactive), MP3 PRO and RIFF MP3 formats.

### ⚠ CAUTION

This unit can only play MP3 files that have an MP3 file extension (.mp3) attached. Do not attach an MP3 file extension to any other type file as it could cause noise to be emitted or a malfunction in the unit.

### Specialized glossary

#### MP3

Abbreviation for “MPEG Audio Layer 3”. A technical standard for audio compression as decided by an ISO (International Organization for Standardization) MPEG working group.

Use of MP3 allows for audio data to be compressed to approximately a tenth of the source data size.

#### ISO 9660

An international standard for logical formatting of CD-ROM files and folders. It is divided into three separate levels based on differences in file naming procedures, data configuration and other characteristics.

#### Bit rate

Refers to the volume of data per second, expressed in bps (bits per second). Generally, the larger the number of the transfer bit rate when compressing an MP3 file, the more information regarding musical reproduction it carries, and therefore the better the sound quality.

#### Packet writing

A general term for the method, similar to that used for floppy discs or hard drives, of recording the required file in a single increment on a CD-R and similar.




### ■ CD-TEXT

Music CDs are available in which separate music data including album/title names, music name, artist name, and other textual information can be recorded. The data standard for recording textual information to these kinds of music CDs is termed CD-TEXT.

There are two regions of a CD where textual information can be recorded which include regions related to the entire CD (Attributes recorded for the entire CD) and individual track regions (Attributes recorded for individual tracks).

As for this audio unit, textual information (Album/artist information), which can be recorded on individual track regions, appears on the display. Textual information (Artist and other information), which can be recorded to regions related to the entire CD, does not appear on the display.

Unless all the textual information is input in one-byte characters, a dotted line (----) will appear in place of the textual information, even if one of the characters is not a one-byte character (Two-byte character).

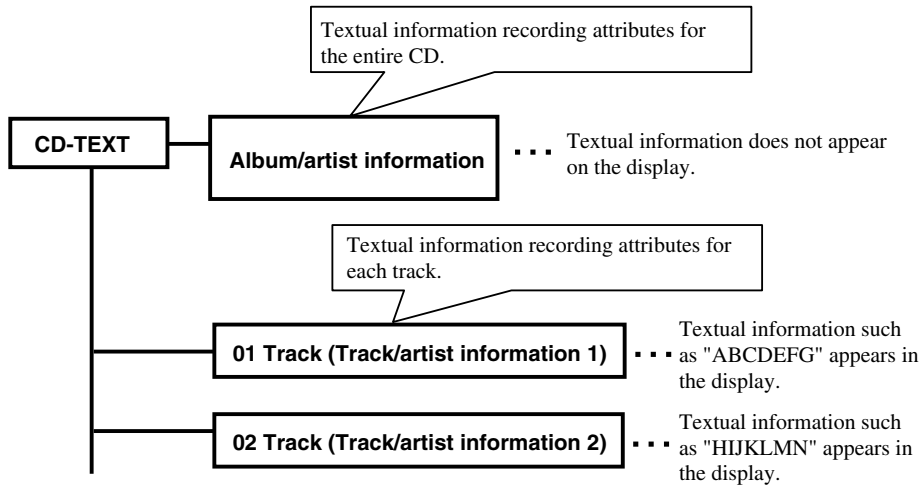



## Operating Tips for Display

- Do not place any objects on the dashboard. If you drop any objects onto the dashboard or spill liquid on it, it may result in system malfunction.
- Be careful not to pinch your hands or fingers when the liquid crystal display is closed.
- Do not open/close the liquid crystal display manually. It may damage the equipment.

 
- The liquid crystal display may not open if the power supply had been interrupted due to the vehicle battery being disconnected.
- If the liquid crystal display stays open/closed (or partly opened) and does not move when the liquid crystal display is pressed, switch the ignition switch and then on again. Then try the open/close operation again. If the liquid crystal display still does not move, contact an Authorized Mazda Dealer.

## Beep sound and voice guidance restrictions while using Bluetooth Hands-Free

The beep sound and voice guidance related to the audio operation are not heard while a Bluetooth Hands-Free is being used.




Audio Operation



## Power/Volume/Sound Controls

Power / Volume dial

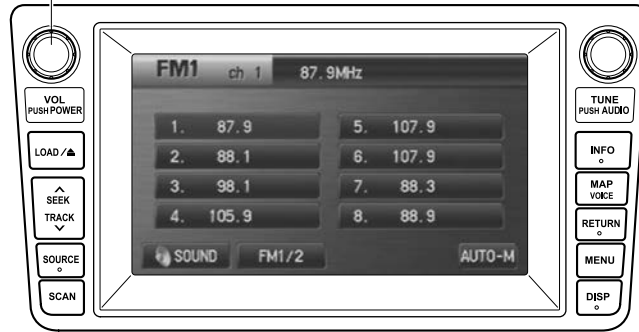

### ■ Power ON/OFF

Switch the ignition switch to the ACC or ON position.  
 Press the power/volume dial to turn the audio system on.  
 Press the power/volume dial again to turn the audio system off.

#### Note

To prevent the battery from being discharged, do not leave the audio system on for a long period of time when the engine is not running.

### ■ Volume adjustment

To adjust the volume, turn the power/volume dial.  
 Turn the power/volume dial to the right to increase volume, to the left to decrease it.


### ■ Audio sound adjustment

1. Press the SOURCE button.
2. Select the desired on-screen button corresponding to one of the following modes.



- on-screen button : Audio mode (AM band)
- on-screen button : Audio mode (FM band)
- on-screen button : Satellite radio
- on-screen button : CD mode
- , on-screen button : Image and Sound playback is possible using a portable video player connected to an external input terminal.\*
- on-screen button : iPod mode
- on-screen button : BT-Audio mode

- \*The external input terminal is not equipped on your vehicle because it is not standard equipment.
3. Press the TUNE AUDIO dial to display the sound adjustment screen.
  4. Select the **SOUND** on-screen button to display the sound adjustment screen.

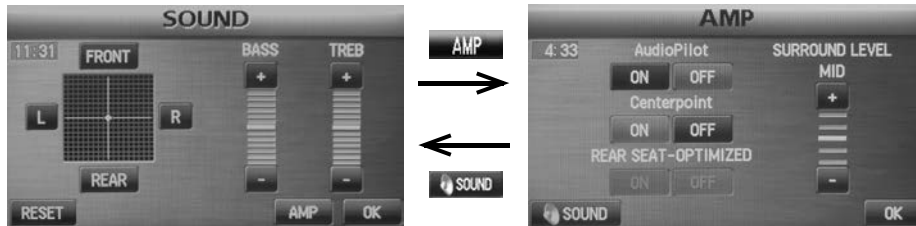

### ■ Sound quality adjustment

#### TREB (treble sound)

Select the **+** on-screen button to increase treble, and **-** to decrease.

#### BASS (low pitch sound)

Select the **+** on-screen button to increase bass, and **-** to decrease.

### ■ Volume balance adjustment

#### Front/back volume balance

Select the **FRONT** on-screen button to increase the volume at the front, and **REAR** on-screen button to increase the volume to the back.

#### Left/right volume balance

Select the **R** on-screen button to increase the volume to the right, and **L** on-screen button to increase the volume to the left.

#### Note

- Pressing an on-screen adjustment button for 0.5 seconds or more progressively changes the adjustment range towards +/-, up/down, or left/right.
- While an adjustment button is selected in this manner, the level indicator will momentarily stop at the medium range position and a beep sound will be heard before proceeding.
- Select the **RESET** on-screen button to reset bass, treble, and balance.
- To return to the previous screen, select the **OK** on-screen button.

### ■ AudioPilot®

AudioPilot automatically adjusts audio volume and sound quality in accordance with the level of noise entering the vehicle interior while driving. When AudioPilot is turned ON, the system automatically calculates the conditions for optimum hearing of sound which may be difficult to hear depending on exterior noise.

Select the AUDIOPILOT on-screen **ON** button when AudioPilot is on. Select the AUDIOPILOT on-screen **OFF** button when AudioPilot is off.

AudioPilot® is a registered trademark of Bose Corporation.

### ■ Centerpoint®

Centerpoint offers you the experience of 5.1 channel surround sound in your vehicle even with your conventional 2 channel sound.

Select the Centerpoint on-screen **ON** button when Centerpoint is on. Select the Centerpoint on-screen **OFF** button when Centerpoint is off.

#### Note

- Centerpoint does not work with AM/FM/SIRIUS/AUX/BT-Audio.
- Centerpoint operates only with a 2-channel stereo CD. Poor sound quality in the audio signal playback could result from playing highly compressed audio such as MP3 with Centerpoint operating.
- If a CD or a DVD is inserted in the Rear Entertainment System main unit and selected as an audio source, and the CD or DVD audio is 5.1 DolbyDigital/DTS audio, Centerpoint cannot be selected.

Centerpoint® is a registered trademark of Bose Corporation.

### ■ Rear seat-optimized (With Rear Entertainment System)

The rear seat-optimized function allows passengers to optimize the audio output to the rear for a more pleasurable acoustic field.

Select the REAR SEAT-OPTIMIZED on-screen **ON** button to increase the surround effect to the rear seat. Select the REAR SEAT-OPTIMIZED on-screen **OFF** button to apply the surround effect to all seats.

#### Note

Rear seat-optimized is only effective if a CD or a DVD is inserted in the Rear Entertainment System main unit and selected as an audio source, and the CD or DVD audio is 5.1 DolbyDigital/DTS audio.

### ■ Surround

#### Centerpoint

When Centerpoint is on, the true surround sound effect of Centerpoint can be adjusted to any one of five level between minimum and maximum enhancement.


Indication	Enhance change
CENTERPT MIN	Minimum
CENTERPT LOW	Low
CENTERPT MID	Medium
CENTERPT HI	High
CENTERPT MAX	Maximum

#### Rear seat-optimized

When rear seat-optimized is on, the surround effect can be enjoyed at five separate levels.

Indication	Enhance change
Surround MIN	Minimum
Surround LOW	Low
Surround MID	Medium
Surround HI	High
Surround MAX	Maximum

## Operating the Radio

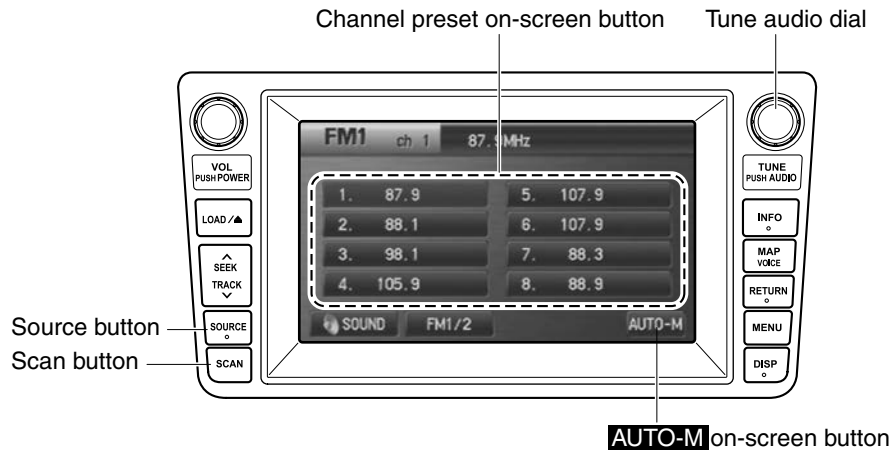

### ■ Radio ON

1. Press the SOURCE button.
2. Select the or on-screen button to turn the radio on.

### ■ Band selection

Choose AM by pressing the on-screen button and FM by pressing the on-screen button.

The selected mode will be indicated. If FM stereo is being received, STEREO will be displayed.

### ■ Tuning

The radio has the following tuning methods: Manual, Seek, Scan, Preset channel, and Auto memory tuning. The easiest way to tune stations is to set them on preset channels.

#### Note

 
- If the FM broadcast signal becomes weak, reception automatically changes from STEREO to MONO for reduced noise, and the STEREO indicator will go out.
- To clear the information, press the MAP/VOICE button.
- If the power supply is interrupted (fuse blows or the battery is disconnected), the preset channels will be canceled.

### ■ Manual tuning

Turning the TUNE AUDIO dial will change the frequency higher or lower.

### ■ Seek tuning

Pressing and holding the SEEK/TRACK button (, ) will cause the tuner to seek a higher or lower frequency automatically.



**Note**

If you continue to press and hold the button, the frequency will continue changing without stopping.

**Scan tuning**

Press the SCAN button to automatically sample strong stations. Scanning stops at each station for about 5 seconds. To hold a station, press the SCAN button again during this interval.

**Preset channel tuning**

The 8 preset channels can be used to store 8 AM and 16 FM stations.

1. To set a channel first select AM, FM1, or FM2. Tune to the desired station.
2. Press the TUNE AUDIO dial.
3. Select any channel preset on-screen button for about 2 seconds until a beep sound is heard. The selected preset channel number and station frequency will be displayed. The station is now held in the memory.
4. Repeat this operation for the other stations and bands you want to store. To tune one in the memory, select AM, FM1, or FM2 and then press its channel preset button. The station frequency and the channel number will be displayed.

**Note**


If the power supply is interrupted (fuse blows or the battery is disconnected), the preset channels will be canceled.


**Auto memory tuning**

This is especially useful when driving in an area where the local radio stations are not known. Additional AM/FM stations can be stored without disturbing the previously set channels.



Select and hold the **AUTO-M** on-screen button for about 2 seconds until a beep sound is heard; the system will automatically scan and temporarily store up to 8 stations with the strongest frequencies in each selected band in that area.

**Audio Sound Adjustment**

Refer to "Power/Volume/Sound Controls" (  page 75).

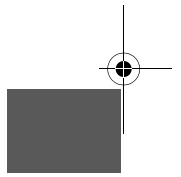

Audio Operation

  



### ■ Satellite Radio (SAT)

 
Vehicles equipped with the separately purchased SIRIUS digital satellite radio unit have the ability to receive channels of digital quality programming coast to coast via satellite. For information on use, read the Satellite Radio Kit manual accompanying the SIRIUS digital satellite radio unit. A subscription to SIRIUS digital satellite radio service is required (available in the U.S. - Except Alaska and Hawaii) to enable this feature once the separately purchased SIRIUS digital satellite radio unit has been installed. For subscription and channel information, or for digital satellite radio technical issues, contact SIRIUS directly at:

- Web: [www.siriusradio.com](http://www.siriusradio.com)
- Phone (24 hrs/day, 7 days/week): 888-539-SIRI (7474)
- E-mail: [customercare@sirius-radio.com](mailto:customercare@sirius-radio.com)
- Mailing Address: Sirius Satellite Radio  
1221 Avenue Of The Americas  
New York, NY 10020  
Attention: Customer Care

Include your Sirius Radio ESN (Electronic Serial Number) when subscribing or requesting technical assistance. See the Satellite Radio Kit manual accompanying the SIRIUS unit for complete satellite radio activation procedures and information on how to display the ESN#.




Audio Operation





## Operating the Satellite Radio

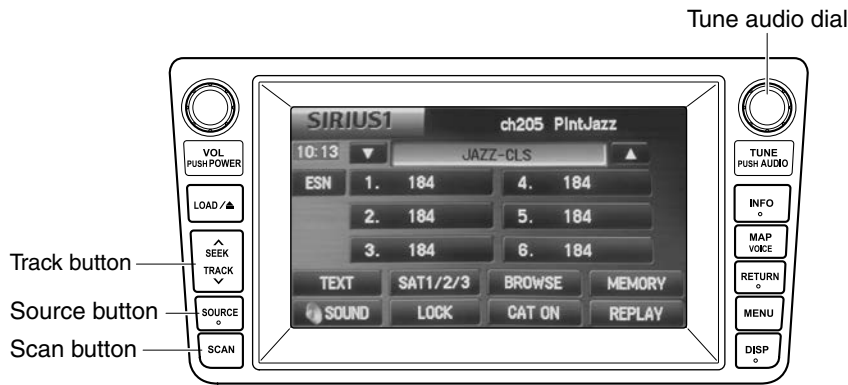

Used on vehicles equipped with the DLP\* unit.

\* DLP: Down Link Processor (SATELLITE RADIO Module)

### ■ What is satellite radio?

Sirius is radio the way it was meant to be: Up to 100 new channels of digital quality programming delivered to listeners coast to coast via satellite. That means 50 channels of completely commercial-free music. Plus up to 50 more channels of news, sports, and entertainment from names like CNBC, Discovery, SCI-FI Channel, A&E, House of Blues, E!, NPR, Speed vision and ESPN.

Sirius is live, dynamic entertainment, completely focused on listeners. Every minute of every day of every week will be different. All 50 commercial-free music channels are created in-house and hosted by DJs who know and love the music. Do you like Reggae? How about Classic Rock or New Rock? Sirius has an array of choices spanning a vast range of musical tastes including the hits of the 50's, 60's, 70's, & 80's as well as Jazz, Country, Blues, Pop, Rap, R&B, Bluegrass, Alternative, Classical, Heavy Metal, Dance and many others. From its state-of-the-art, digital broadcasting facility in Rockefeller Center, New York City, Sirius will deliver the broadest, deepest mix of radio entertainment from coast to coast. Sirius will bring you music and entertainment programming that is simply not available on traditional radio in any market across the country. It's radio like you've never heard before. Sign up for Sirius Radio today! For more information, visit [siriusradio.com](http://siriusradio.com).

Satellite radio can be subscribed to and received in the United States. (Except Alaska, Hawaii, Virgin Islands of the U.S, and Puerto Rico)



### ■ How to subscribe to satellite radio


Once the system is installed you must first subscribe to the Sirius Radio service to activate the system.

The Sirius Radio service uses an ID code to identify your radio. This code is needed to subscribe to Sirius Radio, and if needed, is also used to report any problems should there be any in the future. Listeners can subscribe using any of the following methods:

- Visiting SIRIUS on the web at [www.sirius.com](http://www.sirius.com)
- Subscribing to Sirius customer care, available 24 hours a day, 7 days a week.
- Calling (888) 539-7474
- E-mail at: [customercare@siriusradio.com](mailto:customercare@siriusradio.com)
- Writing to: SIRIUS SATELLITE RADIO  
1221 Avenue of the Americas  
New York, NY 10020  
Attention: Customer Care

Customers should have their Sirius Radio ID Electronic Serial Number (ESN#) ready.

**Note**

Your ESN# should have been recorded at the time of installation. If not, refer to 'Displaying the SIRIUS ID (ESN)' to retrieve your ESN#. (  page 89)

### ■ Satellite Radio Activation

For activation and subscription information call toll-free at 1-888-539-SIRI (7474). A SIRIUS Customer Care representative will take the necessary information and walk you through the activation process. Or you can visit Sirius online at [WWW.siriusradio.com](http://WWW.siriusradio.com) and click on the 'INSTALL & ACTIVATE' button.

When you call the SIRIUS Customers Care number you have two options available.

- (1) The full package which allows you access to all SIRIUS content except pay-per-view.
- (2) The family package which allows access to certain channels. Please see the website: [www.sirius.com](http://www.sirius.com) for details.

Please have the following information ready when attempting to activate your service:

- SIRIUS ID (ESN\*)
- Valid credit card information (type, number, expiration date)

 
When you are ready to receive the on-air activation signals, you will be instructed (for activation via phone) to turn on your tuner, have the antenna pointed skyward, and to set the channel to channel 184.

Once the signal is sent from the national studio it may take up to 10 minutes to be received by your unit.

\*ESN: Electronic Serial Number.

**Note**

On-air activation is completed after the procedure, in most cases from 10 seconds to 10 minutes.




### ■ Selecting Sirius Radio Mode



 
1. Press the SOURCE button.

2. Press the  on-screen button

When the  on-screen button is pressed, it will play the last selected SIRIUS channel.



3. Each time the  on-screen button is pressed, the satellite selection changes in the order shown below.



### System initializing



It may take 30 to 120 seconds for the system to start up while it is initializing or after the SIRIUS channel map has been changed.

During start up, the following will be displayed. 'UPDATING CHANNELS XX% COMPLETE' or 'UPDATING CHANNELS' appears.

When information on all channel maps is obtained and the system is ready, channel '184' is received.

When switching to a source other than Sirius radio mode, the last active channel is stored and will be the first channel accessed upon activating Sirius radio mode again.





### ■ Channel Selection

#### Using the tune audio dial

Turn the tune audio dial to select the desired channel number.

- Turn the knob clockwise to step-up the channel number.
- Turn the knob counterclockwise to step-down the channel number.

#### Using the track button

Press the track button with a short press to step-up (down) the channel.

When the TRACK button (UP or DOWN) is held pressed, the system will continue to step-up (down) the channel until the button is released.

### ■ Scanning for Subscribed Channels

Press the SCAN button to begin searching through your subscribed channels.

When the system reaches a subscribed channel it plays the channel for 5 seconds before going to the next subscribed channel. After reaching the subscribed channel with the highest number, the search resumes from the subscribed channel with the lowest number and scans forward.

#### Note

To search for channels in the category currently displayed, press the SCAN button when in the category mode.

### ■ Unsubscribed Channels

When a selected station has not been subscribed to, the system displays 'UNSUBSCRIBED'.

Navigation system display: 'CALL 888-539-SIRIUS TO SUBSCRIBE' is displayed.

Information display: 'CALL + 888' and '539 + SIRI' (Flashes alternately)

#### Note

When the subscription contract is canceled, all of the channels including channel 184, appear as unsubscribed.

### ■ Invalid Channels

When a selected channel is not broadcasting, the display indicates the following:

 
Navigation system display: 'INVALID CHANNEL' is displayed

Information display: 'SR + (bank number) + INVALID' and 'SR + (bank number) + CHANNEL' (Flashes alternately)

The display then returns to the previous valid channel.

#### Note

If the last channel selected has become unavailable because of a channel update, the above indication is displayed until any button is pressed.





Channel preset on-screen button

### ■ Preset Channel Programming

1. Select the desired channel to be stored.
2. Hold down the channel preset on-screen button (1-6) for about 1.5 seconds  
You will hear a beep sound to indicate that the channel has been stored.
3. The channel number for the channel preset on-screen button changes.

#### Note

Six stations can be stored in each of the SR banks 1, 2, and 3 for convenient access to your favorite stations.

### ■ Preset Channel Call-up

Press the channel preset on-screen button (1-6) for about 1.5 seconds.

#### Note

In the initial setting, all channels are preset to 184.

### ■ Category Mode On/Off

#### ON

(When doing a TUNE/SEEK within the selected category)

When the **CAT ON** on-screen button is pressed, 'TUNE/SEEK WITHIN SELECTED CATEGORY ONLY' appears for six seconds. 'CATEGORY' is displayed on the left side of the channel number.

#### OFF

(When doing a TUNE/SEEK outside of the category mode)

While in category mode, press the **CAT ON** on-screen button. (The on-screen button display changes to **CAT OFF**.)

'TUNE/SEEK AMONG ALL AVAILABLE SIRIUS CHANNELS.' appears for 6 seconds, and 'CATEGORY' is no longer displayed.

#### Note

Pressing the channel preset on-screen button (1-6) during category mode will exit the category mode and play the selected channel.

### ■ Category Change

Press the category select on-screen button (▲ or ▼) and select the desired category.

● Press the ▲ button to scroll the categories upward.

● Press the ▼ button: to scroll the categories downward.

The channel with the lowest number within the category indicated is received.

When the channel with the highest number within the category is reached, scrolling will resume from the channel with the lowest number in the category.

### ■ Channel Selection Within a Category

Pressing the TRACK button (UP or DOWN) moves the channel number up/down in the present category.

#### When the channel preset on-screen button is pressed in the category mode

When a channel preset button (1-6) is pressed while in the 'CATEGORY ON' mode, the service channel will be changed. When the button is pressed the mode switches to 'CATEGORY OFF' mode. (The same applies when pressing the SAT on-screen button.)

Press the **BROWSE** on-screen button



All the channels (programs) in the category are displayed.

Press the **LIST CATEGORIES** on-screen button.



All the categories are displayed.

Audio Operation

### ■ Channel Number, Channel Name, Category, Artist, Song Titles and Info Display



Press the **TEXT** on-screen button.

Channel name, song title, artist name and INFO are displayed.

Song title, Artist name, INFO display

- Press the **▶** on-screen button to display the last characters of the name.

To return to the display of the preset channels, press the **PRESETS** on-screen button.

### ■ Programming Your Favorites into Memory



1. Press the **MEMORY** on-screen button.
  2. 'SELECT TITLE OR ARTIST' or 'SELECT TEAM' is displayed, and the items to be registered will appear below it.
  3. When one of the items is selected from the list, 'TITLE/ARTIST/TEAM STORED' will be displayed for three seconds, and the program registration is completed.
- If program registration information is not included in the program during reception, the MEMORY, TITLE, and ARTIST buttons remain grayed out.

#### Memory contents confirmation and setting

1. When the **MEMORY SETTINGS** on-screen button is pressed, 'TITLE/ARTIST/TEAM MEMORY LIST' is displayed to confirm the program registered in the memory.
- If there are four or more items registered, scroll up or down using the **▼** or **▲** on-screen button to select the desired item.
  - To delete an item, select it from the list and press the **DELETE** on-screen button.
  - Switch the **SONG SEEK ON / OFF** on-screen buttons according to whether the seek alert function is used.





**Note**

- Ten items can be registered in each of the three memory lists (TITLE/ARTIST/TEAM). If ten items are exceeded, 'TITLE/ARTIST/TEAM MEMORY FULL' is displayed and the confirmation screen will appear to inform you that the chronologically oldest program is to be overwritten.
- Ten different types of sports programs are available (NFL, NHL, NBA, MLB, Soccer, Auto Racing, College Football, College Basketball, Other). Your favorite teams can be registered in each.

**■ Seek Alert**



This function informs you that the registered program goes on the air except when it has already been received. (The above screen is displayed when the previously registered program ID, artist ID, or sport ID is identified.)

 
If there are 4 or more items in the list (4 or more registered programs are on the air simultaneously), the previous/next page is displayed by pressing the or on-screen button.

If a program name is too long to be displayed in whole, the remaining part is displayed by pressing the button.

When a desired program is selected from the list, the channel is changed to start the selected program.

When you do not select from the list, press the on-screen button to return to its original display.

Audio Operation





## ■ Instant Replay

This function allows you to rewind and replay the program that you were previously or are currently listening to.



Song playback time

Press the **REPLAY** on-screen button.

When the **◀◀** on-screen button is briefly pressed (about 0.5 seconds), playback starts from the beginning of the current program.

When the **◀◀** on-screen button is pressed twice, playback starts from the beginning of the previous program.

When the **◀◀** on-screen button is pressed and held, the track rewinds in 5-second intervals while the button is being pressed. If the **◀◀** on-screen button is pressed for 10 seconds or longer, the rewind time intervals change every 10 seconds while the button is being pressed in increments of 15 seconds, 30 seconds, and 1 minute.

When the **▶▶** on-screen button is briefly pressed (about 0.5 seconds), playback starts from the beginning of the next program.

When the **▶▶** on-screen button is pressed and held, the track is fast-forwarded in 5-second intervals while the button is being pressed. If the **▶▶** on-screen button is pressed for 10 seconds or longer, the fast-forward time intervals change every 10 seconds while the button is being pressed in increments of 15 seconds, 30 seconds, and 1 minute.

When the **⏸** on-screen button is briefly pressed, playback is temporarily stopped, or playback starts if it has been temporarily stopped.

When the **CANCEL** on-screen button is pressed, the instant replay mode is cancelled and returns to the current program.

### Note

The instant replay mode cannot be cancelled without pressing the **CANCEL** on-screen button even when the display of the song playback time returns to '0:00:00'.

## ■ Displaying the SIRIUS ID (ESN)



1. Press the **ESN** on-screen button.
2. A 12-digit Electronic Serial Number (ESN) for the SIRIUS tuner is displayed

## ■ Initialization of ID Code


If you have forgotten the registered ID code, return the ID code to the default '0000' by performing the following steps:



### Master code input preparation

1. Press the **LOCK** on-screen button.
2. The screen changes to Parental Lock mode and 'INPUT PIN ----' is displayed.
3. Press the **INITIALIZE** on-screen button.
4. 'INPUT MASTER CODE ----' is displayed.

### Master code input

5. Input the master code. (  page 92)  
(The master code is already set at the time of factory shipment.)

### Master code input determination

6. Determine the master code which has been input by pressing the **ENTER** on-screen button briefly.
7. 'PIN CLEARED' appears which indicates that the master code input has been completed.
8. The ID code is set to the default '0000' and the initialization process is completed.

#### Note

- If an ID code is not input for ten seconds, the system returns to the previous screen.
- If the input code does not match the registered code, 'Wrong PIN was input. Please input PIN again.' is displayed for three seconds, and the system returns to the former display.

## ■ Changing the PIN Code

### Registered ID code input

1. Press the **LOCK** on-screen button.
2. The screen changes to Parental Lock mode and 'INPUT PIN ----' is displayed.
3. Press the **CHANGE** on-screen button.
4. 'INPUT CURRENT PIN ----' is displayed. Input your currently registered PIN code.  
Example : If the currently registered PIN code is '2323', input '2323'.

#### Note

The registered PIN code at the time of shipment from the factory is the default '0000'.

### Confirming the currently registered PIN code

5. Confirm your currently registered PIN code by short-pressing the **ENTER** on-screen button.
6. If it matches with the previously registered PIN code, 'INPUT NEW PIN' is displayed.

### New PIN code input

7. Input a new PIN code.  
Example: If the new PIN code is '1234', input as '1234'.

### New PIN code input confirmation

8. Confirm the newly input PIN code by short-pressing the **ENTER** on-screen button.
9. 'PIN CHANGED' appears for three seconds to indicate that the new PIN code input is registered.

**Note**

- If a PIN code is not input within ten seconds, the system returns to the previous screen.
- If the input PIN code does not match the registered PIN code, 'Wrong PIN was input. Please input PIN again.' is displayed for three seconds and the system returns to the PIN code input screen.

**Individual Channel Locking**

If a channel is locked, the channel is muted.

**Note**

If the registered ID code is forgotten, return the ID code to the default '0000'.  
(page 90)

**Locking a channel**

1. Select a channel to be locked by pressing the TRACK button or turning the tune audio dial.  
Example: Select channel 100

**Registered PIN code input preparation**

2. Press the **LOCK** on-screen button.
3. The screen changes to Parental Lock mode and 'INPUT PIN ----' is displayed.

**Registered PIN code input**

4. Press the **INPUT** on-screen button.
5. Input the 4-digit registered PIN code.  
Example: If the registered PIN code is '2323', input '2323'.

**Registered PIN code input confirmation**

6. Confirm the input PIN code by pressing the **ENTER** on-screen button.
7. If it matches with the registered PIN code, 'LOCKED' is displayed.
8. The parental lock is activated. At this time, mute is on and no sound is heard.

**Note**

- If a PIN code is not input for ten seconds, the system returns to the previous screen.
- If the input PIN code does not match the registered PIN code, 'Wrong PIN was input. Please input the PIN again.' is displayed for three seconds and the system returns to the PIN code input screen.

**Lock Cancellation**

**Unlocking a channel**

1. Select the channel to be unlocked.

**Registered PIN code input**

2. Press the **LOCK** on-screen button.
3. Screen changes to Parental Lock mode and 'INPUT PIN ----' is displayed.
4. Press the **INPUT** on-screen button.
5. Input the 4-digits registered PIN code.  
Example :  
If the registered PIN code is '2323', input '2323'.

**Registered PIN code input confirmation**

6. Confirm the input PIN code by short-pressing the **ENTER** on-screen button.

7. If the PIN code matches the previously registered PIN code, the system returns to the normal mode.
8. The parental lock is now released. At this time, mute is off and the sound can be heard.

**Note**

- If an ID code is not input for ten seconds, the system returns to the previous screen.
- If the input PIN code does not match the registered PIN code, 'Wrong PIN was input. Please input the PIN again.' is displayed for three seconds and the system returns to the PIN code input screen.

**Master Code**

The Master Code is used to initialize or re-initialize the PIN code in the event that the code is not set to '0000' and/or the personalized PIN code is not known. The initialization process resets the PIN code to '0000'. The master code can potentially defeat the intent of the security of the parental lock if it is located by persons not authorized by the owner to access certain channels.

Sirius Satellite Radio Master Code: '0913'

**Error Signs**

- (1) Depending on the surrounding conditions (such as large trees, buildings, or tunnels) and special weather conditions, the reception of SIRIUS radio waves may be decreased or temporarily interrupted. 'ACQUIRING SIGNAL' may appear.

**The 'ACQUIRING SIGNAL' message will clear after one of the following occurs:**

1. When the , , , , ,  or  on-screen button is pressed.
2. When the weather conditions have been improved.

- (2) In case of an antenna malfunction, 'ANTENNA FAIL' is displayed.

Check the satellite radio antenna (refer to the 'Antenna' in the owner's manual.), antenna cable and DLP antenna connector.


**The 'ANTENNA FAIL' message will clear after the antenna connection failure has been restored.**

**Note**

If a broken DLP\* unit is replaced with a new unit, cancel the license for the broken unit and make sure to carry out new registration for the replaced unit. If the license for the broken unit is not canceled, you will be charged a reception fee for both units.

\* DLP: Down Link Processor (SATELLITE RADIO Module)

## Operating the Bluetooth Audio

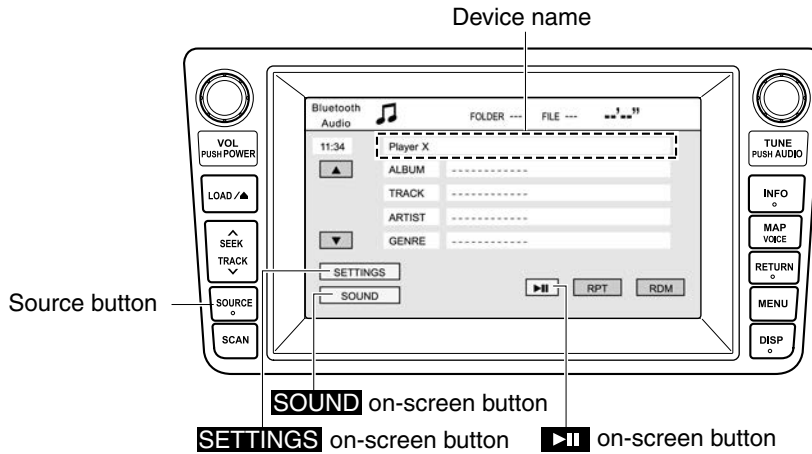

On-screen buttons other than those specified in the above figure are not functional.

### ■ What is Bluetooth Audio?

By programming portable audio devices equipped with the Bluetooth communication function to the vehicle's Bluetooth unit, you can listen to music or audio recorded on these audio devices from the vehicle's speakers.

After programming, operate the audio system's control panel or the navigation system to play/stop the music or audio.



Caution

Always program audio devices to the Bluetooth audio system while the vehicle is stopped.

Because only specified Bluetooth audio devices can be used, consult an Authorized Mazda Dealer when purchasing or changing devices.

Bluetooth audio devices which correspond to specified Bluetooth versions and profiles can be Bluetooth-connected to the vehicle's Bluetooth unit, however, even among these devices are ones which cannot be Bluetooth-connected or have limited functionality. Each device to be used with the vehicle's Bluetooth unit needs to be checked individually for compatibility. Consult an Authorized Mazda Dealer concerning device compatibility.

•Phone : 800-430-0153

•Web : [www.MazdaUSA.com/bluetooth](http://www.MazdaUSA.com/bluetooth)

Bluetooth version : Ver. 2.0 or higher Profile Audio profile

- HFP (Hands Free Profile) Ver. 1.5
- DUN (Dial-up Networking Profile) Ver. 1.1

Audio profile

- A2DP (Advanced Audio Distribution Profile) Ver. 1.0
- AVRCP (Audio/Video Remote Control Profile) Ver. 1.0

A2DP is a profile which transmits only audio to the Bluetooth unit. If your Bluetooth audio device corresponds only to A2DP, but not AVRCP, you cannot operate it using the control panel of the vehicle's audio or navigation systems. In this case, the Bluetooth audio device can be operated by controlling the device itself, the same as when a portable audio system without the Bluetooth communication function is connected to the AUX terminal.

Function	A2DP	A2DP+AVRCP
Playback	No	Yes
Pause	No	Yes
File(Track) up/down	No	Yes

Yes: Available

No: Not available



Bluetooth is the registered trademark of Bluetooth SIG. Inc.

#### Note

- It may not be possible to play a Bluetooth audio device if it is placed anywhere transmission is compromised, such as inside a metal container or the trunk. Move the Bluetooth audio device to a location where transmission is possible.
- Battery consumption of Bluetooth audio devices is higher while Bluetooth-connected.
- If a non-Bluetooth device is to be used, a commercially-available Bluetooth adapter is required. When playing an audio device with a Bluetooth adapter installed, programming of the audio device may not be possible or audio may not be heard from the vehicle speakers if the connection of the adapter and the device is poor. If this happens, check if the Bluetooth adapter is properly connected.

#### ■ Bluetooth audio device programming

Any Bluetooth audio device must be programmed to the vehicle's Bluetooth unit before it can be listened to over the vehicle's speakers.

A maximum of seven devices including Bluetooth audio devices and hands-free mobile phones can be programmed to one vehicle.

#### Note

- Always perform Bluetooth audio device programming while the vehicle is stopped.
- If a Bluetooth device has already been programmed to the vehicle as a hands-free mobile phone, it does not need to be programmed again when using the device as a Bluetooth audio device. Conversely, it does not need to be programmed again as a hands-free mobile phone if it has already been programmed as a Bluetooth audio device.
- The transmission range of a Bluetooth audio device is about 10 m (32 ft).
- Therefore, if there is another Bluetooth audio device within a 10 m (32 ft) radius of the vehicle, the device may be identified and programmed instead.

Concerning the operation of a Bluetooth audio device itself, refer to its instruction manual.


Some Bluetooth audio devices have PIN codes (four digits). Refer to the audio device's instruction manual because the programming procedure differs depending on whether it has a PIN code or not.




1. Press the SOURCE button.
2. Press the  on-screen button.



3. Press the  on-screen button.

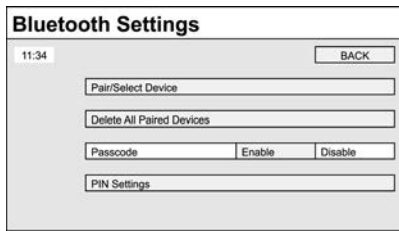

4. Press the  on-screen button.

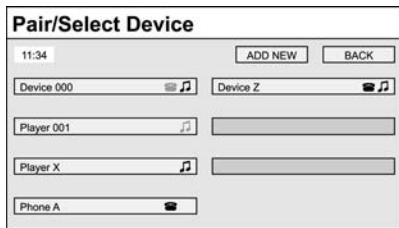


5. Press the  on-screen button.



6. A "Pairing is in progress" message with a PIN number is displayed.



Audio Operation

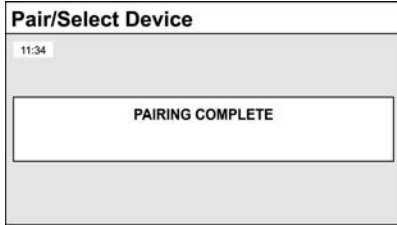


7. If the programming is successful, the Bluetooth audio name is displayed with a message "PAIRING COMPLETE" for three seconds.

**Note**

- The Bluetooth audio device needs to be operated for programming it to the vehicle's Bluetooth unit. Refer to the audio device's instruction manual for the programming procedure.
- If the programming failed, a message indicating a programming error is displayed for three seconds then the screen returns to the normal display.
- Programming cannot be performed while the vehicle is moving. When the vehicle starts to move, the buttons other than the **BACK** on-screen button are grayed out.
- If seven Bluetooth audio devices have been already programmed, additional programming cannot be performed. Delete one programmed Bluetooth audio device to program another one.


■ **Deleting the link to a Bluetooth audio device**



1. Press the SOURCE button.
2. Press the  on-screen button.




3. Press the **SETTINGS** on-screen button.

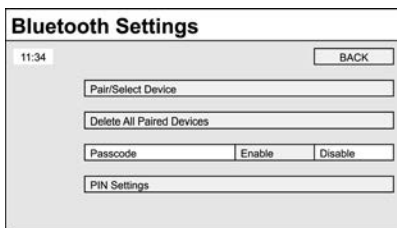


4. Press the **Pair/Select Device** on-screen button.



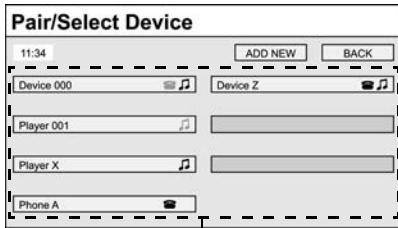

On-screen buttons for programmed Bluetooth audio devices

5. Press the on-screen button of the Bluetooth audio device you would like to delete from the programmed Bluetooth audio devices.

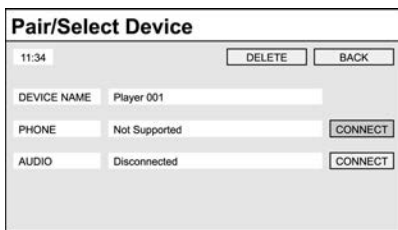

6. Press the **DELETE** on-screen button.



7. A confirmation screen is displayed to ask if the device is deleted. If the **OK** on-screen button is pressed, the programmed Bluetooth audio device can be deleted

**Note**

- A Bluetooth audio device cannot be deleted while it is being connected.
- If the programmed Bluetooth audio device deletion failed, a message indicating a deletion failure is displayed for three seconds then the screen returns to the normal display.
- Programming cannot be performed while the vehicle is moving. When the vehicle starts to move, the buttons other than the **BACK** on-screen button are grayed out.


### ■ Changing programmed Bluetooth device




1. Press the SOURCE button.
2. Press the  on-screen button.



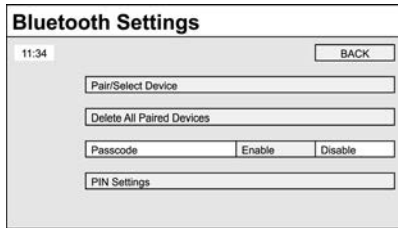

3. Press the **SETTINGS** on-screen button.

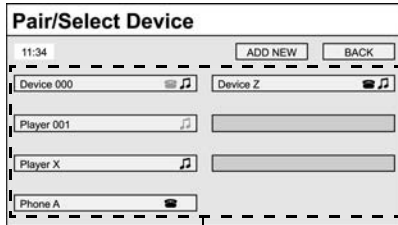


4. Press the **Pair/Select Device** on-screen button.



5. Press the on-screen button of the Bluetooth device you would like to choose from the programmed Bluetooth devices.

-  : Completed pairing as Hands-free mobile phone. Highlighted while connected.
-  : Completed pairing as Bluetooth audio device. Highlighted while connected.

On-screen buttons for programmed Bluetooth audio devices

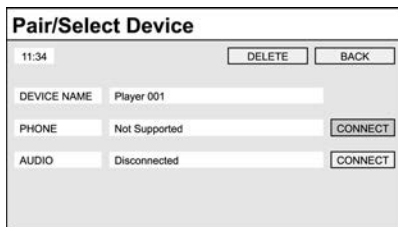


6. The Bluetooth Device Setting screen is displayed.
  - **DEVICE NAME:** Name of the Bluetooth device
  - **PHONE:** Status as Hands-free mobile phone
  - **AUDIO:** Status as Bluetooth audio device
7. If the **PHONE** or **AUDIO** **CONNECT** on-screen button is pressed, the selected phone or audio function becomes operable.

**Note**

- If “Not supported” is displayed on the Bluetooth Device Setting screen, the device is not supported for use with a Hands-free mobile phone or Bluetooth audio device.
- If “Disconnected” is displayed on the Bluetooth Device Setting screen, the device is supported for use with a Hands-free mobile phone or Bluetooth audio device, but cannot be used because it is not connected. If the **CONNECT** on-screen button is pressed, the device is connected and becomes enabled.
- If “Connected” is displayed, the device is supported for use with a Hands-free mobile phone or Bluetooth audio device, and is currently being enabled.

**How to use the Bluetooth Audio system**

**Switching to Bluetooth audio mode**


To listen music or voice audio recorded to a Bluetooth audio device, switch to the Bluetooth audio mode to operate the audio device using the audio system or navigation system control panels. Any Bluetooth audio device must be programmed to the vehicle’s Bluetooth unit before it can be used. Refer to “Bluetooth audio device programming”. (  page 94)



1. Press the SOURCE button.
2. Press the  on-screen button.


3. The audio recorded to the Bluetooth audio device begins playback.

**Note**

- If playback is not possible, press the  on-screen button after checking the Bluetooth device settings.
- If the mode is switched from Bluetooth audio mode to another mode (radio mode), audio playback from the Bluetooth audio device stops.
- If a call is received on a hands-free mobile phone during playback from the Bluetooth audio device, the playback is stopped. Playback from the Bluetooth audio device resumes after the call ends.

**Playback**




1. Press the SOURCE button.
2. To listen to a Bluetooth audio device over the vehicle’s speaker system, switch the mode to Bluetooth audio mode. (  page 99)




Audio Operation






3. To stop playback, press the  on-screen button. Press the button again to resume playback.

### ■ Setting the Passcode

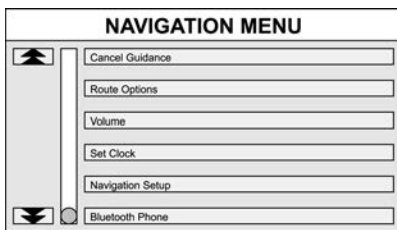
The system cannot be activated unless the previously set passcode is input.



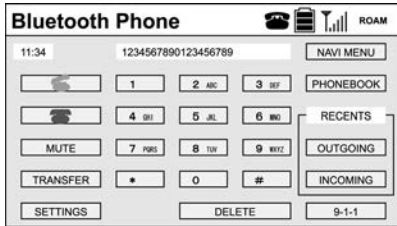



1. Press the MENU button.
2. The NAVIGATION MENU screen is displayed. Press the  on-screen button to scroll down the menu. Press the  on-screen button to switch to the Bluetooth Phone screen.



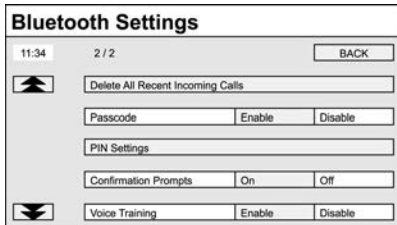

3. Press the  on-screen button to switch to the Bluetooth Setting screen.

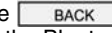


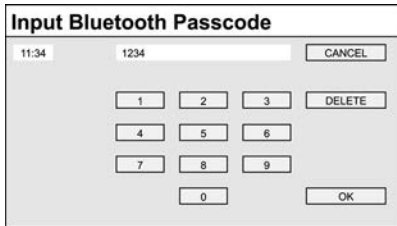4. Press the  on-screen button to scroll down the menu. Press the Passcode  on-screen button to switch to the Input Bluetooth Passcode screen.
  - Press the  on-screen button to return to the Bluetooth Phone screen.





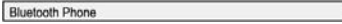
5. After inputting the 4-digit passcode, press the  on-screen button.
  - Press the  on-screen button to return to the Bluetooth Setting screen.


### Note

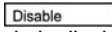- If the Passcode  on-screen button is pressed while Passcode has been enabled, Passcode is disabled.


### ■ Setting the PIN code

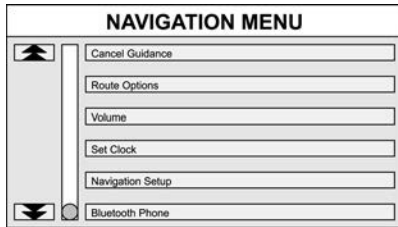

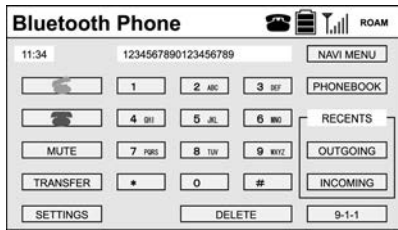

1. Press the MENU button.
2. The NAVIGATION MENU screen is displayed.  
Press the  on-screen button to scroll down the menu.  
Press the  on-screen button to switch to the Bluetooth Phone screen.




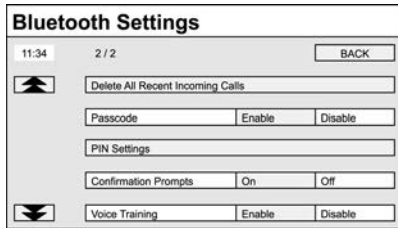

3. Press the  on-screen button to switch to the Bluetooth Setting screen.



4. Press the  on-screen button to scroll down the menu.  
Press the  on-screen button to switch to the Input Bluetooth PIN screen.

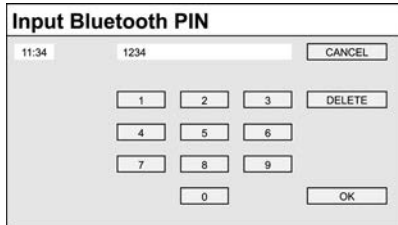- Press the  on-screen button to return to the Bluetooth Phone screen.




5. After inputting the 4-digit PIN code, press the  on-screen button.
- Press the  on-screen button to return to the Bluetooth Settings screen.

#### Note

- The default PIN code is "0000".

## Operating Single CD-MP3 Player

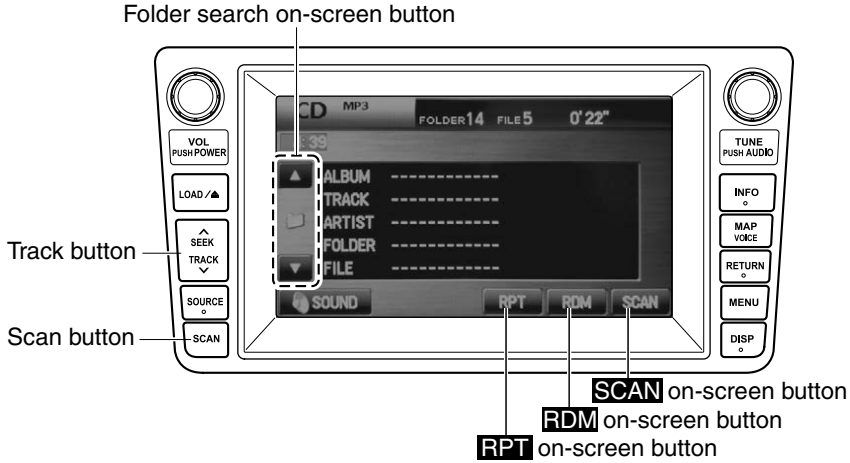

### ■ Inserting the CD

The display must be open (lowered) to insert the CD. The CD must be label-side up when inserting. The auto-loading mechanism will set the CD and begin play. There will be a short lapse before play begins while the player reads the digital signals on the CD.

#### Note

"IN" is displayed on the tray number for a CD that is inserted.

### ■ During CD playback


The album title, the track title, and the artist name will be displayed.

### ■ During MP3 CD playback

The album title, the track title, the folder name, the file number, and the artist name will be displayed.


#### Note

The CD will begin playback automatically after insertion.

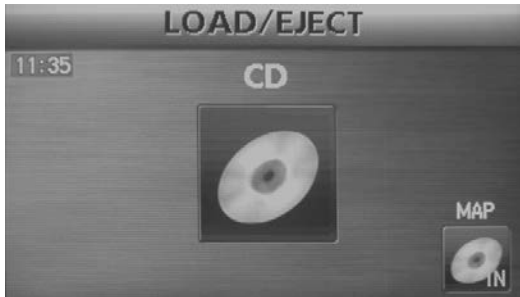




**Normal insertion**

1. Press the LOAD/▲ button.
2. Press the  on-screen button lightly.  
The display opens.
3. Lightly insert the CD after "DISC IN" is displayed. The CD will be inserted and played automatically after the display is closed.

**Note**

- The CD loading operation cancels 15 seconds after "DISC IN" is displayed or if the LOAD/▲ button is pressed again.


**Normal ejection**

1. Press the LOAD/▲ button.
2. Press the  on-screen button lightly.
3. The CD ejects after the display is opened.
4. The display closes automatically after the ejection is fully completed.

**Note**

 
 
If the CD is not removed from the slot within 15 seconds, it will be re-inserted. When this happens, or if the LOAD/▲ button is pressed again, the CD ejecting operation will be canceled.

**Playing**




1. Press the SOURCE button.
2. Select the  on -screen button.  
The song information will be displayed during playback.

**Note**

Press the tune audio dial if the following screen is not displayed.



Audio Operation

   

### Music CD



### MP3 CD





#### Note

- "-----" will be displayed for files without a file, track or other name input.
- This unit can read English (including numerals) one-byte characters.
- The displayable number of characters on each title is a maximum of 64.

 
(Music CDs)

- Although textual information (Track/artist information) recorded to each track appears in the display, textual information (Album/artist information) recorded for the entire CD does not appear in the display.

For details, refer to "CD-TEXT". (  page 73)

Select the  on-screen button if the whole title cannot be displayed at one time. The screen changes to display the rest of the characters.





### ■ Fast-forward/Reverse

Press and hold the SEEK/TRACK up button (⤴) to advance through a track at high speed until a beep sound is heard.

Press and hold the SEEK/TRACK down button (⤵) to reverse through a track at high speed until a beep sound is heard.

### ■ Track search

Press the SEEK/TRACK up button (⤴) once to skip forward to the beginning of the next track.

Press the SEEK/TRACK down button (⤵) once to skip back to the beginning of the current track.

Press the SEEK/TRACK down button (⤵) during track search to skip back to the beginning of the previous track.

### ■ Folder search (during MP3 CD playback)

To change to the previous folder, select the ◀ on-screen button, or select the ▶ on-screen button to advance to the next folder.

### ■ Music scan

 
 
 
 
 
 
This feature helps to find a program by playing about the first 10 seconds of each track.

 
Press the **SCAN** on-screen button or the SCAN button during play to start scan play operation (the track number will flash).

Press the **SCAN** on-screen button or the SCAN button once again to cancel scan play.

#### Note

If the unit is left in scan, normal play will resume where scan was selected.





### ■ Repeat play

#### **During music CD playback**

1. Select the **RPT** on-screen button during playback to play the current track repeatedly.
2. Select the button again to cancel the repeat play.

#### **During MP3 CD playback**

##### **(Track repeat)**

1. Select the **RPT** on-screen button during playback to play the current track repeatedly.
2. To cancel the repeat play, select the button again after 3 seconds.

##### **(Folder repeat)**

1. Select the **RPT** on-screen button during playback, and then select the button again within 3 seconds to play the tracks in the current folder repeatedly.
2. Select the button again to cancel the repeat play.

### ■ Random play

Tracks are randomly selected and played.

#### **During music CD playback**

1. Select the **RDM** on-screen button during playback to play the tracks on the CD randomly.
2. Select the button again to cancel the random play.

#### **During MP3 CD playback**

##### **(Folder random)**

 
1. Select the **RDM** on-screen button during playback to play the tracks in the folder randomly.
2. To cancel the random play, press the button again after 3 seconds.

 
##### **(DISC random)**

1. Select the **RDM** on-screen button during playback, and then select the button again within 3 seconds to play the tracks on the CD randomly.
2. Select the button again to cancel the random play.

### ■ Audio sound adjustment

Refer to "Power/Volume/Sound Controls".











# Contents

## Rear View Monitor

  - Rear View Monitor
  - Rear View Monitor Cautions..... 108
  - Rear View Parking Camera Location ..... 108
  - Switching to the Rear View Monitor Display..... 109
  - Displayable Range on the Screen ..... 109
  - Rear View Monitor Operation ..... 110
  - Variance Between Actual Road Conditions and Displayed Image.... 111



Rear View Monitor

    

# Rear View Monitor

## Rear View Monitor Cautions

The rear view monitor is a visual assist system when reversing the vehicle that provides images from the rear of the vehicle.



Warning

The rear view monitor is only a visual assist device when reversing the vehicle. The images on the screen may be different from the actual conditions. Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes. Reversing the vehicle by only looking at the screen may cause an accident or a collision with an object.



Cautions

- When the display is cold, images may course across the monitor or the screen and may be dimmer than usual, which could cause difficulty in confirming the surrounding conditions of the vehicle. Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes.
- Do not apply excessive force to the camera. The camera position and angle may deviate.
- Do not disassemble, modify, or remove it as it may no longer be waterproof.
- The camera cover is made of plastic. Do not apply degreasing agents, organic solvents, wax, or glass coating agents to the camera cover. If any are spilled on the cover, wipe off with a soft cloth immediately.
- Do not rub the cover excessively, or polish it using an abrasive compound or a hard brush. The cover may be damaged affecting the image.


### Note

- If water, snow, or mud is stuck on the camera lens, wipe it off using a soft cloth. If it cannot be wiped off, use a mild detergent.
- If the camera temperature changes rapidly, such as by pouring hot water on it under cold temperature conditions, the rear view monitor may not operate correctly.

Rear View Monitor

## Rear View Parking Camera Location

Rear View Parking Camera

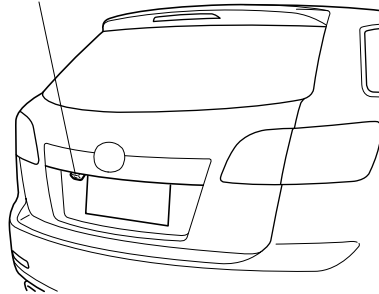

## Switching to the Rear View Monitor Display

Shift the shift lever to R with the ignition switch in the ON position to switch the display to the rear view monitor display.


### Note

When the shift lever is shifted from R to another shift lever position, the screen returns to the previous display.

## Displayable Range on the Screen

The images on the screen may be different from the actual conditions.

(Screen display)

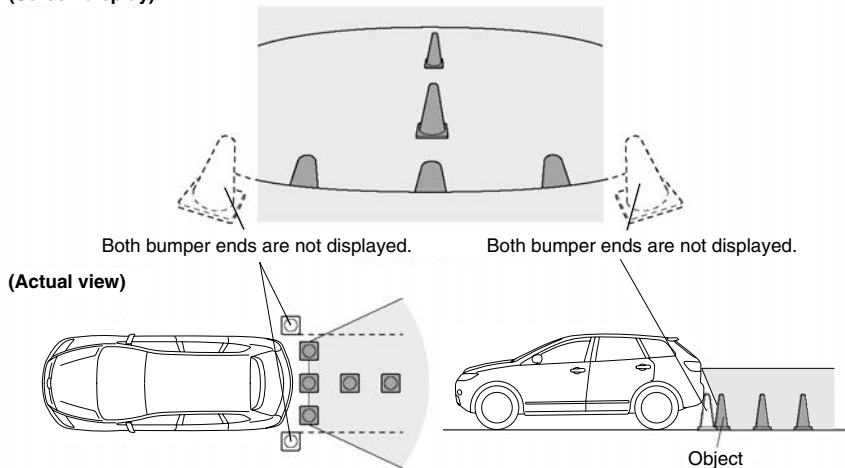

### Note

- The displayable range varies depending on the vehicle and road conditions.
- The displayable range is limited. Objects under the bumper or around the bumper ends cannot be displayed.
- The distance appearing in the displayed image is different from the actual distance because the rear view parking camera is equipped with a specific lens.
- Some optionally installed vehicle accessories may be picked up by the camera. Do not install any optional parts that can interfere with the camera view, such as illuminating parts or parts made of reflective material.
- It may be difficult to see the display under the following conditions, however, it does not indicate a malfunction.
  - In darkened areas.
  - When the temperature around the lens is high/low.
  - When the camera is wet such as on a rainy day or during periods of high humidity.
  - When foreign material such as mud is stuck around the camera.
  - When the camera lens reflects sunlight or headlight beams.
- If the camera picks up a high-intensity light such as sunlight reflected off the vehicle body, a bright belt (light line) may appear on the display. (Smear phenomenon)

Rear View Monitor


# Rear View Monitor Operation

The operation of the rear view monitor when reversing the vehicle varies depending on the traffic, road, and vehicle conditions. The amount of steering and the timing also varies depending on conditions, so confirm the surrounding conditions directly with your eyes and steer the vehicle in accordance with the conditions. Be well aware of the above cautions prior to using the rear view monitor.

## Note

Images displayed on the navigation display from the rear view parking camera are reversed images (mirror images).

- (1) Shift the shift lever to R to switch the display to the rear view monitor display.
- (2) Confirming the surrounding conditions, reverse the vehicle.

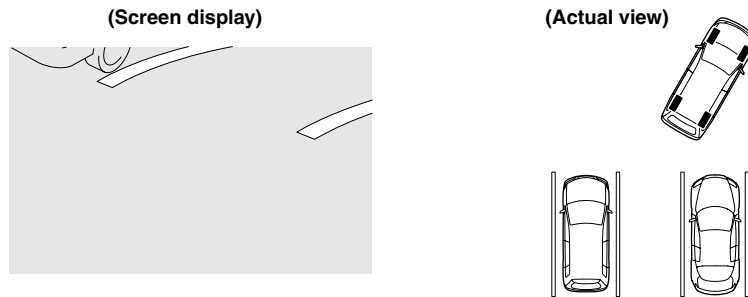

- (3) When the shift lever is shifted from R to another shift lever position, the screen returns to the previous display.

Rear View Monitor




# Variance Between Actual Road Conditions and Displayed Image

Some variance occurs between the actual road and the displayed road. Such variance in distance perspective could lead to an accident. Note the following conditions that may cause a variance in distance perspective.


## 1 When the vehicle is tilted due to the weight of passengers and load

When the vehicle rear is lowered, the object displayed on the screen appears farther than the actual distance.

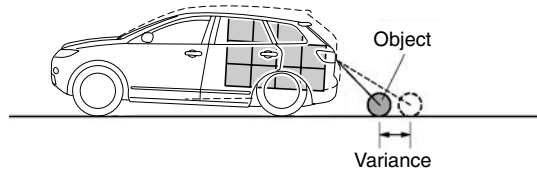



## 2 When there is a steep grade behind the vehicle

When there is a steep upgrade (downgrade) behind the vehicle, the object displayed on the screen appears farther (downgrade: closer) than the actual distance.

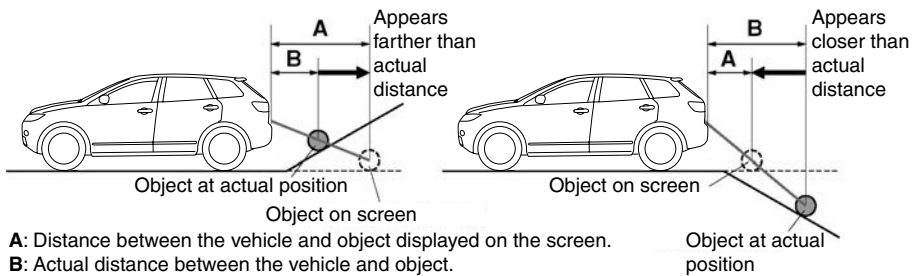


Rear View Monitor


 


 

# MEMO

 

**Rear View Monitor**

  








# Contents

## Others use

  - Bluetooth Hands-Free
  - Operating the Bluetooth Hands-Free..... 114  
 (What is Bluetooth Hands-Free?), (Mobile telephone programming),  
 (Deleting the link to a Mobile telephone),  
 (Changing the registered mobile telephone),  
 (Making calls using a Bluetooth phone),  
 (Receiving call using a Bluetooth phone),  
 (Making phone calls using the outgoing call record),  
 (Making calls using the incoming call record),  
 (Making calls using the phonebook), (Deleting all registered devices),  
 (Deleting all phonebooks), (Deleting all outgoing call records),  
 (Deleting all incoming call records), (Setting the Passcode),  
 (Setting the PIN code), (Activating the confirmation prompts function),  
 (Activating the voice training function)
- Steering Switch
  - Operating the Steering Switch..... 129  
 (Adjusting the Volume), (Changing the Source), (Seek Switch),  
 (Safety Certification)




Bluetooth Hands-Free

 

# Bluetooth Hands-Free

## Operating the Bluetooth Hands-Free

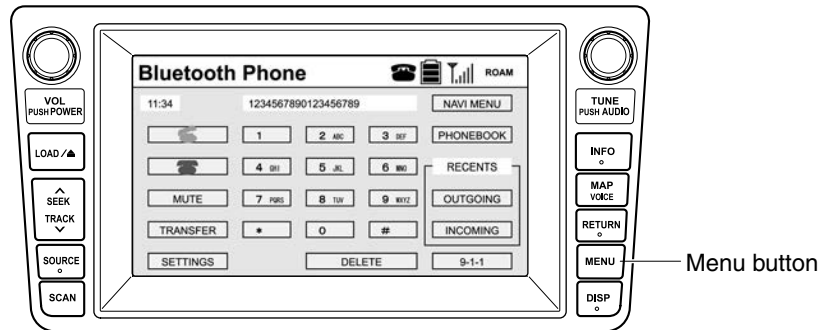

### ■ What is Bluetooth Hands-Free?

By connecting a Bluetooth equipped mobile telephone to the hands-free unit equipped on the vehicle, making and receiving calls are possible using the voice recognition switch, Pick-up button and Hang-up button located on the steering wheel, and saying the voice commands. A Bluetooth equipped mobile telephone communicates with the hands-free unit equipped on the vehicle using radio transmission (Bluetooth). For example, if the mobile telephone is placed in a coat pocket, the phone calls can be made through your mobile service without direct use of the mobile telephone. Refer to the "Bluetooth Hands-Free" in the owner's manual.

The types of mobile phones which can be connected to the hands-free unit are limited, so before purchasing or changing your mobile phone model, consult an Authorized Mazda Dealer.

Mobile phones which can be connected to the hands-free system need to be compliant with Bluetooth specifications and the appropriate profile, however, even among these Bluetooth phones are some which will not connect with your Mazda or will have limited function. Therefore, consult Mazda Bluetooth Hands-Free Customer Service for information regarding mobile phone compatibility:

- Phone : 800-430-0153
- Web : [www.MazdaUSA.com/bluetooth](http://www.MazdaUSA.com/bluetooth)

Applicable Bluetooth specification: Ver. 2.0 or higher

Response profile

- HFP (Hands Free Profile) Ver. 1.5
- DUN (Dial-up Networking Profile) Ver. 1.1
- A2DP (Advanced Audio Distribution Profile) Ver. 1.0
- AVRCP (Audio/Video Remote Control Profile) Ver. 1.0



Bluetooth is the registered trademark of Bluetooth SIG, Inc.


Bluetooth Hands-Free

**Note**

- If the ignition switch is turned off during a hands-free call, the line is transferred to the mobile telephone automatically.
- If the mobile telephone is in a location where radio reception is difficult such as a metal container or in the trunk, the call may not be connected using Bluetooth. If communication is not possible, change the location of the mobile telephone.

**Mobile telephone programming**


To use Bluetooth Hands-Free, the phone has to be programmed to the hands-free unit using the following procedure.

A maximum of seven devices including hands-free mobile phones and Bluetooth audio devices can be programmed to one vehicle. Refer to "Bluetooth audio device programming". (  page 94)


**Note**

- A mobile telephone can be programmed only when the vehicle is parked.
- If a Bluetooth device has already been programmed to the vehicle as a Bluetooth audio device, it does not need to be programmed again when using the device as a hands-free mobile phone. Conversely, it does not need to be programmed again as a Bluetooth audio device if it has already been programmed as a hands-free mobile phone.
- Since the communication range of a Bluetooth equipped mobile telephone is about 10 meters (32 ft), if a mobile telephone is placed within a 10-meter (32 ft) radius of the vehicle, it may be detected/programmed unintentionally while another telephone is being programmed.

**Deleting the link to a Mobile telephone**



Refer to "Deleting the link to a Bluetooth audio device". (  page 96)







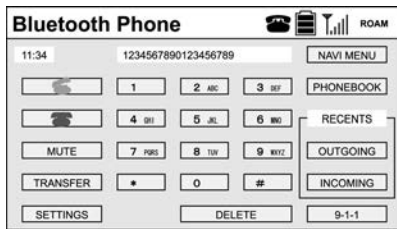
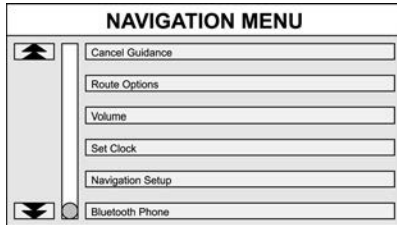



**Changing the registered mobile telephone**

Refer to "Changing the registered Bluetooth device". (  page 98)

**Bluetooth Hands-Free**

### ■ Making calls using a Bluetooth phone

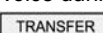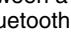


1. Press the MENU button.
2. The NAVIGATION MENU is displayed.  
Press the  on-screen button to scroll down the menu. Press the  on-screen button to switch to the Bluetooth Phone screen.
3. Input the telephone number using the number buttons.
  - If a number has been input incorrectly short-press the  on-screen button to delete the last digit of the number.
  - Long-press the  on-screen button to delete all of the digits.
  - Press the  on-screen button to return to the NAVIGATION MENU screen.
  - Press the  on-screen button to mute your voice during a call.
  - Press the  on-screen button to switch between a Hands-free call and call using a Bluetooth phone.
  - Press the  on-screen button to erase the currently input telephone number and replace it with the 911 emergency number.
4. Press the  on-screen button to place the call for the telephone number which was input using the number buttons.  
The call is canceled if the  on-screen button is pressed while the call is being placed.
5. Press the  on-screen button to end the call.

Bluetooth Hands-Free

**Note**

- Park your vehicle before attempting to input telephone numbers using the on-screen number buttons.

### ■ Receiving call using a Bluetooth phone

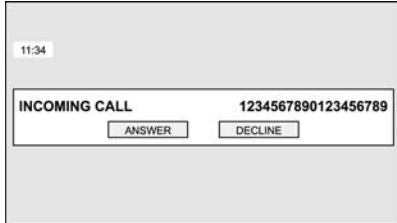


1. The currently connected mobile telephone receives calls.
2. The Incoming Call screen is displayed.
3. Press the **ANSWER** on-screen button.

#### Note

- If the **DECLINE** on-screen button is pressed, the call received on the currently connected mobile telephone is refused and the incoming call screen is no longer displayed.
- If the phone number for the received call is unknown, "Unknown" is displayed on the incoming call screen.
- If the caller cancels the call, the incoming call screen is no longer displayed.


### ■ Making phone calls using the outgoing call record

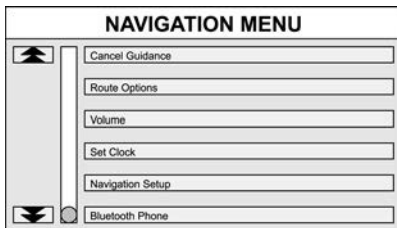


1. Press the MENU button.
2. The NAVIGATION MENU is displayed.  
Press the **DOWN** on-screen button to scroll down the menu.  
Press the **Bluetooth Phone** on-screen button to switch to the Bluetooth phone screen.



3. Press the **OUTGOING** on-screen button.
  - If there are 0 items in the call record, the color of the **OUTGOING** on-screen button is toned down.
  - If you would like to return to the NAVIGATION MENU, press the **NAVI MENU** on-screen button.

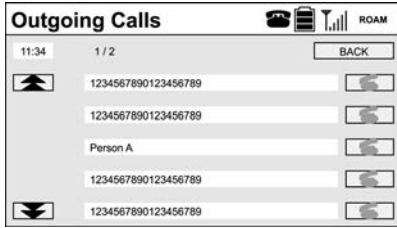

4. The system switches to the Outgoing Calls screen.
5. The names or telephone numbers in the outgoing call record are displayed. Press the or on-screen button to scroll up or down the list. Press the on-screen button at the name or telephone number of the person you would like to call.
  - The name of the person is displayed if the telephone number is already registered in your phonebook and the name can be retrieved from the phonebook.
  - Press the on-screen button to return to the Bluetooth Phone screen.
  - If notification of the telephone number on an outgoing call is restricted, it will not appear in the outgoing call record.
  - A maximum of 10 outgoing call records are displayed.
  - If the mobile telephone is not connected, the on-screen button is toned down.

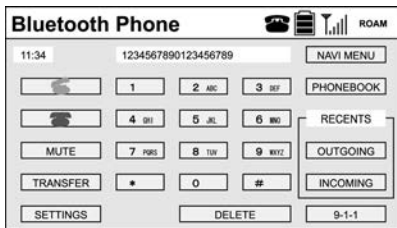

6. The system switches to the Bluetooth Phone screen when the call is made to the number displayed in the outgoing call record. The call is canceled if the on-screen button is pressed while the call is being placed.
7. Press the on-screen button to end the call.





**Note**









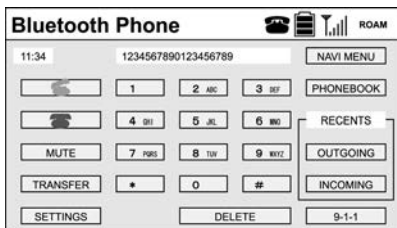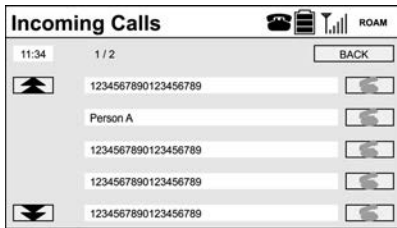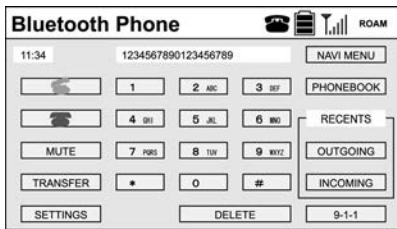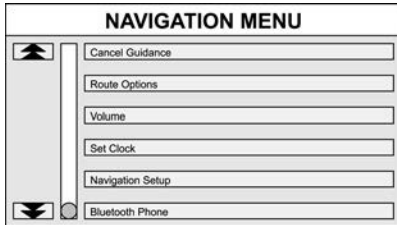



- Park your vehicle before attempting to place calls using the outgoing call record.



Bluetooth Hands-Free

### ■ Making calls using the incoming call record

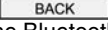

1. Press the MENU button.
2. The NAVIGATION MENU is displayed.  
Press the  on-screen button to scroll down the menu.  
Press the  on-screen button to switch to the Bluetooth phone screen.
3. Press the  on-screen button.
  - If there are 0 items in the call record, the color of the  on-screen button is toned down.
  - If you would like to return to the NAVIGATION MENU, press the  on-screen button.
4. The system switches to the Incoming Calls screen.  
The names or telephone numbers in the incoming call record are displayed. Press the  or  on-screen button to scroll up or down the list. Press the  on-screen button at the name of the person you would like to call.
  - The name of the person is displayed if the telephone number is already registered in your phonebook and the name can be retrieved from the phonebook.
  - Press the  on-screen button to return to the Bluetooth Phone screen.
  - If notification of the telephone number on an incoming call is restricted, it will not appear in the incoming call record.
  - A maximum of 10 incoming call records are displayed.
  - If the mobile telephone is not connected, the  on-screen button is toned down.
5. The system switches to the Bluetooth Phone screen the system switches to the Bluetooth Phone screen when the call is made to the number displayed in the incoming call record. The call is canceled if the  on-screen button is pressed while the call is being placed.
6. Press the  on-screen button to end the call.


#### Note



- Park your vehicle before attempting to place calls using the incoming call record.


## ■ Making calls using the phonebook

### Downloading the phonebook

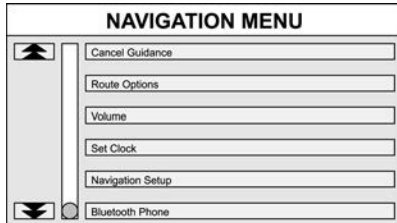
Downloads the phonebook data registered to the currently connected mobile telephone into the navigation system.




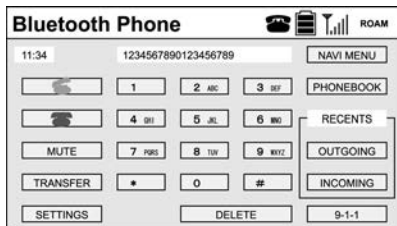


1. Press the MENU button.
2. The NAVIGATION MENU screen is displayed. Press the  on-screen button to scroll down the menu. Press the  on-screen button to switch to the Bluetooth Phone screen.

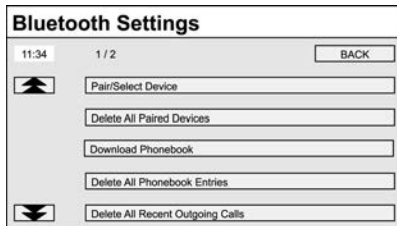


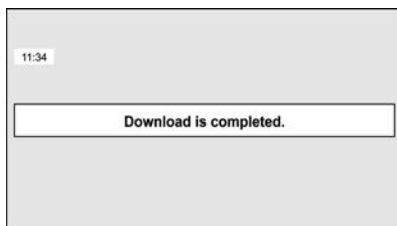
3. Press the  on-screen button to switch to the Bluetooth Setting screen.

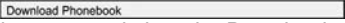

4. Press the  on-screen button to switch to the Download Phonebook screen.
  - Press the  on-screen button to return to the Bluetooth Phone screen.
  - If no mobile telephone is connected, the  on-screen button cannot be pressed.

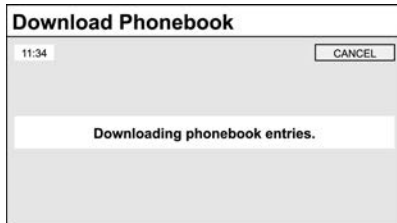

5. "Downloading phonebook entries." is displayed.
  - If the  on-screen button is pressed, the download is canceled and the system returns to the Bluetooth Setting screen.



6. When the download is completed, "Download is completed" is displayed.

Bluetooth Hands-Free






**Note**


- Park your vehicle before attempting to download the phonebook.
- If the download failed, a message indicating a failure is displayed.
- If the mobile telephone is non-PBAP-compliant, a message indicating a download failure is displayed.
- Making an receiving calls from the Bluetooth phone screen is not possible during transfer of phonebook data from the mobile telephone.
- Phonebook data recorded to the navigation screen cannot be called up using the voice recognition commands. In addition, phonebook data recorded to the voice recognition function cannot be called up from the navigation screen.

**Making calls using the phonebook**

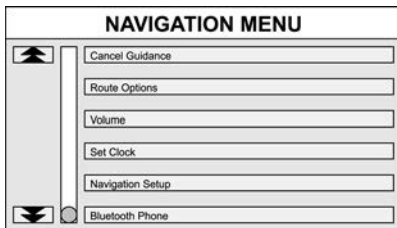
Makes calls using the phonebook downloaded from the currently connected mobile telephone.





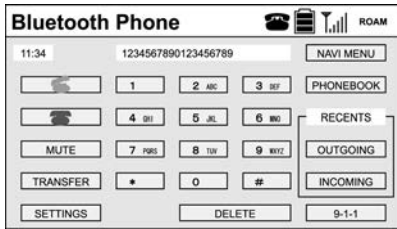


1. Press the MENU button.
2. The NAVIGATION MENU screen is displayed.  
Press the  on-screen button to scroll down the menu. Press the  on-screen button to switch to the Bluetooth Phone screen.

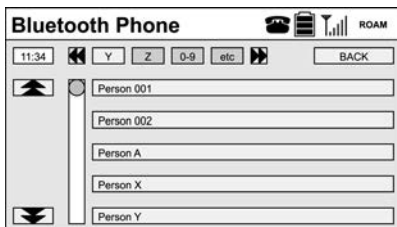


3. Press the  on-screen button to switch to the Bluetooth Phone screen.




4. Press the  or  on-screen button to scroll back and forth through the alphabets. Press the on-screen button indicating the initial letter in the person's name you would like to call.
5. The names/phone numbers registered to the selected initial letter are displayed alphabetically.  
Press the  or  on-screen button to scroll up or down the list. Press the on-screen button area which indicates the name/phone number of the person you would like to call to switch to the screen containing the detailed information recorded for that person.
- Press the  on-screen button to return to the Bluetooth Phone screen.

Bluetooth Hands-Free

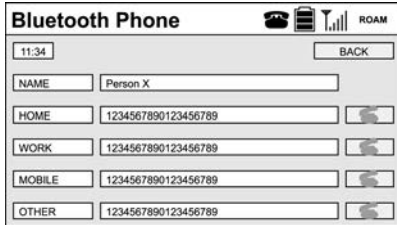

6. The detailed information registered to the phonebook is displayed. The phone numbers registered to each category are displayed. Press the [Call] on-screen button for the number you would like to call.

- Press the [BACK] on-screen button to return to the Phone Book screen.

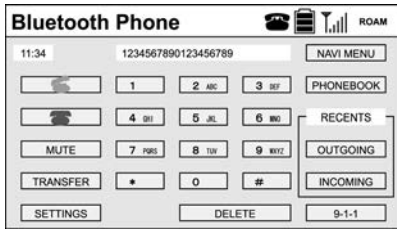

7. The system switches to the Bluetooth Phone screen. The call is made to the number registered to the phonebook.

The call is canceled if the [Call] on-screen button is pressed while the call is being placed.

The call is canceled if the [Call] on-screen button is pressed while the call is being placed.

8. Press the [Call] on-screen button to end the call.




**Note**



- Park your vehicle before attempting to place calls using the phonebook.




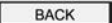


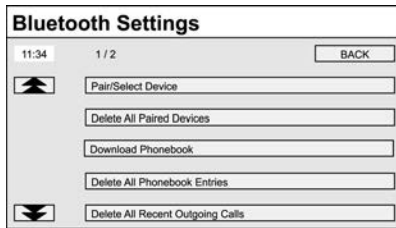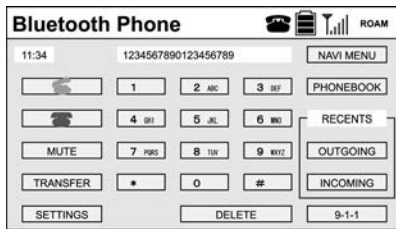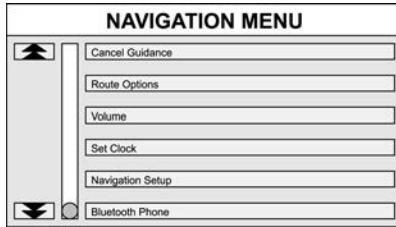


Bluetooth Hands-Free

### ■ Deleting all registered devices



1. Press the MENU button.
2. The NAVIGATION MENU screen is displayed. Press the  on-screen button to scroll down the menu. Press the  on-screen button to switch to the Bluetooth Phone screen.

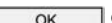
3. Press the  on-screen button to switch to the Bluetooth Setting screen.









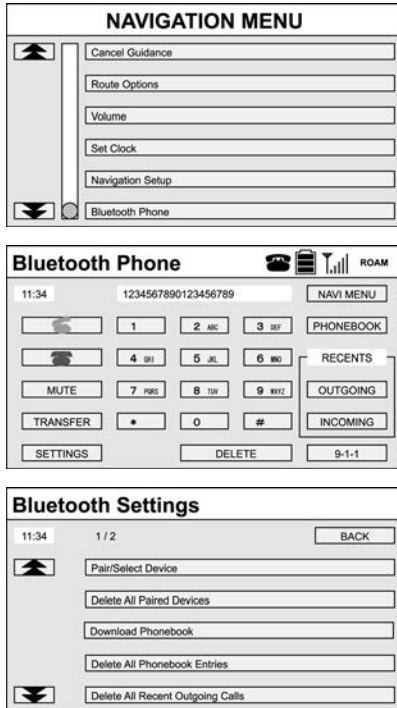

4. Press the  on-screen button to switch to the delete confirmation screen.
  - Press the  on-screen button to return to the Bluetooth Phone screen.
  - If no Bluetooth device is registered, the  on-screen button cannot be pressed.
5. "Delete all devices?" is displayed. Press the  on-screen button to start deleting.
  - The deleting operation cannot be canceled once the  on-screen button is pressed.
  - If the  on-screen button is pressed before pressing the  on-screen button, the message is cleared and the system returns to the Bluetooth Setting screen.
6. "Deleting all devices." is displayed. The message disappears when the deletion ends.

#### Note

- Park your vehicle before attempting to delete the registered devices.

### ■ Deleting all phonebooks








1. Press the MENU button.
2. The NAVIGATION MENU screen is displayed. Press the  on-screen button to scroll down the menu. Press the  on-screen button to switch to the Bluetooth Phone screen.
3. Press the  on-screen button to switch to the Bluetooth Setting screen.
4. Press the  on-screen button to switch to the delete confirmation screen.
  - Press the  on-screen button to return to the Bluetooth Phone screen.
  - If no telephone number is registered to the phonebook, the  on-screen button cannot be pressed.
5. "Delete all phonebook entries?" is displayed. Press the  on-screen button to start deleting.
  - The deleting operation cannot be canceled once the  on-screen button is pressed.
  - If the  on-screen button is pressed before pressing the  on-screen button, the message is cleared and the system returns to the Bluetooth Setting screen.
6. "Deleting all phonebook entries." is displayed. The message disappears when the deletion ends.

#### Note



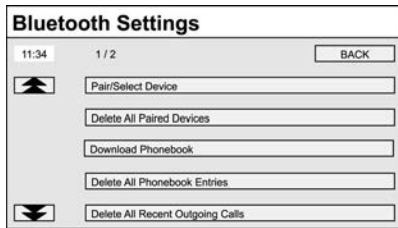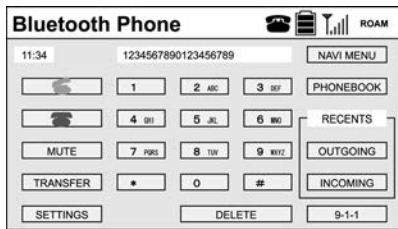
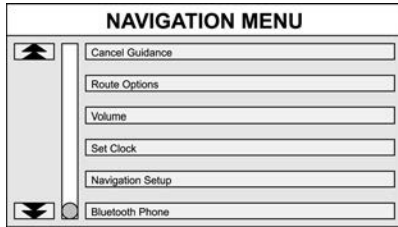



- Park your vehicle before attempting to delete the phonebooks.

### ■ Deleting all outgoing call records



1. Press the MENU button.
2. The NAVIGATION MENU screen is displayed. Press the  on-screen button to scroll down the menu. Press the  on-screen button to switch to the Bluetooth Phone screen.

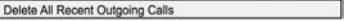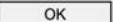
3. Press the  on-screen button to switch to the Bluetooth Setting screen.

4. Press the  on-screen button to switch to the delete confirmation screen.
  - Press the  on-screen button to return to the Bluetooth Phone screen.
  - If there is no outgoing call record, the  on-screen button cannot be pressed.
5. "Delete all recent outgoing calls?" is displayed. Press the  on-screen button to start deleting.
  - The deleting operation cannot be canceled once the  on-screen button is pressed.
  - If the  on-screen button is pressed before pressing the  on-screen button, the message is cleared and the system returns to the Bluetooth Setting screen.
6. "Deleting all recent outgoing calls." is displayed. The message disappears when the deletion ends.


#### Note

- Park your vehicle before attempting to delete the outgoing call records.


### ■ Deleting all incoming call records

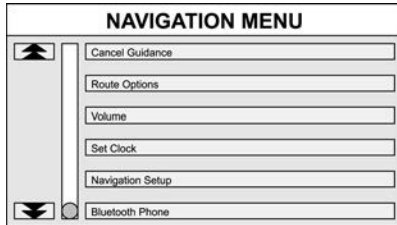

1. Press the MENU button.
2. The NAVIGATION MENU screen is displayed. Press the on-screen button to scroll down the menu. Press the on-screen button to switch to the Bluetooth Phone screen.

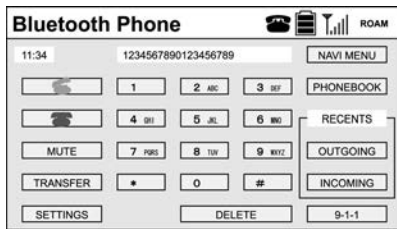

3. Press the on-screen button to switch to the Bluetooth Setting screen.

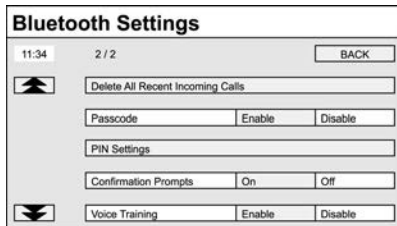

4. Press the on-screen button to scroll down the menu. Press the on-screen button to switch to the delete confirmation screen.
  - Press the on-screen button to return to the Bluetooth Phone screen.
  - If there is no incoming call record, the on-screen button cannot be pressed.
5. "Delete all recent incoming calls?" is displayed. Press the on-screen button to start deleting.
  - The deleting operation cannot be canceled once the on-screen button is pressed.
  - If the on-screen button is pressed before pressing the on-screen button, the message is cleared and the system returns to the Bluetooth Setting screen.
6. "Deleting all recent incoming calls." is displayed. The message disappears when the deletion ends.

#### Note

- Park your vehicle before attempting to delete the incoming call records.


### ■ Setting the Passcode



Refer to "Setting the Passcode". ( page 100)


### ■ Setting the PIN code

Refer to "Setting the PIN code". ( page 101)

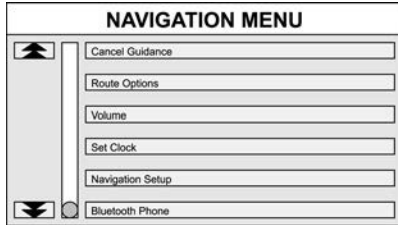
### ■ Activating the confirmation prompts function



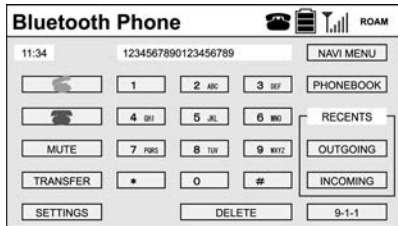


1. Press the MENU button.
2. The NAVIGATION MENU screen is displayed.  
Press the  on-screen button to scroll down the menu.  
Press the  on-screen button to switch to the Bluetooth Phone screen.




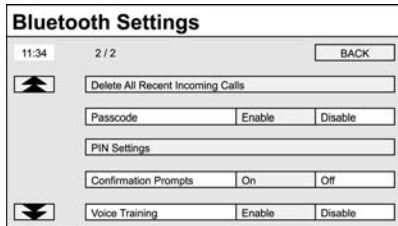

3. Press the  on-screen button to switch to the Bluetooth Setting screen.




4. Press the  on-screen button to scroll down the menu.  
Press the Confirmation Prompts  on-screen button to activate the function.  
Press the  on-screen button to cancel the function.

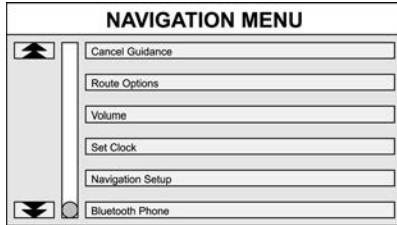
### ■ Activating the voice training function


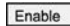
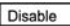


1. Press the MENU button.
2. The NAVIGATION MENU screen is displayed.  
Press the  on-screen button to scroll down the menu.  
Press the  on-screen button to switch to the Bluetooth Phone screen.

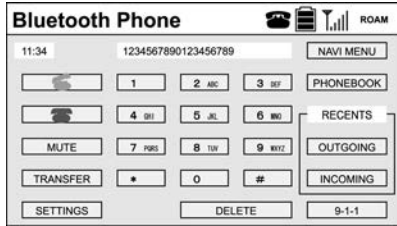

3. Press the  on-screen button to switch to the Bluetooth Setting screen.

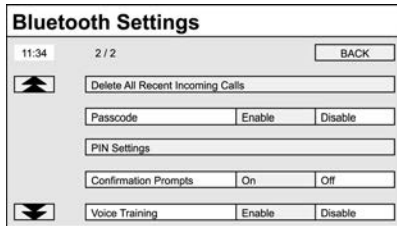

4. Press the  on-screen button to scroll down the menu.  
Press the Voice Training  on-screen button to activate the voice training function. Press the  on-screen button to cancel the function.

Bluetooth Hands-Free




# Steering Switch

## Operating the Steering Switch

### ■ Adjusting the Volume


To increase the volume, pull up the volume switch.

To decrease the volume, press down the volume switch.

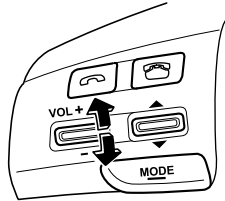


### ■ Changing the Source

Press the mode switch (MODE) to change the audio source (FM1 radio > FM2 radio > AM radio > SIRIUS1 > SIRIUS2 > SIRIUS3 > CD > AUX1 > AUX2 > OFF > cyclical).

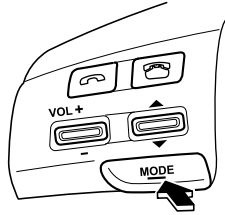

### ■ Seek Switch

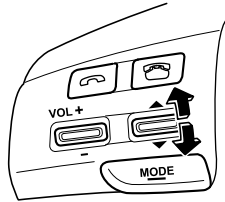

#### When listening to the radio

Pull up or press down the seek switch, the radio switches to the next/previous stored station in the order that it was stored (1-8).

Pull up or press down the seek switch for about 2 seconds until a beep sound is heard to seek all usable stations at a higher or lower frequency whether programmed or not.

#### When playing a CD

Pull up the seek switch to skip to the next track.

Press down the seek switch to repeat the current track.

Steering Switch



### ■ Safety Certification

This CD player is made and tested to meet exacting safety standards. It meets FCC requirements and complies with safety performance standards of the U.S. Department of Health and Human Services.



- This CD player should not be adjusted or repaired by anyone except qualified service personnel. If servicing is required, contact an Authorized Mazda Dealer.
- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser exposure. Never operate the CD player with the top case of the unit removed.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

 
 
#### Note

For CD player section:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.



Steering Switch

