



2009 Mazda6

SMART START GUIDE



zoom-zoom
zoom-zoom



 
 
Optional equipment shown.

Key



ADVANCED KEYLESS ENTRY SYSTEM

- This system allows you to lock and unlock the doors, open the trunk lid and even start the engine without ever taking your key out.
- You can also use the buttons on the advanced key to lock and unlock the doors, open the trunk lid and open the power windows and moonroof.
- Auxiliary key provided for emergencies.

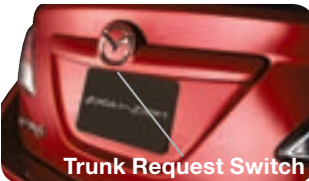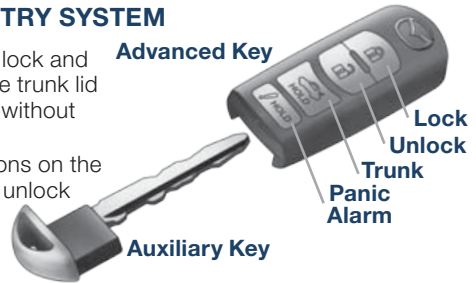

Advanced Key Features

- **Driver's Door Handle:** To unlock only the driver's door, gently grasp and pull the door handle after the beep is heard. The sensor on the back side of the door handle will sense the motion of your hand and unlock the door.

NOTE: If the door handle is pulled too quickly (before door is unlocked), the door may not open. Pull the door handle again to open.

- To unlock all doors from the driver's door, use the inner door lock switch after opening the door OR push the unlock button on the advanced keyless entry transmitter twice.

- **Passenger's Door Handle:** To unlock **all** doors, gently grasp and pull the door handle.
- To lock all the doors, simply push the Driver's Door Request Switch.

NOTE: To avoid unintentionally unlocking the doors (if confirming doors are locked by pulling door handle), they cannot be unlocked for about 3 seconds after they are locked, even if the door handle (sensor) is grasped.

- To unlock/open the trunk, push the Trunk Request Switch.

Please refer to your Owner's Manual for complete details.

KEYLESS ENTRY SYSTEM

This system remotely locks/unlocks doors and opens trunk lid, power windows and moonroof.


- To extend the key, push the release button.
- To retract the key, push the release button and fold the key back into the holder.





STARTING THE ENGINE WITH THE ADVANCED KEY

With the Advanced Key on you...

- Start the engine by pushing the Start button while pushing the clutch pedal (manual transmission) or the brake pedal (automatic transmission). Shut the engine OFF by pushing the Start button again.
- To activate Accessories (ACC), push the Start button once without pushing the clutch or brake pedal.
- The key indicator light  will show **GREEN** when the advanced key is detected and the brake pedal is pushed. The engine is ready to start. The indicator flashes **RED** (for 3 seconds) when the key is not detected or if the advanced keyless transmitter battery is dead. If illuminated **RED**, the push button start may not start the engine, unless the auxiliary key is used (see “**Emergency Vehicle Entry/Engine Start**”).



NOTE:

- Before engine starts (while clutch or brake is pushed), the Start button indicator light is **GREEN** when engine is ready to start, **RED** when system detects a failure (engine may not start), or flashing **RED** (manual transmission only) requires pushing and holding Start button to start the engine.
- **Emergency Engine Stop**
Continuously pushing the Start button while the engine is running will turn the engine OFF. Use only in case of an emergency.
- **Emergency Vehicle Entry/Engine Start**
In case the Start button does not work (e.g., advanced keyless transmitter battery is dead), locate the emergency key slot cover on the steering column, remove the cover and insert the auxiliary key into the key slot, then push the Start button to start the engine.

Seats



ELECTRONICALLY OPERATED DRIVER SEAT W/MEMORY

Slide/Tilt Switch

Push forward or backward to slide seat bottom. Seat can also be raised, lowered or tilted with this control.

Recline Switch

Push forward or backward to adjust seatback angle.

Lumbar Adjustment

Rotate clockwise to increase support and counterclockwise to decrease support.



Memory Seat Switch



To Program the Driver's Seat Position:

- 1 Park vehicle.
- 2 Adjust seat to desired position using the Slide/Tilt and Recline switches.
- 3 While pushing the memory seat SET button, push one of the three programming buttons until beep is heard. Programming is now complete. Program the remaining two buttons as desired.

To return to the programmed position:

- When entering the vehicle with the door open and the ignition OFF, the seat will move to the programmed position with one touch of the button (1, 2 or 3).
- In all other situations (door closed or engine running), you must push and hold the button (1, 2 or 3) to move the seat to the programmed position.

NOTE:

- Memory seat functions do not operate while the vehicle is in motion.
- You can also program one seat position for each advanced key/retractable type key used with the vehicle. See Owner's Manual for programming instructions.



AUTO-DIMMING MIRRORS AND HOMELINK®



Auto-Dimming Mirrors



- Auto-Dimming automatically darkens your rear view mirror and both outside door mirrors to reduce headlight glare from the vehicles behind you.
- Auto-Dimming is activated every time the vehicle is started.

NOTE:

- Both door mirrors will appear to have a halo, or ring around the outer edge of the mirror surface. This is actually the electrical circuitry that allows the mirrors to dim. This is normal operation of the mirrors.
- In addition to the auto-dimming mirror's front light sensor, there is also a rear light sensor (not shown). Do not place or hang any objects over the front or rear mirror light sensors, otherwise, the auto-dimming mirrors will not operate properly.

HomeLink®

- This feature provides a convenient way to replace up to three transmitters such as garage door openers, home lighting remotes and other radio frequency devices.
- Refer to your Owner's Manual for complete programming details.

Driver's View (shown with optional



5

Navigation System)

HAZARD WARNING

**INFORMATION
DISPLAY**
(P. 14)

**AUDIO/NAVIGATION
DISPLAY** 
(PP. 17-20)

**AUDIO SYSTEM
WITHOUT NAVIGATION**
(PP. 15-16)



**PASSENGER
AIRBAG
OFF INDICATOR**



**CLIMATE
CONTROL** 
(PP. 13-14)

**PUSH BUTTON
START** 
(P. 2)

**SEAT WARMER
SWITCHES**

 **Video available at MyMazda.com** 6



Instrument Cluster



INSTRUMENT
CLUSTER DIMMER
















FUEL GAUGE

TACHOMETER

AMBIENT
TEMPERATURE

GLOSSARY OF WARNING AND INDICATOR LIGHTS

NOTE: See Owner's Manual for more details and explanations.

- | | |
|---|---|
| <p> Low Fuel</p> | <p> DSC OFF
(Dynamic Stability Control)</p> |
| <p> KEY Warning Light (RED)
Advanced key not detected or transmitter battery is dead.</p> | <p> Charging System</p> |
| <p> KEY Indicator Light (GREEN)
Advanced key detected, engine is ready to start.</p> | <p> Tire Pressure Monitoring System
Tire pressure may be low in one or more tires.</p> |
| <p> Check Fuel Cap</p> | <p> Powertrain Malfunction/ Reduced Power</p> |
| <p> Electronic Steering Lock
Indicates steering wheel is locked.</p> | <p> ABS
(Antilock Brake System)</p> |
| <p> Light-On (Exterior Lights)</p> | <p> Check Engine</p> |
| <p> BSM OFF
(Blind Spot Monitoring)</p> | <p> Brake</p> |
| <p>7  TCS OFF
(Traction Control System)</p> | |



ODOMETER /
TRIP METER

SPEEDOMETER

ENGINE COOLANT
TEMPERATURE GAUGE

ODOMETER/ TRIP
METER SELECTOR

GEAR INDICATOR



Automatic Transmission



TCS/DSC



Turn Signal/
Hazard Warning



Headlight High-Beam



Shift Position



Air Bag/Front Seat Belt
Pretensioner System



Engine Oil Pressure



Security Indicator



Door-Ajar



Seat Belt



Cruise Main Indicator
Light (AMBER)/Cruise Set
Indicator Light (GREEN)



 
Low Washer Fluid Level

NOTE: The tire pressure should be set when tires are cold. Large changes in ambient temperatures or altitude may cause TPMS warning light to illuminate.

Feature Highlights

LIGHTING CONTROL/TURN SIGNAL LEVER


- Rotate the outer knob up to the first position for AUTO. With the headlight switch in AUTO and the ignition ON, the light sensor determines the surrounding lightness or darkness and automatically turns the headlights, other exterior lights and dashboard illumination on or off.
- Rotate the outer knob up to the second position for tail, parking and dashboard lights.
- Rotate the outer knob up to the third position for tail, parking, dashboard, and headlights.
- Rotate the inner ring up for fog lamps.
- Push the lever away from you to turn the high beams on.
- Pull the lever all the way back and release to flash the high beams.

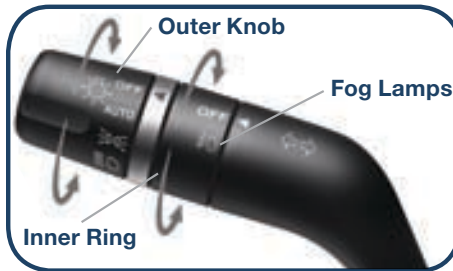

PORTABLE AUDIO PLAYER INTEGRATION USING THE AUX JACK

Your vehicle is equipped with an AUX or auxiliary jack that will allow you to play your portable audio player through the vehicle's audio system.

 - 1 Locate the AUX jack inside the center console.
- 2 Plug your portable audio player into the AUX jack and turn it on.
- 3 Turn the vehicle audio system on.
- 4 • **Without Navigation System:** Push AUX button on audio system **OR** push Mode button on steering wheel controls until "AUX" is displayed.
• **With Navigation System:** Push Source button on audio system, then push AUX1 on screen **OR** push Mode button on steering wheel controls until "AUX1" is displayed.
- 5 Use the portable audio player controls to play music.

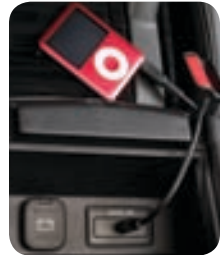


NOTE: Set the volume level on your portable audio player to the highest level before distortion starts. Then, adjust volume in the vehicle using the audio system power/volume control or the steering wheel volume up and down controls.

WINDSHIELD WIPER/WASHER CONTROL LEVER

- MIST-Push lever up for a single swipe to clear mist.
- AUTO-With the windshield wiper lever in the AUTO position, the rain sensor senses the amount of rainfall and turns the wiper on or off automatically. Rotate inner ring away from you (clockwise) for less sensitivity and toward you (counterclockwise) for more sensitivity.

NOTE: Vehicles not equipped with AUTO wipers will have intermittent (INT) wipers.

 - LO-Push down to second position for low speed wiper operation.
- HI-Push down to third position for high speed wiper operation.
- Pulling lever toward you will dispense washer fluid and the wipers will make several passes across windshield.

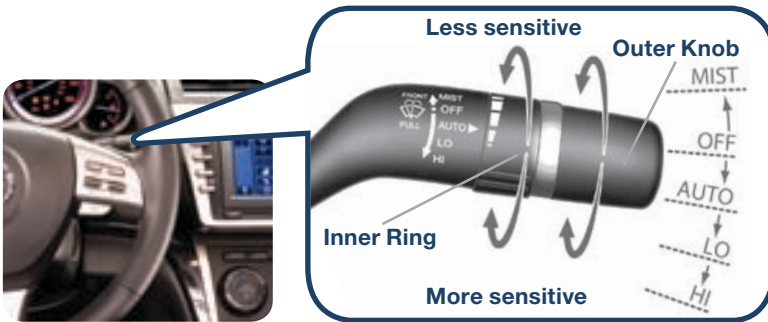

Fuel Door Release

To open, pull up the remote fuel door release.

NOTE: Fuel requirement 87 Octane.



Fuel Door

To avoid scratching the paint during refueling, secure the fuel filler cap tether over the hook as shown.



Feature Highlights

BLIND SPOT MONITORING (BSM) SYSTEM

 
 
The Blind Spot Monitoring (BSM) system is designed to assist the driver by monitoring the blind spots to the rear of the vehicle on both sides.

- If your vehicle speed is 20 mph (32 km/h) or more, the BSM will warn you of vehicles in the detection area by illuminating the BSM warning lights located on the left and right door mirrors.
- If you operate a turn signal in the direction of an illuminated BSM warning light, the system will also warn you with a beep and warning light flash.
- BSM sensors are located under the left and right rear bumper areas. The BSM system may not operate properly if the rear bumper gets too dirty, so keep the rear bumper area clean.

Please refer to your Owner's Manual for complete details.

Turning BSM System Off:

To manually turn the BSM system off/on, push the BSM switch. The BSM indicator will illuminate in the instrument cluster when the BSM system is off. The BSM system will automatically turn on the next time the vehicle is started.

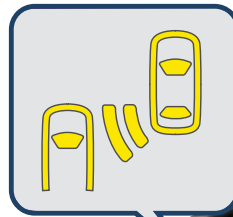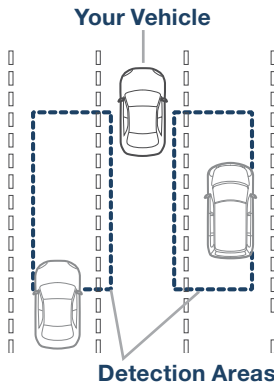

NOTE: Do not rely completely on the BSM system and be sure to look over your shoulder before changing lanes:

- The BSM system can assist the driver in confirming the safety of the surroundings, but is not a complete substitute.
- The driver is responsible for assuring lane changes and other maneuvers.
- Always pay attention to the direction in which the vehicle is traveling and the vehicle's surroundings.
- The BSM system does not operate when the vehicle speed is lower than about 20 mph (32 km/h).

SPORT A7 MANUAL SHIFT MODE

The Sport A7 Manual Shift Mode gives you the feel of driving a manual transmission by allowing you to manually shift to control engine rpm and torque when more control is desired.

To Use Manual Shift Mode:

- Shift lever from D to M.

 
NOTE: Changing to manual mode can be done while driving the vehicle.

To Shift Up To A Higher Gear:


- Tap shift lever back (+) once.

To Shift Down To A Lower Gear:

- Tap shift lever forward (-) once.

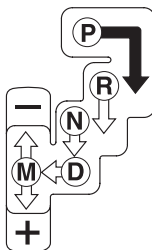

6-SPEED MANUAL TRANSMISSION

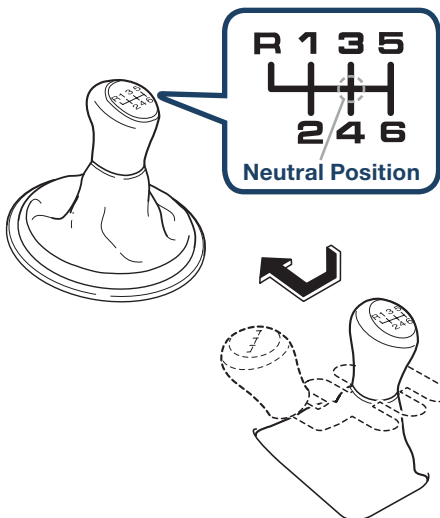 

- Push the clutch pedal down completely to start the engine and to shift gears.
- To place the transmission in Reverse, place shifter in the neutral position, push the shifter down, move to the left and push forward.

NOTE: Do not shift into 1st gear above 20 mph or clutch failure could occur. Resting your foot on the clutch pedal while driving and using the clutch to hold your vehicle at a standstill while waiting on a hill may reduce clutch life.


Manual Climate Control








 
Temperature Control Dial

- Push to turn Air Conditioning system ON and OFF.
- Rotate dial to desired air temperature.

Fan Control Dial

- Rotate dial to desired fan speed (1-4).
-  Push to recirculate cabin air, reduce exhaust odors and increase cooling.

Mode Selector Dial

- Rotate dial to select airflow mode.
-  Dashboard vents
 -  Dashboard and floor vents
 -  Floor vents
 -  Defroster and floor vents
 -  Windshield Defroster
 -  Push to defrost rear window

NOTE: Applies to Manual and Automatic Climate Control Systems: With any type of defroster operation (even in the FLOOR mode where some air goes to defrost to keep the windows defrosted), the system turns on the A/C compressor and selects the FRESH AIR mode. This helps defrost the windows more efficiently by dehumidifying the air. The A/C compressor will always be on in defroster mode, but the defroster (and floor) will deliver warm air when the temperature dial is set to a warmer temperature and the engine warms up.

Automatic Climate Control

Driver side temperature setting

Passenger side temperature setting



Driver Temperature Control Dial

- Push AUTO ON to turn Automatic Air Conditioning system ON.
- Rotate dial to desired air temperature (shown in Information Display above).


NOTE: Rotating Fan control dial or pushing the MODE button while in AUTO ON mode will cancel auto A/C.


 **FRONT** Push to defrost windshield.

 **REAR** Push to defrost rear window.

Fan Control Dial

- Push to turn the climate control system OFF.
- Rotate dial to desired fan speed (for manual control).

 Push to recirculate cabin air and reduce outside exhaust, odors and improve cooling.

 Push for fresh air circulation.

Passenger Temperature Control Dial

- Push and rotate to activate.
- Rotate dial to desired passenger side air temperature (shown in Information Display above).

 **MODE** Push to select the desired airflow mode.

A/C Push to manually turn air conditioning on or off.

Interconnection Mode: Push DUAL switch to change between individual (driver and passenger) operation and interconnection modes.

Indicator Light ON - Passenger independently controls passenger side temperature setting.

Indicator Light OFF - Driver controls temperature settings on both sides.

Audio Controls Without Navigation



TO LOAD/PLAY A CD (if equipped with 6-CD changer)

1. Push the **LOAD** button.
2. After "IN" is displayed on the Information Display, insert the CD.

Audio System ON

- Push **POWER/VOLUME** to turn the radio on.

Media Selection

- AM, FM, CD, SAT (SIRIUS™ Satellite radio), AUX (to switch to AUX jack input and Bluetooth® streaming audio if equipped).

NOTE: If the FM broadcast signal becomes weak, reception automatically changes from STEREO to MONO for reduced noise, and the "ST" indicator will go out.

SAT: SIRIUS™ Satellite radio will deliver the broadest, deepest mix of radio entertainment. See Owner's Manual for more details.

Tuning

The radio has the following tuning controls:

- **MANUAL**
- **TRACK/SEEK**
- **SCAN**
- **PRESET CHANNEL**
- **AUTO MEMORY TUNING**

Manual Tuning

- Turning the **TUNE** dial will change the frequency higher or lower.

Seek Tuning

- Pushing the **TRACK/SEEK** tuning buttons **▲ ▼** will cause the tuner to seek a higher or lower frequency automatically.





SETTING YOUR CLOCK (not equipped with Trip Computer)

1. Push and hold the **H** (hours) button to the correct hour.
2. Push and hold the **M** (minutes) button to the correct minute.

NOTE: Push the **:00** button to zero out the minutes.

Scan Tuning

- Push the SCAN button to automatically sample strong stations.
- To hold a station, push the SCAN button again during this interval.

Preset Channel Tuning

The 6 preset channels can be used to store 6 AM and 12 FM stations.

- To set a channel first select AM, FM1, or FM2.
- Tune to the desired station.
- Push a channel preset button for about 2 seconds until a beep is heard.
- Repeat this operation for the other stations and bands you want to store.

Auto-Memory Tuning

When driving in an area where the local stations are not known, additional AM/FM stations can be stored without disturbing the previously set channels. Refer to your Owner's Manual for complete details.

SETTING YOUR CLOCK (if equipped with Trip Computer)

1. Push the "**CLOCK**" button.
2. Push and hold the **H** (hours) button to the correct hour.
3. Push and hold the **M** (minutes) button to the correct minute.

Audio Controls With Navigation

TO LOAD/PLAY A CD

1. Push **LOAD/▲**
2. Push the **LOAD** on-screen button lightly.
3. Wait for the screen to lower.
4. After "IN" is displayed on the Information Display, insert the CD.
The CD will begin playing after the screen closes.



Audio System ON

- Push POWER/VOLUME on.
- Push SOURCE button.

Media Selection

- AM, FM, DISC, SAT (SIRIUS™ Satellite radio), AUX (to switch to AUX jack input and Bluetooth® streaming audio if equipped).

Tuning

- The radio has the following tuning methods: Manual, Seek, Scan, Auto Memory tuning, and Preset channel.

Manual Tuning

- Turning the TUNE AUDIO dial will change the frequency higher or lower.

Seek/Track Tuning

- Pushing and holding the SEEK/TRACK buttons ▲ ▼ will

cause the tuner to automatically seek a higher or lower frequency or track depending on media selected.

NOTE: If you continue to push and hold the button, the frequency will continue changing without stopping.

Scan Tuning

- Push the SCAN button to automatically sample strong stations.
- To hold a station, push the SCAN button again during this interval.

Auto-Memory Tuning

When driving in an area where the local stations are not known, additional AM/FM stations can be stored without disturbing the previously set channels. Refer to your Owner's Manual for complete details.





Preset Channel Tuning

The 8 preset channels can be used to store 8 AM, 16 FM stations and 24 SIRIUS™ Satellite radio stations (if equipped).

- To set a channel first select AM, FM1, FM2, SAT1, SAT2 or SAT3. Tune to the desired station.
- Push the TUNE AUDIO dial.
- Select any channel preset on-screen button for about 2 seconds until a beep is heard. The selected preset channel number and station frequency will be displayed and is now held in memory.
- Repeat to store other stations. To tune one in memory, select band then push its channel preset button. The station frequency and the channel number will be displayed.

SETTING YOUR CLOCK

 
1. Push the **MENU** button.
2. Select the Set Clock tab.
3. Choose a 24-hour display or a 12-hour display.
4. Use the + hour and - hour tabs to enter the correct hour.
5. Use the + min (minutes) and - min to set the correct minutes.
6. Exit by pushing the OK tab.

NOTE: Minutes and seconds are adjusted by the GPS, however, it is necessary to adjust hours under the following conditions:

- Driving across different time zones
- Daylight saving time start and end

Navigation System

INSERTING THE MAP DISC:

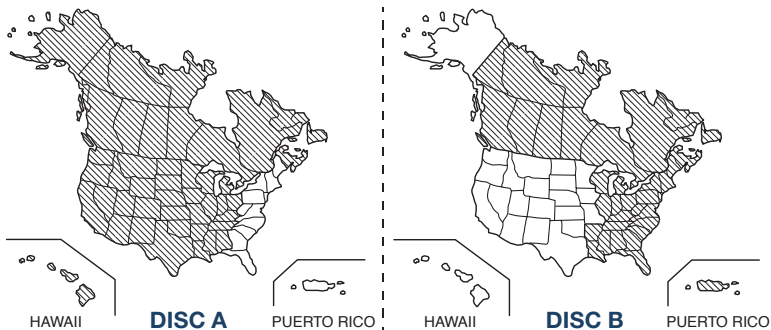

Your navigation system operates using the Map Discs supplied.

- Disc A covers most of the Midwest and Western states including Hawaii and Alaska.
- Disc B covers some of the Midwest and all of the Eastern states including Puerto Rico.
- Both discs cover all of Canada.

NOTE: If the state your address is in is not displayed when entering a destination, you may have the wrong disc in the navigation system.

- 1 Push **LOAD/▲**.
- 2 When "Load/Eject" screen appears select "MAP". Wait for navigation screen to tilt open.
- 3 Insert the correct Map Disc with the printed side facing up, into the lower DVD MAP slot.
- 4 Read the Caution carefully and select the "AGREE" on-screen button.
- 5 To remove the Map Disc, place the ignition in ACC or ON position.
- 6 Push **LOAD/▲** and then "MAP".

SELECTING A DESTINATION USING A STREET ADDRESS

You can choose setting a destination using a street address, a point of interest, the nearest restaurants, ATMs, gas stations, hospitals and more.

- 1 Push “Menu” button on navigation face.
- 2 Select “Destination Entry”.
- 3 Select “Address”.
- 4 Select the “State” or “Province”.
 - Scroll down past the States to find Canadian Provinces.
- 5 Push “OK”.
- 6 Select “City”.
- 7 Select “Input City Name”.
- 8 Use the keyboard to enter the city name.
- 9 Select “Street”.
- 10 Use the keyboard to enter the street name.
- 11 Select “House No”.
- 12 Use the keyboard to enter the house number, then push “OK”.
- 13 When the map appears, push “Destination”.
- 14 Push “Guide” or just start driving.

SELECTING A POINT OF INTEREST (POI) NEAR YOUR CURRENT LOCATION

- 1 Push the “Menu” button on the navigation face.
- 2 Select “Destination Entry”.
- 3 Select “Point of Interest”.
- 4 Select “Nearest”.
- 5 Select “Current Position”.
- 6 In the QUICK POI screen, select the category of the point of interest you want to find. You can set multiple categories for searching up to five.
- 7 After selecting categories, push “List”.
- 8 Search result shows up as a list in “LOCAL POIs” screen. Select the point of interest you want to set as the destination from the list.
- 9 Push “Destination”.
- 10 Push “Guide” or just start driving.

NOTE: When entering numbers for a street name, (e.g., 1st Ave.), push “Sym.” button to switch to the numeric keyboard.

Please refer to your Navigation System Owner’s Manual for complete details and important safety information.




Bluetooth®

PAIRING YOUR BLUETOOTH® PHONE

NOTE: Before pairing your cell phone, it is recommended that you refer to your phone's manual for steps to turn on Bluetooth® and perform phone pairing.

Voice Pairing




- 1 Push and release (wait for beep) the  **button on the steering wheel.**
- 2 From main menu, say, **“Setup, Pairing Options.”**
- 3 Say, **“Pair.”**
- 4 Say a four-digit code (i.e., “1, 2, 3, 4”).
- 5 Place phone in discovery mode; if necessary, consult your phone's manual or go to www.mazdausa.com/bluetooth. Select model, Bluetooth, and follow screen prompts.
- 6 After phone is recognized, you will be prompted to name the paired phone.
- 7 Pairing completed.

Pairing with Navigation

- 1 Push **Source** button next to Navigation screen.
- 2 Select **BT-Audio** on Navigation screen.
- 3 Select **Settings.**
- 4 Select **Pair/Select Device.**
- 5 Select **Add New.**
- 6 System will provide a four-digit code.
- 7 Use the four-digit code to begin the pairing procedure; if necessary, consult your phone's manual or go to www.mazdausa.com/bluetooth. Select model, Bluetooth, and follow screen prompts.
- 8 Pairing completed.

Please call 800-430-0153 for questions regarding Bluetooth® compatibility, phone pairing, or other phone related problems.

TO MAKE OR RECEIVE A HANDS-FREE CALL:

- 1 To make a call, push . After the beep say, **“Dial.”**
- 2 Say the number you want dialed. If the number repeated back is correct say, **“Yes,”** and the prompt will say it is dialing.
- To receive a call, push . To end or reject a call, push ; a beep will confirm the call is ended.

NOTE:

- Sound quality of Bluetooth® streaming audio varies depending on device. Please refer to your Owner's Manual for complete details on how to “Pair” up to 7 Bluetooth® phones and audio devices, and how to use the built-in tutorial and other important safety information.
- To make calls using phone book: Phone book data downloading using the Navigation screen cannot be called up using voice recognition commands. In addition, phone book data recorded by voice recognition cannot be called up from Navigation screen.
- For safety reasons, some Bluetooth® functions cannot be performed via the Navigation screen while driving.





MYMAZDA.COM—THE OFFICIAL SITE FOR MAZDA OWNERS

Register today on MyMazda.com—the ultimate destination for Mazda Owners. Once registered, you'll be able to take advantage of benefits exclusively for Mazda owners:

- Insider access to exclusive events and promotions
- Personalized maintenance schedules
- Zoom-Zoom Owner Magazine
- Warranty information and on-line Owner's Manuals
- Wallpaper, videos and other fun stuff
- Accessories specifically designed for your vehicle
- Car Care Discount Coupons available from your Mazda Dealer

Visit and register at MyMazda.com today!

Customer Delivery Checklist

VEHICLE PRESENTATION:

Refer to Smart Start Guide during presentation

Keyless Entry 1



- Key Fob
- Smart Entry (Advanced Key*)
- Door Request Switch*
- Trunk Request Switch*
- Power Door Locks

Starting the Engine* 2



- Push Button Ignition
- Emergency Engine Stop

Seat Adjustments* 3

Auto-Dimming Mirrors* 4

Driver's View 5-6

- Location of Switches and Controls

Instrument Cluster 7-8

- Review indicator light function and location

Lighting Control 9

AUX Input 9

Wiper Washer 10



Fuel Door 10

- Fuel Door Release and Fuel Spec

Blind Spot Monitoring* 11

Climate Control 13-14



- Manual Mode
- Auto Mode*

Audio Controls 15-18

- SIRIUS™ Satellite Radio* Operation

Set Clock 16, 18



Navigation System* 19-20

- 2 Disc System, Insert Map Disc
- Enter Customer Address
- Enter Destination

Bluetooth Hands-Free* 21

- Tutorial
- Pair Phone
- Make a Call
- Toll-Free Customer Service

800-430-0153

Tutorial Videos on MyMazda.com
..... Inside Back Cover

**if equipped*

All items in the Customer Delivery Checklist have been reviewed with the customer and the first maintenance appointment has been scheduled:

SALES CONSULTANT	CUSTOMER

Signed copy must be placed in dealer jacket

Customer Delivery Checklist

DEALERSHIP	DATE
SALES CONSULTANT	CUSTOMER'S NAME
VIN	E-MAIL

PRESENTATION OF OWNER'S MATERIALS:

Review the following items with the customer

Smart Start Guide

- Remove this checklist from Smart Start Guide

Warranty Information

- Basic Vehicle – 36 months/36,000 miles
- Roadside assistance program

SERVICE DEPARTMENT

- Introduce Service Manager; Provide business cards
- Review Service and Parts Department hours of operation
- Explain free initial Full Circle service inspection.
- Schedule first maintenance service

MyMazda.com

- Offer to register customer on MyMazda.com
- Tell the owner about the (“how-to”) videos that will help them get acquainted with the vehicle’s features

Owner's Manual

- Personalization Features (refer to enclosed postcard or your Owner’s Manual)

Scheduled Maintenance

Windshield Cling Reminder

Affix to inside windshield

GENUINE MAZDA SERVICE

Because you and your Mazda deserve the best

Your new Mazda deserves nothing less than the very best. To keep it running like new for years to come, trust the experts at your local Authorized Mazda Dealer. Simply bring your vehicle in for your scheduled maintenance and any needed repairs.*

At Mazda Full Circle Service Centers,** our technicians will automatically perform a complimentary Full Circle inspection on your vehicle and issue a detailed report card at every visit. This is designed to help you keep track of your Mazda's critical operating condition. Our factory-trained technicians know your vehicle inside out and use Genuine Mazda Parts, giving your vehicle the optimum care and maintenance it requires to run with flawless precision.

Remember, to further enhance your driving experience, visit your local Mazda Service Center for your scheduled maintenance. It's also the place where you can find a wide variety of tires, parts, and accessories that are just right for your vehicle.

* See vehicle's scheduled-maintenance program for details.

** Visit MyMazda.com/fullcircle for a list of Full Circle Service Centers

Customer Assistance Center: 1-800-222-5500

Roadside Assistance Contact: 1-800-866-1998



FREE FULL CIRCLE SERVICE INSPECTION

We're committed to providing expert Mazda service.

You love to drive your Mazda, and we love to service your Mazda. With our Full Circle Service, we'll give your vehicle a **COMPLIMENTARY MULTI-POINT INSPECTION**. Your Mazda will receive a thorough review of its most crucial components.

This easy-to-use Smart Start Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. Mazda reserves the right to change specifications or design without obligation.

© Mazda North American Operations
Printed in U.S.A. 01/09
Print 3
9999 95 078C 09SSR

