



# 2009 Mazda RX-8

SMART START GUIDE



zoom-zoom



Optional equipment shown.

# Key



## ADVANCED KEYLESS ENTRY SYSTEM

- Advanced Keyless Entry allows you to lock/unlock the doors and trunk of the vehicle, open the windows, and even start the engine without ever taking the key out of your pocket. You can also use the buttons on the advanced keyless transmitter.

### Advanced Key



 
While carrying the Advanced Key you can...

- Unlock the vehicle by pressing the driver's door request switch OR by pressing the unlock button on the keyless entry transmitter.
- Unlock both doors from the driver's door request switch by pressing 2 times OR from the passenger's door request switch by pressing one time OR by pressing the unlock button on the keyless entry transmitter twice.
- Open the front windows by pressing the unlock button on the keyless entry transmitter and then pressing again and holding; release to stop.
- Open the trunk by pressing the trunk request switch OR by pressing the trunk button on the advanced keyless transmitter OR by pressing the trunk lid release button.
- Lock the vehicle by simply pressing the driver's or passenger's door request switch once.
- Close the front windows by pressing and holding the driver's door request switch; release to stop.
- Engage panic alarm operation by pressing and holding the panic button ! on the advanced keyless entry transmitter. Press any button on the remote to turn off the alarm system.


### Auxiliary Key



### Door Request Switch

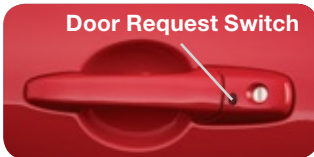

### Trunk Request Switch

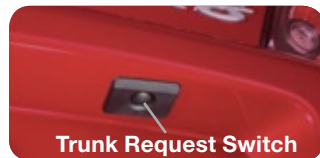 




## KEYLESS ENTRY SYSTEM



 This system remotely locks and unlocks the doors, the trunk, and opens the power windows.

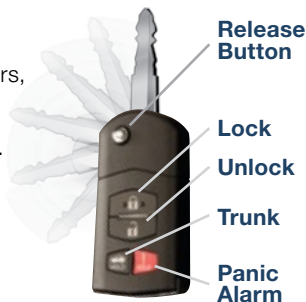- To extend the key, press the release button.
- To retract the key, press the release button and fold the key back into the holder.



## STARTING THE ENGINE WITH THE ADVANCED KEY

While carrying the Advanced Key you can...

- Start the engine by pushing in the Start knob. When the key  indicator illuminates **GREEN**, turn the Start knob. Shut the engine OFF by turning the Start knob to the ACC position and then pushing the knob in and turning to the Lock position.
- The key  indicator light will show **GREEN** when the advanced key is detected. If the key indicator light flashes **GREEN**, the advanced key transmitter battery power is low. The indicator turns **RED** when the key is not detected or the transmitter battery is dead. If illuminated **RED**, use the auxiliary key (see “Emergency Engine Start/Vehicle Entry”).

### **Note:** EMERGENCY VEHICLE ENTRY / ENGINE START

If the advanced key cannot be used due to a malfunction or dead advanced key battery, use the auxiliary key to lock/unlock the doors and to start the engine.

To start the engine, remove the start knob cover by pressing both side release buttons while pulling. Insert the auxiliary key into the key cylinder and turn it to start the engine.





 
## ELECTRONICALLY OPERATED DRIVER SEAT

### Slide/Tilt Switch

Push forward or backward to slide seat bottom. Seat can also be raised, lowered or tilted with this control.

### Recline Switch

Push forward or backward to adjust seatback angle.

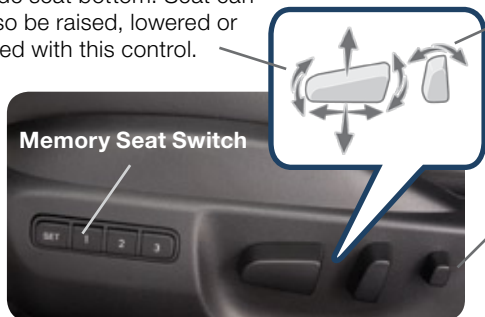

### Memory Seat Switch

### Lumbar Adjustment

Push switch to increase or decrease lumbar support.

### To Program the Memory Seat Function:

- 1 Park the vehicle.
- 2 Adjust the seat to the desired position using the Slide/Tilt and Recline switches.
- 3 While holding the memory seat switch SET button press one of the three programming buttons until a beep sound is heard. Programming is now complete. Program the remaining two buttons as desired.

To return to the programmed position, close the driver's door, turn the ignition ON and press and hold the desired program button while the seat moves to the programmed position. When the programmed position is reached, a beep sound will be heard and the button can be released.

**Note:** You can also program one seat position for each advanced key/retractable type key used with the vehicle. See the Owner's Manual for programming instructions.



## Seat Warmer



### Front Seat Warmer

The front seats are electrically heated. The ignition must be in the ON position. The switches are located on the center console. Press the switch to turn the seat warmer ON or OFF. When the switch is in the ON position, the indicator light will come on.



## RECARO SEATS



### Seatback angle (RECARO seat)

Lean forward slightly, lift the lever, and then release it at the desired position.



## Rear Seat Occupant Exiting

Press and hold the top of the driver's power seatback folding switch to move the seat forward and to fold the seatback forward.



 
Press and hold the bottom of the driver's power seatback folding switch until the seat returns to the original position and a confirmation beep is heard.

On all passenger seats and manual driver's seat (except Recaro), use the lever located on the rear of the seat along the lower edge of the seat back.

**Note:** The seat back recline lever may be used on all passenger seats and manual driver's seat (except Recaro).



# Driver's View (shown with optional)

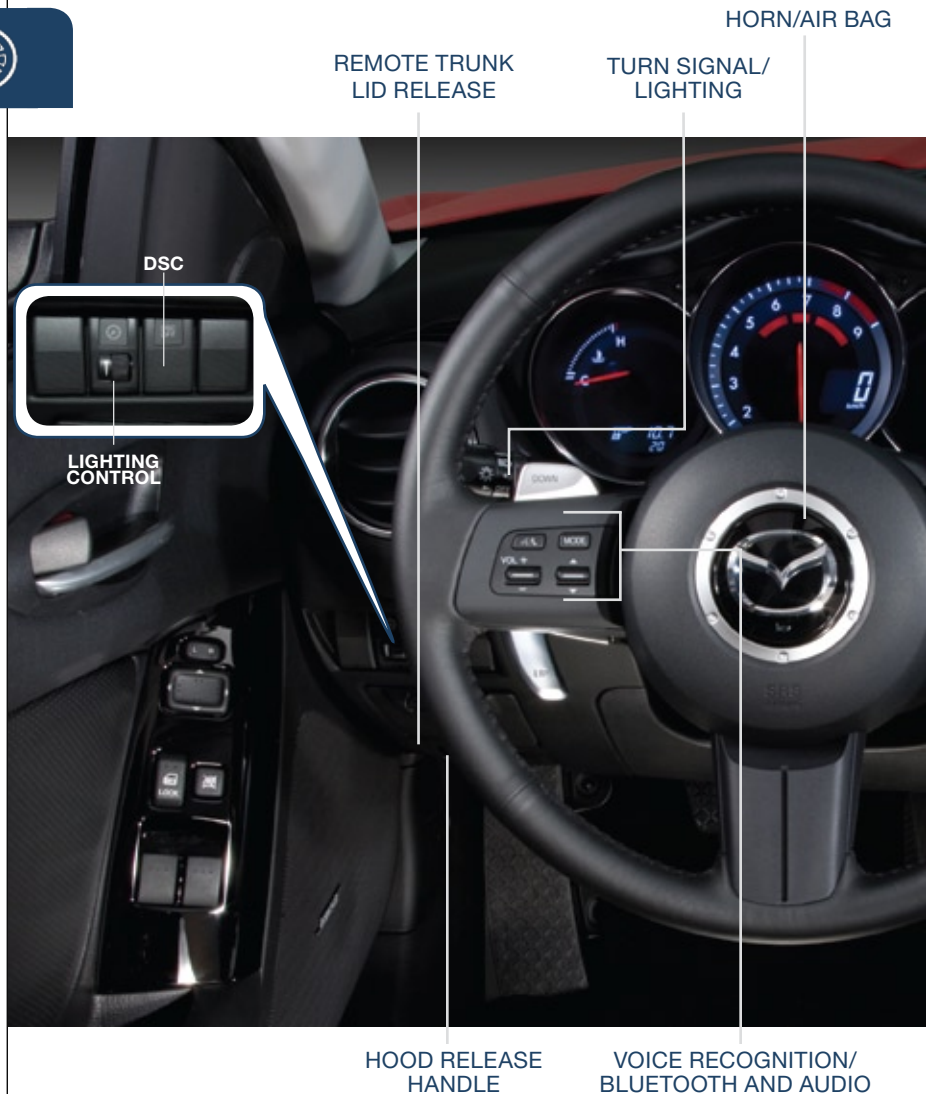

# Navigation System)



CLIMATE CONTROL

INFORMATION DISPLAY

PASSENGER AIR BAG OFF INDICATOR

WIPER/WASHER

HAZARD WARNING

AUDIO SYSTEM WITHOUT NAVIGATION

CRUISE CONTROL

STEERING SHIFT (A/T ONLY)

ASHTRAY/LIGHTER

NAVIGATION DISPLAY

PARKING BRAKE

# Instrument Cluster



ENGINE COOLANT  
TEMPERATURE GAUGE

ODOMETER/  
TRIP METER

ODOMETER/TRIP  
METER SELECTOR

TACHOMETER/  
VARIABLE RED ZONE

## GLOSSARY OF WARNING AND INDICATOR LIGHTS

*Please see Owner's Manual for more details and explanations*



Low Washer Fluid Level



Headlight High Beam



Charging System



Lights On (Exterior Lights)



Tire Pressure  
Monitoring System (TPMS)



Turn Signals/  
Hazard Warning

CRUISE

Cruise Main Indicator  
Light (AMBER)/Cruise Set  
Indicator Light (GREEN)



Headlight Auto  
Leveling Malfunction



ABS  
(Antilock Brake System)



Traction Control System  
(TCS)/Dynamic Stability  
Control (DSC)



Security Indicator



Brake



Air Bag/Front Seat Belt  
Pretensioner System





**SPEEDOMETER    SPEED UNIT SELECTOR    GEAR INDICATOR (A/T ONLY)    FUEL GAUGE**



**Power Steering Malfunction**



**Seat Belt**

**AT**

**Automatic Transmission**



**KEY Warning Light (RED)**  
Advanced key not detected or transmitter battery is dead.

**PRNDM**

**Shift Position**



**KEY Indicator Light (GREEN)**  
Advanced key detected, engine is ready to start.

**DSC OFF**

**Dynamic Stability Control (DSC)/Traction Control System (TCS) Off**



**Door Ajar**



**Check Engine**



**Low Fuel**



**Engine Oil Level**



**Engine Coolant Level**

# Feature Highlights



## **AUTOMATIC TRANSMISSION**

The gearshift must be in Park or Neutral to start the engine and must be in Park to remove the ignition key.

### **P = Park**

To move the gearshift out of Park, the ignition must be in the ON position and the brake pedal must be pressed firmly.

### **R = Reverse**

### **N = Neutral**

No gear is engaged.

### **D = Drive (Overdrive)**

This is the normal driving position for the best fuel economy.

The transmission shifts through forward gears.



## **Direct Mode**

Use this mode for temporarily switching gears via steering wheel shift switches with the gear selector in D. D and M indicators will be illuminated. Direct mode will be cancelled if the tachometer approaches the red zone, the accelerator is fully depressed, after 4 seconds of steady throttle or if the vehicle is stopped or moving at slow speed.

### **To Shift Up To A Higher Gear:**

Pull the UP steering shift switch.

 
### **To Shift Down To A Lower Gear:**

Press the DOWN steering shift switch.



## Sport AT Manual Shift Mode

The Sport AT Manual Shift Mode gives you the feel of driving a manual transmission by allowing you to manually shift to control engine rpm and torque when more control is desired.



**Note:** Changing to manual mode can be done while driving the vehicle.

### To Use Manual Shift Mode:

Shift lever from D to M.

### To Shift Up To A Higher Gear:

Tap shift lever back (+) once.

### To Shift Down To A Lower Gear:

Tap shift lever forward (-) once.

### To Shift Up To A Higher Gear:

Pull the UP steering shift switch.

### To Shift Down To A Lower Gear:

Press the DOWN steering shift switch.



## MANUAL TRANSMISSION

Press the clutch pedal down completely to start the engine and change gears.

Push the shifter down, over to the left and forward for Reverse.

 
**Note:** Do not shift into 1st gear above 20 mph or clutch failure could occur. Resting your foot on the clutch pedal while driving and using the clutch to hold your vehicle at a standstill while waiting on a hill may reduce clutch life.

# Feature Highlights



## WINDSHIELD WIPER/WASHER

- MIST-Push the lever up for a single swipe to clear mist.
- AUTO-With the windshield wiper lever in the AUTO position, the rain sensor detects the amount of rainfall and turns the wiper on or off automatically. Rotate the ring away from you (clockwise) for less sensitivity and toward you (counterclockwise) for more sensitivity.
- LO-Push down to second position.
- HI-Push down to third position.
- Pull the lever toward you to dispense washer fluid; the wipers will make several passes across the windshield.

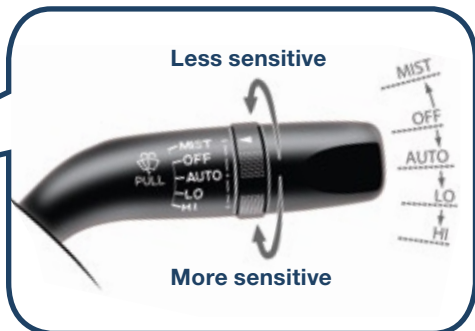




## TURN SIGNAL/LIGHTING CONTROL LEVER

- Rotate the outer knob up to the first position for tail, parking and dashboard lights.
- Rotate the outer knob up to the second position for tail, parking, dashboard, and headlights.
- Rotate the outer knob up to the third position for AUTO.
- Rotate the inner ring up for fog lamps.
- Push the lever away from you to turn the high beams on.
- Pull the lever back one position to turn the high beams off.
- Pull the lever all the way back and release to flash the high beams.

### AUTO

 With the headlight switch in AUTO and the ignition ON, the light sensor determines the surrounding lightness or darkness and automatically turns the headlights, other exterior lights and dashboard illumination on or off.

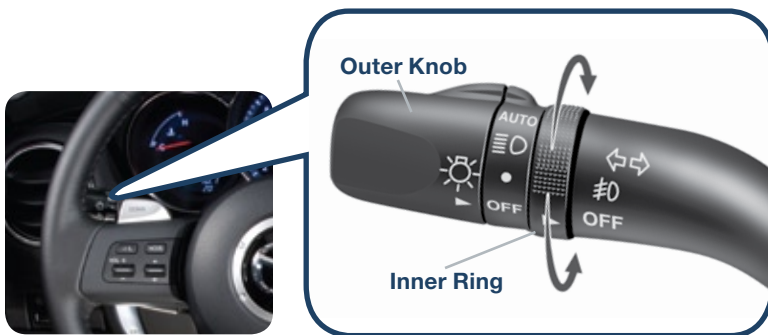

# Feature Highlights



## FREESTYLE DOORS

- Open the freestyle door by opening the front door first and then pulling the rear door handle.
- To allow for easier entry/exit of the rear seats, see “Rear Seat Occupant Exiting”.
- Close the freestyle door first, and then close the front door.



Freestyle Door Handle

## MP3 PLAYER INTEGRATION USING THE AUX JACK

Your vehicle is equipped with an AUX or auxiliary jack that will allow you to play your MP3 player through the vehicle's audio system.

- 1 The jack is located inside the center console.
- 2 Plug your player in and turn it on.
- 3 Turn the audio system on.
- 4 Press the MEDIA button on the audio face, or the Mode button on the steering wheel controls.
- 5 Use the player controls to play back music.



**Note:** Set the volume level on your player to the highest level before distortion starts. Then, adjust volume in the vehicle using the audio system power/volume control or the steering wheel volume up and down controls.



HomeLink

Indicator Light

Auto-Dimming On and Off

Light Sensor

## AUTO-DIMMING MIRROR AND HOMELINK®

### Auto-Dimming Mirror

- Auto-Dimming will automatically darken your rear view mirror to reduce headlight glare from vehicles behind you.
- The Auto-Dimming feature is active when the vehicle is started and cancels when the transmission is placed in Reverse.

### HomeLink®

- This feature provides a convenient way to replace up to three transmitters such as garage door openers, home lighting remotes and other radio frequency devices.
- Refer to your Owner's Manual for complete programming details.

# Feature Highlights



## SHORT TRIP DRIVING

In order to improve engine starting performance on restart, DO NOT turn OFF a cold engine until one or more of the variable red zones in tachometer have turned off. Warm the engine until the first indicator of the variable red zone goes off.



## Variable Red Zone

A beep sound indicates an engine over-rev when the tachometer needle enters striped zone. The variable red zone in the tachometer changes according to the temperature of engine coolant. When engine coolant temperature is low, the engine does not run at higher speeds, and the fuel supply will be at a lower RPM than in the red zone.

## Fuel Requirements

91 octane fuel is required. If 91 octane fuel is not available, fuel as low as 87 octane can be used temporarily for emergency purposes. Use of fuel lower than 91 octane can decrease performance, cause knocking/engine noise and can deteriorate shift quality. Refueling the vehicle with correct octane fuel a couple of times will restore vehicle performance and shift quality.

## INSTANT MOBILITY SYSTEM (IMS)

The IMS emergency flat tire repair kit included with your Mazda is for a temporary repair of a slightly damaged flat tire resulting from running over nails or similar sharp objects on the road surface. Refer to your Owner's Manual for complete details.







## ENGINE OIL

### **Check engine oil level when refueling**

By design, rotary engines consume a small amount of oil to lubricate internal engine components. Use the oil dipstick to inspect the oil level when refueling. If the level is near or below the low mark, add oil to bring the level to full.

#### **A Engine Oil Dipstick**

Open the service cover to access the engine oil dipstick. If engine oil is needed, add as required.


#### **B Engine Cover**

Remove the cover to gain access to the engine oil filler cap. Remove the cover by pulling up on front corners, then pull toward the front of the vehicle.

#### **C Engine Oil Filler Cap**

SAE 5W-20

Remove the oil filler cap and fill as needed.

 
When the oil light  flashes and then illuminates, and a beep sound is heard, the engine oil level is low. Immediately pull over to a safe location, turn the engine off and check the engine oil level. When the engine is cool, add engine oil, if necessary.



# Manual Climate Control




Information Display (See bottom of page 18 for details)

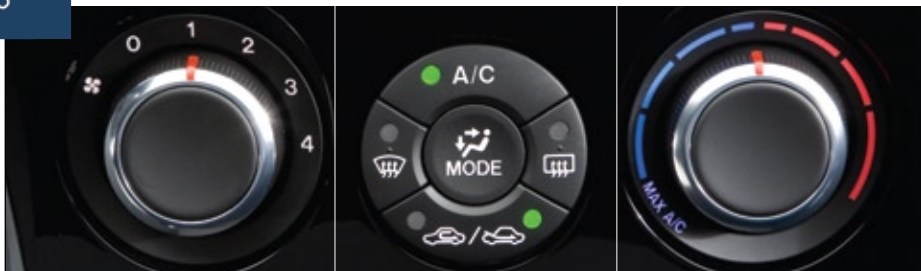


## Fan control dial

 
- Rotate the dial to set the desired fan speed (1-4).


## Mode selector dial


 Push the button repeatedly to select airflow mode. The selected mode will be displayed on the information display.

 Push to defrost the windshield.

**A/C** Push to manually turn air conditioning on or off.

 Push to defrost the rear window.

 Push to recirculate cabin air and reduce outside exhaust, odors and improve cooling.

 Push for fresh air and defogging the windows.

## Temperature control dial

- Rotate the dial to select a warmer or cooler air temperature.

**Note:** When set to MAX A/C, A/C will turn ON, mode will set to exit from the dash vents and air will set to recirculate position for maximum cooling.

# Automatic Climate Control



7:23 | FM1 <sup>BT</sup> 89.3 | A/C 72°



 


## Information Display (See bottom of page for details)



### Fan control dial

- Rotate the dial to turn the air conditioning system on and for desired fan speed.
- Push the driver's side dial to turn the air conditioning system OFF.

### Mode selector dial

-  **MODE** Push the button repeatedly to select airflow mode. The selected mode will be displayed on the information display.
-  Push to defrost the windshield.
- A/C** Push to manually turn air conditioning on or off.
-  Push to defrost the rear window.
-  Push to recirculate cabin air and reduce outside exhaust, odors and improve cooling.
-  Push for fresh air and defogging the windows.

### Temperature control dial

- Push to turn the automatic air conditioning system ON.
- Rotate the dial to the desired air temperature (shown in Information Display).
- Automatic climate control will allow you to maintain a preset cabin temperature.

## Information Display Functions

- Clock
- Audio Display
- Bluetooth Hands-Free Display
- Climate Control Display
- Ambient Temperature Display

# Audio Controls Without Navigation



## Audio System ON

- Press the POWER/VOLUME button to turn the radio on.

## Media selection

Press the appropriate button:

- CD
- FM/AM
- SAT (SIRIUS™ Satellite radio)
- MEDIA (to switch to AUX jack input)

**Note:** If the FM broadcast signal becomes weak, reception automatically changes from STEREO to MONO for reduced noise, and the “ST” indicator will go out.

**SAT:** SIRIUS™ Satellite radio will deliver the broadest, deepest mix of radio entertainment. See the Owner’s Manual for more details.

## Tuning

The radio has the following tuning controls:

- MANUAL
- TRACK/SEEK
- SCAN
- PRESET CHANNEL
- AUTO MEMORY TUNING

## Manual tuning

- Turn the TUNE dial to change the frequency higher or lower.

## Seek tuning

- Press the SEEK/TRACK tuning buttons to seek a higher or lower frequency automatically.



### Scan tuning

- Press the **SCAN** button to automatically sample strong stations.
- To hold a station, press the **SCAN** button again during this interval.

### Preset channel tuning

The 6 preset channels can be used to store 6 AM and 12 FM stations.

- To set a channel, first press **AM**, **FM1**, or **FM2**.
- Tune to the desired station.
- Press and hold until a beep is heard.
- Repeat this operation for the other stations and bands you want to store.

### Outside Temperature Display

Push outside button to display outside temperature in the information display.

### Load CDs

Press the load button and wait for the Information Display to show "IN". Insert the CD to start play.

### Auto-Memory

 
Press and hold the **AUTO-M** button to store additional FM/AM stations without disturbing the previously set channels. Refer to your Owner's Manual for complete details.

## SETTING YOUR CLOCK

1. Turn the ignition switch to the **ACC** or **ON** position.
2. Use **H** to set hours and **M** to set minutes.
3. Push and hold **:00** to move time to the nearest hour.



# Audio Controls With Navigation



## Audio System ON

- Press the POWER/VOLUME button to turn the radio on.

## Source

- Press the appropriate on-screen button: FM/AM, DISC, SAT (SIRIUS™ Satellite radio), AUX1/2, iPod.

## Tuning

- The radio has the following tuning controls: Manual, Seek, Scan, Preset channel, and Auto Memory tuning.

## Manual tuning

- Turn the TUNE/AUDIO dial to change the frequency higher or lower.

## Seek/Track tuning

- Press and hold the SEEK/TRACK buttons to

automatically seek a higher or lower frequency or track, depending on media selected.

**Note:** If you continue to press and hold the buttons, the frequency will continue changing without stopping.

## Scan tuning

- Press the SCAN button to automatically sample strong stations.
- To hold a station, press the SCAN button again during this interval.

## Preset channel tuning

The 8 preset channels can be used to store 8 AM, 16 FM stations and 24 SIRIUS™ Satellite stations.

- To set a channel, first select AM, FM1, FM2, SAT1, SAT2 or SAT3. Tune to the desired station.
- Press the TUNE button.



## TO PLAY A CD

1. Place the ignition in the ACC or ON position.
2. Press **LOAD/▲**
3. Press the **LOAD** on-screen button lightly.
4. Wait for the screen to lower.
5. Insert the CD after "IN" is displayed on the Information Display. The CD will begin playing after the screen closes.

- Press any channel preset on-screen button for about two seconds until a beep sound is heard. The selected preset channel number and station frequency will be displayed and are now held in memory.
- Repeat to store other stations. To tune to one in memory, select band, then press its channel preset button. The station frequency and the channel number will be displayed.

### Auto-Memory

Press and hold the AUTO-M button to store additional AM/FM stations without disturbing the previously set channels. Refer to your Owner's Manual for complete details.

 
### Outside Temperature Display

Push outside button to display outside temperature in the information display.

## SETTING YOUR CLOCK

1. Press the **MENU** button.
2. Select the Set Clock tab.
3. Choose a 24-hour display or a 12-hour display.
4. Use the **+** hour and **-** hour tabs to enter the correct hour.
5. Use the **+30** min (minutes) and **-30** min to move minutes ahead or back by 30 minutes.
6. Press the OK tab to exit.
7. GPS automatically sets the clock, however, it may be necessary to adjust hours in different time zones or daylight saving time.

## INSERTING THE MAP DISC

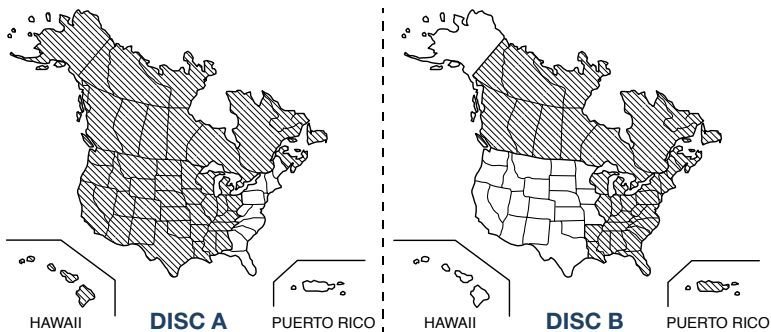

Your navigation system operates using the map discs supplied.

- Disc A covers most of the Midwest and Western states, including Hawaii and Alaska.
- Disc B covers some of the Midwest and all of the Eastern states, including Puerto Rico.
- Both discs cover all of Canada.

- 1 To insert a disc, put the ignition in the ACC or ON position.
- 2 Press **LOAD/▲**.
- 3 When "Load/Eject" screen appears, select "MAP" located at the lower right corner. Wait for the navigation screen to tilt open.
- 4 Insert the correct Map Disc, with the printed side facing up, into the lower DVD MAP slot.
- 5 Read the Caution carefully and select the "AGREE" on-screen button.
- 6 To remove the Map Disc, put the ignition in the ACC or ON position.
- 7 Press **LOAD/▲** and then "MAP".





## SELECTING A DESTINATION USING A STREET ADDRESS

You can choose setting a destination using a street address, a point of interest, the nearest restaurants, ATMs, gas stations, hospitals and more.

- 1 Press “Menu” button on Navigation Face.
- 2 Select “Destination Entry”.
- 3 Select “Address”.
- 4 Select the “State” or “Province”.
  - Scroll down past the States to find Canadian Provinces.
- 5 Press “OK”.
- 6 Select “City”.
- 7 Select “Input City Name”.
- 8 Use the keyboard to enter the city name.
- 9 Select “Street”.
- 10 Use the keyboard to enter the street name.
- 11 Select “House No”.
- 12 Use the keyboard to enter the house number, then press “OK”.
- 13 When the map appears press “Destination”.
- 14 Press “Guide” or just start driving.

## SELECTING A POINT OF INTEREST (POI) NEAR YOUR CURRENT LOCATION

- 1 Press “Menu” button on Navigation Face.
- 2 Select “Destination Entry”.
- 3 Select “Point of Interest”.
- 4 Select “Nearest”.
- 5 Select “Current Position”.
- 6 In the QUICK POI screen, select the category of the point of interest you want to find. You can set multiple categories for searching up to five.
- 7 After selecting categories, press “List”.
- 8 Search result shows up as a list in “LOCAL POIs” screen. Select the point of interest you want to set as the destination from the list.
- 9 Press “Destination”.
- 10 Press “Guide” or just start driving.

**Note:** When entering numbers for a street name, (e.g. 1st Ave.), press “Sym.” button to switch to the numeric keyboard.

Please refer to your Owner’s Manual for complete details and important safety information.



## PAIRING YOUR BLUETOOTH® PHONE

Imagine hands-free calling right through your vehicle's audio system. Let's connect or "Pair" you to your vehicle's Bluetooth mobile phone feature.

- 1 Activate the Bluetooth® application of the mobile telephone.
- 2 Press located on the steering wheel.
- 3 From the options menu and after the beep say, **"Set-up"**.
- 4 From the next prompt options after the beep, say, **"Pairing options"**.
- 5 The prompt will give you some more options. After the beep, say, **"Pair"**.
- 6 The prompt will ask you for a 4-digit pairing code. After the beep, say any 4-digit code you'd like to use.
- 7 The prompt will repeat the number and ask if it is correct. After the beep, say, **"Yes"** if it is or **"No"** if it isn't. If it's not, the system will repeat the process.
- 8 Use your phone's manual for instructions on how to proceed. You can also find this information on MyMazda.com. Choose Mazda from the list provided.
- 9 Input the 4-digit code you chose earlier.
- 10 You will be asked to name your phone. Say the name you want to give the phone like, **"Heather's Phone"**.
- 11 The prompt will then say that it is adding that phone name and ask if this is correct. After the beep say, **"Yes"**.
- 12 The prompt should then say that the pairing is complete.
- 13 You will also be asked if you would like to use this device for streaming audio as well if your phone is capable.

## TO MAKE A HANDS-FREE CALL



- 1 Press and after the beep say, **"Dial"**.
- 2 Say the number you would like dialed. The prompt will repeat the number and ask if it's correct. If it is, say, **"Yes"** and the prompt will say it's dialing.
- 3 To receive an incoming call, just press . To end a call or reject a call, press . A beep will confirm the call is ended.



## ***MYMAZDA.COM—THE OFFICIAL SITE FOR MAZDA OWNERS***

Register today on MyMazda.com—the ultimate destination for Mazda Owners. Once registered, you'll be able to take advantage of benefits exclusively for Mazda owners:

- Insider access to exclusive events and promotions
- Personalized maintenance schedules
- Zoom-Zoom Owner Magazine
- Warranty information and on-line Owners' Manuals
- Wallpaper, videos and other fun stuff
- Accessories specifically designed for your vehicle
- Car Care Discount Coupons available from your Mazda Dealer

**Visit and register at MyMazda.com today!**

# Customer Delivery Checklist

## VEHICLE PRESENTATION:

*Refer to the Smart Start Guide during presentation*

### Keyless Entry .....1-2



- Keyless Entry Transmitter
- Advanced Key\*
- Door Request Switches\*
- Trunk Request Switch\*
- Power Door Locks

### Starting The Engine .....2

- Start Knob Ignition (Advanced Key\*)
- Importance of warming engine to operating temperature before shutting off

### Seats ..... 3-4

- Adjustment
- Memory Seat Function\*
- Rear Seat Access

### Trunk Release Button.....5

### Driver's View ..... 5-6

- Location of Switches and Controls

### Instrument Cluster .....7-8

- Review indicator light function and location

### Wiper / Washer.....11



### AUX Input.....13

### Rear Doors ..... 13

### Auto Dimming Mirror..... 14

### Flat Tire ..... 15

- Instant Mobility System (IMS) located in trunk

### Checking Engine Oil ..... 16

- Hood Release
- Remove Engine Cover
- Importance to check oil with each fill-up

### Climate Control ..... 17-18



- Auto Controls
- Manual Controls

### Audio Controls ..... 19-22

- SIRIUS™ Satellite Radio Operation

### Set Clock ..... 20, 22



### Navigation System\* ..... 23-24

- 2 Disc System, Insert Disc
- Enter Destination
- Set Volume
- Enter Customer Address (Home)

### Bluetooth® Hands-Free\* ..... 25

- Tutorial
- Pair Phone
- Make a Call
- Toll-Free Customer Service

**800-430-0153**

**All items in the Customer Delivery Checklist have been reviewed with the customer and the first maintenance appointment has been scheduled:**

	SALES CONSULTANT	CUSTOMER
Initials		

*Signed copy must be placed in dealer jacket*

*\*if equipped*

# Customer Delivery Checklist

DEALERSHIP	DATE
SALES CONSULTANT	CUSTOMER'S NAME
VIN	E-MAIL

## PRESENTATION OF OWNER'S MATERIALS:

*Review the following items with the customer*

**Smart Start Guide**

- Remove this checklist from Smart Start Guide

**Warranty Information**

- Basic Vehicle –  
36 months/36,000 miles
- Roadside assistance program

## SERVICE DEPARTMENT

- Introduce Service Manager;  
Provide business cards
- Review Service and Parts Department  
hours of operation
- Explain free Full Circle  
Service Inspection
- Schedule first maintenance service

**MyMazda.com**

- Offer to register customer on  
MyMazda.com

**Owner's Manual**

*Scheduled Maintenance  
Windshield Cling Reminder*

*Affix to inside windshield*

## GENUINE MAZDA SERVICE

***Because you and your Mazda deserve the best***

Your new Mazda deserves nothing less than the very best. To keep it running like new for years to come, trust the experts at your local authorized Mazda Dealer. Simply bring your vehicle in for your scheduled maintenance and any needed repairs.\*

At Mazda Full Circle Service Centers,\*\* our technicians will automatically perform a complimentary Full Circle inspection on your vehicle and issue a detailed report card at every visit. This is designed to help you keep track of your Mazda's critical operating condition. Our factory-trained technicians know your vehicle inside out and use Genuine Mazda Parts, giving your vehicle the optimum care and maintenance it requires to run with flawless precision.

Remember, to further enhance your driving experience, visit your local Mazda Service Center for your scheduled maintenance. It's also the place where you can find a wide variety of tires, parts, and accessories that are just right for your vehicle.

\* See vehicle's scheduled-maintenance program for details.

\*\* Visit [MyMazda.com/fullcircle](http://MyMazda.com/fullcircle) for a list of Full Circle Service Centers

Customer Assistance Center: 1-800-222-5500

Roadside Assistance Contact: 1-800-866-1998



### FREE FULL CIRCLE SERVICE INSPECTION

*We're committed to providing expert Mazda service.*

You love to drive your Mazda, and we love to service your Mazda. With our Full Circle Service, we'll give your vehicle a COMPLIMENTARY MULTI-POINT INSPECTION. Your Mazda will receive a thorough review of its most crucial components.

This easy-to-use Smart Start Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. Mazda reserves the right to change specifications or design without obligation.

© Mazda North American Operations  
Printed in U.S.A. 07/08  
9999 95 079C 09SS

