

CIMS #608143
com_maint-sched.j14
itdseq=1

SCHEDULED MAINTENANCE

Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply:

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with an extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates
- Towing a trailer or using a car-top carrier

If any do apply, follow Schedule 2 (Canada and Puerto Rico residents follow Schedule 2).

NOTE: After the described period, continue to follow the described maintenance at the recommended intervals.

SCHEDULE 1

I: Inspect and repair, clean, adjust, or replace if necessary
(Oil-permeated air filter cannot be cleaned using the air-blow method)
R: Replace
L: Lubricate

 
Maintenance Item	Maintenance Interval (Months or miles [km], whichever comes first)												
	Months	6	12	18	24	30	36	42	48	54	60	66	72
	x 1,000 Miles	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90
(x 1,000 Km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)	(108)	(120)	(132)	(144)	
ENGINE													
Engine valve clearance (2.5L engine)	Audible inspection every 75,000 miles (120,000 km); if noisy, adjust												
Engine oil ¹	R	R	R	R	R	R	R	R	R	R	R	R	R
Oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R
Drive belts (tension)	2.5L engine					I					I		
	3.0L engine				I				I				I

REVIEW COPY —
2010 Tribute (j14), Owners Guide (own2002), Market: USA (fus)



Maintenance Item	Maintenance Interval (Months or miles [km], whichever comes first)													
	Months	6	12	18	24	30	36	42	48	54	60	66	72	
	x 1,000 Miles	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	
	(x 1,000 Km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)	(108)	(120)	(132)	(144)	
IGNITION SYSTEM														
Spark plugs	2.5L engine	Replace every 75,000 miles (120,000 km)												
	3.0L engine	Replace every 90,000 miles (145,000 km)												
FUEL SYSTEM														
Air cleaner filter						R						R		
Fuel tank	Fill fuel tank with a full tank of regular unleaded fuel every 3,000 miles (5,000 km) when use of E85 is 50% of the time or greater													
Fuel lines and hoses ²				I					I				I	
Hoses and tubes for emission ²									I					
COOLING SYSTEM														
Cooling system and hoses				I					I				I	
Engine coolant (yellow)	Replace at 100,000 miles (160,000 km) or 72 months; every 50,000 miles (80,000 km) or 36 months thereafter													
Engine coolant level	I	I	I	I	I	I	I	I	I	I	I	I	I	
CHASSIS and BODY														
Brake lines, hoses and connections				I					I				I	
Disc brakes		I		I		I		I		I		I	I	
Drum brakes				I					I				I	
Tire (rotation), check wheel lug nut torque ⁴	Rotate every 7,500 miles (12,000 km)													
Tire inflation and wear	I	I	I	I	I	I	I	I	I	I	I	I	I	
Steering operation and linkages				I					I				I	
Power steering fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I	
Manual transmission fluid	Replace every 100,000 miles (160,000 km)													
Automatic transmission fluid	Replace every 150,000 miles (240,000 km)													

REVIEW COPY —
 2010 Tribute (j14), Owners Guide (own2002), Market: USA (fus)



Maintenance Item	Maintenance Interval (Months or miles [km], whichever comes first)												
	Months	6	12	18	24	30	36	42	48	54	60	66	72
	x 1,000 Miles	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90
(x 1,000 Km)	(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)	(108)	(120)	(132)	(144)	
Rear differential fluid (4WD only) ³	Replace every 150,000 miles (240,000 km)												
Front and rear suspension ball joints				I				I					I
Driveshaft dust boots				I				I					I
Bolts and nuts on chassis and body				I				I					I
Exhaust system heat shields				I				I					I
All locks and hinges	L	L	L	L	L	L	L	L	L	L	L	L	L
Washer fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I

¹Change engine oil and replace oil filter every 5,000 miles (8,000 km) or 6 months when use of E85 is 50% of the time or greater.

²According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or miles (kilometers) period to ensure long-term reliability.


³If this component has been submerged in water, the oil should be changed.

⁴The wheel lug nuts must be retightened to the proper specifications at 500 miles (800 km) of new vehicle operation, at any wheel change, or at any other time the wheel lug nuts have been loosened. Refer to *Wheel lug nut torque specifications* in the *Tires, Wheels and Loading* chapter for the proper lug nut torque specification.

SCHEDULE 2

 - I:** Inspect and repair, clean, adjust, or replace if necessary (Oil-permeated air filter cannot be cleaned using the air-blow method)
- R:** Replace
- L:** Lubricate





Maintenance Item	Maintenance Interval (Number of months or km (miles), whichever comes first)												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
	x 1000 miles	5	10	15	20	25	30	35	40	45	50	55	60
	(x 1000 Km)	(8)	(16)	(24)	(32)	(40)	(48)	(56)	(64)	(72)	(80)	(88)	(96)
ENGINE													
Engine valve clearance (2.5L engine)	Audible inspection every 75,000 miles (120,000 km), if noisy, adjust												
Engine oil (except Puerto Rico) ¹	R	R	R	R	R	R	R	R	R	R	R	R	R
Engine oil (Puerto Rico) ¹	Replace every 3,000 miles (5,000 km) (or 3 months)												
Oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R
Drive belts (tension)	2.5L engine							I					
	3.0L engine						I						I
IGNITION SYSTEM													
Spark plugs	USA 2.5L engine	Replace every 60,000 miles (96,000 km)											
	USA 3.0L engine	Replace every 75,000 miles (120,000 km)											
	Other ²	Replace every 75,000 miles (120,000 km)											
FUEL SYSTEM													
Air cleaner filter	Puerto Rico						R						R
	Others							R					
Fuel tank	Fill fuel tank with a full tank of regular unleaded fuel every 3,000 miles (5,000 km) when use of E85 is 50% of the time or greater												
Fuel lines & hoses ³							I						I
Hoses and tubes for emission ³													I
COOLING SYSTEM													
Cooling system and hoses							I						I
Engine coolant (yellow)	Replace at 100,000 miles (160,000 km) or 72 months; every 50,000 miles (80,000 km) or 36 months thereafter												
Engine coolant level	I	I	I	I	I	I	I	I	I	I	I	I	I


REVIEW COPY —
 2010 Tribute (j14), Owners Guide (own2002), Market: USA (fus)



Maintenance Item	Maintenance Interval (Number of months or km (miles), whichever comes first)												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
	x 1000 miles	5	10	15	20	25	30	35	40	45	50	55	60
	(x 1000 Km)	(8)	(16)	(24)	(32)	(40)	(48)	(56)	(64)	(72)	(80)	(88)	(96)
ELECTRICAL SYSTEM													
Function of all lights	I	I	I	I	I	I	I	I	I	I	I	I	I
CHASSIS and BODY													
Brake lines, hoses and connections							I						I
Brake fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Disc brakes			I				I			I			I
Drum brakes							I						I
Tire (rotation), check wheel lug nut torque ⁵	Rotate every 5,000 miles (8,000 km)												
Tire inflation pressure and tire wear	I	I	I	I	I	I	I	I	I	I	I	I	I
Steering operation and linkages							I						I
Power steering fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Manual transmission oil	Replace every 100,000 miles (160,000 km)												
Automatic transmission fluid	Replace every 30,000 miles (48,000 km)												
Rear differential fluid (4WD only) ⁴	Replace every 100,000 miles (160,000 km)												
Front and rear suspension ball joints							I						I
Driveshaft dust boots							I						I
Bolts and nuts on chassis and body			I				I			I			I
Exhaust system heat shields							I						I
All locks and hinges	L	L	L	L	L	L	L	L	L	L	L	L	L
Washer fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I

 ¹Change engine oil and replace oil filter every 3,000 miles (5,000 km) or three months when use of E85 is 50% of the time or greater.
²If the vehicle is operated under any of the following conditions, change the spark plugs every 60,000 miles (96,000 km) or shorter:
a) Repeated short-distance driving.
b) Extended periods of idling or low-speed operation.
c) Driving for long periods in cold temperatures or extremely humid climates.
³According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties.





However, Mazda recommends that all maintenance services be performed at the recommended time or miles (kilometers) period to ensure long-term reliability.

⁴If this component has been submerged in water, the oil should be changed.

⁵The wheel lug nuts must be retightened to the proper specifications at 500 miles (800 km) of new vehicle operation, at any wheel change, or at any other time the wheel lug nuts have been loosened. Refer to *Wheel lug nut torque specifications* in the *Tires, Wheels and Loading* chapter for the proper lug nut torque specification.

OWNER MAINTENANCE SCHEDULE

The owner or a qualified service technician should make these vehicle inspections at the indicated intervals to ensure safe and dependable operation.

Bring any problem to the attention of an authorized Mazda dealer or qualified service technician as soon as possible.

When refueling

- Brake and clutch fluid level
- Engine coolant level
- Engine oil level
- Washer fluid level

At least monthly

- Tire inflation pressures

At least twice a year (for example, every Spring and Fall)

- Automatic transmission fluid level
- Power steering fluid level

Retightening lug nuts

- Retighten the lug nuts to the specified torque at 500 miles (800 km) after any wheel disturbance (tire rotation, changing a flat tire, wheel removal, etc.).
- Refer to *Wheel lug nut torque specifications* in the *Tires, Wheels and Loading* chapter for the proper lug nut torque specification.