# brother

P-touch 1290 **User's Guide** English / Český



With your PT-1290, you can create labels for any widths and styles to design beautiful custom labels. In to print labels with different widths and exciting colours. Read this manual carefully before starting and keep the manual in a handy place for future reference.

EC Declaration of Conformity Manufacturer
Brother Industries, Ltd.
15-1, Naeshiro-cho, Mizuho-ku, Nagoya 467-8561, Japan

<u>Plant</u> Zhuhai Brother Industries Co., Ltd. 254 Gangchang Road, Gongbei, Zhuhai City S.E.Z. Guang Dong, CHINA Herewith declare that:

is in conformity with provisions of the Electromagnetic Compatibility Directive (2004/108/EC) and we declare compliance with the following standards :

armonized standards applied EMC EN55022: 2006 + A1: 2007 Class B EN55024: 1998 + A1: 2001 + A2: 2003

Directive 2006/95/EC Year in which CE marking was first affixed: 2009

Power Supply and Tape Cassette

# : Brother Industries, Ltd. Quality Management Dept.

### Safety Precautions

### ▲ Warning Follow these guidelines to avoid fire, burn, injury, electric shock, rupture, heat, abnormal odour and smoking.

- Always use the specified voltage and the suggested AC adapter (AD-24ES) for this machine to prevent any damage or failure.

  Unplug the adapter cord immediately and stop using the P-touch during an electrical storm.

  Do not use the machine/AC adapter in places of high humidity such as bathrooms

- Do not use the machine/AC adapter in places of high numidity such as bathrooms.

  Do not overload the adapter cord.

  Do not place heavy objects on, or damage the adapter cord or plug. Do not forcibly bend or pull the adapter cord. When disconnecting the adapter cord from the power outlet, always hold the plug.

  Make sure that the plug is fully inserted in the power outlet. Do not use an outlet that is loose.

  Do not swallow the cutter stopper.

  Do not get the machine/AC adapter/adapter plug wet, such as by handling them with wet hands or spilling liquids on to them.

  Do not disassemble or modify the P-touch/AC adapter/batteries.

  Do not use metallic objects, such as tweezers or a metallic pen, when changing the batteries.

  Do not throw the batteries into fire or expose to heat.

  Disconnect the AC adapter, remove batteries immediately and stop using the machine if you notice abnormal odour, heat, discolouration, deformation or anything unusual while using or storing it.

# **A** Caution

# Follow these guidelines to avoid personal injury, battery leakage, burn and heat.

intend to use the P-touch for an extended period of time. Do not use old and new batteries together or mix alkaline batteries with other type batteries, or set the positive and negative end in the

### **General Precautions**

Do not drop or hit the P-touch/AC adapter

Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, the colour of the label may change or be transferred to other objects. Before applying the label, check the environmental condition and the material.
 Do not use the P-touch in any way or for any purpose not described in this guide. Doing so may result in accidents or damage to the machine.

Do not press hard on the LCD display.

Make sure you do not trap your fingers when closing the cassette

- machine.
  Use only Brother TZ tapes with this machine. Do not use tapes that
- do not have the I mark.

  Only use a soft, dry cloth to clean the machine; never use alcohol or other organic solvents.

  Use a cotton swab to clean the print head; never touch the print
- Do not put any foreign objects into the tape exit slot or AC adapter
- connector, etc.

  Do not place the P-touch/battery/adapter in direct sunlight or rain, near heaters or other hot appliances, in any location exposed to extremely high or low temperatures (e.g. on the dashboard or in the back of your car), high humidity, or dusty locations.

  Do not apply excessive pressure to the cutter lever.

  Do not try to print if the cassette is empty; it will damage the print head
- Do not pull the tape while printing or feeding; it will damage the tape
- and machine.

  Any data stored in memory will be lost due to failure or repair of the P-touch, or if the battery expires and no adapter is connected.

  When power is disconnected for more than three minutes, all texts settings and any text files stored in the memory will be cleared.

ÂBC≠DEF\_



### ► Setting Font

(Helsinki) or (Bohemia) (Bohemia) Label image (Helsinki) Label image (Bohemia

Bohemia

► Switching Upper Case/Lower Case A∢a

**Entering Text** 

Helsinki

Upper case (A4a ON) Lower case (A4a OFF) ABCDE\_ abcde\_

► Entering Two Lines of Text Move the cursor to where the second line starts and press

Use either 9mm or 12mm wide tape for two line text. Display Label image

► Entering Symbols

# → Choose a symbol with ( ) and

### · Refer to the table of symbols (A) on the enclosed insertion sheet for a list of available symbols

• To go to the next group, press • To cancel operations, press (Esc).

**▶** Entering Accented Characters

# A - Z → AAA- → AAA- / ( ) → []

- · Refer to the table of accented characters (B) on the enclosed insertion sheet for a list of available accented
- To cancel operations, press (Esc).
- (A) + (E) ► Setting Margin ( F + 9) · The order of accented characters differs by the selected LCD language.

(F) → (○) [Margin] ¬ → ► To Clear By pressing , the letters will be deleted one by one.



↑ + ② → ( ) [Text&Format] ...

To delete text only:

### Designing Labels

Press (F), use (C) to select a function under column [A], and then press (I). (The function can also be selected with the shortcut keys listed under column [C]. (F) + 11 to 81))

**2** Use ( ) to select a setting listed under column [B], and then press .

Design	[A]	[B]	Label image	[C]	
		Large*1	J.SMITH		
Size	Size	Medium	J.SMITH	1 !	
		Small	J.SMITH		
		Normal* <sup>1</sup>	J.SMITH		
Width	Width	x 2	J.SMITH	2"	
		x 1/2	J.SMITH		
		Normal* <sup>1</sup>	J.SMITH		
		Bold	J.SMITH		
		Outline	J.SMITH		
		Shadow	J.SMITH		
Style	Style	Italic	J.SMITH	3 '	
		Italic Bold	J.SMITH		
		Italic Outl (Italic Outline)	J.SMITH		
		Italic Shadow	J.SMITH		
		Vertical	¬ ·ω≥−⊢I		
		Off* <sup>1</sup>	ABC		
		Underline	ABC		
		Round	(ABC)		
		Leaf	ABC.		
Underline/Frame*2	Underline/Frame	Tile	<b>∴</b> ABC	4€	
		Star	<u>★</u> <u>ABC</u> ★		
		Heart	√V <u>ABC</u> V		
		Square	#ABC#		
		Clip	@[ABC]]]		
Tab	Tab	The cursor should be positioned where you set a tab.		5 %	
Tab length	Tab Length	Auto* <sup>1</sup> / 0-100mm* <sup>3</sup>	The tab is set with the specified length.	6 &	
Label length	Label Length	Auto* <sup>1</sup> / 30-300mm* <sup>3</sup>	The label is printed with the specified length.	7 /	
Auto format	Auto Format	Off* <sup>1</sup> VHS Spine			
		MiniDV Spine	42mm	8 (	
		Audio Tape	89mm		
		-			
		CD Case Spine	113mm		
		File Tab	82mm		

\*2 Frames can not be printed on 3.5mm tapes.

\*3 You can also select the length by entering the length with the number keys. To turn to [Auto], press \_\_\_\_\_\_.

1. Enter text.

► Text Preview

(P) \$/500

► Feeding (Tape Feed)

[Full]/[Half]/[Narrow]

You can preview the text before printing.

inch), then returns to the original text.

· The LCD shows the whole text and the label length (mm/

Only the text can be previewed, not the font, style, size, underline/frame or any additional features.

( ) [Full/Half/Narrow/Chain Print]

[Chain Print] For creating a label containing text in various styles.

For leaving equal margins on both sides of the text.

2. Press (国), then [OK to Feed?] appears.

3. Press (so to enter more text. Press to feed and Chain Print

ABC ABC DEF

● NOTE • When [Half] or [Narrow] is set, feed the tape before using the cutter otherwise a part of the text may be cut off. Also, cut along the printed dots (:) with scissors so the text is centered in the label

 To print more than 1 copy of a label with minimum margin. set the margin to [Narrow] and select [Copies] in the [Print

· Do not try to pull the tape since this may damage the tape

### **▶** Printing

 To prevent damage to the tape, do not touch the cutter lever while the message "Print" or "Feed" is displayed.


 To cut off the label, push in the tape cutter lever on the upper-right corner of the machine.

· Peel the printed label from backing and apply the label

### ► Using Print Options ( F + 🗐 )

You can print up to 9 copies of each label.


• To print more than 1 copy of a label with minimum margin, set the margin to [Narrow] and select [Copies] for [Print Options] function.

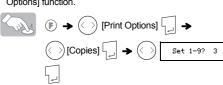

· You can also select the number of copies by entering it with the Number keys.

### [Numbering]

You can print many copies of the same text while increasing a selected number by 1 after each label is printed. **Example:** To print copies of a label containing a serial

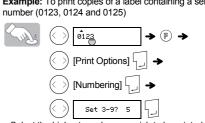

· Select the highest number you wish to be printed when setting the number.



J.SMITH

• Use clear tape with [Mirror], so the labels can be read correctly from the opposite side when attached on glass, windows or other transparent surfaces.

### Resetting the P-touch

You can reset the P-touch when you want to initialize the settings, or in the event the P-touch is not working properly.

Turn off the P-touch and then while holding down 🕝 and 🖪, press 🕲 to turn the Ptouch back on.

Release 🛈 and R. The P-touch turns on with the internal memory reset.

All text, settings and stored files are cleared.

See the Web http://www.brother.eu/

· Do not swallow the cutter stopper.

# Introduction

application. Select from the many frames, character sizes, addition, the variety of tape cartridges available allows you

Products description : P-touch Model number : PT-1290

EN61000-3-2: 2006 EN61000-3-3: 1995 + A1: 2001 + A2:

The optional AC adapter AD-24ES also conforms with EN60950-1:2001+A11:2004 and follows the provisions of the Low Voltage

Insert six new AAA alkaline batteries

(LR03), making sure that their poles

point in the correct directions. Always

replace all six batteries at the same time

using brand new ones of the same type.

15. Caps key

Shift key to go to start/

end of the text.)

18. Print/Feed ke

19. Preview key

22. Enter key

23. Accent key

24. Symbol key

25. Space key

20. DECO MODE ke

21. Backspace key

Issued by

End of tape

it snaps into place.

the tape guides

on the cassette

Do not touch the cutter blade or any metal parts near the print head.
 Remove the batteries and disconnect the AC adapter if you do not


Insert a tape cassette, making sure that

· Make sure that the end of the tape feeds under

• If the ink ribbon is loose, use your finger to wind

the toothed wheel in the direction of the arrow

· Use only Brother TZ tapes with this machine.

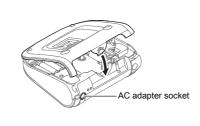

### Securely close the cassette cover, making sure that it snaps into place. After you have installed the tape, press 🔓 + 🗐

to feed the tape once and then push in the tape cutter lever to cut the tape.

NOTE When using optional AC adapter (AD-24ES) 1. Insert the small plug on the adapter cord into the AC adapter socket on the top end of the machine. 2. Insert the power plug into the nearest standard electrical

outlet.
For memory back up, we recommend using AAA alkaline

batteries (LR03) together when using the AC adapter.

## LCD Display & Keyboard

Open the cassette cover by pressing the

indicated area at the back of the machine.


If a tape cassette is already installed, remove it by

pulling it straight up. Also, if batteries are already

Make sure that the power is turned off when

replacing batteries or tape cassettes

installed, remove them.

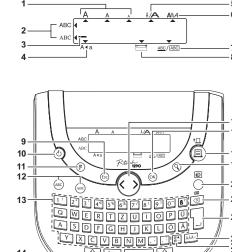

# Cursor

- Caps . Width Style
- Underline/Frame Label Length Escape key
- 10. Power key 11. Function key 12. Font keys Character keys
- The LCD shows one row of 15 characters; however, the text that you enter can be up to 80 characters in length.

### Initial Settings

Start your machine. Supply power by using six AAA alkaline batteries (LR03)

Deutsch] [

or the optional AC adapter, and then press (b)

2 Set the language. The default setting is [English].



Português/Română/Slovenski/Slovenský/

Suomi/Svenska/Türkçe/Český/Dansk/

(F) → () [Unit] √ → ( ) [mm/inch] [ , ,

Set the unit of measurement.

The default setting is [mm].

 The machine automatically turns off if no keys are pressed within five minutes To cancel operations, press (Esc)

Problem

Solution

### ► Error message

Troubleshooting

, =ccage				
Message	Cause/Remedy			
Battery Weak!	The batteries are weak. Replace them with new ones.			
Check Battery!	The installed batteries are running low.			
Invalid!	There is no text above the cursor when you selected [Numbering]. Invalid character is selected for [Numbering or Invalid number is selected for [Tab Length] or [Label Length].  You tried to print a text file when there is not data stored in the memory.  Image: It is pressed when no text is entered. You tried to select [Copies], [Numbering], [Mirror], or Text Preview when no text is entered.			
No Text!				
Line Limit!	You tried to enter a 3rd line by pressing     .      You tried to print a 2 line text with 3.5mm of 6mm tape installed.			
No Cassette!	You tried to print a label with no cassette installed.			
Cutter Error!	The tape cutter lever was used while printing			

Message	Cause/Remedy	
Full!	The maximum number of characters (80 characters, for DECO MODE 50 characters have already been entered.	
Text Too Long!	The text length exceeds the selected label length, Auto Format setting length and DEC MODE setting length.	
No Frame OK?	Printing on 3.5mm tape with invalid Frame setting ON. (Select to print with no Frame, (550) to cancel.)	
OK to Feed?	Feeding tape after printing when [Chain prin is selected. Refer to "Setting Margin".	
Cooling	If the print head becomes too hot, your machine will stop printing and automatically start to cool down. The cool down time will b displayed. Once the print head is cool, printin will automatically continue.  Do not touch the P-touch while cooling.	
Insert 12mm!	12mm tape is required for DECO MODE.	

· What to do when						
Problem	Solution					
he display stays lank after turning n the machine.	Check that the batteries are correctly inserted. If the batteries are weak, replace them. Check that the optional AD-24ES adapter is correctly connected.					
When the label is rinted out, there is so much margin space) on both ides of the text.	See "Setting Margin" and select [Half] or [Narrow] to have smaller margins for your label.					
he machine does ot print, or the rinted characters re not formed roperly.	Check that the tape cassette has been inserted correctly. If the tape cassette is empty, replace it. Check the cassette cover is properly closed.					
the settings and exts have cleared in their own.	The batteries may be weak. Replace them. When power is disconnected for more than three minutes, all texts, settings and any text files stored in the memory will be cleared.					
blank horizontal ne appears	There maybe some dust on the print head. Remove the tape cassette and use a dry cotton swab to gently wipe the print head.					

	1 1 100.0	Colution	
Solution	The machine ha	s	
Check that the batteries are correctly inserted.     If the batteries are weak, replace them.     Check that the optional AD-24ES adapter is correctly connected.	"locked up" (i.e., nothing happens when a key is pressed, even though the machine is on.)		
See "Setting Margin" and select [Half] or [Narrow] to have smaller margins for your label.	The power turns when you try to print.	off  The batteries may be weak. Replace them. Check that the batteries are correctly inserted.	
Check that the tape cassette has been inserted correctly. If the tape cassette is empty, replace it. Check the cassette cover is properly closed.	The tape does n feed properly or t tape gets stuck inside the machi	the tape guides.  The tape cutter lever was used while printing. Do not touch the cutter lever during	
The batteries may be weak. Replace them. When power is disconnected for more than three minutes, all texts, settings and any text files stored in the memory will be cleared.	How can I delete text and format settings to create new label?	Press	
There maybe some dust on the print head. Remove the tape cassette and use a dry cotton swab to gently wipe the print head with an up-and-down motion.	How can I chang the language setting?	e Refer to "Initial Settings".	
I			

\*1 These are the default settings. To return to the default setting, press

Printing Labels DECO MODE

> This function allows you to create unique labels by using some built-in templates. Refer to the DECO MODE format table (C) on the enclosed insertion sheet.

Example: Design 10 Bill Anderson

→ ( ) [Design 10]

→ Label Length → ( >) [Auto/30-200mm]

→ Bill Anderson → Text 2 → ABC Company, Inc. Print OK?] T

• The formats marked in column [C] of the insertion sheet's DECO format table can require cooling. If the print head becomes too hot, your machine will automatically stop

printing and begin to cool down. Once the print head has cooled, printing will automatically continue Do not touch the P-touch while cooling.

If you select a format that is one line (Design 1 - Design 9), only enter the text once. Printing and formatting of entered text may depend on the

· The format of DECO MODE templates cannot be

• The highlighted symbols in the table of symbols (A) on the

enclosed insertion sheet are available in DECO MODE. • To clear all text, press 🛕 and 🖾, then "Clear?"

appears. Press to clear. Press to cancel.

· When you access DECO MODE, your most recently printed DECO MODE text and label length will be • Press Esc to return to the previous step.

the text entry screen. • DECO MODE feature is only available when using 12mm The maximum label length is 200mm for DECO MODE

- To exit DECO MODE, press  $\stackrel{\text{(Esc)}}{=}$  until the display shows


· When [Auto] is selected for "Label Length", the label will automatically adjust to the correct size for printing the text

to return to the [Auto] setting for "Label • Press Length" mode

### Saving Label Files

► Memory (**(** + **0** )

You can save your original labels on to your machine. Up to nine labels can be saved and recalled for printing at a later date. You can also edit and overwrite the stored label.

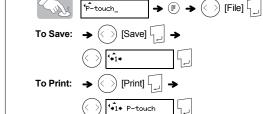

To Open: → ( >) [Open] - → ( ) 1+1+ P-touch

● NOTE

Weight:

If you try to store a label when there is already a label stored to that number, the message "Overwrite?" will appear. Press to save your new label. Press (Esc) to

## Specifications

159 × 157 × 61.7mm (W x D x H)

> Six AAA alkaline batteries (LR03) Optional AC adapter (AD-24ES) Brother TZ tape (width)

(without batteries and tape cassette)

3.5mm, 6mm, 9mm, 12mm

# Accessories

Tape Cassettes: See the included "Tape Catalog" AD-24ES AC Adapter: Cutter Unit: TC-5 (replacement)

tape cannot be cut cleanly, replace with a new cutter unit (stock no. TC-5) from an authorized Brother reseller. **CAUTION** 

· Do not touch the cutter blade directly with your fingers

If the cutter blade becomes blunt after repetitive use and the

Contact Information

Contact may differ by country.