

1-touch TZ ELECTRONIC LABELING SYSTEM

> English / Español Printed in China LW643600

www.brother.com



INTRODUCTION

With your PT-1280, you can create labels for any application. Select from the many frames, character sizes and styles to design beautiful custom labels. In addition, the variety of tape cartridges available allows you to print labels with different widths and exciting colors.

Read this manual carefully before starting and keep the manual in a handy place for future reference.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmfunterference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular nstallation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment.


GENERAL PRECAUTIONS

- Use only Brother TZ tapes with this machine. Do not use tapes that do not have the 🍱 mark.
- Do not clean the machine with alcohol or other organic solvents. Only use a soft, dry
- Do not touch the print head mechanism. Use a soft wipe (e.g. a cotton swab) when cleaning the print head.
- To avoid injuries, do not touch the cutter's edge
- To prevent damage or breakage of the glass, do not press hard on the LCD display. · Do not put any foreign objects into or heavy objects on the machine
- Do not leave any rubber or vinyl on the machine for an extended period of time, otherwise the machine may be stained.
- Do not get the machine wet, such as by touching with wet hands or spilling beverages on to the machine. Do not expose the machine to extremely high temperatures or high humidity. Never
- leave it on the dashboard, in the back of your car, near heaters or other hot appliances. Keep it out of both direct sunlight and rain.
- Avoid using the machine in extremely dusty places.
- Do not pull on the tape being fed from the P-touch labeler, otherwise the tape cassette may be damaged.
- Do not attempt to cut the tape while printing or feeding since this will damage the tape. Do not try to print labels using an empty tape cassette set in the P-touch labeler. Doing so will damage the print head.
- Remove the batteries and disconnect the AC adapter if you do not intend to use the machine for an extended period of time. (Note: When power is disconnected for more than three minutes, all text shown in the display and any text files stored in the memory will be lost. Language and unit settings will also be cleared.)
- Do not use old and new batteries together or mix alkaline batteries with other type batteries, or set the positive and negative end in the wrong position. Otherwise, the batteries may leak or be damaged.
- Use only the AC adapter designed exclusively for this machine to prevent any damage or failure

PREPARATION

Unpacking Your P-touch Labeler Check that the package contains the followings before using your P-touch



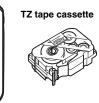



Included items may differ by distribution

Power Supply & Tape Cassettes

Open the back cover by pressing in the rough area at the top end of the machine. If a tape cassette is already installed, remove it by pulling it straight up. Also, if batteries are already installed, remove them. Make sure that the power is turned off when replacing batteries or tape cassette


batteries (LR03), making sure


that their poles point in the

correct directions. Always

replace all six batteries at the


same time using brand new

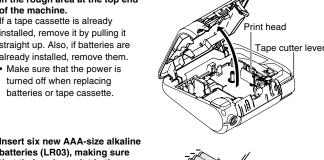

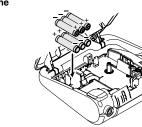

Insert a tape cassette, making sure that it snaps into place. End of tape




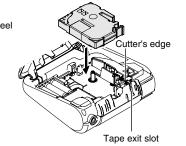

- Make sure that the end of the tape feeds under the tape guides • If the ink ribbon is loose, use your finger to wind the toothed wheel in the
- direction of the arrow on the cassette Use only Brother TZ tapes with this machine
- Securely close the back cover, making sure that it snaps into place.


After you have installed the tape, feed the tape (see Feeding) once and then push in the tape cutter lever to cut the tape



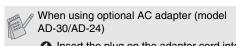

- Insert the plug on the adapter cord into the adapter jack on the top end of the
- 2 Insert the plug into the nearest standard electrical outlet. For memory back up, we recommend using AAA-size alkaline batteries (LR03) together

when using the AC adapter.

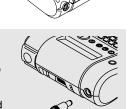


(Fn) + 2º)

[×1/2]

OPERATION


Keyboard & LCD

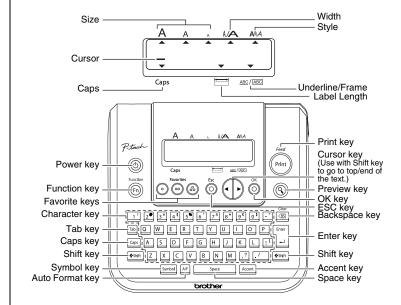


Initial Setting

Supply power by using six AAA batteries or the optional AC adapter, and then

The LCD shows one row of 15 characters; however, the text that you

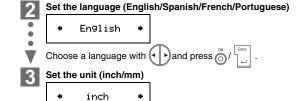

enter can be up to 80 characters in length.

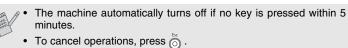

To initialize the settings, turn off the machine and then while

Choose a unit with () and press () | Letter ()

holding down ${\underline{\tiny{\mbox{\footnotesize 45MB}}}}$ and ${\underline{\mbox{\footnotesize R}}}$, press ${\underline{\mbox{\footnotesize (b)}}}$ to turn the machine back on. Finally, release shift and

Creating Labels

See the under side for steps of creating labels.

REFERENCE

Troubleshooting

Frror message

Message	Cause/Remedy		
Battery Weak!	The batteries are weak.		
Check Battery!	The installed batteries are about to run out.		
Invalid!	There is no text above the cursor when you set Numbering. Invalid character is selected for Numbering. Invalid number is selected for Tab Length or Label Length.		
No Text!	You tried to print a text file when there is no data stored in the memory. The Print key is pressed when no text is entered. You tried to set Copies, Numbering or Mirror when no text is entered.		
Line Limit!	You tried to enter a 3rd line by pressing Enter key. You tried to print a 2 line text when 0.13" (3.5 mm) or 0.23" (6 mm) tape is installed.		
No Cassette!	You tried to print a label when there is no cassette installed.		
Cutter Error!	Tape cutter lever is used in the middle of printing process.		
Full!	The maximum number of characters (80 characters) have already been entered.		
Text Too Long!	The text length exceeds the selected label length or the selected Auto Format setting length.		
No Frame OK?	Printing on 0.13" (3.5 mm) tape with invalid Frame setting ON. (Select on to print with no Frame, on to cancel.)		

What to do when

Problem	Solution		
The display stays blank after you have turned on the machine.			
The machine does not print, or the printed characters are blurred.	Check that the tape cassette has been inserted correctly. If the tape cassette is empty, replace it.		
The printed characters are not formed properly.	The batteries may be weak. Replace them.		
The memory has cleared on its own.	The batteries may be weak. Replace them.		
A blank horizontal line appears through the printed label.	There may be some dust on the print head. Remove the tape cassette and use a dry cotton swab to gently wipe the print head with an up-and-down motion. The print head can be cleaned more easily if the optional print head cleaning cassette (TZ-CL3) is used.		
The machine has "locked up" (i.e., nothing happens when a key is pressed, even though the machine is on).	Turn off the machine, and then while holding down and R, press to turn the machine back on. Finally, release and R. Note: The text and formats in the display and all text files stored in the memory are erased. Also, the language and unit settings will be cleared.		

Specifications

Item	Specification			
Dimensions	6.4" (W) × 6.0" (D) × 2.4" (H) (160 mm (W) × 151 mm (D) × 60 mm (H))			
Weight	1.03 lbs. (470 g) (without batteries and tape cassette)			
Power supply	Six AAA-size alkaline batteries (LR03) or optional AC adapter (model AD-30/AD-24)			
Tape cassette	Brother TZ tape (width): 0.13" (3.5 mm), 0.23" (6 mm), 0.35" (9 mm), 0.47" (12 mm)			
Accessins				

Accessories (Supplies may differ by distribution.)

Accessories	Stock No.		
Tape Cassettes	See the attached "Supplies and Accessories Guide".		
AC Adapter	model AD-30/AD-24		
Cutter Unit	TC-5 (replacement)		
Carrying Case	CC1000		

If the cutter blade becomes blunt after repetitive use and the tape cannot be cut cleanly, replace with new cutter unit (stock no. TC-5) by obtaining from an authorized brother reseller.

[CREATING LABELS]

MAKING TEXT

Switching Upper Case/Lower Case



Upper case (🔤 ON) ÂBCDE_


Lower case (Gaps OFF) a b c d e_

Making Two Line Text

Move the cursor to where the second line starts and press Use either 3/8" (9 mm) or 1/2" (12 mm) wide tape for two line text.


ÂBC#DEF_

Entering Symbols Symbol → () _,:;"' · 01/11 ○ ×

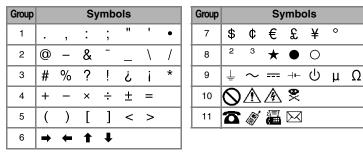

 To go to the next group, press [symbol] To cancel operations, press

Entering Accented Characters

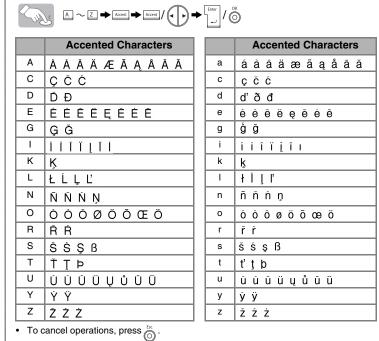

The order of accented characters differ by the selected LCD language.

To Clear

By pressing the Backspace Key, the letters will be deleted one by one. All text and settings will be cleared.

♦shift + ®

Setting [Size] ((b) + 1)

DESIGNING LABELS

(Size) ([Medium] J.SMITH J.SMITH Automatically adjusts the text size according to the tape width.

Setting [Width] $\widehat{\mathbb{P}} \rightarrow \widehat{\mathbb{P}}$ [Width] $\widehat{\mathbb{Q}} \rightarrow \widehat{\mathbb{P}}$ [×2] $\widehat{\mathbb{Q}}$

J.SMITH

J.SMITH J.SMITH Setting [Style] (Vertical) ((Fig) + 3")

 $(n) \rightarrow (-)$ [Style] $(n) \rightarrow (-)$ [Vertical] $(n) \rightarrow (-)$ [Normal] [Outline] J.SMITH J.SMITH J.SMITH J.SMITH J.SMITH J.SMITH [Italic Outl](Italic Outline) [Italic Shadow] J.SMITH っ・の≥−⊢ェ

Setting [Underline/Frame] ((Fin) + 41) (a) → (b) [Underline/Frame] (b) → (c) [Underline] (c) → (d) [Underline] [Off] [Underline] [Round] ABC <u>ABC</u> X ABC X ABC

[Wooden]

ABC

PABC☐ (ABC) Frames can not be printed on 9/64" (3.5mm) tape. Setting [Tab]

[Callout]

((fig) + [3]) You can make aligned texts by setting tabs.

ABC

Example: To set a tab between "ABC" and "D" The cursor should be positioned where you set a tab. **→** () [Tab] () Display

[Banner]

 You can also set a tab by using the Tab Key on the keyboard. Setting [Tab Length](Auto / 0.0" - 4.0")(60+6)

(a) → (b) [Tab Length] (a) → (c) (c) (d) 1.0" • (d)


You can also select the length by entering the length with Num keys.

Setting [Label Length](Auto/1.2"-12.0") (66) + 2)

• You can also select the length by entering the length with Num keys To return to [Auto], press
 Space

Setting [Auto Format]

You can choose label length from six formats to create labels for various ap-

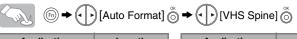

Application	Length	Application	Length	
HS Spine	5.5"	CD Case Spine	4.4"	
liniDV Spine	1.6"	File Tab	3.2"	
udio Tape	3.5"	Divider Tab	1.6"	

PRINTING LABELS

Text Preview

You can preview the text before printing. Sul!

• The LCD shows the whole text and the label length (inch/mm), then returns to the · Only the text can be previewed, not the font, style, size, underline/frame or any

Feeding (Tape Feed)

⊕Shift + (PrInt) **Printing**



• To cut off the label, push in the tape cutter lever on the upper-right corner of the

machine. To prevent damage to the tape, do not try to cut while the message "Print" or "Feed"

Setting [Margin] (Tape Margin) ((Fin) + (1))

(Full) (Margin) (S → (1) (Full) (S) [Full]/[Half]/[Narrow] is for leaving equal margins on both sides of the text. NOTE: Cut along the printed dots (:) with scissors so the text is centered in the label.

Half

1/6" 1/6" [Chain Print] is for printing more than 1 copy of a label with minimum margin <e.g. 1>. You can also create a label containing texts in various styles; print a text in one style, and before feeding, enter the second text in another style <e.g. 2>

FEED THE TAPE BEFORE USING THE CUTTER (see Feeding/Printing). Otherwise A PART OF THE TEXT MAY BE CUT OFF. Do not try to pull the tape since this may damage the tape cassette Chain Print <e.g. 1> <e.g. 2>

ABC


Using [Print Option]

((Fi) + (2') [Copies]


((Fn) + 8*)

You can print up to 9 copies of each label

ABC ABC ABC

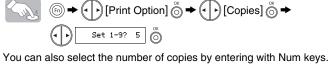


You can print many copies of the same text while increasing a selected number by 1 after each label is printed. Example: To print copies of a label containing a serial number (0123, 0124 and 0125)

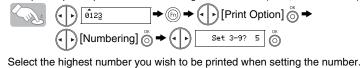

(Mirror] (→ [Print Option] (→ (Mirror) (

Use clear tape in [Mirror], so the labels can be read correctly from the oppo-

site side when attached on glass, windows or other transparent surfaces.

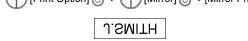

4 COMPLETED LABELS

Mary.B

☎05(8652)-6491

SOON SHOARHZOO

O DO NOT TOUCH

Larry Sampson <Marketing Dept.>

Ken@P-touch.com

Peel the printed label from backing and apply the label. USEFUL FUNCTIONS

Memory (Favorites)

You can save and print your favorite label in seconds at the touch of a button. There are three Favorite Keys (💿 ~ 🔊) to store your three favorite labels

→ ○ → ○ Save? :P-touch

To Print: Print? :P-touch

To Open: ○→○→○ Ôpen? :P-touch ○

When the saved text contains more than 8 characters, use () to scroll

Function Shortcuts

((m)+11~0) In addition to the basic steps to search for a function, PT-1280 provides you with function shortcuts so you can easily jump to a frequently used function

just by pressing (6) and the shortcut key shown in the table below. To con-**Function Function** [Tab Length] 6 ' [Label Length] 2. [Width] 7 &

3 # [Style] 8* 4 1 [Underline/Frame 9(5 % [Tab]

[Auto Format] [Margin] [Print Option]

Should you encounter any problems with your product, please do not return your product to the store!

After referring to the User's guide, if you still need assistance, call Brother

Voice: 1-877-BROTHER(1-877-276-8437)

www.brother.com Web: Fax: 1-901-379-1210

us at www.brother.com

If you need to locate a service center, please call 1-800-284-HELP or visit