

# Common Functions & Commands

Model PT-1400



## Quick Reference Guide



# brother

Printed in China LN4393001A



### Setup Menu

Code **Z**

- Cut**
  - 1 (1 = cut-pause; no chain print)
  - 2 (2 = no cut-pause; no chain print)
  - 3 (3 = cut-pause; chain print)
  - 4 (4 = no cut-pause; chain print)
- Contrast**
  - + 2, to -2 (0 = default, + = darker, - = lighter)
- Auto Reduction**

If label is set to AUTO size, text size or width will change based on label length.

  - Text Size
  - Text Width
- Length Adjustment**

Increase or decrease the label length if the length differs from actual.

  - +3 to -1, 0 = default
- Symbol Save**

Personal Category is full, symbols will be added (on) or not (off).

  - On
  - Off
- Units**

Set unit for measurement.

  - inch
  - mm
- Language**

Set language for menus, settings and messages.

  - English
  - Français
- Version Info**

Version information for P-touch software & symbol set.

  - Main
  - Boot
  - Char-Set (Character Set)
  - Symb-Set (Symbol Set)

### (Label) Length

Code **A**

- Length**

Specify label length.

  - Auto / 0.30 - 39.00inch (Auto / 6 - 999mm)
- Margin**

Specify margin.

  - 0.10 - 4.00inch (2 - 99mm)

### Bar Code

Parameter **BarCode**

### Bar Code Functions

Code **BarCode**

- Bar Code**

Type in bar code data.
- Parameter Settings**

Set settings for bar code.

  - Protocol**

Specify protocol.

    - Code 39
    - Code 128
    - EAN128
    - CODABAR
    - UPC-E
    - UPC-A
    - EAN8
    - EAN13
    - I-2/5
  - Width**

Specify width of bar code graphic.

    - Small
    - Medium
    - Large
  - Under Number**

Specify whether the number is printed under the bar code.

    - On
    - Off
  - Check Digit**

Code 39, I-2/5 and CODABAR only, specify Check Digit on/off.

    - On
    - Off

### (Line) Style

Code **D**

- Style**

Set font style.

  - Normal
  - Bold
  - Outline
  - Italic
  - Italic + Bold
  - Italic + Outline

### (Line) Size

Code **E**

- Size**

Set the size for an individual line.

  - Auto
  - 1mm
  - 2mm
  - 3mm
  - 4mm
  - 6mm
  - 9mm
  - 12mm

### Print Options

Code **Label Type**

- Copies**
  - 1-99
- Number (sequential labels)**
  - Off
  - 1-99
- Block No.**

Choose the block numbers (start/end) to print.
- Mirror (print text in reverse order)**
  - Off
  - On

### Format

Code **Format**

- GLB (Global) Size**

Set font size for label.

  - Auto
  - 1mm
  - 2mm
  - 3mm
  - 4mm
  - 6mm
  - 9mm
  - 12mm
- GLB (Global) Wide**

Set label font width.

  - Minimum
  - Narrow
  - Normal
  - Wide
- GLB (Global) Style**

Set label font style - individual line style overrides settings.

  - Normal
  - Bold
  - Outline
  - Italic
  - Italic + Bold
  - Italic + Outline
- Align**

Specify text alignment.

  - Left
  - Justify
  - Right
  - Center

### (Label) Frame

Code **B**

- Frame**

Choose from 14 different borders.

  - Off
  - 1 - 14

### (Label) Clear

Code **BS**

- Clear**

Clear text (and font) to start new label.

  - Text & Format
  - Text Only

### Label Type

Code **Label Type**

- Label Type**

Specify type of label printed.

  - Normal
  - Rotate
  - Rotate-Repeat
  - Port
  - Panel
  - Flag
  - Vertical

# Creating & Printing Commonly Used Labels

## General

Sales Out Reports  
Regions 1 - 4

1. Press **Label Type** – until Normal.  
Press to select.
2. Type *Text* ( for new line, or to place a block of text to the right).
3. To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code D** to specify different font types. to choose. Press to enter.
  - **Code E** to specify different font sizes. to choose. Press to enter.
4. **Print**

## Vertical

R  
E  
P  
O  
R  
T

W  
I  
R  
E

4 1  
5 2  
6 3

1. Press **Label Type** – until Vertical.  
Press to select.
2. Type *Text*. Enter more than one line of text with **A** ( or **B**) **Code** (). Text will be added to previous text. Example by typing:  
**A) 1. 123** () **B) 1. 123** (**Code** )  
**2. 456** Output: **2. 456** Output:  
**3. Print** **3. Print**   
 (Two Column) (One Column)
3. To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code D** to specify different font types. to choose. Press to enter.
  - **Code E** to specify different font sizes. to choose. Press to enter.
4. **Print**

## Name Badge

Monica McLaughlin  
FOUNDING MEMBER

1. Press **Label Type** – until Normal.  
Press to select.
2. Set label length **Code A** – use number pad to type length or to specify. Press to enter.
3. Type *Name*. Press for new line.
4. Type *Company*.
5. To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code D** to specify different font types. to choose. Press to enter.
  - **Code E** to specify different font sizes. to choose. Press to enter.
6. **Print**

## Cable/ Wire Wrap



1. Press **Label Type** – until Rot-Rep.  
Press to select.
2. Set the length of the label with (*BLK LEN*), use number pad to type length or arrows to select, arrow to the next option.
3. Choose frame (*FRAME*) option - Arrow to select, to end.
4. Type *Text*.
5. To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code D** to specify different font types. to choose. Press to enter.
  - **Code E** to specify different font sizes. to choose. Press to enter.
6. **Print**

## Cable/ Wire Flag



1. Press **Label Type** – until Flag.  
Press to select.
2. Set the diameter of the cable/wire (*FLAG Ø*) arrows to select, arrow to next option.
3. Set the length of the label (*FLAG LEN*), use number pad to type length or arrows to select, arrow to the next option.
4. Choose frame (*FRAME*) option - Arrow to select frame, arrow to next option.
5. Choose to have text rotated or not (*ROTATE*), arrows to select, to end.
6. Type *Text*.
7. To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code D** to specify different font types. to choose. Press to enter.
  - **Code E** to specify different font sizes. to choose. Press to enter.
8. **Print**

## Port Label



1. Press **Label Type** – until Port.  
Press to select.
2. Set the length of the label (*BLK LEN*), use pad to type length or arrows to select, arrow to the next option.
3. Choose frame (*FRAME*) option - Arrow to select, to end.
4. Type *Text*.  
**(continue to next column)**

## Port Label (cont.)



5. To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code D** to specify different font types. to choose. Press to enter.
  - **Code E** to specify different font sizes. to choose. Press to enter.
6. **Print**

## Panel Label

7C-A01 7C-A02

1. Press **Label Type** – until Panel.  
Press to select.
2. Set the length of the label with (*BLK LEN*), use number pad to type length or arrows to select, arrow to the next option.
3. Choose frame (*FRAME*) option - Arrow to select, to end.
4. Choose print option - front of a panel or for the reverse of a panel — arrow to select, to end.
5. Type *Text*. Use **Code** to separate port information.
6. To change text style or size per specific line, use to place cursor on line to be changed. Use
  - **Code D** to specify different font types. to choose. Press to enter.
  - **Code E** to specify different font sizes. to choose. Press to enter.
7. **Print**