
brother

Operation Manual

Sewing Machine

Product Code: 882-D00

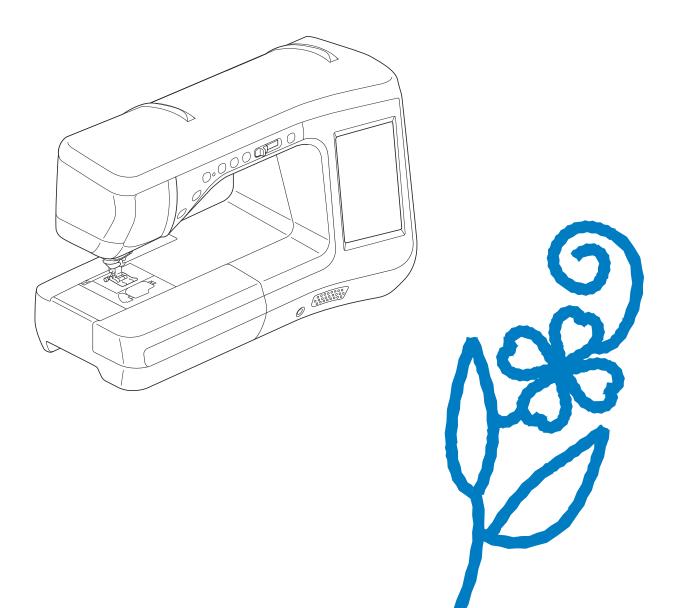

Be sure to read this document before using the machine. We recommend that you keep this document nearby for future reference.

TRADEMARKS

IMPORTANT:

READ BEFORE DOWNLOADING, COPYING, INSTALLING OR USING.

By downloading, copying, installing or using the software you agree to this license. If you do not agree to this license, do not download, install, copy or use the software.

Intel License Agreement For Open Source Computer Vision Library

Copyright © 2000, Intel Corporation, all rights reserved. Third party copyrights are property of their respective owners.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistribution's of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistribution's in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- The name of Intel Corporation may not be used to endorse or promote products derived from this software without specific prior written permission.

This software is provided by the copyright holders and contributors "as is" and any express or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall Intel or contributors be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage.

All information provided related to future Intel products and plans is preliminary and subject to change at any time, without notice.

SD is a registered trademark or a trademark of SD-3C, LLC.

CompactFlash is a registered trademark or a trademark of Sandisk Corporation.

Memory Stick is a registered trademark or a trademark of Sony Corporation.

SmartMedia is a registered trademark or a trademark of Toshiba Corporation.

MultiMediaCard (MMC) is a registered trademark or a trademark of Infineon Technologies AG.

xD-Picture Card is a registered trademark or a trademark of Fuji Photo Film Co. Ltd.

IBM is a registered trademark or a trademark of International Business Machines Corporation.

Microsoft, Windows and Windows Vista are registered trademarks or trademarks of Microsoft Corporation.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

All other brands and product names mentioned in this manual are registered trademarks of their respective companies. However, the explanations for markings such as $^{\circ}$ and m are not clearly described within the text.

INTRODUCTION

Thank you for purchasing this machine. Before using this machine, carefully read the "IMPORTANT SAFETY INSTRUCTIONS", and then study this manual for the correct operation of the various functions. In addition, after you have finished reading this manual, store it where it can quickly be accessed for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Please read these safety instructions before attempting to use the machine.



f 1 Always unplug the machine from the electrical outlet immediately after using, when cleaning, making any user servicing adjustments mentioned in this manual, or if you are leaving the machine unattended.



persons.

- 2 Always unplug the machine from the electrical outlet when making any adjustments mentioned in the instruction manual.
- To unplug the machine, switch the machine to the symbol "O" position to turn it off, then grasp the plug and pull it out of the electrical outlet. Do not pull on the cord.
- Plug the machine directly into the electrical outlet. Do not use an extension cord.
- Always unplug your machine if the power is cut.

3 Electrical Hazards:

- This machine should be connected to an AC power source within the range indicated on the rating label. Do not connect it to a DC power source or inverter. If you are not sure what kind of power source you have, contact a qualified electrician.
- This machine is approved for use in the country of purchase only.

4 Never operate this machine if it has a damaged cord or plug, if it is not working properly, has been dropped or damaged, or water is spilled on the unit. Return the machine to the nearest authorized dealer for examination, repair, electrical or mechanical adjustment.

- While the machine is stored or in use if you notice anything unusual, such as an odor, heat, discoloration or deformation, stop using the machine immediately and unplug the power cord.
- When transporting the sewing machine, be sure to carry it by its handle. Lifting the sewing machine by any other part may damage the machine or result in the machine falling, which could cause injuries.
- When lifting the sewing machine, be careful not to make any sudden or careless movements, otherwise you may injure your back or knees.

5 Always keep your work area clear:

- Never operate the machine with any air openings blocked. Keep ventilation openings of the sewing machine and foot control free from the build up of lint, dust, and loose cloth.
- Do not store objects on the foot controller.
- Do not use extension cords. Plug the machine directly into the electrical outlet.
- Never drop or insert foreign objects in any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the machine near a heat source, such as a stove or iron; otherwise, the machine, power cord or garment being sewn may ignite, resulting in fire or an electric shock.
- Do not place this sewing machine on an unstable surface, such as an unsteady or slanted table, otherwise the sewing machine may fall, resulting in injuries.

b Special care is required when sewing:

- Always pay close attention to the needle. Do not use bent or damaged needles.
- Keep fingers away from all moving parts. Special care is required around the machine needle.
- Switch the sewing machine to the symbol "O" position to turn it off when making any adjustments in the needle area.
- Do not use a damaged or incorrect needle plate, as it could cause the needle to break.
- Do not push or pull the fabric when sewing, and follow careful instruction when free motion stitching so that you do not deflect the needle and cause it to break.

7 This machine is not a toy:

- Your close attention is necessary when the machine is used by or near children.
- The plastic bag that this sewing machine was supplied in should be kept out of the reach of children or disposed of. Never allow children to play with the bag due to the danger of suffocation.
- Do not use outdoors.

8 For a longer service life:

- When storing this machine, avoid direct sunlight and high humidity locations. Do not use or store the machine near a space heater, iron, halogen lamp, or other hot objects.
- Use only neutral soaps or detergents to clean the case. Benzene, thinner, and scouring powders can damage the case and machine, and should never be used.
- Always consult the operation manual when replacing or installing any assemblies, the presser feet, needle, or other parts to assure correct installation.

9 For repair or adjustment:

- If the light unit is damaged, it must be replaced by an authorized dealer.
- In the event a malfunction occurs or adjustment is required, first follow the troubleshooting table in the back of the operation manual to inspect and adjust the machine yourself. If the problem persists, please consult your local authorized Brother dealer.

Use this machine only for its intended use as described in the manual.

Use accessories recommended by the manufacturer as contained in this manual.

Use only the interface cable (USB cable) included with this machine.

Use only the mouse designed specifically for this machine.

Use only the sensor pen included with this machine.

The contents of this manual and specifications of this product are subject to change without notice.

For additional product information and updates, visit our website at <u>www.brother.com</u>

SAVE THESE INSTRUCTIONS This machine is intended for household use.

FOR USERS IN COUNTRIES EXCEPT CENELEC COUNTRIES

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

FOR USERS IN CENELEC COUNTRIES

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

FOR USERS IN THE UK, EIRE, MALTA AND CYPRUS ONLY

IMPORTANT

- In the event of replacing the plug fuse, use a fuse approved by ASTA to BS 1362, i.e. carrying the 🔅 mark, rating as marked on plug.
- Always replace the fuse cover. Never use plugs with the fuse cover omitted.
- If the available electrical outlet is not suitable for the plug supplied with this equipment, you should contact your authorized dealer to obtain the correct lead.

Federal Communications Commission (FCC) Declaration of Conformity (For USA Only)

Responsible Party: Brother International Corporation 200 Crossing Boulevard P.O. Box 6911 Bridgewater, NJ 08807-0911 USA TEL : (908) 704-1700

declares that the product

Product Name:	Brother Sewing Machine
Model Number:	VQ3000, BQ3050

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The included interface cable should be used in order to ensure compliance with the limits for a Class B digital device.
- Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment.


Laser Notices (For U.S.A. only)

Laser Safety

This sewing machine is certified as a Class 1 laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the sewing machine does not produce hazardous laser radiation.

IEC 60825-1 Specification

 This sewing machine is a Class 1 laser product as defined in IEC 60825-1:2007 specifications.

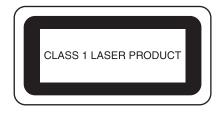

The laser beam emitted by the laser unit installed in this machine is restricted to an output at a safe level. However, the machine contains 7-milliwat, 650-660nanometer wavelength, 6-12 degree at parallel divergence angle, 24-34 degree at perpendicular divergence angle, InGaAIP laser diodes. Therefore, eye damage may result from disassembling or altering this machine. Safety precautions have been designed to prevent any possible laser beam exposure to the operator.

FDA Regulations

U.S. Food and Drug Administration (FDA) has implemented regulations for laser products manufactured on and after August 2, 1976. Compliance is mandatory for products marketed in the United States. The label shown on the back of the sewing machine indicates compliance with the FDA regulations and must be attached to laser products marketed in the United States.

Brother Industries, Ltd. 15-1, Naeshiro-cho, Mizuho-ku, Nagoya 467-8561, JAPAN

This product complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.

A CAUTION

• Use of controls, adjustments or the performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

Laser Notices (For countries except U.S.A.)

IEC 60825-1 Specification

This sewing machine is a Class 1 laser product as defined in IEC 60825-1:2007 specifications.



The laser beam emitted by the laser unit installed in this machine is restricted to an output at a safe level. However, the machine contains 7-milliwat, 650-660nanometer wavelength, 6-12 degree at parallel divergence angle, 24-34 degree at perpendicular divergence angle, InGaAIP laser diodes. Therefore, eye damage may result from disassembling or altering this machine. Safety precautions have been designed to prevent any possible laser beam exposure to the operator.

A CAUTION

- This sewing machine has a Class 3B Laser Diode in the Laser Unit. The Laser Unit should not be opened under any circumstances.
- Use of controls, adjustments or the performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

OUTSTANDING FEATURES

Setting Laser Guideline Marker as a Guide to Sew

The guideline marker shows the sewing position. You can adjust the sewing position by moving the guideline marker while checking the guideline marker on the fabric. You don't need to look for the needle drop point to check the sewing position.

Other various adjustments are available using the guideline marker.


See "USING SENSOR FUNCTIONS WITH SEWING STITCH" on page B-64.

Useful Sensor Function - Variety of Functions

When sewing, you can specify easily the guideline marker position, the needle drop position, the width and "L/R SHIFT" of the stitch, and sewing end point, using the sensor pen.

See "USING SENSOR FUNCTIONS WITH SEWING STITCH" on page B-64.

Expanding Your Creativity with Dual Feed Foot

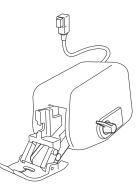

Do you feel like trying a new material, like thin fabric or nylon fabric?

Included dual feed foot works very effectively when sewing those difficult materials. This foot also works effectively when you sew the different type of materials together, like thin fabric with thick fabric. You can adjust the feed length for the various fabric types.

See "Using the Dual Feed Foot" on page B-54.

WHAT YOU CAN DO WITH THIS MACHINE

B Basic operations

After purchasing your machine, be sure to read this section first. This section provides details on the initial setup procedures as well as descriptions of this machine's more useful functions.

Chapter 1 Getting Ready

To learn the operation of the principal parts and the screens *Page B-18*

Chapter 2 Sensor Functions

Try the new function using the supplied sensor pen Page B-58

S Sewing

This section describes procedures for using the various utility stitches as well as other functions. It provides details on basic machine sewing in addition to the more expressive features of the machine, from sewing tubular pieces and buttonholes to sewing the character and decorative stitch patterns.

Chapter 1 Sewing Basics

To learn how to prepare for sewing and basic sewing operations *Page S-2*

Chapter 3 Character/Decorative Stitches

The variety of stitches widen your creativity *Page S-76*

stitches Page S-20

Pre-programmed with more than 100 frequently used

Chapter 2 Utility Stitches

Chapter 4 MY CUSTOM STITCH

Create original decorative stitches *Page S-102*

A Appendix

This section provides important information for operating this machine.

Chapter 1 How to Create Bobbin Work

To learn how to create bobbin work *Page A-2*

Chapter 2 Maintenance and Troubleshooting

Find troubleshooting tips and pointers as well as how to keep your machine in the best working condition. *Page A-14*

2

CONTENTS

TRADEMARKS
INTRODUCTION 1
IMPORTANT SAFETY INSTRUCTIONS 1
OUTSTANDING FEATURES 7
WHAT YOU CAN DO WITH THIS MACHINE 8
NAMES OF MACHINE PARTS AND THEIR
NAMES OF MACHINE PARTS AND THEIR FUNCTIONS 11
FUNCTIONS 11 Machine 11 Needle and Presser Foot Section 12
FUNCTIONS 11 Machine 11 Needle and Presser Foot Section 12 Operation Buttons 13
FUNCTIONS 11 Machine 11 Needle and Presser Foot Section 12 Operation Buttons 13
FUNCTIONS 11 Machine 11 Needle and Presser Foot Section 12

B Basic operations

Chapter1 Getting Ready	18
TURNING THE MACHINE ON/OFF	19
Setting Your Machine for the First Time	20
LCD SCREEN	
Using the Machine Setting Mode Key	
Using the Sewing Machine Help Key	
Using the Operation Guide Function	31
Using the Sewing Guide Function	
Using the Pattern Explanation Function	
LOWER THREADING	34
Winding the Bobbin	34
Setting the Bobbin	
Pulling Up the Bobbin Thread	
UPPER THREADING	
Upper Threading	
Using the Twin Needle Mode	
Using Threads that Unwind Quickly	
CHANGING THE PRESSER FOOT	
Removing the Presser Foot	
Attaching the Presser Foot	
Attaching the Presser Foot with the Included Adapter	
CHANGING THE NEEDLE	
ABOUT THE NEEDLE AND FABRIC	52
About the Needle	
Fabric/Thread/Needle Combinations	52
USING FUNCTIONS BY CONNECTING THE	
ACCESSORY TO THE MACHINE	53
Using USB Media	53
Connecting the Machine to the Computer	53
Using a USB Mouse	
Using the Dual Feed Foot	54
Chapter2 Sensor Functions	58

CONVENIENT SEWING FEATURES	
BY USING THE SENSOR PEN	. 59
CONNECTING THE SENSOR PEN	. 59
Using the Sensor Pen Holder	60
USING THE SENSOR PEN	. 61
Using the Sensor Pen	
Important Information about Sensor Pen	61
Calibrating the Sensor Pen	62
USING SENSOR FUNCTIONS WITH SEWING	
STITCH	. 64
Sensor Function Area	64
Specifying the Guideline Marker Position	
With the Sensor Pen	64

S Sewing

Chapter1 Sewing Basics

SEWING	3
Sewing a Stitch	3
Sewing Reinforcement Stitches	
Automatic Reinforcement Stitching	
Sewing Curves	
Changing Sewing Direction	
Sewing Heavyweight Fabrics	7
Sewing Hook-and-Loop Fastener	
Sewing Lightweight Fabrics	
Sewing Stretch Fabrics	9
STITCH SETTINGS	. 10
Setting the Stitch Width	10
Setting the Stitch Length	
Setting the "L/R SHIFT"	
Setting the Thread Tension	12
USEFUL FUNCTIONS	
Automatic Thread Cutting	
Adjusting the Needle Drop Position with the Guideline	
Marker (For models equipped with the guideline marker)	14
Using the Knee Lifter	
Pivoting	
Automatic Fabric Sensor System (Automatic Presser Foot	
Pressure)	17
Needle Position – Stitch Placement	
Locking the Screen	
-	
Chapter2 Utility Stitches	20
SELECTING UTILITY STITCHES	. 21
SELECTING UTILITY STITCHES	
Selecting a Stitch	21
Selecting a Stitch Saving Your Stitch Settings	21
Selecting a Stitch Saving Your Stitch Settings SEWING THE STITCHES	21 22 . 24
Selecting a Stitch Saving Your Stitch Settings SEWING THE STITCHES Straight Stitches	21 22 24 24
Selecting a Stitch Saving Your Stitch Settings SEWING THE STITCHES Straight Stitches Dart Seam	21 22 24 24 28
Selecting a Stitch Saving Your Stitch Settings SEWING THE STITCHES Straight Stitches Dart Seam Gathering	21 22 24 24 28 29
Selecting a Stitch Saving Your Stitch Settings SEWING THE STITCHES Straight Stitches Dart Seam Gathering Flat Fell Seam	21 22 24 24 28 29 29
Selecting a Stitch Saving Your Stitch Settings SEWING THE STITCHES Straight Stitches Dart Seam Gathering Flat Fell Seam Pintuck	21 22 . 24 24 28 29 29 30
Selecting a Stitch Saving Your Stitch Settings SEWING THE STITCHES Straight Stitches Dart Seam Gathering Flat Fell Seam Pintuck Zigzag Stitches	21 22 24 24 28 29 29 30 31
Selecting a Stitch Saving Your Stitch Settings SEWING THE STITCHES Straight Stitches Dart Seam Gathering Flat Fell Seam Pintuck Zigzag Stitches Elastic Zigzag Stitches	21 22 24 24 28 29 29 30 31 33
Selecting a Stitch	21 22 24 24 28 29 30 31 33 33
Selecting a Stitch	21 22 24 24 28 29 29 30 31 33 33 35
Selecting a Stitch Saving Your Stitch Settings SEWING THE STITCHES Dart Seam Gathering Flat Fell Seam Pintuck Zigzag Stitches Elastic Zigzag Stitches Overcasting Quilting Blind Hem Stitches	21 22 . 24 24 28 29 29 30 31 33 33 35 45
Selecting a Stitch Saving Your Stitch Settings SEWING THE STITCHES Dart Seam Gathering Flat Fell Seam Pintuck Zigzag Stitches Elastic Zigzag Stitches Overcasting Quilting Blind Hem Stitches Appliqué	21 22 . 24 24 28 29 29 30 31 33 33 35 45 48
Selecting a Stitch	21 22 . 24 28 29 29 30 31 33 35 45 48 49
Selecting a Stitch	21 22 . 24 28 29 29 30 31 33 35 45 48 49 50
Selecting a Stitch	21 22 . 24 28 29 29 30 31 33 35 45 48 49 50 50
Selecting a Stitch	21 22 . 24 24 28 29 30 31 33 35 45 48 49 50 51
Selecting a Stitch	21 22 . 24 24 28 29 29 30 31 33 35 45 45 48 49 50 51 52
Selecting a Stitch	21 22 . 24 24 28 29 29 30 31 33 35 45 45 48 49 50 51 52 52
Selecting a Stitch	21 22 . 24 24 28 29 29 30 31 33 35 45 45 48 49 50 51 52 52 53
Selecting a Stitch	21 22 . 24 24 28 29 29 30 31 33 35 45 45 48 49 50 51 52 53 55
Selecting a Stitch	21 22 . 24 24 28 29 29 30 31 33 35 45 45 48 49 50 51 52 55 58
Selecting a Stitch	21 22 . 24 24 28 29 29 30 31 33 35 45 45 48 49 50 51 52 55 58 59
Selecting a Stitch	21 22 . 24 24 29 29 30 33 35 35 45 45 50 51 52 55 58 59 61 62
Selecting a Stitch	21 22 . 24 24 29 29 30 33 35 35 45 45 50 51 52 55 58 59 61 62
Selecting a Stitch	21 222 . 24 24 28 29 30 31 33 35 45 45 48 49 50 51 52 55 55 55 61 62 63

SELECTING STITCH PATTERNS
Selecting Decorative Stitch Patterns/7mm Decorative Stitch
Patterns/Satin Stitch Patterns/7mm Satin Stitch
Patterns/Cross Stitch/Utility Decorative Stitch Patterns
Characters
SEWING STITCH PATTERNS
Sewing Attractive Finishes
Basic Sewing 81
Making Adjustments
EDITING STITCH PATTERNS
Changing the Size
Changing the Length (for 7mm Satin Stitch Patterns Only) 86
Creating a Vertical Mirror Image
Creating a Horizontal Mirror Image
Sewing a Pattern Continuously
Changing Thread Density (for Satin Stitch Patterns Only) 87
Returning to the Beginning of the Pattern
Checking the Image 88
COMBINING STITCH PATTERNS 89
Before Combining 89
Combining Various Stitch Patterns
Combining Large and Small Stitch Patterns
Combining Horizontal Mirror Image Stitch Patterns
Combining Stitch Patterns of Different Length
Making Step Stitch Patterns
(for 7mm Satin Stitch Patterns Only) 92
USING THE MEMORY FUNCTION
Stitch Data Precautions
Saving Stitch Patterns in the Machine's Memory
Saving Stitch Patterns to USB Media
Saving Stitch Patterns in the Computer
Retrieving Stitch Patterns from the Machine's Memory
Recalling from USB Media
Recalling from the Computer 100

Chapter4 MY CUSTOM STITCH

DESIGNING A STITCH	103
ENTERING STITCH DATA	105
USING STORED CUSTOM STITCHES	110
Storing Custom Stitches in Your List	110
Retrieving Stored Stitches	111

102

A Appendix

Chapter1	How to Create Bobbin Work	2
ABOUT	BOBBIN WORK	3
	NG FOR BOBBIN WORK	
Required	Materials	3
	reading	
Preparing	the Bobbin Thread	5
CREATIN	NG BOBBIN WORK	9
Positioni	ng the Fabric and Sewing	9
	Vork Free Motion Sewing	
ADIUST	ING THE THREAD TENSION	12
	ESHOOTING	
TROUBL		13
TROUBI Chapter2	ESHOOTING	13 <mark>g 14</mark>
TROUBI Chapter2 CARE AN	ESHOOTING Maintenance and Troubleshootin ND MAINTENANCE	13 <mark>g 14</mark> 15
TROUBI Chapter2 CARE AN Restriction	ESHOOTING Maintenance and Troubleshootin	13 g 14 15
TROUBL Chapter2 CARE AN Restrictio Precautic	ESHOOTING Maintenance and Troubleshootin ND MAINTENANCE Ins on oiling Ins on storing the machine	13 g 14 15 15
TROUBL Chapter2 CARE AN Restrictio Precautic Cleaning	ESHOOTING Maintenance and Troubleshootin ND MAINTENANCE ns on oiling	 13 g 14 15 15 15
TROUBL Chapter2 CARE AN Restrictio Precautic Cleaning Cleaning	ESHOOTING Maintenance and Troubleshootin ND MAINTENANCE Ins on oiling Ins on storing the machine the LCD Screen	 13 g 14 15 15 15 15
TROUBL Chapter2 CARE AN Restrictio Precautic Cleaning Cleaning Cleaning Cleaning	ESHOOTING Maintenance and Troubleshootin ND MAINTENANCE ns on oiling the son storing the machine the LCD Screen the Machine Casing	13 g 14 15 15 15 15 15 15 15 17

ADJUSTING THE SCREEN 18


Adjusting the Brightness of the Screen Display	18
Touch Panel is Malfunctioning	18
TROUBLESHOOTING	19
Frequent troubleshooting topics	19
Upper thread tightened up	19
Tangled thread on wrong side of fabric	20
Incorrect thread tension	22
Fabric is caught in the machine and cannot be removed	23
List of Symptoms	26
ERROR MESSAGES	29
SPECIFICATIONS	31
UPGRADING YOUR MACHINE'S SOFTWARE	32
Upgrade Procedure Using USB Media	32
Upgrade Procedure Using Computer	33
INDEX	

NAMES OF MACHINE PARTS AND THEIR FUNCTIONS

The names of the various parts of the sewing machine and their functions are described below. Before using the sewing machine, carefully read these descriptions to learn the names of the machine parts.

Machine

Front View

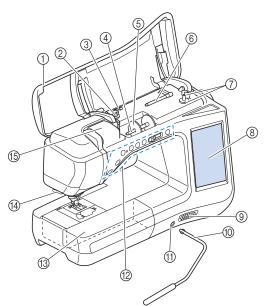

(1) Top cover

Open the top cover to thread the machine and wind the bobbin.

- ② Pre-tension disk Pass the thread around the pre-tension disk when winding the bobbin thread. (page B-34)
- Thread guide for bobbin winding Pass the thread through this thread guide when winding the bobbin thread. (page B-34)
- (4) Spool pin
- Place a spool of thread on the spool pin. (page B-42) (5) Spool cap

Use the spool cap to hold the spool of thread in place. (page B-42)

- 6 Supplemental spool pin Use this spool pin to wind the bobbin thread, or to sew with the twin needle. (page B-34, B-45)
- ⑦ Bobbin winder

Use the bobbin winder when winding the bobbin. (page B-34) (8) LCD (liquid crystal display)

Settings for the selected stitch and error messages appear in the LCD. (page B-22)

- (9) Speaker
- (1) Knee lifter

Use the knee lifter to raise and lower the presser foot. (page S-15)

- Knee lifter slot (11)
 - Insert the knee lifter into the slot. (page S-15)
- (2) Operation buttons (7 buttons) and sewing speed controller


Use these buttons and the slide to operate the sewing machine. (page B-13)

- (3) Flat bed attachment with accessory compartment Store presser feet and bobbins in the accessory compartment of the flat bed attachment. When sewing cylindrical pieces, remove the flat bed attachment. (page B-13)
- Thread cutter

Pass the threads through the thread cutter to cut them. (page B-44)

Thread guide plate (15) Pass the thread around the thread guide plate when threading upper thread. (page B-42)

■ Right-side/Rear View

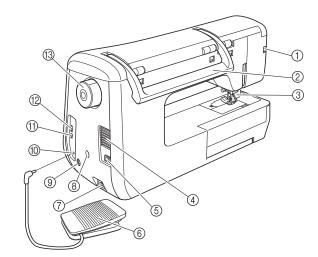

- 1 Connector for the presser foot
 - Connect the dual feed foot. (page B-54)

Handle

Carry the sewing machine by its handle when transporting the machine.

- Presser foot lever Raise and lower the presser foot lever to raise and lower the presser foot. (page B-49)
- Air vent (4)

The air vent allows the air surrounding the motor to circulate. Do not cover the air vent while the sewing machine is being used.

Main power switch (5)

Use the main power switch to turn the sewing machine ON and OFF. (page B-19)

Foot controller 6

Depress the foot controller to control the speed of the machine. (page S-4)

Power cord receptacle

Insert the power cord into the machine receptacle. (page B-19) (8) Sensor pen holder connector

Connect the included sensor pen holder. The connector hole is covered with the protective cap when purchased. (page B-60) Sensor pen jack

Connect the sensor pen. (page B-59) Foot controller jack

Insert the foot controller plug into its jack on the machine. (page S-4)

⊕ USB port for computer

(13)


In order to import/export patterns between a computer and the machine, plug the USB cable into the USB port. (page B-53, S-97)

(12) USB port for mouse / media (USB 2.0) In order to send patterns from/to USB media, plug the USB media directly into the USB port. (page B-53, S-96) Connect the USB mouse to operate with mouse. (page B-54)

Handwheel

Rotate the handwheel toward you (counterclockwise) to raise and lower the needle. The wheel should be turned toward the front of the machine.

Needle and Presser Foot Section

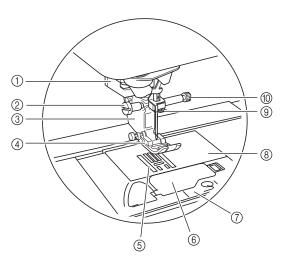

① Buttonhole lever

The buttonhole lever is used with the one-step buttonhole foot to create buttonholes. (page S-55)

- ② Presser foot holder screw Use the presser foot holder screw to hold the presser foot in place. (page B-49)
- ③ Presser foot holder

The presser foot is attached to the presser foot holder. (page B-49)

(4) Presser foot

The presser foot consistently applies pressure to the fabric as sewing takes place. Attach the appropriate presser foot for the selected stich. (page B-49)

5 Feed dogs

The feed dogs feed the fabric in the sewing direction.

6 Bobbin cover

Open the bobbin cover to set the bobbin. (page B-39, S-32) ⑦ Needle plate cover

Remove the needle plate cover to clean the race. (page S-26) **Needle plate**

The needle plate is marked with guides to help sew straight seams. (page S-26)

(9) Needle bar thread guide


Pass the upper thread through the needle bar thread guide. (page B-42)

10 Needle clamp screw

Use the needle clamp screw to hold the needle in place. (page $\operatorname{B-49})$


Measurements on the needle plate, bobbin cover (with mark) and needle plate cover

The measurements on the bobbin cover are references for patterns with a middle (center) needle position. The measurements on the needle plate and the needle plate cover are references for stitches with a left needle position.

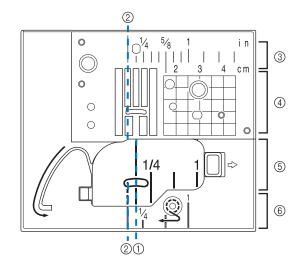


- ① For stitches with a middle (center) needle position
- ② For stitches with a left needle position
- ③ Left needle position on the needle plate <inch>
- ④ Left needle position on the needle plate <cm>
- (5) Middle (center) needle position on the bobbin cover (with mark) <inch>
- ⑥ Left needle position on the needle plate cover <inch>

Operation Buttons

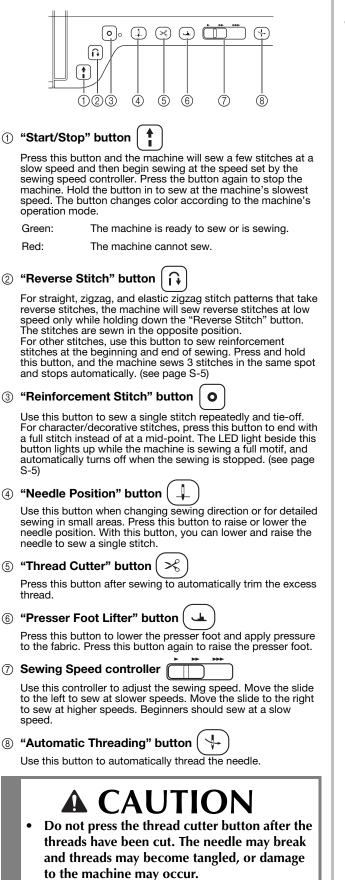


Using the Flat Bed Attachment

Pull up on the lid of the flat bed attachment to open the front or back accessory compartments.

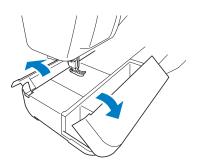


A presser foot storage tray is stored in the accessory compartment of the flat bed attachment.

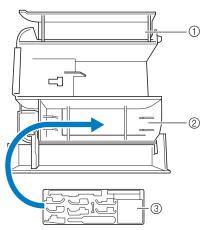

- ① Storage space of the flat bed attachment
- ② Presser foot storage space of the flat bed attachment
- ③ Presser foot storage tray There are also storage spaces for optional presser feet, such as the vertical stitch alignment foot "V".

Included Accessories

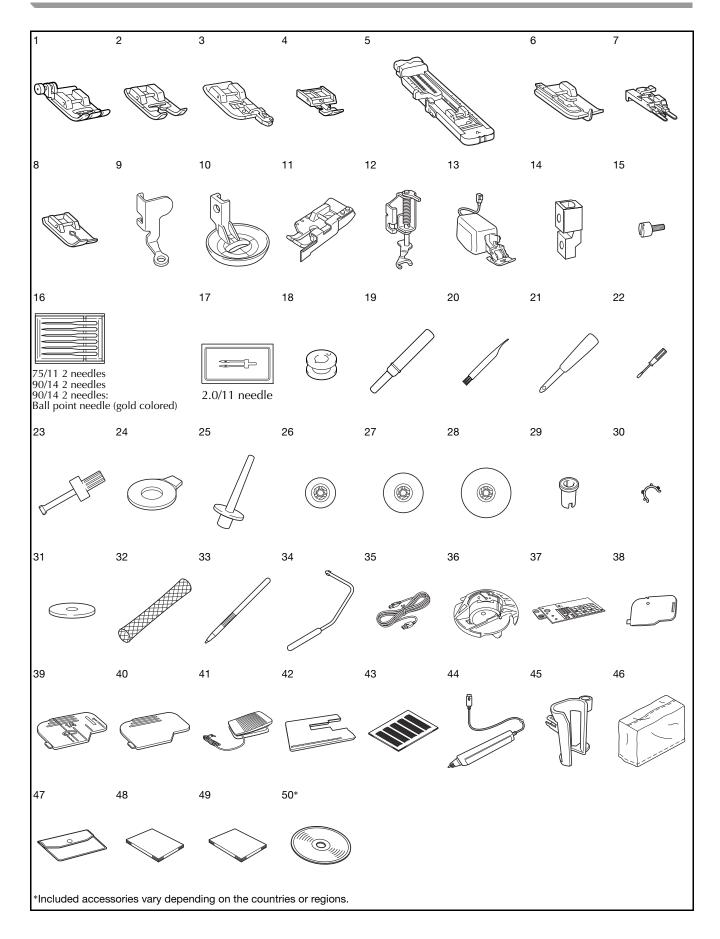

		Part	Code
No.	Part Name	Americas	Others
1	Zigzag foot "J" (on machine)	XF3022-001	
2	Monogramming foot "N"	X53840-351	
3	Overcasting foot "G"	XC3098-051	
4	Zipper foot "I"	X59370-051	
5	Buttonhole foot "A"	X5778	9-251
6	Blind stitch foot "R"	X56409-051	
7	Button fitting foot "M"	130489-001	
8	Straight stitch foot	SA167	F042N: XC1973-052
9	Free motion quilting foot "C"	XF4737-001	
10	Free motion echo quilting foot "E"	XE0766-001	
11	1/4" quilting foot with guide	SA185	F057: XC7416-252
12	Free motion open toe quilting foot "O"	XF487	3-001
13	Dual feed foot	DF1: XF4166- XF3165-001	001 (EU area) (other area)
14	Adapter	XF361	3-001
15	Screw (small)	XA481	3-051
16	Needle set ^{*1}	X5835	8-051
17	Twin needle ^{*2}	X5929	6-151
18	Bobbin × 10 (One is on machine.)	SA156	SFB: XA5539-151
19	Seam ripper	XF496	7-001
20	Cleaning brush	X5947	6-051
21	Eyelet punch	XZ505	1-001
22	Screwdriver (small)	X5546	8-051
23	Screwdriver (large)	XC423	37-021
24	Disc-shaped screwdriver	XC107	'4-051
25	Vertical spool pin	XC861	9-052
26	Spool cap (small)	13001	3-154
27	Spool cap (medium) × 2 (One is on machine.)	X5526	0-153
28	Spool cap (large)	130012-054	
29	Spool cap (special)	XA575	2-121
30	Bobbin clip × 10	XE306	0-001
31	Spool felt (on machine)	X5704	5-051
32	Spool net × 2	XA552	3-050
33	Touch pen (stylus)	XA994	0-051
34	Knee lifter	XA694	
35	USB cable	XD074	5-051
36	Bobbin case (gray, for bobbin work)	XE829	8-001
37	Straight stitch needle plate	XF307	
38	Cord guide bobbin cover (with single hole)	XE8991-101	
39	Bobbin cover (with mark)	XF075	
40	Bobbin cover (on machine)	XE8992-101	
41	Foot controller	XD0501-151(EU area) XC8816-051 (other area)	
42	Wide table	SAWT6200D (U.S.A.) SAWT6200DC (Canada)	WT10: XF4184-001
43	Grid sheet set	SA507	GS3: X81277-151
44	Sensor pen	XF4992-00 XF3116-001	(other area)
45	Pen holder	XF297	3-001
46	Dust cover	XF456	9-001
47	Accessory bag	XC4487-021	
48	Operation manual	This manual	
49	Quick Reference Guide	XF3634-001	

No.	Part Name	Part Code	
NO.	Fait Name	Americas	Others
50	MY CUSTOM STITCH CD* XE8901-)1-001

*1 75/11 2 needles


90/14 2 needles

90/14 2 needles: Ball point needle (gold colored)

```
*2 2.0/11 needle
```

Memo


- Foot controller: Model T This foot controller can be used on the machine with product code 882-D00. The product code is mentioned on the machine rating plate.
- Always use accessories recommended for this machine.
- Placing bobbin clips on bobbins helps prevent the thread from unwinding from the bobbin. In addition, snapping bobbin clips together allows the bobbins to be conveniently stored and prevents them from rolling around if they are dropped.

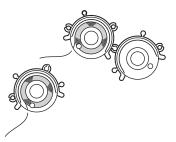

 Included accessories may vary depending on the country or region.

Options

The following are available as optional accessories to be purchased separately from your authorized Brother dealer.

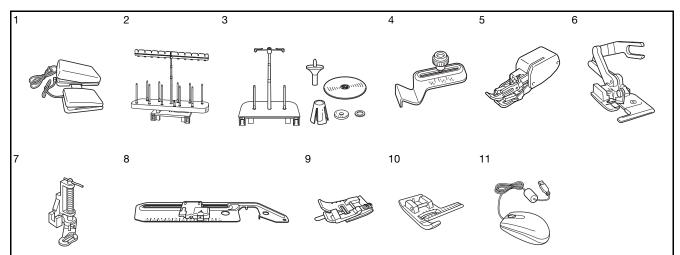

No.	Part Name	Part Code		
NO.	Fait Maine	Americas	Others	
1	Multi-function foot controller	SAMFFC (U.S.A.) SAMFFCC (Canada)	MFFC1: XF4159-001 MFFC10C: XF4471-001 (Australia)	
2	10 spool stand	SA561 (U.S.A.) SA561C (Canada)	TS5: XF4175-001	
3	2 Spool stand	SA562 (U.S.A.) SA562C (Canada)	TS6: XF4180-001	
4	Seam guide	SA538	SG1: XC8483-052	
5	Walking foot	SA140	F033N: XC2214-052	
6	Side cutter foot	SA177	F054: XC3879-152	
7	Free-motion quilting foot	SA129	F005N: XC1948-052	
8	Circular attachment	SACIRC1	CIRC1: XE3527-001	
9	Stitch in the ditch foot	SA191	F065: XF2339-001	
10	Vertical stitching alignment foot "V"	SA189	F063: XE5224-001	
11	USB mouse	XE533	34-101	

Memo

• All specifications are correct at the time of printing. Please be aware that some specifications may change without notice.



This section provides details on the initial setup procedures as well as descriptions of this machine's more useful functions. Page number starts with "B" in this section.

Chapter1 Getting Ready	B-18
Chapter2 Sensor Functions	B-58

BBasic operations

Chapter **1** Getting Ready

Setting Your Machine for the First Time20
LCD SCREEN22
 Utility Stitch Screen
 Changing the Pointer Shape When a USB Mouse Is Used
Using the Sewing Machine Help Key
Using the Pattern Explanation Function
LOWER THREADING
Winding the Bobbin 34 Using the Supplemental Spool Pin
UPPER THREADING
Upper Threading
Removing the Presser Foot 49 Attaching the Presser Foot 49 Attaching the Presser Foot with the Included Adapter 49 ■ Attaching the Free Motion Echo Quilting Foot "E" 50 CHANGING THE NEEDLE 51
ABOUT THE NEEDLE AND FABRIC52
About the Needle
Using USB Media

TURNING THE MACHINE ON/OFF

A WARNING

- Use only regular household electricity for the power source. Using other power sources may result in fire, electric shock, or damage to the machine.
- Make sure that the plugs on the power cord are firmly inserted into the electrical outlet and the power cord receptacle on the machine. Otherwise, a fire or electric shock may result.
- Do not insert the plug on the power cord into an electrical outlet that is in poor condition.
- Turn the main power to OFF and remove the plug in the following circumstances:
- When you are away from the machine After using the machine When the power fails during use When the machine does not operate correctly due to a bad connection or a disconnection During electrical storms


A CAUTION

- Use only the power cord included with this machine.
- Do not use extension cords or multi-plug adapters with many other appliances plugged in to them. Fire or electric shock may result.
- Do not touch the plug with wet hands. Electric shock may result.
- When unplugging the machine, always turn the main power to OFF first. Always grasp the plug to remove it from the outlet. Pulling on the cord may damage the cord, or lead to fire or electric shock.
- Do not allow the power cord to be cut, damaged, modified, forcefully bent, pulled, twisted, or bundled. Do not place heavy objects on the cord. Do not subject the cord to heat. These things may damage the cord, or cause fire or electric shock. If the cord or plug is damaged, take the machine to your authorized dealer for repairs before continuing use.
- Unplug the power cord if the machine is not to be used for a long period of time. Otherwise, a fire may result.
- When leaving the machine unattended, either the main switch of the machine should be turned to OFF or the plug must be removed from the socket-outlet.
- When servicing the machine or when removing covers, the machine must be unplugged.
- For U.S.A. only
 This appliance has a polarized plug (one blade wider than the other). To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.

 If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.


B

Insert the power supply cord into the power cord receptacle, then insert the plug into a wall outlet.

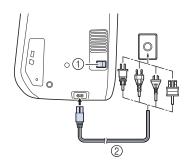

- 1 Main power switch
- ② Power supply cord

 Turn the main power switch to "I" to turn on the machine.

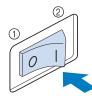

OFF
 ON

V Note

• When the straight stitch needle plate is on the machine, the needle will automatically move to the middle position.

🔊 Memo

• When the machine is turned on, the needle and the feed dogs will make sound when they move; this is not a malfunction.

When the machine is turned on, the opening movie is played. Touch anywhere on the screen to display the sewing screen.

A CAUTION

• Only touch the screen with your finger or the included touch pen. Do not use a sharp pencil, screwdriver, or other hard or sharp object. It is not necessary to press hard on the screen. Pressing too hard or using a sharp object may damage the screen.

4 Turn the main power switch to "O" to turn off the machine.

Memo

 If the machine is turned off in the middle of sewing in the "Sewing" function, the operation will not continued after turning the power on again.


Setting Your Machine for the First Time

When you first turn on the machine, set the language and time/date to your language and local time/date. Follow the procedure below when the settings screen appears automatically.

Press	and b to set your local language.
	Select your language.
	English I I
	ОК
Press	ок .

- **3** The message screen, confirming if you want to set time/date, appears. To set the time/date, press or ; to cancel the setting, press on cancel.
 - $\rightarrow\,$ The screen to set time/date appears.

A Press — or + to set time/date.

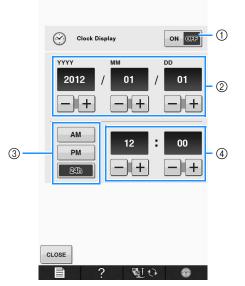

- ① Press to display the time on the screen.
- ② Set the year (YYYY), month (MM) and date (DD).
- ③ Select whether 24h or 12h setting to display.
- ④ Set the current time.

Press **CLOSE** to start using your machine.

 \rightarrow The clock starts from 0 second of the time you set.

🖌 Note

5

 The time/date you set may be cleared, if you don't turn on the machine for a certain period.


LCD SCREEN

A CAUTION

• Only touch the screen with your finger or the included touch pen. Do not use a sharp pencil, screwdriver, or other hard or sharp object. It is not necessary to press hard on the screen. Pressing too hard or using a sharp object may damage the screen.

■ Utility Stitch Screen


Press a key with your finger to select the stitch pattern, to select a machine function, or to select an operation indicated on the key. When the key display is light gray, the function is not currently available.

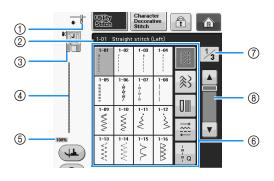

No.	Display	Key Name	Explanation	Page
1	•	Needle position setting display	Shows single or twin needle mode setting, and the needle stop position. Single needle/down position Twin needle/down position Twin needle/down position	-
2	1-01 Straight stitch (Left)	Selected stitch display	Shows the name and code number of the selected stitch.	S-3
3		Presser foot display	hows the presser foot code. Attach the presser foot indicated in this splay before sewing.	
4	100%	Stitch preview	Shows a preview of the selected stitch. When shown at 100%, the S-21 stitch appears in the screen at nearly its actual size.	
6	100%	Pattern display size	Shows the approximate size of the pattern selected. S-21 100% : Nearly the same size as the sewn pattern 50% : 1/2 the size of the sewn pattern 25% : 1/4 the size of the sewn pattern * * The actual size of the sewn pattern may differ depending on the type of fabric and thread that is used.	
6	1-81 Straight strifts (Left) 1-83 1-83 1-83 1-83 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-84 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94 1-94	Stitch selection screen	Press the key for the pattern you want to sew. Use S-21 Image: Solution of the pattern is t	
7	1/3	Page display	Shows additional pages that can be displayed. –	

 Scroll key Press ▲ or ▼, to move one page at a time, or touch anywhere on the bar to jump ahead for additional pages of stitches. 	No.	Display	Key Name	Explanation	Page
	8	V	Scroll key		-


■ Key Functions

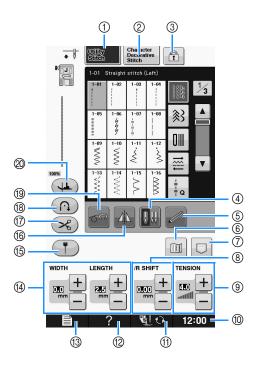


No.	Display	Key Name	Explanation	Page
1	Utility Stitch	"Utility Stitch" key	ress this key to select a straight stitch, zigzag stitch, buttonhole, blind hem itch, or other stitches commonly used in garment construction.	
2	Character Decorative Stitch	"Character/ Decorative Stitch" key	Press this key to select character or decorative stitch patterns.	S-77
3	Î	Screen lock key	ress this key to lock the screen. When the screen is locked, the various ettings, such as the stitch width and stitch length, are locked and cannot be nanged. Press this key again to unlock the settings.	
4	0.00	Needle mode selection key (Single/Double)	ress this key to select twin needle sewing mode. The sewing mode changes etween single needle mode and twin needle mode each time you press the ey. If the key display is light gray, the selected stitch pattern cannot be sewn the twin needle mode.	
5	<u>a</u>	Sensor function key	Press this key to use the sensor function.	
6		Image key	Press this key to display an enlarged image of the selected stitch pattern.	
7		Machine's memory key	Press this key to select from 3 memory functions; retrieving, storing or reset.	
8		"L/R SHIFT" key	Shows the tendency of Left/Right of the center line of the original zigzag stitch currently selected stitch pattern.	
9		Thread tension key	Shows the automatic thread tension setting of the currently selected stitch pattern. You can use the plus and minus keys to change the thread tension settings.	
10	12:00	Clock key	Press this key to set the clock to your local time.	B-20

No.	Display	Key Name	Explanation	Page
1		Presser foot/Needle exchange key	ress this key before changing the needle, the presser foot, etc. This key locks I key and button functions to prevent operation of the machine.	
12	?	Sewing machine help key	Press this key to see explanations on how to use the machine.	B-30
13		Machine setting mode key	ress this key to change the needle stop position, change the volume of peration sound, adjust the pattern or screen, and change other machine strings.	
14	WIDTH LENGTH	Stitch width and stitch length key	hows the zigzag width and stitch length settings of the currently selected itch pattern. You can use the plus and minus keys to adjust the zigzag width hd stitch length settings.	
15	•	Guideline marker key	ss this key to display the guideline marker along the sewing line. The deline marker makes it easier to sew stitches that align with the fabric edge other marker on the fabric.	
16		Mirror image key	Press this key to create a mirror image of the selected stitch pattern. If the key display is light gray, a mirror image of the selected stitch pattern cannot be sewn.	S-21
Ø	×	Automatic thread cutting key	Press this key to set the automatic thread cutting function. Set the automatic thread cutting function before sewing to have the machine automatically sew reinforcement stitches at the beginning and end of sewing (depending on the pattern, the machine may sew reverse stitches) and trim the threads after sewing.	
18		Automatic reverse/reinforcement stitch key	reverse stitches or reinforcement stitches depending on the pattern, at the beginning and end of sewing.	
19	60	Free motion mode key	Press this key to enter free motion sewing mode. The presser foot is raised to an appropriate height and the feed dog is lowered for free motion quilting.	
0	4	Pivot key	Press this key to select the pivot setting. When the pivot setting is selected, stopping the machine lowers the needle and slightly raises the presser foot automatically. In addition, when sewing is restarted, the presser foot is automatically lowered.	S-15
			 If this key appears as , the pivot function cannot be used. Be sure the needle position on page B-26 of Machine Settings is set to the down position. 	

For additional operational information, refer to page reference number listed above.

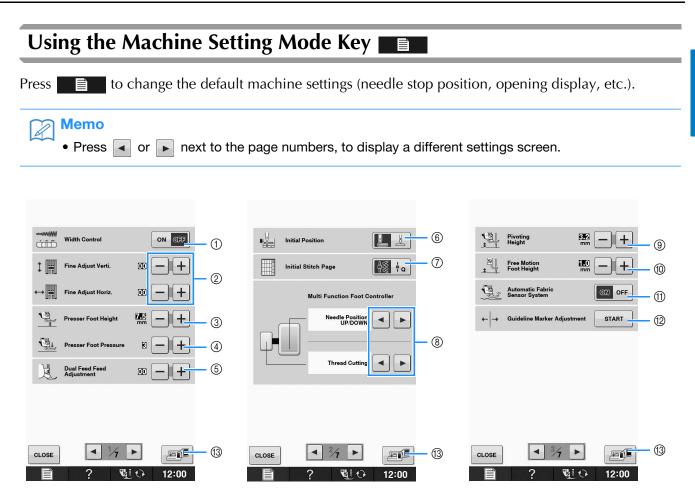

- ① Select whether to use the sewing speed controller to determine the zigzag width (see page S-39).
- ② Make adjustments to character or decorative stitch patterns (see page S-82).
- ③ Adjust the presser foot height. (Select the height of the presser foot when the presser foot is raised.)
- Adjust the presser foot pressure. (The higher the number, the greater the pressure will be. Set the pressure at "3" for normal sewing.) (see page S-17)
 If the dual feed foot is installed and its roller is lowered, the pressure setting is fixed at "2" and cannot be changed.
- 5 Fine tune the feed of the dual feed foot (see page B-54).
- 6 Select whether "1-01 Straight stitch (Left)" or "1-03 Straight stitch (Middle)" is the utility stitch that is automatically selected when the machine is turned on. (see page S-21)
- ⑦ Select whether "Utility Stitch" or "Quilt Stitch" displayed first on the stitch selection screen when the "Sewing" is selected.
- ⑧ You can activate this setting after connecting the optional multi-function foot controller. (These settings are not operable unless the optional multi-function foot controller is attached to the machine.)
- ③ Change the height of the presser foot when sewing is stopped when the pivot setting is selected (see page S-15). Adjust the presser foot to one of the three heights (3.2 mm, 5.0 mm and 7.5 mm). (see page S-15)
- (1) Change the height of the presser foot when the machine is set to free motion sewing mode (see page S-40).
- (1) When set to "ON", the thickness of the fabric is automatically detected by an internal sensor while sewing. This enables the fabric to be fed smoothly (see pages S-8 and S-17).
- ② Adjust the guideline marker position and brightness (see page S-14).
- ③ Press to save the current settings screen image to USB media (see page B-29)

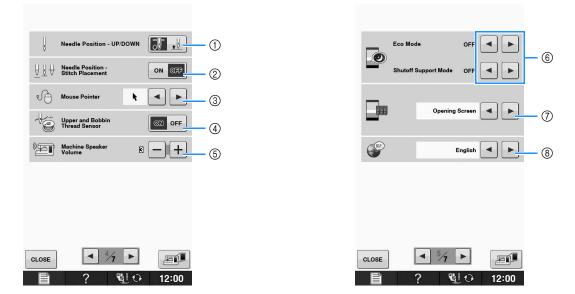

- Select the needle stop position (the needle position when the machine is not operating) to be up or down. Select the down position when using the pivot key. (see page S-15)
- ② Select the operation of the "Needle Position Stitch Placement" button from the following two sequences (see page S-18).
 - Each press of the "Needle Position Stitch Placement" button:
 - "ON" raises the needle, stops it at a nearly lowered position, then lowers it
 - "OFF" raises the needle, then lowers it
- ③ Change the shape of the pointer when a USB mouse is used (see page B-28).
- (4) Turn the "Upper and Bobbin Thread Sensor" "ON" or "OFF". If it is turned "OFF", the machine can be used without thread. (see page S-4)

A CAUTION

- If "Upper and Bobbin Thread Sensor" is set to "OFF", remove the upper thread. If the machine is used with the upper thread threaded, the machine will not be able to detect if the thread has become tangled. Continuing to use the machine with tangled thread may cause damage.
- (5) Change the speaker volume. Increase the number for louder volume, decrease for softer volume.
- (6) Select to save the machine power by setting the "Eco Mode" or the "Shutoff Support Mode" (see page B-28).
- \bigcirc Select the initial screen that is displayed when the machine is turned on (see page B-28).
- (8) Change the display language (see page B-29).

Screen Display El - + 2	
Sensor Function + 3	
	No. ************************************
	Version 2
📄 ? 🖏 🗘 12:00	📄 ? 📲 O- 12:00

- ① Change the brightness of the needle area and work area lights.
- ② Change the screen display brightness (see page A-18).
- ③ Calibrate the sensor function (see page B-62).
- ④ Display the service count which is a reminder to take your machine in for regular servicing. (Contact your authorized dealer for details.)
- 5 Display the total number of stitches sewn on this machine.
- 6 The "No." is the internal machine number for the machine.
- ⑦ Display the program version. "Version 1" shows the program version of the LCD panel, "Version 2" shows the program version of the machine.

Memo

• The latest version of software is installed in your machine. Check with your local authorized Brother dealer or at " <u>support.brother.com</u> " for available updates (see page A-32).

B

Selecting the "Eco Mode" or "Shutoff Support Mode"

You can save the machine power by setting the eco mode or the shutoff support mode. If you leave the machine without using for a specified period of time, the machine enters in one of these modes.

"Eco Mode";

Machine will enter a sleep mode. Touch the screen or press the "Start/Stop" button to continue sewing.

"Shutoff Support Mode";


Machine will enter lower power modes after set period of time. Turn machine off and then back on to restart sewing.


Condition	Eco Mode	Shutoff Support Mode
Available time	OFF, 0 - 120 (minute)	OFF, 1 - 12 (hour)
"Start/Stop" button	Green flashing	Green slow flashing
Suspended function	Machine light, Screen display, Guideline marker	All functions
After recovering	The machine starts from the previous operation.	You need to turn off the machine.

Press the "Start/Stop" button or touch the screen display to recover from these modes.

- 1 Press 📑 .
 - \rightarrow The settings screen appears.

 Display page 5 of the settings screen.

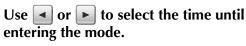

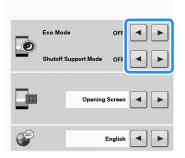

V Note

• If you turn off the machine while the machine is in the "Eco Mode" or the "Shutoff Support Mode", wait for about 5 seconds before turning on the machine again.

■ Changing the Pointer Shape When a USB Mouse Is Used


In the settings screen, the shape can be selected for the pointer that appears when a USB mouse is connected.



З

 \rightarrow The settings screen appears.

- Display page 4 of the settings screen.
- Use or b to choose the pointer shape
 from the three settings available (),

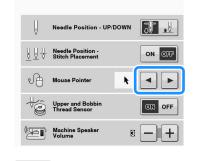

4 Pre

Press CLOSE to return to the original screen.

Memo

The setting remains selected even if the machine is turned off.

Selecting the Initial Screen Display

The Initial screen that appears on the machine can be changed.

Press 📄

 $\rightarrow\,$ The settings screen appears.

- Display page 5 of the settings screen.
- 3 Use ◀ or ► to select the setting for the initial screen display.

Eco Mode	OFF
Shutoff Support Mode	OFF
Openin	g Screen

- * **Opening Screen:** When the machine is turned on, the sewing screen appears after the opening movie screen is touched.
- * Sewing Screen: When the machine is turned on, the sewing screen appears.

Press **CLOSE** to return to the original screen.

4 Remove the USB media, and then for future reference, check the saved image using a computer.


The files for Settings screen images are saved with the name "S##.BMP".


* "##" in the name "S##.BMP" will automatically be replaced with a number between S00 and S99.

Ly Note

 If 100 image files have already been saved on the USB media, the following message appears. In this case, delete a file from the USB media or use different USB media.

3	
Failed to save file.	
CLOSE	
- COOL	

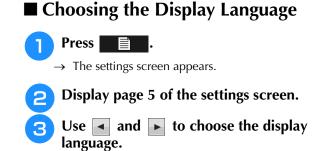

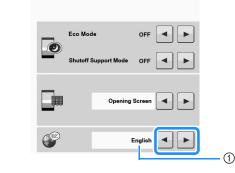

① Display language




Press **CLOSE** to return to the original screen.

■ Saving a Settings Screen Image to USB Media

An image of the settings screen can be saved as a BMP file.

A maximum of 100 images can be saved on a single USB media at one time.

 Insert the USB media into the USB port on the right side of the machine.

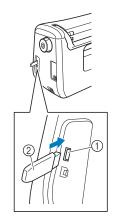

① USB port

② USB media



→ The settings screen appears. Select the settings screen page, make the changes that you want, and then save the screen image.




 \rightarrow The image file will be saved to the USB media.

Getting Ready

Using the Sewing Machine Help Key


Press **Press** to open the sewing machine help screen. Three functions are available from the screen shown below.

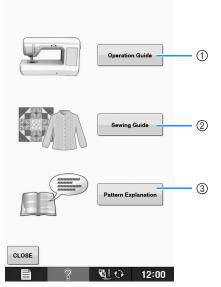


- ① Press this key to see explanation for upper threading, winding the bobbin, changing the presser foot, and how to use the machine (see page B-31).
- ② Press this key to select utility stitches when you are not sure which stitch to use or how to sew the stitch (see page B-32).
- ③ Press this key to see an explanation of the stitch selected (see page B-33).

Using the Operation Guide Function


Press Operation Guide to open the screen shown below. Five categories are displayed at the top of the screen. Press a key to see more information about that category.

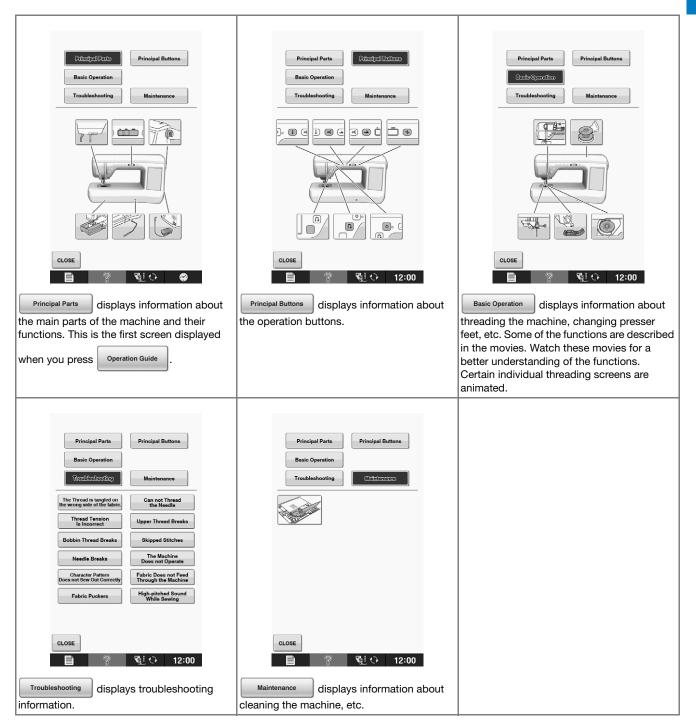

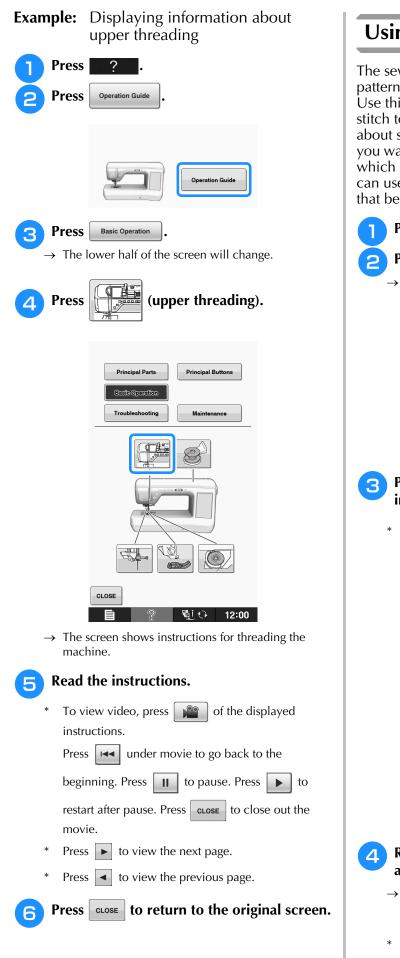


Using the Sewing Guide Function

The sewing guide function can be used to select patterns from the Utility Stitch screen. Use this function when you are not sure which stitch to use for your application, or to get advice about sewing particular stitches. For example, if you want to sew overcasting, but you do not know which stitch to use or how to sew the stitch, you can use this screen to get advice. We recommend that beginners use this method to select stitches.

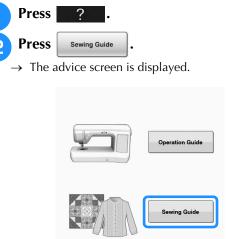

Press the key of the category whose sewing instructions you wish to view.


Press **CLOSE** to return to the original screen.

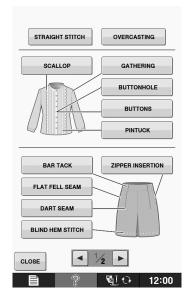




Read the explanations and select the appropriate stitch.

- The screen displays directions for sewing the selected stitch. Follow the directions to sew the stitch.
- Press **>** to view the next page.

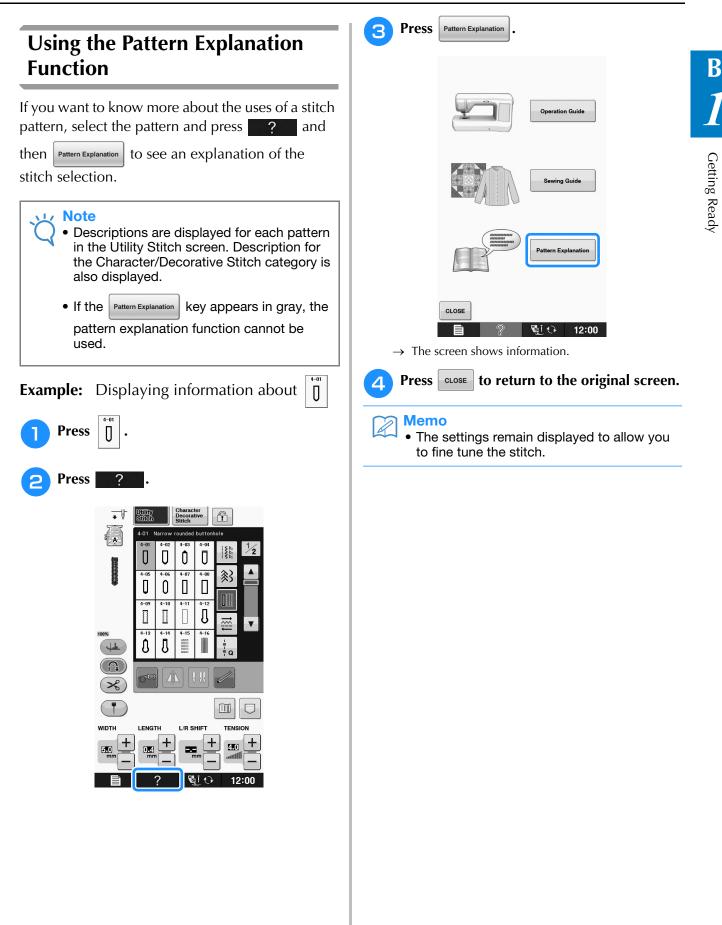


LOWER THREADING

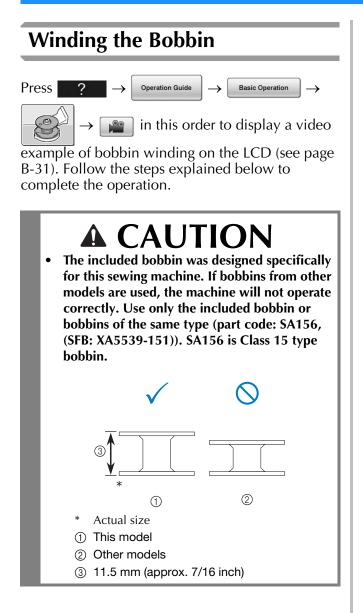

■ Using the Supplemental Spool Pin


With this machine, you can wind the bobbin without unthreading the machine. While using the main spool pin to sew, you can conveniently wind the bobbin using the supplemental spool pin.

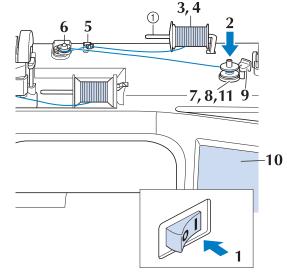

① Supplemental spool pin

Turn the main power to ON and open the top cover.

Align the groove in the bobbin with the spring on the bobbin winder shaft, and set the bobbin on the shaft.

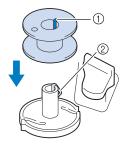

① Groove in the bobbin

Spring on the shaft



Set the supplemental spool pin in the "up" position.



- ① Supplemental spool pin
- Place the spool of thread on the supplemental spool pin, so that thread unrolls from the front. Push the spool cap onto the spool pin as far as possible to secure the thread spool.



 
- Spool pin
- ② Spool cap
- ③ Thread spool

A CAUTION


- If the thread spool and/or spool cap are set incorrectly, the thread may tangle on the spool pin and cause the needle to break.
- Use the spool cap (large, medium, small, or special) that is closest in size to the thread spool. If a spool cap smaller than the thread spool is used, the thread may become caught in the slit on the end of the spool and cause the needle to break.

Memo


• When sewing with fine, cross-wound thread, use the small spool cap, and leave a small space between the cap and the thread spool.

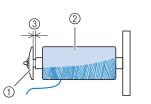

- ① Spool cap (small)
- ② Thread spool (cross-wound thread)
- ③ Space
 - If a spool of thread whose core is 12 mm (1/2 inch) in diameter and 75 mm (3 inches) high is inserted onto the spool pin, use the special spool cap.

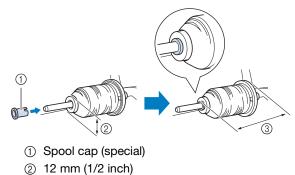


- ③ 75 mm (3 inches)
- 3) 75 mm (3 inches)
- 5 With your right hand, hold the thread near the thread spool. With your left hand, hold the end of the thread, and use both hands to pass the thread through the thread guide.

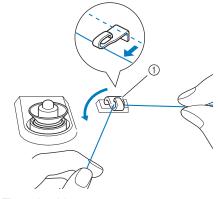


① Thread guide

6 Pass the thread around the pre-tension disk making sure that the thread is under the pre-tension disk.

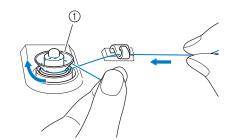


 - ① Pre-tension disk
- → Make sure that the thread passes under the pre-tension disk.

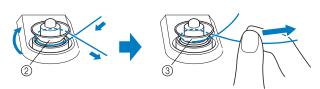


- ② Pre-tension disk
- ③ Pull it in as far as possible.
- → Check to make sure thread is securely set between pre-tension disks.

Wind the thread clockwise around the bobbin 5-6 Times.

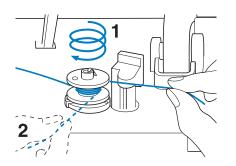

8 Pass the end of the thread through the guide slit in the bobbin winder seat, and pull the thread to the right to cut the thread with the cutter.

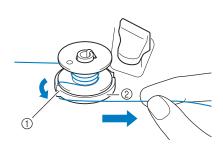

- ① Guide slit (with built-in cutter)
- ② Bobbin winder seat

A CAUTION

- Be sure to follow the process described. If the thread is not cut with the cutter, and the bobbin is wound, when the thread runs low it may tangle around the bobbin and cause the needle to break.
- 9

Set the bobbin winding switch to the left, until it clicks into place.

 


① Bobbin winding switch

🦙 Memo

 Sliding the bobbin winding switch to the left switches the machine into bobbin winding mode.

 \rightarrow The bobbin winding window appears.

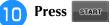

→ Bobbin winding starts automatically. The bobbin stops rotating when bobbin winding is completed. The bobbin winding switch will automatically return to its original position.



Vie Note

- **START** changes to **STOP** while the bobbin is winding.
- Stay near the machine while winding the bobbin to make sure the bobbin thread is being wound correctly. If the bobbin thread

is wound incorrectly, press stop immediately to stop the bobbin winding.

• The sound of winding the bobbin with stiff thread, such as nylon thread for quilting, may be different from the one produced when winding normal thread; however, this is not a sign of a malfunction.


Memo

• You can change the winding speed by pressing _ (to decrease) or + (to


increase) in the bobbin winding window.



- Press **CLOSE** to minimize the bobbin winding window. Then, you can perform other operations, such as selecting a stitch or adjusting the thread tension, while the bobbin is being wound.
- Press (in top right of the LCD screen) to display the bobbin winding window again.

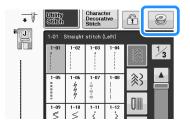

U Cut the thread with scissors and remove the bobbin.

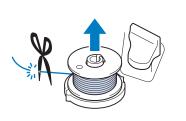

Memo

• When removing the bobbin, do not pull on the bobbin winder seat. Doing so could loosen or remove the bobbin winder seat, and could result in damage to the machine.




• Setting the bobbin improperly may cause the thread tension to loosen, breaking the needle and possibly resulting in injury.



■ Using the Spool Pin

You can use the main spool pin to wind the bobbin before sewing. You cannot use this spool pin to wind the bobbin while sewing.

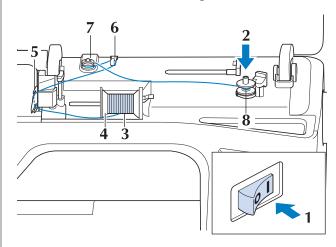

Getting Ready




Turn the main power to ON and open the top cover.


Align the groove in the bobbin with the spring on the bobbin winder shaft, and set the bobbin on the shaft.




- ① Groove in the bobbin
- Spring on the shaft
- Pivot the spool pin so that it angles upward. Set the thread spool on the spool pin so that the thread unwinds from the front of the spool.

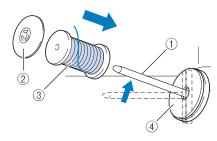


- ① Spool pin
- ② Spool cap
- ③ Thread spool
- ④ Spool felt
- Push the spool cap onto the spool pin as far as possible, then return the spool pin to its original position.
- 5 While holding the thread with both hands, pull the thread up from under the thread guide plate.

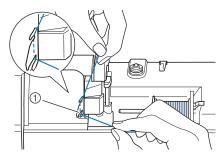

① Thread guide plate

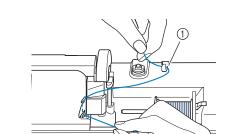


 Pass the thread through the thread guide.

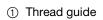

6

Pass the thread around the pre-tension disk making sure that the thread is under the pre-tension disk.

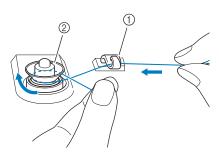


- Thread guide
- ② Pre-tension disk
- B Follow steps 7 through 1 on page B-36 through B-37.

Untangling Thread from Beneath the Bobbin Winder Seat

If the bobbin winding starts when the thread is not passed through the pre-tension disk correctly, the thread may become tangled beneath the bobbin winder seat.

 Wind off the thread according to the following procedure.

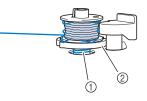

- ① Thread
- ② Bobbin winder seat

A CAUTION

• Do not remove the bobbin winder seat even if the thread becomes tangled under the bobbin winder seat. It may result in injuries.

 
Basic Operation

If the thread becomes tangled under the bobbin winder seat, press stop once to stop the bobbin winding.






Cut the thread with scissors near the pre-tension disk.

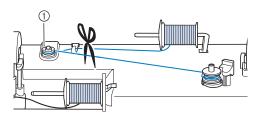


Pre-tension disk

 Push the bobbin winder switch to the right, and then raise the bobbin at least 10 cm (4 inches) from the shaft.

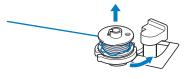

4 Cut the thread near the bobbin and hold the thread end with your left hand. Unwind the thread clockwise near the bobbin winder seat with your right hand as shown below.

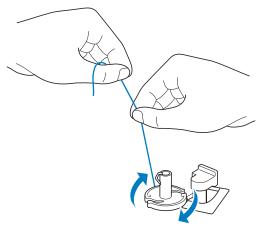



Wind the bobbin again.

Note

 Make sure that the thread passes through the pre-tension disk correctly (page B-36).

Setting the Bobbin



 
 \rightarrow [in this order to display a video of the operation on the LCD (see page

example of the operation on the LCD (see page B-31). Follow the steps explained below to complete the operation.


Operation Guide



• Use a bobbin thread that has been correctly wound. Otherwise, the needle may break or the thread tension will be incorrect.

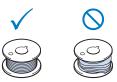

• The included bobbin was designed specifically for this sewing machine. If bobbins from other models are used, the machine will not operate correctly. Use only the included bobbin or bobbins of the same type (part code: SA156, (SFB: XA5539-151)). SA156 is Class 15 type bobbin.

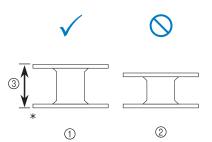



- * Actual size
- ① This model
- ② Other models
- ③ 11.5 mm (approx. 7/16 inch)
- Before inserting or changing the bobbin, be sure to press III in the LCD, otherwise injuries may occur if the "Start/Stop" button or any other button is pressed and the machine starts sewing.

Press **U** to lock the keys and buttons, and then raise the presser foot.

  - If the message "OK to automatically lower the presser foot? " appears on the LCD screen, press OK to continue.
- → The entire screen becomes white, and all keys and operation buttons are locked.



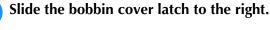


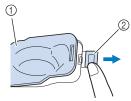

- ① Bobbin cover
- ② Latch
- \rightarrow The bobbin cover opens.
- З

Remove the bobbin cover.

Insert the bobbin with your right hand so that the end of the thread is on the left, and then, after pulling the thread firmly around the tab with your left hand as shown, lightly pull the thread to guide it through the slit.

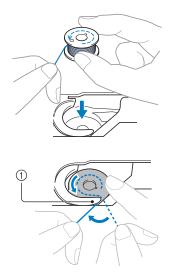

① Tab

 
* Be sure to insert the bobbin correctly.

A CAUTION

• Be sure to install the bobbin so that the thread unwinds in the correct direction, otherwise the thread may break or the thread tension will be incorrect.


Memo

 The order that the bobbin thread should be passed through the bobbin case is indicated by marks around the bobbin case. Be sure to thread the machine as indicated.

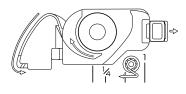

- 5 While lightly holding down bobbin with your right hand as shown, guide the thread through the slit (1 and 2).
 - * At this time, check that the bobbin easily rotates counterclockwise.


Then, pull the thread toward you to cut it with the cutter (③).

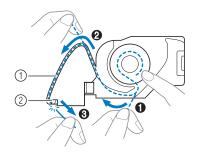

① Slit

- ② Cutter (Cut the thread with the cutter.)
- \rightarrow The cutter cuts the thread.

Make sure that the thread is correctly passed through the flat spring of the bobbin case. If it is not inserted correctly, reinstall the thread.

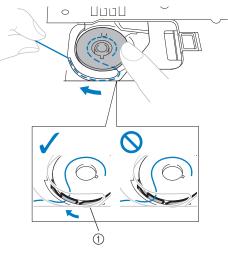


① Flat spring

A CAUTION

• Be sure to hold down the bobbin with your finger and unwind the bobbin thread correctly. Otherwise, the thread may break or the thread tension will be incorrect.

 6 Insert the tab in the lower-left corner of the bobbin cover (1), and then lightly press down on the right side to close the cover (2).

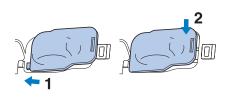




Press 📲 to unlock all keys and buttons.


Pulling Up the Bobbin Thread


There may be some sewing applications where you want to pull up the bobbin thread; for example, when making gathers, darts, or doing free motion quilting.

Memo

  - You can pull up the bobbin thread after threading the upper thread ("UPPER THREADING" on page B-42).
- Guide the bobbin thread through the groove, following the arrow in the illustration.
- * Do not cut the thread with the cutter.
- * Do not replace the bobbin cover.

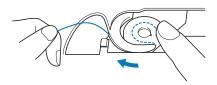


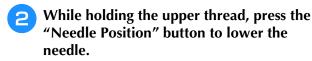

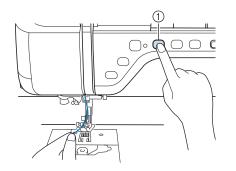


① "Needle Position" button

- **3** Press the "Needle Position" button to raise the needle.
- Press **WO** to lock the keys and buttons, and then raise the presser foot.
- **5** Gently pull the upper thread. A loop of the bobbin thread will come out of the hole in the needle plate.

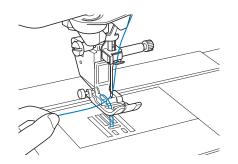

6 Pull up the bobbin thread, pass it under the presser foot and pull it about 100 mm (approx. 4 inches) toward the back of the machine, making it even with the upper thread.

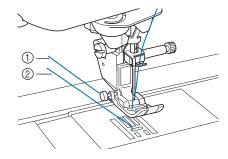



Upper thread
 Bobbin thread



8

  Replace the bobbin cover.

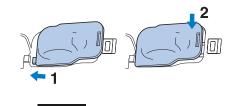

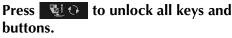

UPPER THREADING

Upper Threading

Press	?	$ \rightarrow $	Operation Guide	$] \rightarrow [$	Basic Operation

📔 in this order to display a video

 \rightarrow


example of the operation on the LCD (see page B-31). Follow the steps explained below to complete the operation.

A CAUTION

- Be sure to thread the machine properly. Improper threading can cause the thread to tangle and break the needle, leading to injury.
- When using the walking foot, the side cutter or accessories not included with this machine, attach the accessory to the machine after threading the machine.


Memo

- The automatic threading function can be used with sewing machine needle sizes 75/11 through 100/16.
- Thread such as transparent nylon monofilament thread and thread with a thickness of 130/20 or thicker cannot be used with the automatic threading function.
- The automatic threading function cannot be used with the wing needle or the twin needle.

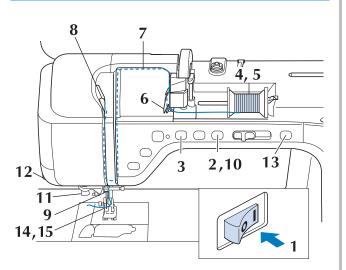


Turn the main power to ON.

 Press the "Presser Foot Lifter" button to raise the presser foot.

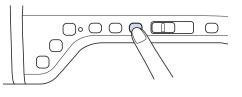

→ The upper thread shutter opens so the machine can be threaded.

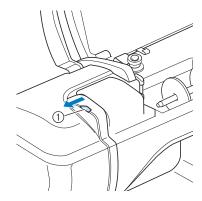


① Upper thread shutter

Memo

• This machine is equipped with an upper thread shutter, allowing you to check that the upper threading is performed correctly.



 
Press the "Needle Position" button to raise the needle.

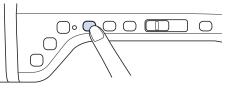

닛 Note

• If you try to thread the needle automatically without raising the needle, the thread may not thread correctly.

4 Pivot the spool pin so that it angles upward. Set the thread spool on the spool pin so that the thread unwinds from the front of the spool.

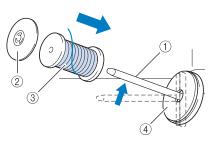


- Spool pin
- ② Spool cap
- ③ Thread spool
- ④ Spool felt
- Push the spool cap onto the spool pin as far as possible, then return the spool pin to its original position.

A CAUTION


- If the thread spool and/or spool cap are set incorrectly, the thread may tangle on the spool pin and cause the needle to break.
- Use the spool cap (large, medium, small, or special) that is closest in size to the thread spool. If a spool cap smaller than the thread spool is used, the thread may become caught in the slit on the end of the spool and cause the needle to break.

Memo

 
 When sewing with fine, cross-wound thread, use the small spool cap, and leave a small space between the cap and the thread spool.

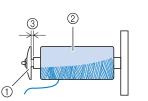


- ① Spool cap (small)
- ② Thread spool (cross-wound thread)
- ③ Space
 - If a spool of thread whose core is 12 mm (1/2 inch) in diameter and 75 mm (3 inches) high inserted onto the spool pin, use the special spool cap.

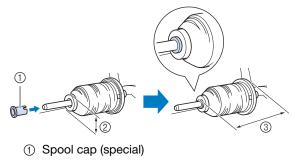

- ② 12 mm (1/2 inch)
- ③ 75 mm (3 inches)
- 6 While holding the thread with both hands, pull the thread up from under the thread guide plate.

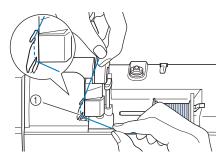


- ① Thread guide plate
- While holding the thread in your right hand, pass the thread through the thread guide in the direction indicated.

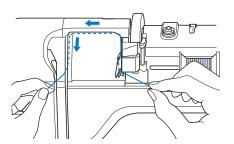

B Guide the thread down, up, then down through the groove, as shown in the illustration.


Memo

 • Look in the upper groove area to check if the thread catches on the take-up lever visible inside the upper groove area.

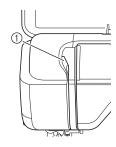

Look in the upper groove area


Pass the thread through the needle bar thread guide (marked "6") by holding the thread with both hands and guiding it as shown in the illustration.

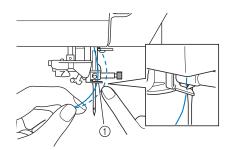


① Needle bar thread guide



 Press the "Presser Foot Lifter" button to lower presser foot.

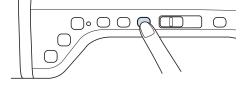

Pass the thread through the thread guide disks (marked "7"). Make sure that the thread passes through the groove in the thread guide.

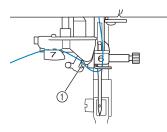

- ① Groove in thread guide
- 12 F

Pull the thread up through the thread cutter to cut the thread, as shown in the illustration.




① Thread cutter

🗤 Note


• When using thread that quickly winds off the spool, such as metallic thread, it may be difficult to thread the needle if the thread is cut.

Therefore, instead of using the thread cutter, pull out about 80 mm (approx. 3 inches) of thread after passing it through the thread guide disks (marked "7").

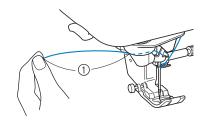

① 80 mm (approx. 3 inches) or more

 Press the "Automatic Threading" button to have the machine automatically thread the needle.

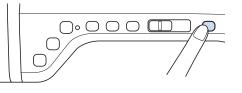


 \rightarrow The thread passes through the eye of the needle.

🏹 Memo

• When the "Automatic Threading" button is pressed, the presser foot will be automatically lowered. After threading is finished, the presser foot moves back to the position before the "Automatic Threading" button was pressed.

Carefully pull the end of the thread that was passed through the eye of the needle.

* If a loop was formed in the thread passed through the eye of the needle, carefully pull on the loop of thread through to the back of the needle.

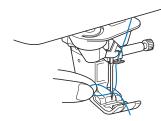


🗤 Note

• Pulling the loop of thread gently will avoid needle breakage.

Pull out about 5 cm (approx. 2 inches) of the thread, and then pass it under the presser foot toward the rear of the machine.

→ Raise the presser foot lever if the presser foot is lowered.

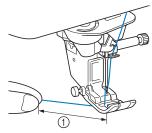


① About 5 cm (approx. 2 inches)

🏹 Memo

If the needle could not be threaded or the thread was not passed through the needle bar thread guides, perform the procedure again starting from step 3.
 Then, pass the thread through the eye of the needle after step 9.

Note

 Some needles cannot be threaded with the needle threader. In this case, instead of using the needle threader after passing the thread through the needle bar thread guide (marked "6"), manually pass the thread through the eye of the needle from the front to the back.

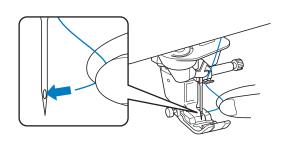

Using the Twin Needle Mode

The twin needle can only be used for patterns that

show 💵 after being selected. Before you select a stitch pattern, make sure the stitch can be sewn in


the twin needle mode (refer to the "STITCH SETTING CHART" on page S-67).

A CAUTION


- Twin needle (part code X59296-151) is recommended for this machine. Contact your authorized dealer for replacement needles (size 2.0/11 is recommended).
- Be sure to set the twin needle mode when using the twin needle. Using the twin needle while the machine is in single needle mode could cause the needle to break, resulting in damage.
- Do not sew with bent needles. The needle could break and cause injury.
- When using the twin needle, it is recommended to use presser foot "J".
- When the twin needle is used, bunched stitches may occur depending on the types of fabric and thread that are used. Use monogramming foot "N" for decorative stitches.
- Before changing the needle or threading the machine, be sure to press Streen, otherwise injuries may occur if the "Start/Stop" button or any other button is pressed and the machine starts sewing.

Getting Ready

- Press State and install the twin needle ("CHANGING THE NEEDLE" on page B-51).
 Thread the machine for the first needle
 - according to the procedure for threading a single needle ("Upper Threading" on page B-42).

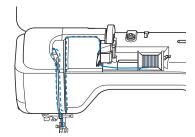

 3 Pass the thread through the needle bar thread guides on the needle bar, then thread the needle on the left side manually.

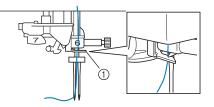


① Needle bar thread guide

🖌 Note

• The "Automatic Threading" button cannot be used. Manually thread the twin needle from front to back. Using the "Automatic Threading" button may result in damage to the machine.


Pull up the supplemental spool pin and set it in the up position.

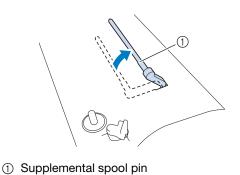

5 Place the additional spool of thread on the supplemental spool pin, so that the thread unwinds from the front. Push the spool cap onto the spool pin as far as possible to secure the thread spool.




- ① Spool pin
- ② Spool cap
- ③ Thread spool
- 6 Hold the thread from the spool with both hands, and place the thread in the thread guide.
 - * Do not place the thread in the pre-tension disks.

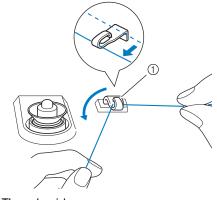




7

While holding the thread from the spool, pull the thread through the lower notch in the thread guide plate, then through the upper notch. Hold the end of the thread with your left hand, and then guide the thread through the groove, following the arrows in the illustration.

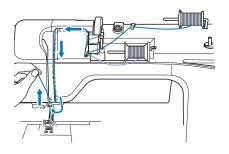

 Continue threading however do not pass the thread in the needle bar thread guide "6" on the needle bar. Thread the needle on the right side.

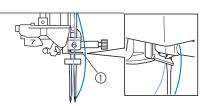

Needle bar thread guide

Press <u>Si</u>O


10 Select a stitch pattern. (Example:

- Refer to the "STITCH SETTING CHART" on page S-67 for the proper stitch to use with presser foot "J".
- \rightarrow The selected stitch is displayed.

Note

 If the key is light gray after selecting the stitch, the selected stitch cannot be sewn in the twin needle mode.

to select the twin needle mode. Press

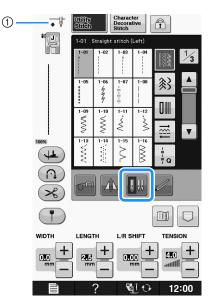

- ① Single needle/twin needle setting
- appears.

CAUTION

Be sure to set the twin needle mode when using the twin needle. Using the twin needle while the machine is in single needle mode could cause the needle to break, resulting in damage.

Start sewing. 12

Sample of Twin Needle Sewing

	××××××××××		
W	×	$\langle \rangle$	$\langle \rangle$

Memo


- Getting Ready
- To change direction when sewing with the twin needle, raise the needle from the fabric, raise the presser foot lever, and then turn the fabric.

Using Threads that Unwind Quickly

Using the Spool Net

If using transparent nylon monofilament thread, metallic thread, or other strong thread, place the included spool net over the spool before using it. When using specialty threads, threading must be done manually.

If the spool net is too long, fold it once to match it to the spool size before placing it over the spool.

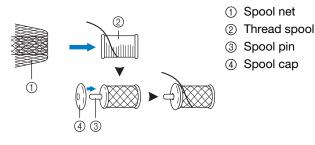

Memo

- When threading the spool with the spool net on, make sure that 5 cm - 6 cm (approx. 2 inches - 2-1/2 inches) of thread are pulled out.
- It may be necessary to adjust the thread tension when using the spool net.


B

■ Using the Vertical Spool Pin


Use the vertical spool pin when using an irregularly shaped thread spool, and when sewing with metallic thread.



Insert the vertical spool pin onto the bobbin winder shaft.

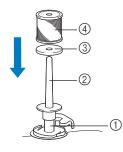

 - Bobbin winder shaft
- ② Vertical spool pin
- ③ Spool felt
- ④ Thread spool

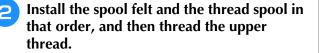

Memo

 
- When setting the thread spool, set it so that the thread winds off from the front of the spool.
- If using metallic thread, we recommend that you use a 90/14 home sewing machine needle.
- This method keeps the thread from twisting as it comes off the spool pin.

 
CHANGING THE PRESSER FOOT

A CAUTION

- Always press 🔊 on the screen before changing the presser foot. If 🔊 is not pressed and the "Start/Stop" button or another button is pressed, the machine will start and may cause injury.
- Always use the correct presser foot for the selected stitch pattern. If the wrong presser foot is used, the needle may strike the presser foot and bend or break, and may cause injury.
- Only use presser feet made for this machine. Using other presser feet may lead to accident or injury.

Removing the Presser Foot

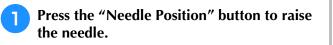


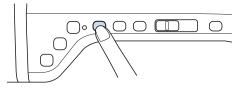




- If the message "OK to automatically lower the presser foot? " appears on the LCD screen, press OK to continue.
- → The entire screen becomes white, and all keys and operation buttons are locked.

Raise the presser foot lever.

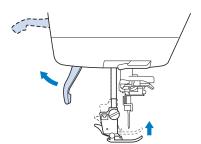



Press the black button on the presser foot holder and remove the presser foot.

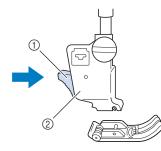

- ① Black button
- Presser foot holder

Attaching the Presser Foot

A CAUTION Make sure that the presser foot is installed in the correct direction, otherwise the needle may strike the presser foot, breaking the needle and causing injuries.

Place the new presser foot under the holder, aligning the foot pin with the notch in the holder. Lower the presser foot lever so that the presser foot pin snaps into the notch in the holder.



Press Store to unlock all keys and buttons.

3 Raise the presser foot lever.

Attaching the Presser Foot with the Included Adapter

You can attach the free motion echo quilting foot "E" and the optional walking foot, the optional free motion quilting foot and so on, using the included adapter and small screw.

The following procedure shows how to attach the free motion echo quilting foot "E" as an example.





Getting Ready


Attaching the Free Motion Echo **Quilting Foot "E"** Follow the steps in "Removing the Presser Foot" in the previous page. Loosen the screw of the presser foot holder to remove the presser foot holder. 1 3 ① Disc-shaped screwdriver ② Presser foot holder ③ Presser foot holder screw

Remove the screw of the presser foot

- completely from the presser foot shaft.

3

Set the adapter on the presser foot bar, aligning the flat side of the adapter opening with the flat side of the presser bar. Push it up as far as possible, and then tighten the screw securely with the screwdriver.

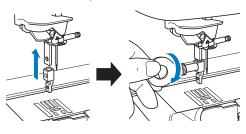


Attach the free motion echo quilting foot 5 "E" on the left side of the adapter with the holes in the quilting foot and adapter aligned.





Tighten the screw with the included screwdriver.

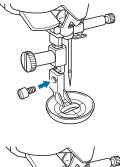



A CAUTION

Be sure to securely tighten the screws with the included screwdriver. Otherwise, the needle may touch the quilting foot, causing it to bend or break.

 
CHANGING THE NEEDLE

A CAUTION

- Always press **UO** on the screen before changing the needle. If **UO** is not pressed and the Start/Stop button or another operation button is pressed accidentally, the machine will start and injury may result.
- Use only sewing machine needles made for home use. Other needles may bend or break and may cause injury.
- Never sew with a bent needle. A bent needle will easily break and may cause injury.

Memo


• To check the needle correctly, place the flat side of the needle on a flat surface. Check the needle from the top and the sides. Throw away any bent needles.

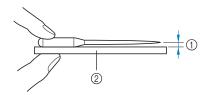

① Parallel space

② Level surface (bobbin cover, glass, etc.)

 Press the "Needle Position" button to raise the needle.

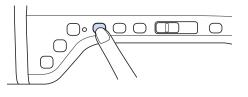


2 Press Store

- If the message "OK to automatically lower the presser foot? " appears on the LCD screen, press OK to continue.
- → The entire screen becomes white, and all keys and operation buttons are locked.

🟒 Note

• Before replacing the needle, cover the hole in the needle plate with fabric or paper to prevent the needle from falling into the machine. **3** Use the screwdriver to turn the screw toward the front of the machine and loosen the screw. Remove the needle.

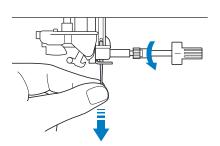


<u>بر</u> Note

 Do not apply pressure to the needle clamp screw. Doing so may damage the needle or machine.



4 With the flat side of the needle facing the back, insert the new needle all the way to the top of the needle stopper (viewing window) in the needle clamp. Use a screwdriver to securely tighten the needle clamp screw.

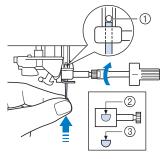

- ① Needle stopper
- ② Hole for setting the needle
- ③ Flat side of needle

A CAUTION

 Be sure to push in the needle until it touches the stopper, and securely tighten the needle clamp screw with a screwdriver. If the needle is not completely inserted or the needle clamp screw is loose, the needle may break or the machine may be damaged.

```
5 P
b
```

Press to unlock all keys and buttons.

ABOUT THE NEEDLE AND FABRIC

About the Needle

The sewing machine needle is probably the most important part of the sewing machine. Choosing the proper needle for your sewing project will result in a beautiful finish and fewer problems. Below are some things to keep in mind about needles.

- The smaller the needle number, the finer the needle. As the numbers increase, the needles get thicker.
- Use fine needles with lightweight fabrics, and thicker needles with heavyweight fabrics.
- To avoid skipped stitches, use ball point needle (golden colored) 90/14 with stretch fabrics.
- To avoid skipped stitches, use ball point needle (golden colored) 90/14 when sewing character or decorative stitches.

Fabric/Thread/Needle Combinations

The following table provides information concerning the appropriate thread and needle for various fabrics. Please refer to this table when selecting a thread and needle for the fabric you wish to use.

Fabric type/Application		Thread		Size of needle
		Туре	Size	1
Medium weight fabrics	Broadcloth	Cotton thread	60 - 90	75/11 - 90/14
	Taffeta	Synthetic thread	1	
	Flannel, Gabardine	Silk thread	50	1
Thin fabrics	Lawn	Cotton thread	60 - 90	65/9 - 75/11
	Georgette	Synthetic thread	1	
	Challis, Satin	Silk thread	50	1
Thick fabrics	Denim	Cotton thread	30	90/14 - 100/16
			50	1
	Corduroy	Synthetic thread	50 - 60	1
	Tweed	Silk thread	1	
Stretch fabrics	Jersey	Thread for knits	50 - 60	Ball point needle
	Tricot	•		(gold colored) 75/11 - 90/14
Easily frayed fabrics	i	Cotton thread	50 - 90	65/9 - 90/14
		Synthetic thread	1	
		Silk thread	50	1
For top-stitching		Synthetic thread	30	100/16
		Silk thread	50 - 60	90/14 - 100/16

🥱 Memo

• For transparent monofilament nylon thread, always use needle sizes 90/14 or 100/16. The same thread is usually used for the bobbin thread and upper thread.

Note

• Never use a thread of weight 20 or lower. It may cause malfunctions.

A CAUTION

Be sure to follow the needle, thread, and fabric combinations listed in the table. Using an improper combination, especially a heavyweight fabric (i.e., denim) with a small needle (i.e., 65/9 - 75/11), may cause the needle to bend or break, and lead to injury. Also, the seam may be uneven, the fabric may pucker, or the machine may skip stitches.

USING FUNCTIONS BY CONNECTING THE ACCESSORY TO THE MACHINE

Using USB Media




- ① USB port for mouse / media
- ② USB media

Memo

- USB media is widely used, however some USB media may not be usable with this machine. Please visit our website for more details.
- Depending on the type of USB media being used, either directly plug the USB device into the machine's USB port or plug the USB media Reader/Writer into the machine's USB port.

Connecting the Machine to the Computer

Using the included USB cable, the sewing machine can be connected to your computer.

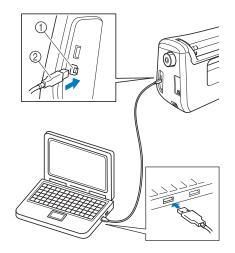

- ① USB port for computer
- ② USB cable connector

Vote

- The connectors on the USB cable can only be inserted into a port in one direction. If it is difficult to insert the connector, do not insert it with force. Check the orientation of the connector.
- For details on the position of the USB port on the computer (or USB hub), refer to the instruction manual for the corresponding equipment.


B

Using a USB Mouse

The USB mouse, connected to the sewing machine, can be used to perform a variety of operations in the screens.

🟒 Note

• If a mouse other than the optional USB mouse is used, it may not perform as described in this Operation Manual.

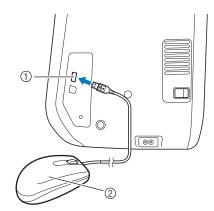

- ① USB port for mouse / media (USB 2.0)
- ② USB mouse

بر Note


- Do not perform operations with the mouse at the same time that you are touching the screen with your finger or the included touch pen.
- A USB mouse can be connected or disconnected at any time.
- Only the left mouse button and its wheel can be used to perform operations. No other buttons can be used.

■ Clicking a Key

When the mouse is connected, the pointer appears on the screen. Move the mouse to position the pointer over the desired key, and then click the left mouse button.



• Double-clicking has no effect.

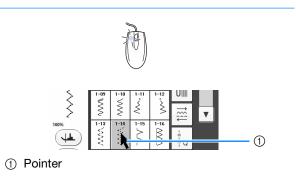


Changing Pages

Rotate the mouse wheel to switch through the tabs of the pattern selection screens.

Memo

 If page numbers and a vertical scroll bar for additional pages are displayed, rotate the mouse wheel or click the left mouse button

with the pointer on \blacksquare / \blacktriangleright or \blacktriangle / \blacktriangledown to display the previous or next page.

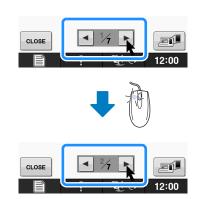

Using the Dual Feed Foot

Dual feed foot enables you to have best fabric control when sewing difficult fabrics that slip easily, such as quilted fabrics or fabrics that tend to stick to the bottom of a presser foot, such as vinyl, leather or synthetic leather.

レ Note

• When sewing with the dual feed foot, sew at medium to low speeds.

 
🦙 Memo

- When selecting stitches to be used with the dual feed foot, only the stitches that can be used will be activated on the display.
- When sewing fabric that easily sticks together, a more attractive finish can be achieved by basting the beginning of sewing.

Attaching the Dual Feed Foot



Press the "Needle Position" button to raise the needle.

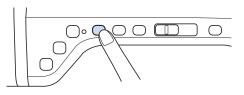

Press 🛯 🔮 🕂 .


→ The entire screen becomes white, and all keys and operation buttons are locked.

A CAUTION

• When attaching a presser foot, always press work on the screen. You may accidentally press the "Start/Stop" button and possibly cause injury.




Raise the presser foot lever.

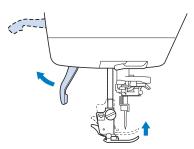




Push the black button on the presser foot holder and remove the presser foot.

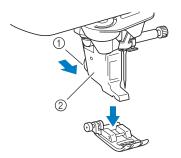


- ① Black button
- ② Presser foot holder
- → Remove the presser foot from the presser foot holder.

5 Use the included screwdriver to loosen the screw of the presser foot holder, then remove the presser foot holder.

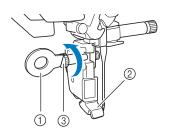

- ① Screwdriver
- ② Presser foot holder
- ③ Presser foot holder screw
- \rightarrow Remove the presser foot holder.
- 6 Position the dual feed foot to the presser foot bar by aligning the notch of the dual feed foot to the large screw.

 Side view

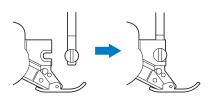


7 Hold the dual feed foot in place with your right hand, then using the included screwdriver securely tighten the large screw.



A CAUTION

Use the included screwdriver to firmly tighten the screw. If the screw is loose, the needle may strike the presser foot and possibly cause injury. Plug the connector of the dual feed foot into the jack on the back of your machine.

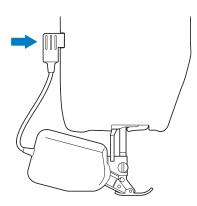


Press 📲 to unlock all keys and buttons.

→ All keys and operation buttons are unlocked, and the previous screen is displayed.

Attaching/Detaching the Toe


Attach the toe by aligning the pins with the notches and snap it into place.

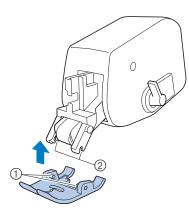

① Pins

② Notches

If you push down on the front part of the dual feed foot, the toe of the dual feed foot will snap off.

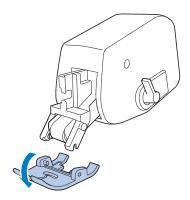


■ Using the Dual Feed Position Lever

When the feed position lever is up, the black roller belt on the dual feed is not engaged.



When the feed position lever is down, the black roller belt on the dual feed is engaged.

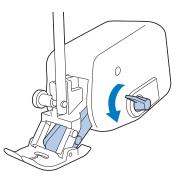

Vie Note

Do not operate the lever while sewing.

Adjusting the Amount of Fabric Feeding of the Dual Feed Foot

The dual feed mechanism pulls the top fabric according to the set stitch length. With troublesome fabrics, fine tune the set length, by changing the dual feed feed adjustment in the settings screen.

V Note

• As a default, some keys mentioned in the following procedures appear in light gray and are not available. To enable the keys for specifying the settings, attach the dual feed foot to the machine. The keys are enabled after the dual feed foot is detected.

Press 📄 .

 \rightarrow The settings screen appears.

Display page 1 of the settings screen.

3 Use – or + to increase or decrease the feeding of the top fabric.

- * Select "00" for sewing in most cases.
- * If the feed amount for the top fabric is too little, causing the fabric to be longer than the bottom

fabric, press + to increase the feed amount for the top fabric.

* If the feed amount for the top fabric is too much, causing the fabric to be shorter than the bottom

fabric, press — to decrease the feed amount for the top fabric.

	Dual Feed Feed Adjustment		-+
CLOSE		⁄7 ►	
Ē	?	۲ <u>س</u> ان	12:00



Press CLOSE to return to the original screen.

BBasic operations

Chapter 2 Sensor Functions

CONNECTING THE SENSOR PEN	
Using the Sensor Pen Holder60	
USING THE SENSOR PEN61	
Using the Sensor Pen61	
Important Information about Sensor Pen61	
Calibrating the Sensor Pen62	
USING SENSOR FUNCTIONS WITH SEWING STITCH 64	
Sensor Function Area64	
Specifying the Guideline Marker Position With the Sensor Pen64	
Specifying the Needle Drop Position With the Sensor Pen66	
Using the Sensor Pen to Specify the Stitching Width and Stitch	
Position	
Using the Sensor Pen to Specify the Sewing End Point	

CONVENIENT SEWING FEATURES BY USING THE SENSOR PEN

By using the sensor pen, you have the option of four separate functions


- Setting the guideline as a reference for your sewing position.
- Set the needle position of straight stitch.
- Adjust the width and "L/R SHIFT" position of a zigzag stitch.
- Set the ending point of a stitch pattern sequence.

A CAUTION

• The guideline marker is a laser; therefore, do not stare at the laser light directly. Otherwise it may cause blindness.

د Note


• When the guideline does not appear clearly, set the brightness of the machine light dimmer to see them clearly. Refer to "Using the Machine Setting Mode Key" on page B-25.

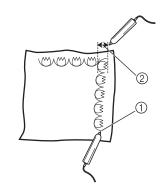

- When specifying the end point of your sewing, this function adjusts your pattern or stitch so that you end up with a complete design.
- O It is easy to set the pattern width and position.

CONNECTING THE SENSOR PEN

When connecting the sensor pen to the machine, make sure that the arrow on the sensor pen connector faces up and that the connector is firmly inserted into the jack.

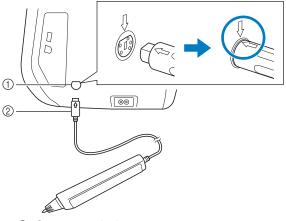

- ① Sensor pen jack
- ② Sensor pen connector

A CAUTION

- When connecting the sensor pen, make sure that the arrow on the sensor pen connector faces up, otherwise the connector pins will not align correctly and the connector will be damaged.
- When connecting or disconnecting the sensor pen, grab the connector, and then slowly push it straight in or pull it straight out.
- When disconnecting the sensor pen from the machine, do not pull on the cord, otherwise the sensor pen may be damaged.

Using the Sensor Pen Holder

When connecting the sensor pen to the machine, attach the sensor pen holder to keep the sensor pen with the machine.


The right side of the holder can be used to hold the touch pen.




Sensor pen holder

Using the point end of the cleaning brush or the seam ripper point, remove the protective cap covering the hole on the right side of the machine.


→ Insert the point of the seam ripper or cleaning brush into the hole in the protective cap, and then lightly pull out the protective cap to remove it.

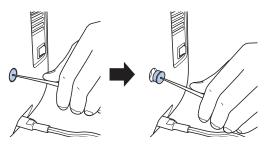

Firmly insert the sensor pen holder into the hole where the protective cap was removed.

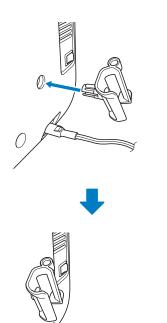

3 Set the sensor pen in the sensor pen holder with the pen tip pointing downward, and then connect the sensor pen to the machine.

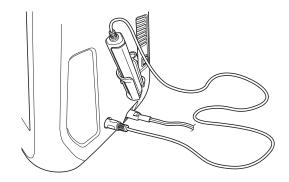


в 2

USING THE SENSOR PEN

Using the Sensor Pen

Hold the sensor pen, and then touch the point to be specified. When the tip of the sensor pen is pushed in, the position information is sent to the machine.

When using the sensor pen, touch slowly and gently for the definite operation.

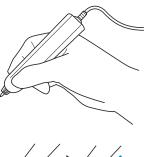

1) Touch: Touch a point with the sensor pen, then immediately lift up the pen.

2) Long touch: Touching a point with the sensor pen and holding it down for at least one second allows you to activate the functions that you just selected.

🗤 Note


- Once a point is touched with the sensor pen and the entered information is applied in the screen, perform the next operation. Repeatedly touching a point with the sensor pen may prevent the information from being correctly read.
- Do not drag the sensor pen tip on the machine, otherwise the sensor pen tip may be chipped off.
- If there is any problem with the guideline marker, the sensor function may not operate correctly.

) Memo

• The sensor pen can be used to touch on the screen as a touch pen.

Important Information about Sensor Pen

The sensor pen emits the signal to the machine, and then the sensor pen receiver receives the signal to specify the position.

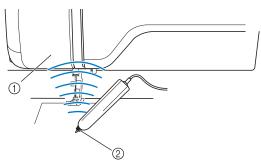

- ① Sensor pen receiver
- ② Signal is waved out from the sensor pen

A CAUTION

• Do not insert any object into the sensor pen and the receiver, otherwise the machine may be damaged.

A IMPORTANT

- Do not put your hand, the fabric or any object between the machine and the sensor pen, otherwise the sensor pen receiver may not receive the ultrasonic wave.
- Do not use the machine close to any other unit which produces ultrasonic wave or a vibration sound, otherwise interference may occur.

Calibrating the Sensor Pen


Before using the sensor pen for the first time, be sure to personalize it using "Sensor Function Calibration" in the settings screen. Doing so allows the machine to learn the position in which you usually hold the pen.

Hold the sensor pen at a comfortable angle and then calibrate the machine according to the procedure below.


Be sure to keep the sensor pen at the same angle while calibrating the first and second points.



4 Touch the first point of green dot marking using the sensor pen.

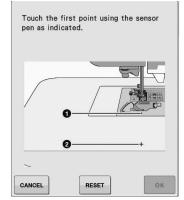


* Touch on the needle plate cover.

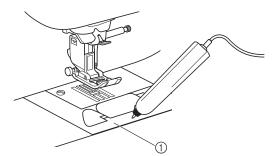


- ① Needle plate cover
- * A beep will sound and the **①** will change to red. (If you cannot hear the beep, check that the volume setting on page 4/7 of your settings is 1 or higher.)
- * Press **CANCEL** to redo the first point by starting over from step **4**.

5 Touch the second point of center of cross-hair using the sensor pen.

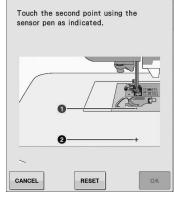


* Touch on the point in the illustrations.

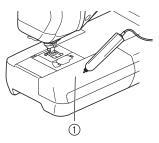

① Flat bed attachment

6 Press **•** to finish the calibration. To repeat the calibration touch the first point again using the sensor pen, and continue with step **5**.

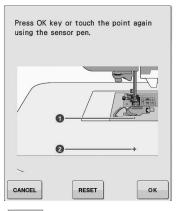

- * Press **CANCEL** to return to the original screen without finishing the calibration.
- * Press **RESET** to reset the calibration.


USING SENSOR FUNCTIONS WITH SEWING STITCH

Before using the sensor functions, carefully read "Utility Stitches" chapter to familiarize yourself with the machine operations.

The sensor functions are performed using the sensor pen.

Sensor Function Area

When using the sensor pen with utility stitches, the operations may differ depending on the area to be touched.

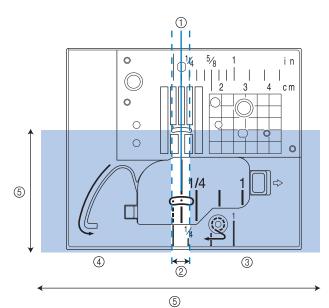

(1)	Center needle	Sewing position for stitch patterns sewn
	position	with the center needle position
2	Setting area	Area 3.5 mm to the left and right of ①. Touch this area with the sensor pen to specify a position. Area 7 mm, when positioning the guideline marker.
3	Adjustment area (right)	Touch: With each touch, the setting increases by 0.5 mm. This allows fine adjustments to be made after touching within ② to specify a position. Long touch: After touching ② to specify a position or adjusting the position by touching within ③ or ④, long touch to apply the setting.
4	Adjustment area (left)	Touch: With each touch, the setting decreases by 0.5 mm. This allows fine adjustments to be made after touching within ② to specify a position. Long touch: Apply the setting in the same way as a long touch within ③.
5	(7-7/8 inches) towa	ich range extends approximately 200 mm rd you from the needle drop point and 130 nes) to either side of the middle (center)

Memo

- There are borderline areas between setting area and adjustment areas, which allow you to set quickly to the most decreased/increased value.
- The borderline areas are respectively 6.5 mm (approx. 1/4 inch) wide when positioning the guideline marker, and 10 mm (approx. 3/8 inch) wide in other cases.

Specifying the Guideline Marker Position With the Sensor Pen


The sewing position will be indicated by a red guideline marker.

The position of the guideline marker can be adjusted to your desired location.



Turn on the machine.

2 Press 🖉

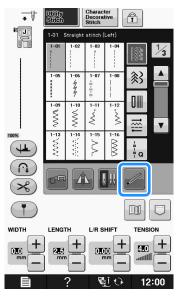

 \rightarrow The sensor functions screen appears.







 \rightarrow The guideline marker position setting screen appears and the guideline marker flashes.

With the sensor pen, touch the location to be specified as the guideline marker position.

- \rightarrow The machine's guideline marker moves to the touched position and flashes.
- → The distance from the left reference line to the touched position appears in the guideline marker position setting screen.
- The stitch preview on the upper left side of the \rightarrow screen is updated according to the specified setting.

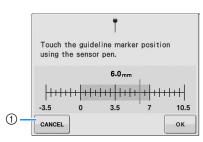

① Press to stop specifying a setting with the sensor pen.

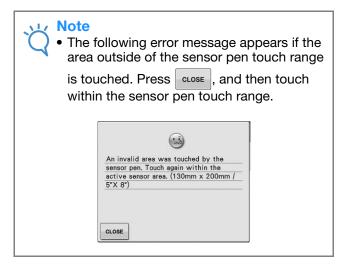


Memo

- The position can be precisely adjusted by touching the adjustment areas with the sensor pen.
- · When using the sensor pen to specify the guideline marker position, it may not be possible to exactly specify the desired location. In this case, use either of the following operations to make fine adjustments.
 - Touch an adjustment area with the sensor pen to adjust the position in 0.5 mm increments.
 - Adjust the position with the guideline marker scale shown in step 5.

Press

ок to apply the guideline marker position setting.


The setting can also be applied by a long touch of the sensor pen within the adjustment area.

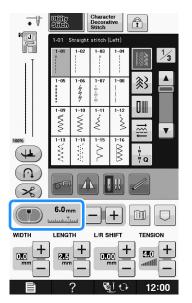

- \rightarrow The stitch selection screen appears again, and the setting in the guideline marker scale changes to the setting specified with the sensor pen.
- \rightarrow The guideline marker stops flashing.


Note

 If you set the needle drop position, the stitch width or stitch position after specifying the guideline marker position, the guideline marker may move while setting. The guideline marker moves back to the specified position after the needle drop position, stitch width or stitch position is set and the original screen appears.

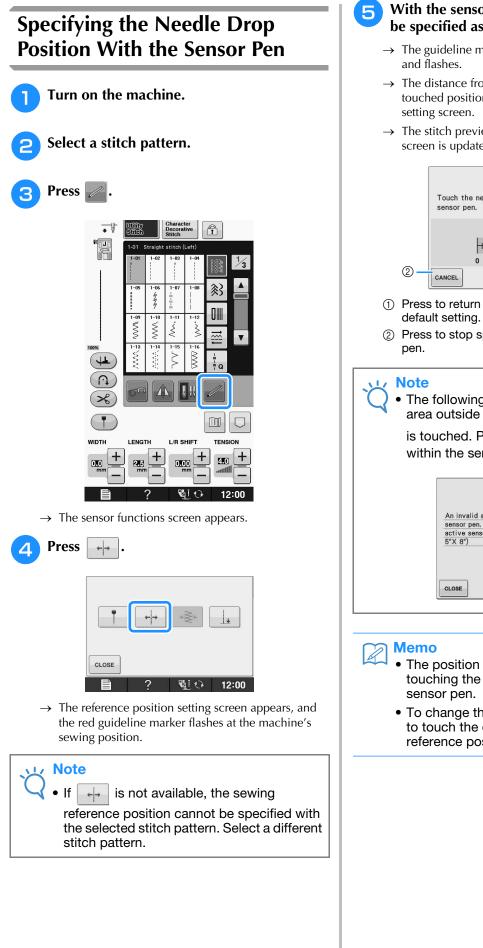

5 With the sensor pen, touch the location to be specified as the needle drop position.

- $\rightarrow\,$ The guideline marker moves to the touched position and flashes.
- → The distance from the left reference line to the touched position appears in the reference position setting screen.
- → The stitch preview on the upper left side of the screen is updated according to the specified setting.

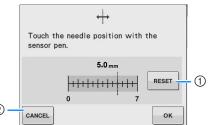

- Press to return the needle drop position to its default setting.
- ② Press to stop specifying a setting with the sensor pen.


• The following error message appears if the area outside of the sensor pen touch range

is touched. Press close , and then touch within the sensor pen touch range.

An invalid area was touched by the sensor pen. Touch again within the	-
active sensor area. (130mm x 200mm 5"X 8")	1

- The position can be precisely adjusted by touching the adjustment areas with the sensor pen.
- To change the setting, use the sensor pen to touch the desired location for the reference position.



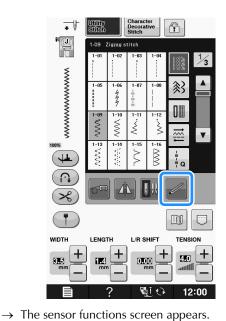





→ The stitching width setting screen appears, and the guideline marker flashes at the present left side of the stitch width.


Ly Note

5


• If → is not available, the stitching width cannot be specified with the selected stitch pattern. Select a different stitch pattern.


With the sensor pen, touch the first point for the stitching width.

→ The distance from the left reference line to the touched position appears in the stitching width setting screen.

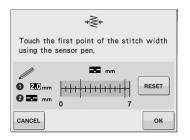

  $\rightarrow\,$ The guideline marker moves to the touched position and flashes.

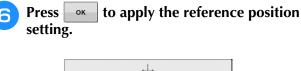

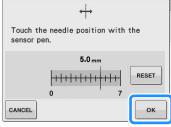


- * The setting can also be applied by long touching an adjustment area with the sensor pen.
- $\rightarrow\,$ The needle moves to the specified position to start sewing.
- \rightarrow The guideline marker stops flashing.
- → The stitch selection screen appears again, and the stitch width changes to the setting specified with the sensor pen.




Using the Sensor Pen to Specify the Stitching Width and Stitch Position

The zigzag width and "L/R SHIFT" value can be specified.

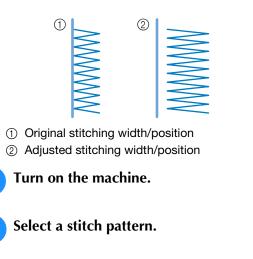

B

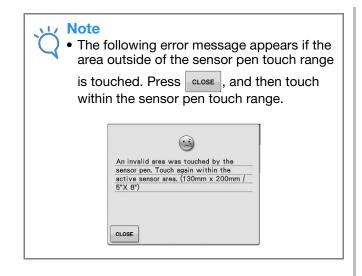

א Memo


• The position can be precisely adjusted by touching the adjustment areas with the sensor pen.

Press or to apply the first point of the stitching width.

* The setting can also be applied by long touching an adjustment area with the sensor pen.

With the sensor pen, touch the second point for the stitching width.

- → The distance from the left reference line to the touched position appears in the stitching width setting screen.
- → The stitch preview on the upper left side of the screen is updated according to the specified setting.
- → The guideline marker moves to the touched position and flashes.

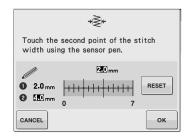


」、Note

- If the distance between the specified first and second points is wider than the maximum stitch width for the selected stitch pattern, the second point cannot be specified. Specify a location closer to the first point.
- If the distance between the specified first and second points is narrower than the minimum stitch width for the selected stitch pattern, the second point cannot be specified. Specify a location further away from the first point.

B Press **I** to apply the second point of the stitching width.

- * The setting can also be applied by long touching an adjustment area with the sensor pen.
- $\rightarrow\,$ The needle moves to the specified position to start sewing.
- → The stitch selection screen appears again, and the stitch width and "L/R SHIFT" change according to the settings specified with the sensor pen.

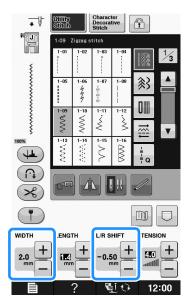

🟒 Note

- With multiple patterns that have been combined, the specified stitching width is applied to the pattern with the largest stitch width. With patterns other than combined patterns, the stitch width is adjusted to the stitching width specified for the pattern with the largest stitch width.
- With multiple patterns that have been combined, the settings specified for the stitch width and "L/R SHIFT" in the stitch selection screen are for the first pattern to be sewn. The value may differ from the stitch width setting.
- With twin needle sewing, the stitching width is specified with the left needle as the reference.

Using the Sensor Pen to Specify the Sewing End Point

Before start sewing, test the pattern first from steps 1 to 5 to see if the stitch can be used with this function.




Turn on the machine.



Select a stitch pattern.

Start sewing, and then stop the machine when the desired sewing end point enters the sensor pen touch range.



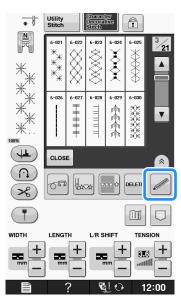


 \rightarrow The sensor functions screen appears.






  $\rightarrow\,$ The sewing end point setting screen appears.

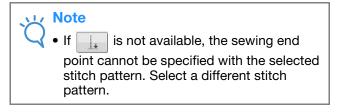

6 With the sensor pen, touch the location to be specified as the sewing end point.

 \rightarrow The distance from the current needle position to the touched location appears.

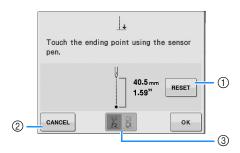


- ① Press to erase the specified sewing end point.
- ② Press to stop specifying a setting with the sensor pen.
- ③ Press to select whether or not sewing is ended with a complete pattern when a decorative stitch is selected.
- → See "Decorative Stitch End Setting Key" on page B-70.

Sensor Functions

Note

The displayed distance is not the length of a straight line connecting the current needle position and the location touched with the sensor pen. It is the length of a perpendicular intersection for the location touched with the sensor pen and the sewing line.

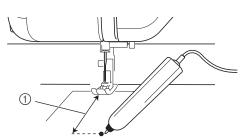

- Displayed distance
 - The following error message appears if the area outside of the sensor pen touch range

is touched. Press CLOSE , and then touch within the sensor pen touch range.

	alid area was touched by the pen. Touch again within the
	sensor area. (130mm x 200mm /
8")	

- When sewing with this setting, be sure to gently hold the fabric and feed it straight.
- When using the sensor pen to specify the sewing end point, be sure to hold the pen in the same way as when it was calibrated, otherwise the actual end point may be different from the point that you specified.
- · For best results, sew test stitching using the same material and stitch pattern as those in the actual project.

Decorative Stitch End Setting Key

2 C	The end of stitching is not adjusted. When the end point is reached, sewing stops immediately, even if the stitch pattern is not complete.	Ser and the series of the seri
3	The length of the stitch pattern is adjusted so that sewing will stop at the specified end point with a complete pattern.	


Note

- The decorative stitch end setting key is not available with the following situations.
 - When selecting the Utility Stitch patterns.
 - When the decorative stitch end setting key is grayed out.
 - When specifying the sewing end point at the point that needs adjustment more than 10% of the length of a pattern, to finish a pattern completely.

7 setting.

Press or to apply the sewing end point

- The setting can also be applied by long touching an adjustment area with the sensor pen.
- \rightarrow When a sewing end point setting is specified, \downarrow appears in the upper-left corner of the screen.

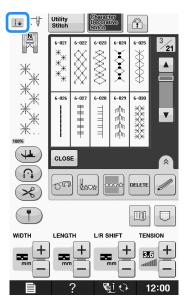

Note •

8

If a different pattern is selected after the sewing end point has been specified, the end point setting is erased.

Start sewing again.

The machine stops at the specified end point automatically.



This section describes procedures for using the various utility stitches as well as other functions.

It provides details on basic sewing in addition to the more expressive features of the machine, from sewing tubular pieces and buttonholes to sewing the character and decorative stitch patterns.

Page number starts with "S" in this section.

The screen display and machine illustration may vary slightly, depending on the countries or regions.

Chapter1 Sewing Basics	S-2
Chapter2 Utility Stitches	S-20
Chapter3 Character/Decorative Stitches	S-76
Chapter4 MY CUSTOM STITCH	S-102

S Sewing

Chapter **1** Sewing Basics

SEWING3
Sewing a Stitch3
Using the Foot Controller 4
Sewing Reinforcement Stitches5
Automatic Reinforcement Stitching5
Sewing Curves7
Changing Sewing Direction7
Sewing a Seam Allowance of 0.5 cm or Less
Sewing Heavyweight Fabrics7
If the Fabric does not Fit under the Presser Foot
If the Fabric does not Feed
Sewing Hook-and-Loop Fastener8
Sewing Lightweight Fabrics9
Sewing Stretch Fabrics9
STITCH SETTINGS10
Setting the Stitch Width10
Setting the Stitch Length10
Setting the "L/R SHIFT"11
Setting the Thread Tension12
Proper Thread Tension
Upper Thread is Too Tight 12
Upper Thread is Too Loose 12
USEFUL FUNCTIONS13
Automatic Thread Cutting13
Adjusting the Needle Drop Position with the Guideline Marker
(For models equipped with the guideline marker)14
Adjusting the Guideline Marker Position
Adjusting the Brightness of the Guideline Marker
Using the Knee Lifter15
Pivoting15
Automatic Fabric Sensor System
(Automatic Presser Foot Pressure)17
Needle Position – Stitch Placement18
Locking the Screen18


SEWING

A CAUTION

- To avoid injury, pay special attention to the needle while the machine is in operation. Keep your hands • away from moving parts while the machine is in operation.
- Do not stretch or pull the fabric during sewing. Doing so may lead to injury.
- Do not use bent or broken needles. Doing so may lead to injury.
- Do not attempt to sew over basting pins or other objects during sewing. Otherwise, the needle may break and cause injury.
- If stitches become bunched, lengthen the stitch length setting before continuing sewing. Otherwise, the needle may break and cause injury.

Sewing a Stitch

- Turn the main power to ON and display the utility stitches, and push the "Needle Position" button to raise the needle.
 - Press the key of the stitch you want to sew.

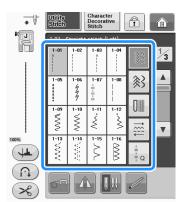


 \rightarrow The symbol of the correct presser foot will be displayed in the upper left corner of the LCD screen.

Install the presser foot ("CHANGING THE PRESSER FOOT" of "Basic operations").

A CAUTION

Always use the correct presser foot. If the wrong presser foot is used, the needle may strike the presser foot and bend or break, possibly resulting in injury. Refer to page S-67 for presser foot recommendations.

Set the fabric under the presser foot. Hold 4 the fabric and thread in your left hand, and rotate the handwheel to set the needle in the sewing start position.

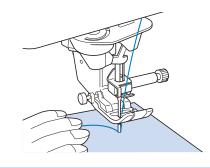


Memo

The black button on the left side of presser foot "J" should be pressed only if the fabric does not feed or when sewing thick seams (see page S-8). Normally, you can sew without pressing the black button.

Lower the presser foot. 5

 - You do not have to pull up the bobbin thread.
- Adjust the sewing speed with the speed 6 control slide.
 - You can use this slide to adjust sewing speed during sewing.

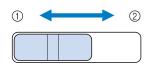


(1) Slow 2 Fast




Press the "Start/Stop" button to start sewing.

* Guide the fabric lightly by hand.

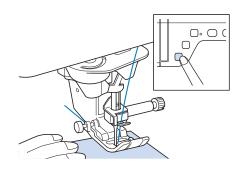


א Memo

- When the foot controller is being used, you cannot start sewing by pressing the "Start/Stop" button.
- Press the "Start/Stop" button again to stop sewing.

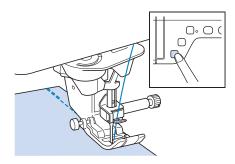



 Press the "Thread Cutter" button to trim the upper and lower threads.

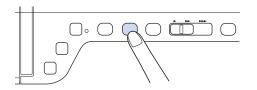

 \rightarrow The needle will return to the up position automatically.

A CAUTION

- Do not press the "Thread Cutter" button after the threads have been cut. Doing so could tangle the thread or break the needle and damage the machine.
- Do not press the "Thread Cutter" button when there is no fabric set in the machine or during machine operation. The thread may tangle, possibly resulting in damage.

Note When cutting thread thicker than #30, nylon monofilament thread, or other decorative threads, use the thread cutter on the side of the machine.



When the needle has stopped moving, raise the presser foot and remove the fabric.

Memo

• This machine is equipped with a bobbin thread sensor that warns you when the bobbin thread is almost empty. When the bobbin thread is nearly empty, the machine automatically stops. However, if the "Start/Stop" button is pressed, a few stitches can be sewn. When the warning displays, re-thread the machine immediately.

■ Using the Foot Controller

You can also use the foot controller to start and stop sewing.

A CAUTION

• Do not allow fabric pieces and dust to collect in the foot controller. Doing so could cause a fire or an electric shock.


Memo

• When the foot controller is being used, you cannot start sewing by pressing the "Start/Stop" button.

(For embroidery and sewing machine only)


- The foot controller cannot be used when embroidering.
- The foot controller can be used for sewing utility and decorative stitches when the embroidery unit is attached.

Insert the foot controller plug into its jack on the machine.

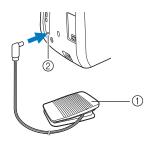


Foot controller

 Foot controller jack

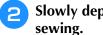

 Slowly depress the foot controller to start

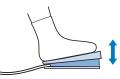

Memo

 
 The speed that is set using the sewing speed controller is the foot controller's maximum sewing speed.

Release the foot controller to stop the machine.

Sewing Reinforcement Stitches

Reverse/reinforcement stitches are generally necessary at the beginning and end of sewing. You can use the "Reverse Stitch" button to sew reverse/reinforcement stitches.


When you keep pressing the "Reinforcement Stitch" button, the machine will sew reinforcement stitch at that point 3 to 5 stitches, and then stop.

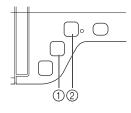

1 "Reverse Stitch" button

2 "Reinforcement Stitch" button

If the automatic reinforcement stitch is selected on the screen, reverse stitches (or reinforcement stitches) will be sewn automatically at the beginning of sewing when the "Start/Stop" button is pressed. Press the "Reverse Stitch" button or "Reinforcement Stitch" button to sew reverse stitches or reinforcement stitches automatically at the end of sewing.

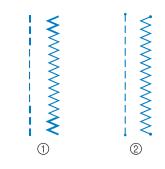

(1) Reverse stitch

(2) Reinforcement stitch

The operation performed when the button is pressed differs depending on the selected pattern. (Refer to the table in "Automatic Reinforcement Stitching" on page S-5.)

Memo

- When you press the "Reinforcement Stitch" button while sewing character/decorative stitch pattern, you can end sewing with a full stitch instead of at a mid-point.
 - The green light on the right of the "Reinforcement Stitch" button lights up while the machine is sewing a full motif, and it automatically turns off when the sewing is stopped.


Automatic Reinforcement Stitching

After selecting a stitch pattern, turn on the automatic reinforcement stitching function before sewing, and the machine will automatically sew reinforcement stitches (or reverse stitches, depending on the stitch pattern) at the beginning and end of sewing.



Select a stitch pattern.



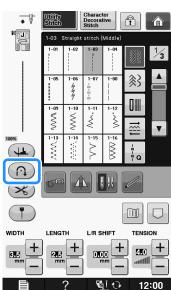


 \rightarrow The key will display as \bigcirc .

🔊 Memo

 Some stitches, such as buttonholes and bar tacks, require reinforcement stitches at the beginning of sewing. If you select one of these stitches, the machine will automatically turn on this function (the key

appears as (when the stitch is selected).


Set the fabric in the start position and start sewing.

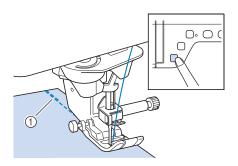

- ① Reverse stitches (or reinforcement stitches)
- → The machine will automatically sew reverse stitches (or reinforcement stitches) and then continue sewing.

Memo

• If you press the "Start/Stop" button to pause sewing, press it again to continue. The machine will not sew reverse/reinforcement stitches again. Press the "Reverse Stitch" button or "Reinforcement Stitch" button.

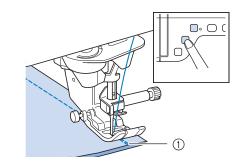

- ① Reverse stitches (or reinforcement stitches)
- → The machine will sew reverse stitches (or reinforcement stitches) and stop.

Memo

 To turn off the automatic reinforcement stitching function, press again, so it appears as .


The operation performed when the button is pressed differs depending on the selected pattern. Refer to the following table for details on the operation that is performed when the button is pressed.

	"Reverse Stitch"	"Reinforcement
	button 🕞	Stitch" button
Utility Stitch +	Machine starts sewing the stitches and only sews reverse stitches while holding the "Reverse Stitch" button.	Machine starts sewing the stitches and sews 3 - 5 reinforcement stitches while holding the "Reinforcement Stitch" button.
Utility + 1-02 1-04	Machine starts sewing the stitches and only sews reverse stitches while holding the "Reverse Stitch" button.	Machine starts sewing the stitches and sews 3 - 5 reinforcement stitches while holding the "Reinforcement Stitch" button.
Utility Stitch +	Machine sews reverse stitches at the beginning and end of sewing.	Machine sews reverse stitches at the beginning and reinforcement stitches at the end of sewing.
Utility + 1-02 1-04 ↓ ↓	Machine sews reinforcement stitches at the beginning and reverse stitches at the end of sewing.	Machine sews reinforcement stitches at the beginning and end of sewing.

	"Reverse Stitch" button	"Reinforcement Stitch" button
Character Decorative Stritch	Machine starts sewing and then sews reinforcement stitches while holding the "Reverse Stitch" button.	Machine starts sewing at the beginning, then completes the pattern and sews reinforcement stitches at the end of sewing.
Character Decorative Stitch	Machine sews reinforcement stitches at the beginning and sews reinforcement stitches when the "Reverse Stitch" button is touched.	Machine sews reinforcement stitches at the beginning, then completes the pattern and sews reinforcement stitches at the end of sewing.


Sewing Curves

Sew slowly while keeping the seam parallel with the fabric edge as you guide the fabric around the curve.

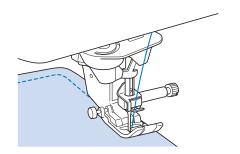

Changing Sewing Direction


Stop the machine. Leave the needle in the fabric, and press the "Presser Foot Lifter" button to raise the presser foot. Using the needle as a pivot, turn the fabric so that you can sew in the new direction. Press the "Presser Foot Lifter" button to lower the presser foot and start sewing.

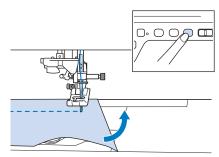

The pivot setting is useful when changing the sewing direction. When the machine is stopped at the corner of the fabric, the machine stops with the needle in the fabric and the presser foot is automatically raised so the fabric can easily be rotated ("Pivoting" on page S-15).

Sewing a Seam Allowance of 0.5 cm or Less


Baste the corner before sewing, and then, after changing the sewing direction at the corner, pull the basting thread toward the back while sewing.

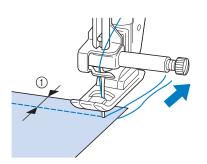

① 5 mm (approx. 3/16 inch)

Sewing Heavyweight Fabrics

The sewing machine can sew fabrics up to 6 mm (approx. 1/4 inch) thick. If the thickness of a seam causes sewing to occur at an angle, help guide the fabric by hand and sew on the downward slope.

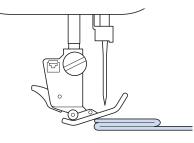


A CAUTION

- Do not forcefully push fabrics more than 6 mm (approx. 1/4 inch) thick through the sewing machine. This may cause the needle to break and cause injury.
- Thicker fabrics require a larger needle ("ABOUT THE NEEDLE AND FABRIC" of "Basic operations").

If the Fabric does not Fit under the Presser Foot

If the presser foot is in the up position, and you are sewing heavyweight or multiple layers of fabric which do not fit easily under the presser foot, use the presser foot lever to raise the presser foot to its highest position. The fabric will now fit under the presser foot.

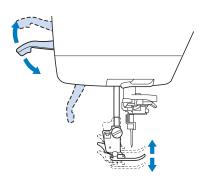

🦙 Memo


• You cannot use the presser foot lever after the presser foot has been raised using the "Presser Foot Lifter" button.

■ If the Fabric does not Feed

If the fabric does not feed when starting to sew or when sewing thick seams, press the black button on the left side of presser foot "J".

Raise the presser foot.

While keeping the black button on the left side of presser foot "J" pressed in, press the "Presser Foot Lifter" button to lower the presser foot.

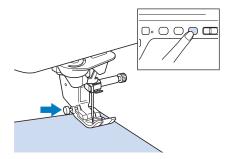

Release the black button.



→ The presser foot remains level, enabling the fabric to be fed.

🦙 Memo

- Once the trouble spot has been passed, the foot will return to its normal position.
- When "Automatic Fabric Sensor System" (Automatic Presser Foot Pressure) in the machine settings screen is set to "ON", the thickness of the fabric is automatically detected by the internal sensor so the fabric can be fed smoothly for best sewing results. (see page S-17 for details.)

Sewing Hook-and-Loop Fastener

 
A CAUTION

- Do not use adhesive backed hook-and-loop fastener designed for sewing. If the adhesive sticks to the needle or the bobbin hook race, it may cause malfunction.
- If the hook-and-loop fastener is sewn with a fine needle (65/9-75/11), the needle may bend or break.

🟒 Note

Before starting to sew, baste the fabric and hook-and-loop fastener together.


Make sure that the needle passes through the hook-and-loop fastener by rotating the handwheel and lower the needle into the hook-and-loop fastener before sewing. Sew the edge of the hook-and-loop fastener at a slow speed. If the needle does not pass through the hook-and-loop fastener, replace the needle with the needle for thick fabrics ("Fabric/Thread/Needle Combinations" of "Basic operations").

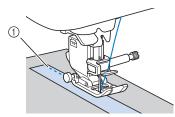

① Edge of the hook-and-loop fastener

Sewing Lightweight Fabrics

Place thin paper or tear away embroidery stabilizer under thin fabrics to make sewing easier. Gently tear off the paper or the stabilizer after sewing.

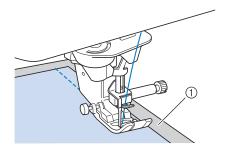

① Thin paper


Sewing Stretch Fabrics

First, baste together the pieces of fabric, and then sew without stretching the fabric.

In addition, a better result can be achieved by using thread for knits or a stretch stitch.

Memo

• For best results when sewing stretch fabrics, decrease the pressure of the presser foot ("Using the Machine Setting Mode Key" of "Basic operations").

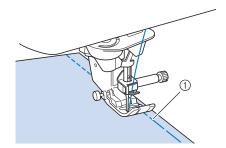

① Basting stitching

STITCH SETTINGS

When you select a stitch, your machine automatically selects the appropriate stitch width, stitch length, "L/R SHIFT", and upper thread tension. However, if needed, you can change any of the individual settings.

ப் Note

- Settings for some stitches cannot be changed (refer to the "STITCH SETTING CHART" on page S-67).
- If you turn off the machine or select another stitch without saving stitch setting changes ("Saving Your Stitch Settings" on page S-22), the stitch settings will return to their default settings.

Setting the Stitch Width

Follow the steps below when you want to change the zigzag stitch pattern width.




Memo


• For an alternate method of changing the stitch width using the speed controller, see page S-39.


Example:

Press — to narrow the zigzag stitch pattern width.

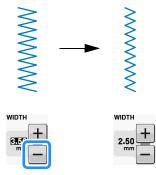

  \rightarrow The value in the display gets smaller.

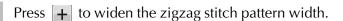

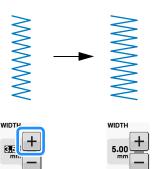

 \rightarrow The value in the display gets bigger.

Memo

 
Press after pressing
 to return to the original setting.

Vote

• After adjusting the stitch width, slowly rotate the handwheel toward you (counterclockwise) and check that the needle does not touch the presser foot. If the needle hits the presser foot, the needle may bend or break.


Setting the Stitch Length

Follow the steps below when you want to change the stitch pattern length.

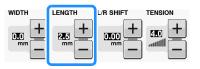


Example:

Press – to shorten the stitch length.

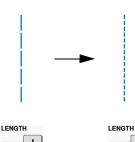



 \rightarrow The value in the display gets smaller. Press + to lengthen the stitch length.

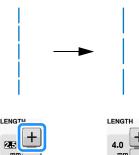

 \rightarrow The value in the display gets bigger.

Memo

 
- Press in to check changes made to the stitch.
- Press est after pressing to return to the original setting.

A CAUTION


• If the stitches get bunched together, lengthen the stitch length and continue sewing. Do not continue sewing without lengthening the stitch length. Otherwise, the needle may break and cause injury.


Setting the "L/R SHIFT"

Follow the steps below when you want to change the placement of the zigzag stitch pattern by moving it left and right.

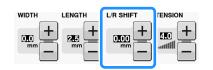


Example:

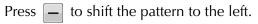 

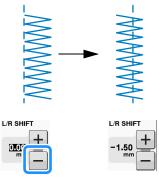

 \rightarrow The value in the display appears with a minus sign. Press + to shift the pattern to the right side of the left needle position.

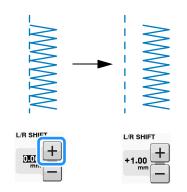

 \rightarrow The value in the display appears with a plus sign.

Memo

 
• Press est after pressing to return to the original setting.

Vie Note

 After adjusting the "L/R SHIFT", slowly rotate the handwheel toward you (counterclockwise) and check that the needle does not touch the presser foot. If the needle hits the presser foot, the needle may bend or break.


Setting the Thread Tension

You may need to change the thread tension, depending on the fabric and thread being used. Follow the steps below to make any necessary changes.

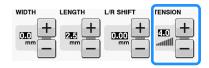

Proper Thread Tension

The upper thread and the bobbin thread should cross near the center of the fabric. Only the upper thread should be visible from the right side of the fabric, and only the bobbin thread should be visible from the wrong side of the fabric.

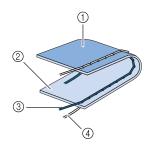


- ① Wrong side
- ② Surface
- ③ Upper thread
- ④ Bobbin thread

■ Upper Thread is Too Tight

If the bobbin thread is visible on the right side of the fabric, the upper thread is too tight.

Note

 • If the bobbin thread was incorrectly threaded, the upper thread may appear to be too tight. In this case, refer to "Setting the Bobbin" of "Basic operations" and rethread the bobbin thread.

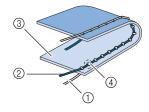

- ① Bobbin thread
- Upper thread
- ③ Surface
- 4 Locks appear on surface of fabric


Press – , to loosen the upper thread.

Upper Thread is Too Loose

If the upper thread is visible from the wrong side of the fabric, the upper thread is too loose.

VV Note

 If the upper thread was incorrectly threaded, the upper thread may appear to be too loose. In this case, refer to "Upper Threading" of "Basic operations" and rethread the upper thread.

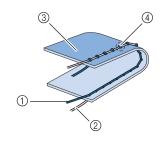

- ① Upper thread
- ② Bobbin thread
- ③ Wrong side
- ④ Locks appear on wrong side of fabric
- Press +, to tighten the upper thread.

Memo

• Press est after pressing D to return to the original setting.

USEFUL FUNCTIONS

Automatic Thread Cutting


After selecting a stitch pattern, turn on the automatic thread cutting function before sewing, and the machine will automatically sew reinforcement stitches (or reverse stitches, depending on the stitch pattern) at the beginning and end of sewing, and trim the threads at the end of sewing. This function is useful when sewing buttonholes and bar tacks.



Select a stitch pattern.




Press \searrow to set the automatic thread cutting function.

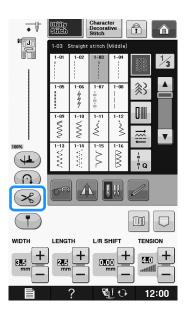

 \rightarrow The key will display as \bigotimes .

3 Set the fabric in the start position and start sewing.

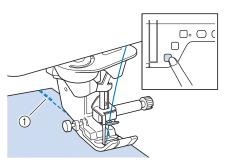


- 1 Reverse stitches (or reinforcement stitches)
- → The machine will automatically sew reverse stitches (or reinforcement stitches) and then continue sewing.

🦙 Memo

• If you press the "Start/Stop" button to pause sewing, press the same button again to continue. The beginning reverse/reinforcement stitches will not be sewn again.



Press the "Reverse Stitch" button or "Reinforcement Stitch" button.

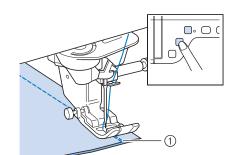

- ① Reverse stitches (or reinforcement stitches)
- $\rightarrow\,$ The machine will sew reverse stitches (or reinforcement stitches), then trim the thread.

Memo

• To turn off the automatic thread cutting


function, press 阏 again, so it appears

as 🔀.

Adjusting the Needle Drop Position with the Guideline Marker (For models equipped with the guideline marker)

The red guideline marker indicates the sewing position on the fabric.

You can adjust the sewing position by moving the guideline marker while checking the guideline marker on the fabric.

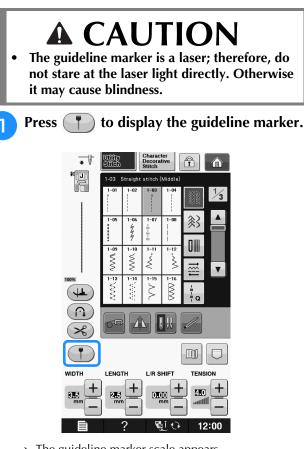

→ The guideline marker scale appears.
 * Depending on the setting of "Initial Position" in the settings screen, the initial needle drop position is scaled as either 0.0 mm or 3.5 mm.

Use — or + to move the needle drop position.

→ Adjust the position from 10.5 mm (3/8 inch) to the right of the left needle to -3.5 mm (-1/8 inch) to the left of the left needle.



Press **Press again to stop using the guideline** 3 marker. Adjusting the Guideline Marker Position If the guideline marker indicates the position incorrectly in the center needle position, adjust the initial position in the settings screen. to display "Guideline Marker Press Adjustment" in the settings screen. **Display settings screen.** খ্য Pivoting Height 32 1.0 _થ્ Free Motion Foot Height یک ON OFF Automatic Fabrie Sensor System START Press START \rightarrow The "Guideline Marker Adjustment" screen appears. Use - or + to adjust the guideline marker position. 1 2 0 l D CLOSE ① Press to move the guideline marker to the left 2) Press to move the guideline marker to the right Press CLOSE twice to return to the original 5 screen. Adjusting the Brightness of the **Guideline Marker** Follow steps from 1 to 3 to display the 1 "Guideline Marker Adjustment" screen.

2 Use – or + to adjust the brightness of the guideline marker.

→ Set the brightness of the guideline marker from "1" for a dim marker, to "5" for the brightest marker, on the fabric.




3 Press screen.

Press **CLOSE** twice to return to the original

Using the Knee Lifter

Using the knee lifter, you can raise and lower the presser foot with your knee, leaving both hands free to handle the fabric.

Align the tabs on the knee lifter with the notches in the knee lifter slot on the front of the machine. Insert the knee lifter bar as far as possible.

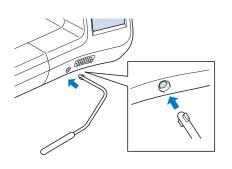


A CAUTION

• Only change position of the knee lifter handle when knee lifter is not on the machine, otherwise the presser foot will go up, and then the knee lifter may damage the mounting slot on front of the machine.

L Note

• If the knee lifter bar is not pushed into the mounting slot as far as possible, it may come out during use.

Use your knee to move the knee lifter bar to the right in order to raise the presser foot. Release the knee lifter to lower the presser foot.

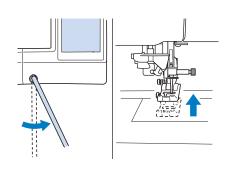

A CAUTION

• Be sure to keep your knee away from the knee lifter during sewing. If the knee lifter is pushed during machine operation, the needle may break or the thread tension may loosen.

Memo


• When the presser foot is in the up position, move the knee lifter to the far right and then release to return the presser foot to the down position.

Pivoting


If the pivot setting is selected, the machine stops with the needle lowered (in the fabric) and the presser foot is automatically raised to an appropriate height when the "Start/Stop" button is pressed. When the "Start/Stop" button is pressed again, the presser foot is automatically lowered and sewing continues. This function is useful for stopping the machine to rotate the fabric.

A CAUTION


• When the pivot setting is selected, the machine starts when the "Start/Stop" button is pressed or the foot controller is pressed down even if the presser foot has been raised. Be sure to keep your hands and other items away from the needle, otherwise injuries may occur.

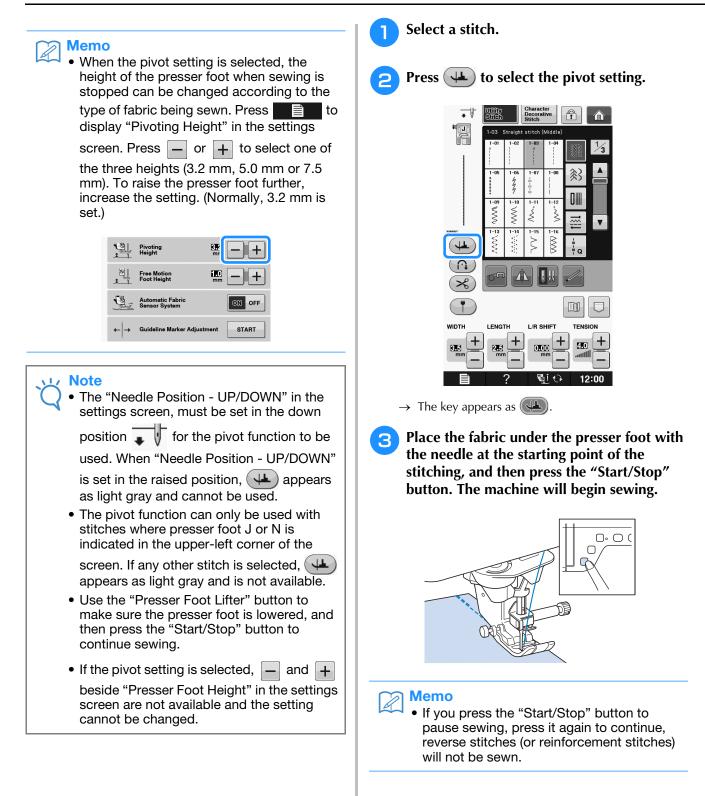


Press the "Start/Stop" button to stop the machine at the point where the sewing direction changes.

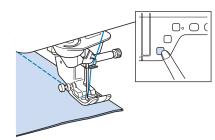

 → The machine stops with the needle in the fabric, and the presser foot is raised.

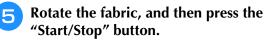


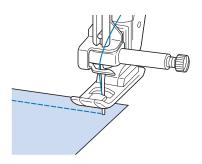

→ The presser foot is automatically lowered, and sewing continues.

Automatic Fabric Sensor System (Automatic Presser Foot Pressure)


The thickness of the fabric is automatically detected and the presser foot pressure is automatically adjusted with an internal sensor while sewing, to insure that your fabric is fed smoothly. The fabric sensor system works continuously while sewing. This function is useful for sewing over thick seams (see page S-8), or quilting (see page S-35).

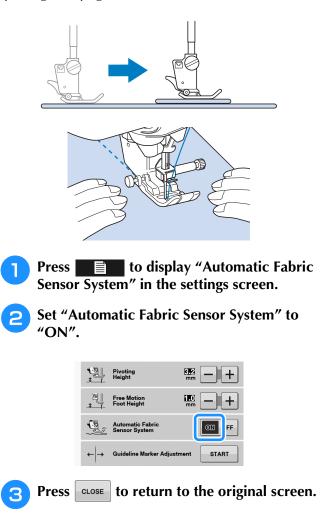


Needle Position – Stitch Placement

When the "Needle Position – Stitch Placement" is on, the needle will be partially lowered for precise stitch placement and then press the "Needle Position" button again to lower the needle completely. Each press of the "Needle Position" button changes the needle to the next position. When the "Needle Position – Stitch Placement" is turned off, each press of the "Needle Position" button simply raises and then lowers the needle.

 - (1) Pointing needle mode is "ON"
- (2) Pointing needle mode is "OFF"

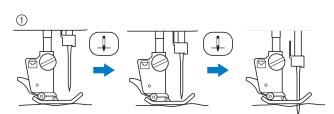

 When the needle is nearly lowered by pressing the "Needle Position" button, the feed dogs are lowered. At this time, the fabric can be shifted to finely adjust the needle drop position.

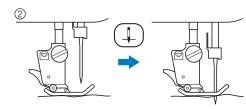

- to display "Needle Position Press Stitch Placement" in the settings screen.
 - Set "Needle Position Stitch Placement" to "ON" or "OFF".





Press CLOSE to return to the original screen.

Locking the Screen

If the screen is locked before starting to sew, the various settings such as the stitch width and stitch length are locked and cannot be changed. This prevents screen settings from accidentally being changed or the machine from being stopped while large pieces of fabric or projects are being sewn. The screen can be locked when sewing utility stitches and character decorative stitches.

- Select a stitch pattern. If necessary, adjust any settings such as the stitch width and stitch length.
 - Press ft to lock the screen settings.
 - \rightarrow The key appears as \square .
- Sew your project.



When you are finished sewing, press again to unlock the screen settings.

A CAUTION

• If the screen is locked ([]), unlock the

screen by pressing 🛐 . While the screen is locked, no other key can be operated.

The settings are unlocked when the machine is turned off and on.

S Sewing

Chapter 2 Utility Stitches

Selecting a Stitch	21
Using the Mirror Image Key	
Using the Image Key	
Saving Your Stitch Settings	
Saving Settings	
Retrieving Saved Settings	
SEWING THE STITCHES	24


Straight Stitches24
Changing the Needle Position (Left or Middle Needle Position Stitches Only)
Aligning the Fabric with a Mark on the Needle Plate or Bobbin
Cover (with Mark) 26
Using the Straight Stitch Needle Plate and the
Straight Stitch Foot
Basting
Dart Seam
Gathering29
Flat Fell Seam
Pintuck
Zigzag Stitches
Overcasting (Using a Zigzag Stitch)
Appliqué (Using a Zigzag Stitch)
■ Patchwork (for Crazy Quilt)
Sewing Curves (Using a Zigzag Stitch)
Cord Guide Bobbin Cover (Using a Zigzag Stitch)
Elastic Zigzag Stitches33
Tape Attaching
Overcasting
Overcasting
Overcasting Using Presser Foot "G"
Overcasting Using Presser Foot "J"
Quilting
■ Piecing
Piecing Using the 1/4" Quilting Foot with Guide (optional with
some models)
Appliqué
Quilting with Satin Stitches
Free Motion Quilting
■ Echo Quilting Using the Free Motion Echo Quilting Foot "E"
(optional with some models)
 If the Needle Catches Too Much of the Hem Fold
Appliqué
Appliqué Sharp Curves
Shelltuck Stitches
Scallop Stitches
Crazy Quilting
Smocking Stitches51
Fagoting52
Tape or Elastic Attaching52
Heirloom53
Hemstitching (1)
 Hemstitching (2) (Drawn Work (1))
Hemstitching (3) (Drawn Work (2))
One-step Buttonholes
Sewing Stretch Fabrics
Odd Shaped Buttons/Buttons that do Not Fit into the Button
Holder Plate

Dar	ning	58
Bar	Tacks	59
	Bar Tacks on Thick Fabrics	61
Butt	ton Sewing	61
	Attaching 4 Hole Buttons	62
	Attaching a Shank to the Button	62
Eyel	let	62
Mul	ti-directional Sewing (Straight Stitch and Zigzag Stitch)	63
Zipp	per Insertion	64
	Centered Zipper	64
	Inserting a Side Zipper	65
тіте	CH SETTING CHART	57

SELECTING UTILITY STITCHES

Selecting a Stitch

There are 5 categories of Utility Stitches.

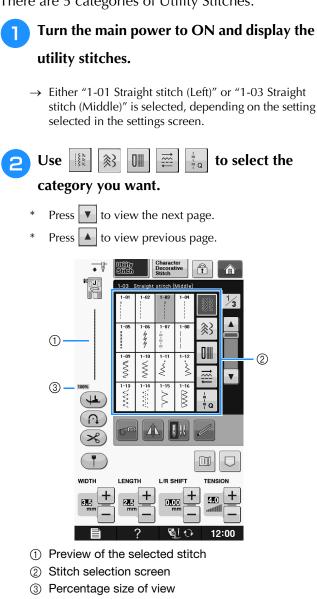

Press the key of the stitch you want to sew.


🦙 Memo

• For details on each stitch, refer to the "STITCH SETTING CHART" on page S-67.

■ Using the Mirror Image Key

Depending on the type of utility stitch you select, you may be able to sew a horizontal mirror image of the stitch.

If *is* is lit when you select a stitch, it will be possible to make a mirror image of the stitch.

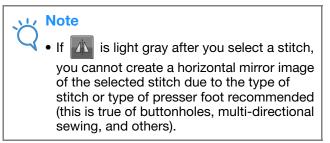

Press **to create a horizontal mirror image of the** selected stitch.

The key will display as 🚺 .









■ Using the Image Key

You can display an image of the selected stitch. You can check and change the colors of the image of the screen.

- 🌓 Press 🔟.
 - \rightarrow An image of the selected stitch is displayed.

 Press \blacksquare to change the thread color of the stitch on the screen.

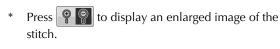

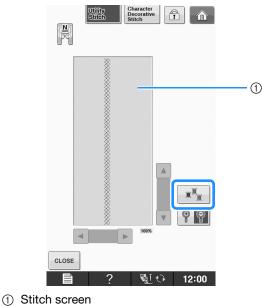


- Memo
 - The color changes every time you press

Note If stitches are wider or larger than display, press darkened arrows to move the stitch pattern for better visibility.

Press CLOSE to return to the original screen.

Saving Your Stitch Settings

The settings for the zigzag stitch width, stitch length, thread tension, automatic thread cutting, automatic reinforcement stitching, etc., are preset in the machine for each stitch. However, if you have specific settings that you wish to reuse later for a stitch, you can change the settings so that they can be saved for that stitch. Five sets of settings can be saved for a single stitch.

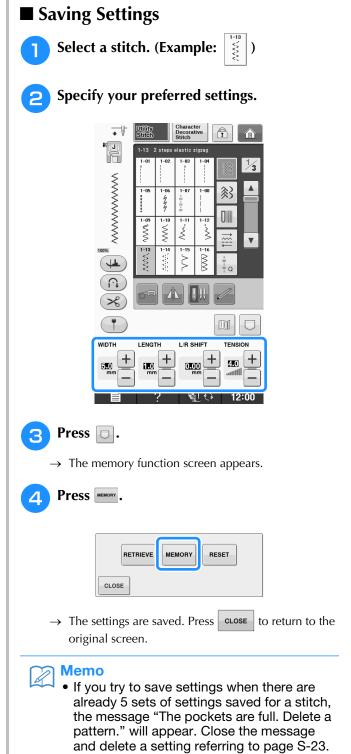

Retrieving Saved Settings

Select a stitch.

Memo

· When a stitch is selected, the last settings retrieved are displayed. The last settings retrieved are retained even if the machine was turned off or a different stitch was selected.

Press 🗔 .

2


 \rightarrow The memory function screen appears.

Press RETRIEVE.



Press the numbered key of the settings to be retrieved.

Press **CLOSE** to return to the original screen without * retrieving settings.

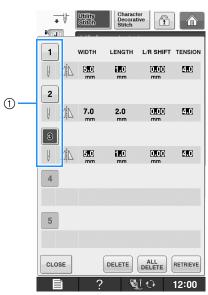

Numbered keys



 \rightarrow The selected settings are retrieved. Press CLOSE to return to the original screen.

A Memo

To save new settings when there are already 5 sets of settings saved for a stitch, press RETRIEVE . Press the numbered key of the setting to be deleted. Press DELETE and then

. Press CLOSE and then MEMORY. The ок new setting will be saved in place of the recently deleted setting.

· You can delete all the saved settings by pressing ALL DELETE


SEWING THE STITCHES

Straight Stitches

See page S-67 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
1-01	Straight stitch (Left)	
1-02	Straight stitch (Left)	
1-03	Straight stitch (Middle)	
1-04	Straight stitch (Middle)	
1-05	Triple stretch stitch	
1-06 47 47	Stem stitch	
1-07 1 111 111 111 111 111	Decorative stitch	
1-08 	Basting stitch	

- ① Left needle position
- ② Middle needle position

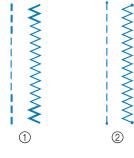


- ① Reverse stitch
- ② Reinforcement stitch


Memo

1

• Refer to "Sewing Reinforcement Stitches" on page S-5 for the detailed information of reverse stitches and reinforcement stitches.

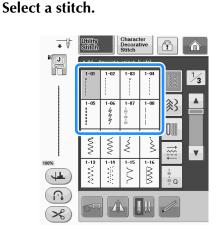


- **2** Attach presser foot "J".
 - * Attach presser foot "N" when you select
- 3 Hold the thread tail and fabric with your left hand, and rotate the handwheel with your right hand to insert the needle into the fabric.

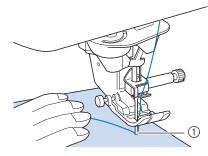

- ① Sewing start position
- **4** Lower the presser foot, and hold the "Reverse Stitch" or "Reinforcement Stitch" button to sew 3-4 stitches.
 - $\rightarrow\,$ The machine sews reverse stitches (or reinforcement stitches).




Press the "Start/Stop" button to sew forward.

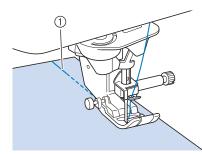

- ① Reverse stitches
- \rightarrow The machine will begin sewing slowly.


A CAUTION

- Be sure the needle does not strike a basting pin, or any other objects, during sewing. The thread could tangle or the needle could break, causing injury.
- 6 When sewing is completed, hold the "Reverse Stitch" button or "Reinforcement Stitch" button to sew 3-4 reverse stitches (or reinforcement stitches) at the end of the seam.

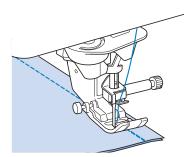



 After sewing, press the "Thread Cutter" button to trim the threads.

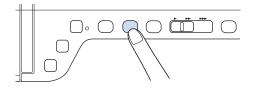


Memo

 When the automatic thread cutting and automatic reinforcement stitch keys on the screen are selected, reverse stitches (or reinforcement stitches) will be sewn automatically at the beginning of sewing when the "Start/Stop" button is pressed. Press the "Reverse Stitch" or "Reinforcement Stitch" button to sew reverse stitches (or reinforcement stitches) and trim the thread automatically at the end of sewing.

Changing the Needle Position (Left or Middle Needle Position Stitches Only)


When you select left or middle needle position

stitches, you can use — and + in the stitch width display to change the position of the needle. Match the distance from the right edge of the presser foot to the needle with the stitch width, then align the edge of the presser foot with the edge of the fabric during sewing for an attractive finish.

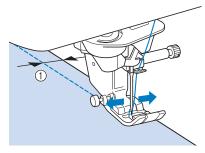

① Stitch width


Example: Left/Middle needle position stitches

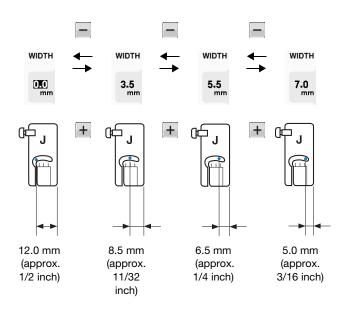

Aligning the Fabric with a Mark on the Needle Plate or Bobbin Cover (with Mark)


While sewing, align the edge of the fabric with the 16 mm (approx. 5/8 inch) mark on the needle plate or bobbin cover (with mark) depending on the needle position (left or middle (center) needle position stitches only).

For stitches with a left needle position (Stitch width: 0.0 mm)

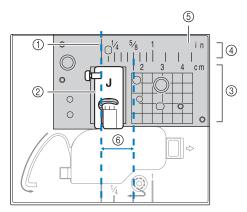

- ① Seam
- ② Presser foot
- ③ Centimeters
- ④ Inches
- 5 Needle plate
- 6 16 mm (5/8 inch)

For stitches with a middle (center) needle position (Stitch width: 3.5 mm)

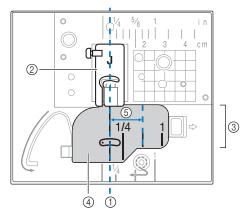


- ① Seam
- ② Presser foot
- ③ Inches
- ④ Bobbin cover (with mark)
- ⑤ 16 mm (5/8 inch)

Using the Straight Stitch Needle Plate and the Straight Stitch Foot

 The straight stitch needle plate and the straight stitch foot can only be used for straight stitches (middle needle position stitches). Use the straight stitch needle plate and the straight stitch foot when sewing thin fabrics or when sewing small pieces which tend to sink into the hole of the regular needle plate during sewing. The straight stitch foot is perfect to reduce puckering on lightweight fabrics. The small opening on the foot provides support for the fabric as the needle travels through the fabric.



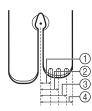




2.25 mm (1/8 inch)
 4.25 mm (3/16 inch)
 6.25 mm (1/4 inch)
 8.5 mm (5/16 inch)




 - Always use the straight stitch foot in combination with the straight stitch needle plate.
- Press the "Needle Position" button to raise the needle and turn the main power to OFF or press **WO** to lock all keys and buttons.
- Remove the needle and the presser foot holder ("CHANGING THE NEEDLE" and "CHANGING THE PRESSER FOOT" of "Basic operations").
- Rer
 - Remove the flat bed attachment.
- Grasp both sides of the needle plate cover, and then slide it toward you.

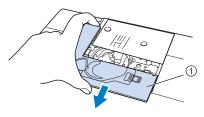

① Needle plate cover

 Grasp the bobbin case, and then pull it out.

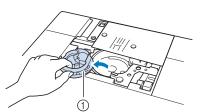

1 Bobbin case

Use the disc-shaped screwdriver included with the machine to unscrew and remove the regular needle plate.



Set the straight stitch needle plate in place and use the disc-shaped screwdriver to tighten the plate.



① Round hole

_レNote

• Align the two screw holes on the needle plate with the two holes on the machine. Use the disc-shaped screwdriver included with the machine to secure the screws in the needle plate.

- B Insert the bobbin case in its original position, and then attach the needle plate cover.
- After reinstalling the needle plate cover, select any of the straight stitches.

Memo


- When using the straight stitch needle plate, all straight stitches become middle needle position stitches. You cannot change the needle position using the width display.
- Always secure the needle plate before inserting the bobbin case into its original position.
- "L/R SHIFT" does not work when straight stitch needle plate is on the machine.

A CAUTION

- Selecting other stitches will cause an error message to be displayed.
- Slowly rotate the handwheel toward you (counterclockwise) before sewing and make sure that the needle is not contacting the straight stitch foot and straight stitch needle plate.

10

Insert needle and attach the straight stitch foot.

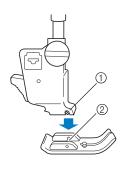

Notch
 Pin



Press **U**O to unlock all keys and buttons, and then start sewing.

* After sewing, make sure to remove the straight stitch needle plate and the straight stitch foot, and reinstall the regular needle plate, the needle plate cover and the presser foot "J".

🏹 Memo

 
• To prevent puckering on fine fabrics, use a fine needle, size 75/11, and a short stitch length. For heavier fabrics, use a heavier needle, size 90/14, and longer stitches.

■ Basting



and attach presser foot "J".

Press the "Reverse Stitch" button to sew reinforcement stitches, then continue sewing.

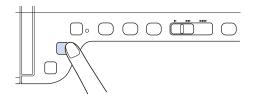

Memo

- When you use the basting stitch for gathering, do not use a reinforcement stitch at the beginning; you should lift the presser foot, rotate the handwheel toward you (counterclockwise), pull up the bobbin thread and pull a length of top and bobbin thread out from the rear of the machine.
- You can set the stitch length between 5 mm (approx. 3/16 inch) and 30 mm (approx. 1-3/16 inches)



 Between 5 mm (approx. 3/16 inch) and 30 mm (approx. 1-3/16 inches)





End the basting with reinforcement stitches.


Dart Seam



and attach presser foot "J".

Sew a reverse stitch at the beginning of the dart and then sew from the wide end to the other end without stretching the fabric.


* If automatic reinforcement stitching is preset, a reinforcement stitch will automatically be sewn at the beginning of sewing.

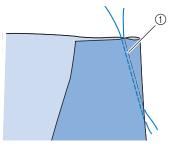




З


- Cut the thread at the end leaving 50 mm (approx. 2 inches), and then tie both ends together.
- * Do not sew a reverse stitch at the end.

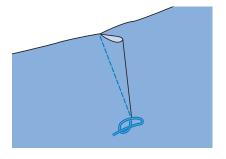




Insert the ends of the thread into the dart with a hand sewing needle.

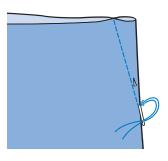

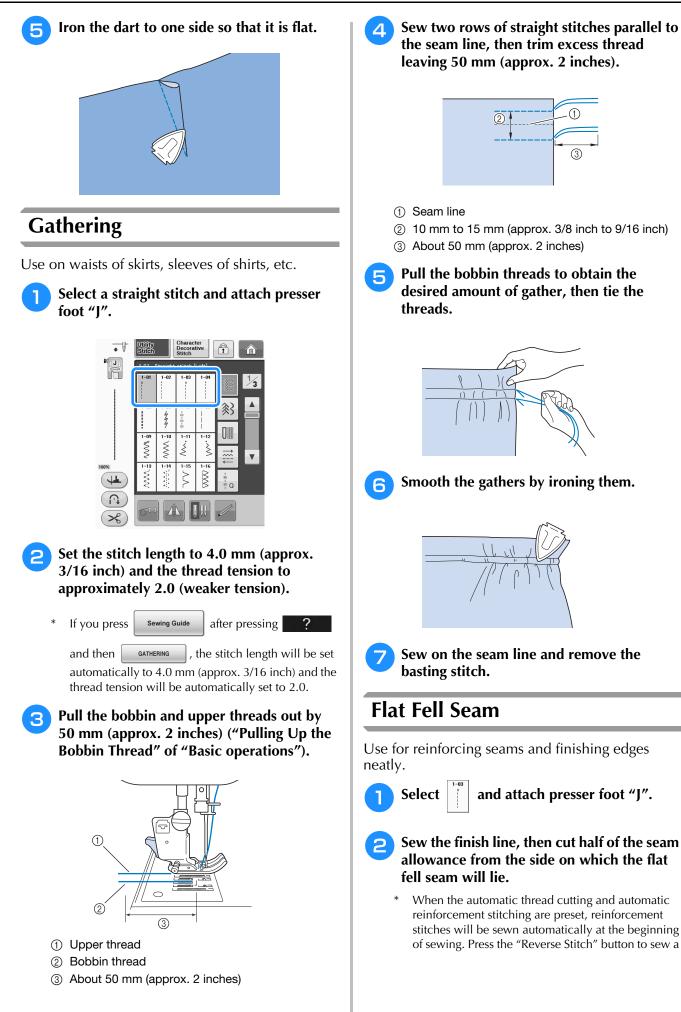


S

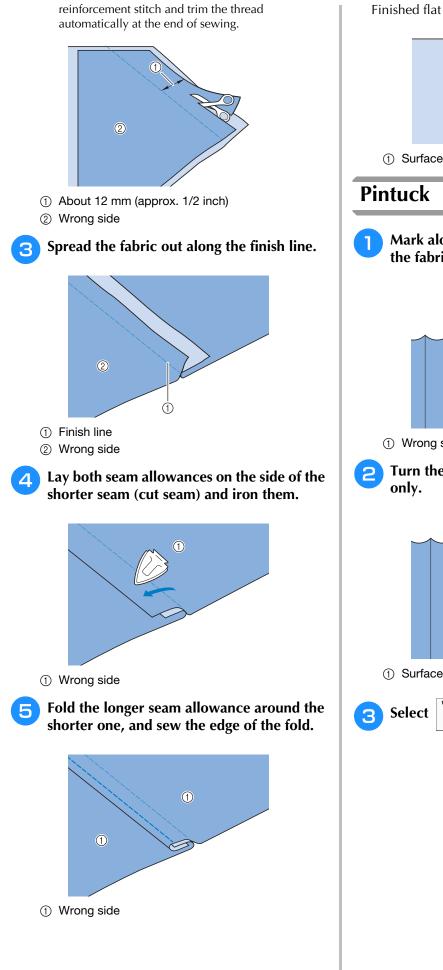


Finished flat fell seam 1 1


Pintuck

Mark along the folds on the wrong side of the fabric.

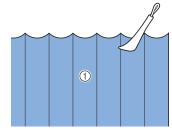

① Wrong side

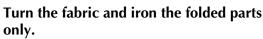 

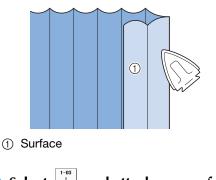


and attach presser foot "I".



Sew a straight stitch along the fold.


* When the automatic thread cutting and automatic reinforcement stitching are preset, reinforcement stitches will be sewn automatically at the beginning of sewing. Press the "Reverse Stitch" button to sew a reinforcement stitch and trim the thread automatically at the end of sewing.

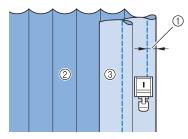

- Width for pintuck
- ② Wrong side
- ③ Surface



Iron the folds in the same direction.

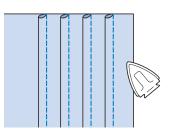

Zigzag Stitches

Zigzag stitches are useful for overcasting, appliqué, patchwork and many other applications.


Select a stitch, and attach presser foot "J".

See page S-5 for the detailed information of reverse stitches and reinforcement stitches.

See page S-67 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
1-09	Zigzag stitch	
1-10	Zigzag stitch	
1-11	Zigzag stitch (Right)	
1-12 >>	Zigzag stitch (Left)	

Select a stitch.

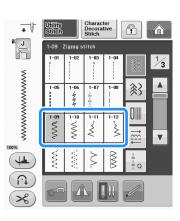




Attach presser foot "J".

■ Overcasting (Using a Zigzag Stitch)

Sew the overcasting along the edge of the fabric while positioning the right-hand side needle drop point just outside the edge of the fabric.

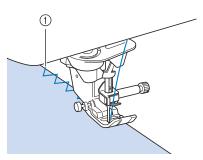


① Needle drop position

Appliqué (Using a Zigzag Stitch)


Attach the appliqué material using a temporary spray adhesive or basting, and then sew it.

* Sew a zigzag stitch while positioning the right-hand side needle drop point just outside the edge of the fabric.

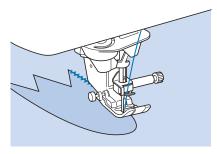


■ Patchwork (for Crazy Quilt)

Turn back the desired width of fabric and position it over the lower fabric, then sew so that the stitch bridges both pieces of fabric.

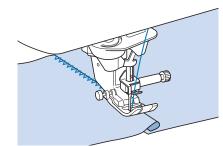


Sewing Curves (Using a Zigzag Stitch)

Shorten the stitch length setting to obtain a fine stitch. Sew slowly, keeping the seams parallel with the fabric edge as you guide the fabric around the curve.

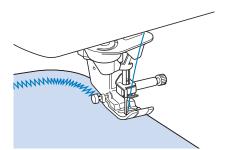

■ Cord Guide Bobbin Cover (Using a **Zigzag Stitch**)

- Remove the bobbin cover from the machine ("Setting the Bobbin" of "Basic operations").
- Thread the gimp thread through the hole in the cord guide bobbin cover from top to bottom. Position the thread in the notch at the back of the cord guide bobbin cover.

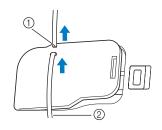


- ① Notch
- ② Gimp thread

- Snap the cord guide bobbin cover into З place, making sure that the gimp thread can be fed freely.
 - Make sure there are no restrictions when feeding the thread.




- - Set the zigzag width from 2.0 mm 2.5 mm (approx. 1/16 inch - 3/32 inch).
- Attach presser foot "N".
- Position the fabric right side up on top of 6 the cord and place the cord to the rear of the machine under the presser foot.

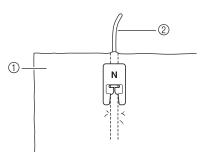

① Fabric (right side)

② Gimp thread

Lower the presser foot and start sewing to make a decorative finish.

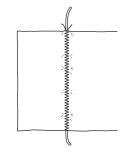

Elastic Zigzag Stitches


Use elastic zigzag stitches for tape attaching, overcasting, darning, or a wide variety of other uses.

See page S-67 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
1-13 <> <> <> <>	2 steps elastic zigzag	
1-14 <;; <;; <;;	3 steps elastic zigzag	



Select a stitch.

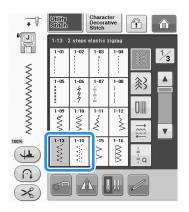




Attach presser foot "J".

■ Tape Attaching

Stretch the tape flat. While stretching the tape flat, sew the tape to the fabric.

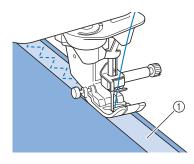

① Tape

Overcasting

Use this stitch to sew overcasting on the edge of stretch fabrics. Sew the overcasting along the edge of the fabric while positioning the right-hand side needle drop point just outside the edge of the fabric.



Overcasting


Use for the edge of seams in skirts or trousers, and the edge of all cuttings. Use presser foot "G", presser foot "J", or the optional side cutter attachment depending on the kind of overcasting stitch you select.

■ Overcasting Using Presser Foot "G"


Stitch	Stitch name	Presser foot
	Overcasting stitch	
1-16	Overcasting stitch	
1-17	Overcasting stitch	G



Select a stitch and attach presser foot "G".

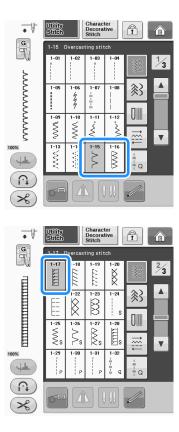


Dower the presser foot so that the presser foot guide is set flush against the edge of the fabric.

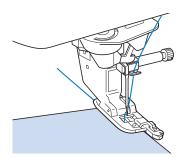



Sew along the presser foot guide.

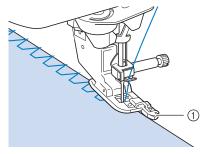

① Guide

A CAUTION

• After the stitch width is adjusted, rotate the handwheel toward you (counterclockwise). Check that the needle does not touch the presser foot. If the needle hits the presser foot, the needle may break and cause injury.




 The needle should not touch the center bar
 If the presser foot is raised to its highest level, the needle may strike the presser foot.

■ Overcasting Using Presser Foot "J"

See page S-67 for the detailed information of stitches.


Stitch	Stitch name	Presser foot
1-18	Overcasting stitch	
1-19	Overcasting stitch	
1-20	Overcasting stitch	
	Overcasting stitch	
	Single diamond overcast	
	Single diamond overcast	

Select a stitch and attach presser foot "J".

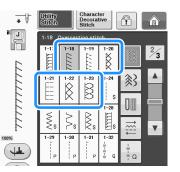



Sew with the needle dropping slightly off the edge of the fabric.

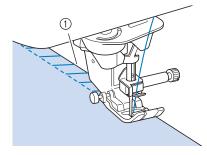

① Needle drop position

ر Note

 Use the "L/R SHIFT" setting for fine tuning the placement of the stitch. Be sure to sew trial stitches using the same conditions as the real sewing.

Quilting

You can make beautiful quilts quickly and easily with this machine. When making a quilt, you will find it convenient to use the knee lifter and foot controller to free your hands for other tasks ("Using the Foot Controller" on page S-4 and /or "Using the Knee Lifter" on page S-15). The 30 quilting stitches Q-01 through Q-30 and the utility stitches with "P" or "Q" indicated on their key are useful for quilting.

The "P" or "Q" at the bottom of the key display indicates that these stitches are intended for ("Q") quilting and ("P") piecing.

See page S-67 for the detailed information of stitches.

Stitch	Stitch name	Presser foot	
		60	<u>6</u> C
Q-01	Piecing stitch (Middle)		C O
Q-02	Piecing stitch (Right)		Ó
0-03	Piecing stitch (Left)		°S
Q-04 -::: ::: ::: ::: ::: ::: Q	Hand-look quilting (Middle)		°S
Q-05 	Basting stitch (Middle)	i j	Ó

	Stitch name	Presser foot	
Stitch			<u>o</u> n
Q-06 47 47 47 47	Stem stitch	i ju	Ś
Q-07	Quilting appliqué zigzag stitch	N JI	Ś
Q-08	Zigzag stitch (Right)	i j	Ś
Q-09	Zigzag stitch (Left)		Ś
Q-10	2 steps elastic zigzag	i ju	Ś
Q-11	3 steps elastic zigzag		Ś
Q-12	Quilting appliqué stitch		Ś
Q-13	Shell tuck edge	N JI	Ś
Q-14	Blanket stitch	i ju	Ś
Q-15	Quilting stippling		Ś
Q-16	Overcasting stitch		Ś
Q-17	Tape attaching	i († 10	Ś
Q-18	Serpentine stitch	N	Ś
Q-19	Feather stitch	i jı	Ś
Q-20	Fagoting cross stitch	i ji	Ś
Q-21 /-^-v^	Couching stitch		Ś
Q-22	Patchwork double overlock stitch		Ś
Q-23	Smocking stitch		Ś

Stitch	Stitch name	Presser foot	
			<u>00</u>
Q-24	Rick-rack stitch		Ś
Q-25 MMW	Decorative stitch		Ó
Q-26 XXXX XXXX	Decorative stitch	i l	Ś
Q-27 11 11 11	Hemstitching	Ň	Ś
Q-28	Hemstitching	Ň	Ś
Q-29	Single diamond overcast	H J	Ó
Q-30	Overcasting stitch	H J	Ś
1-29 P	Piecing stitch (Right)	i j	Ó
1-30 	Piecing stitch (Middle)	i ji	C
1-31	Piecing stitch (Left)		Ś
1-32 	Hand-look quilting	i j	Ó
1-33 	Quilting appliqué zigzag stitch	i ji	Ó
1-34 	Quilting appliqué stitch	# S	Ó
1-35 XXXX Q	Quilting stippling		Ś

Memo

2

When a stitch pattern in the Quilting Stitches category (Q-02 through Q-30) is selected, a finer stitch width can be set than is available with stitch patterns in other categories.

For example: Stitch Q-03 has 57 needle positions and stitch Q-19 has 29 width selections.

 
🟒 Note

• The width range of stitch setting is only available in the Quilting stitch "Q" quilting category.

Piecing

Sewing two pieces of fabric together is called piecing. When cutting pieces for quilt blocks, make sure the seam allowance is 6.5 mm (approx. 1/4 inch).

Select

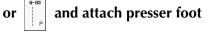


Align the edge of the fabric with the edge of the presser foot, and start sewing.

* To sew a 6.5 mm (approx. 1/4 inch) seam allowance

along the right edge of the presser foot with

 selected, the width should be set to 5.50 mm (approx. 7/32 inch).

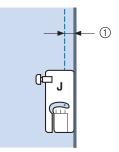


① 6.5 mm (approx. 1/4 inch)


* To sew a 6.5 mm (approx. 1/4 inch) seam allowance

along the left edge of the presser foot with

selected, the width should be set to 1.50 mm (approx. 1/32 inch).

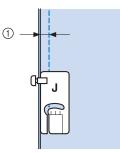

 - ① 6.5 mm (approx. 1/4 inch)
- To change the needle position, use + or in the width display.

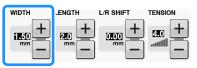

Memo

- Using a straight stitch (middle needle position) makes it easier to sew smoothly (see page S-24).
- For models equipped with the guideline marker:


In the case Q-01(center, at width 3.5 mm) is selected, if the guideline marker is set at 10.0 mm (3.5 mm plus 6.5 mm, close to 1/4 inch), you can sew piecing with referring the guideline marker.

Piecing Using the 1/4" Quilting Foot with Guide (optional with some models)

This quilting foot can sew an accurate 1/4 inch or 1/8 inch seam allowance.

It can be used for piecing together a quilt or for topstitching.

Press , and then attach the 1/4" quilting foot with guide.

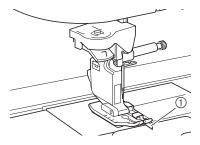


① Guide

Use the guide and marks on the presser foot to sew accurate seam allowances.

Piecing a 1/4 inch seam allowance

 Sew keeping the edge of the fabrics against the guide.

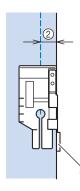

① Guide

② 1/4 inch

 
Memo

 For accurate fabric placement, refer to "Aligning the Fabric with a Mark on the Needle Plate or Bobbin Cover (with Mark)" on page S-26.

1

Creating an accurate seam allowance

Use the mark on the foot to begin, end, or pivot 1/4 inch from edge of fabric.

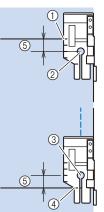


- Align this mark with edge of fabric to begin.
- ② Beginning of stitching
- ③ End of stitching
- ④ Opposite edge of fabric to end or pivot
- ⑤ 1/4 inch

🦙 Memo

 For details on pivoting, refer to "Pivoting" on page S-15.

Topstitching quilting, 1/8 inch


Sew with the edge of the fabric aligned with the left side of the presser foot end.

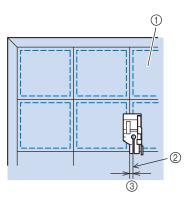


- ① Surface of fabric
- ② Seam
- ③ 1/8 inch

■ Appliqué


Trace the pattern onto the appliqué fabric and then cut around it, leaving a 3 mm to 5 mm (approx. 1/8 inch to 3/16 inch) seam allowance.

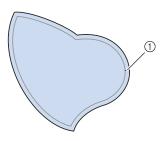

- (1) Seam allowance: 3 mm to 5 mm (approx. 1/8 inch to 3/16 inch)
- Place a piece of stabilizer cut to the finished size of the appliqué design onto the fabric, and then fold over the seam margin using an iron. Clip curves when necessary.

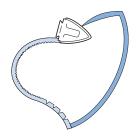


3 Turn the appliqué over, and attach the stabilizer with basting pins or a basting stitch.

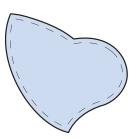




and attach presser foot "J".

5 Use the quilting appliqué stitch to attach the appliqué. Sew around the edge while dropping the needle as close to the edge as possible.

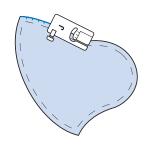

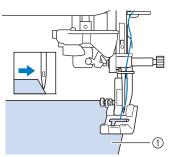




Appliqué
 Needle drop position

A CAUTION

• Be careful that the needle does not strike a basting pin during sewing. Striking a pin can cause the needle to break, resulting in injury.

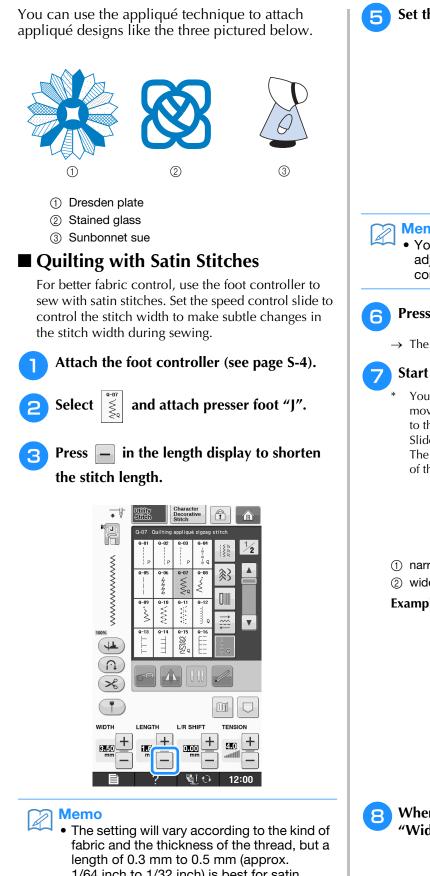


1/64 inch to 1/32 inch) is best for satin stitches.

Δ

Press **The speed control slide** to control the stitch width.

Set the "Width Control" to "ON".

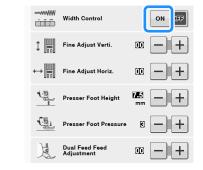

Memo

 You can use the speed control slide to adjust the stitch width. Use the foot controller to adjust the sewing speed.

Press CLOSE

 \rightarrow The display will return to the original screen.

Start sewing.

You can adjust the stitch width during sewing by moving the sewing speed controller. Slide the lever to the left, and the stitch width becomes narrower. Slide it to the right, the stitch width becomes wider. The size of the width changes equally on both sides of the middle needle position.

1	-	2

- (1) narrower
- (2) wider

Example: Changing the width



When you are finished sewing, set the "Width Control" back to "OFF".

S

■ Free Motion Quilting

With free motion quilting, the feed dogs can be

lowered by pressing σ° , so that the fabric can be

moved freely in any direction.

In this mode, the presser foot is raised to the necessary height for free motion sewing.

We recommend attaching the foot controller and sewing at a consistent speed. You can adjust the sewing speed with the speed control slide on the machine.

A CAUTION

• With free motion quilting, control the feeding speed of the fabric to match the sewing speed. If the fabric is moved faster than the sewing speed, the needle may break or other damage may result.

Using free motion open toe quilting foot "O"

The free motion open toe quilting foot "O" is used for free motion quilting with zigzag or decorative stitches or for free motion quilting of straight lines on fabric with an uneven thickness. Various stitches can be sewn using free motion open toe quilting foot "O". For details on the stitches that can be used, refer to the "STITCH SETTING CHART" on page S-67.



Free motion open toe quilting foot "O"

Memo

• When starting to sew, the internal sensor detects the thickness of the fabric, and the quilting foot is raised to the height specified in the machine settings screen. Press

to display "Free Motion Foot

 
Height" of the settings screen. Press - or


+ to select the height that the quilting foot is raised above the fabric. Increase the

setting by pressing +, for example, when sewing very stretchy fabric, so that it is easier to sew.



• In order to sew with a balanced tension, it may be necessary to adjust the upper thread tension (see page S-12). Test with a sample piece of quilting fabric.

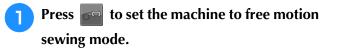

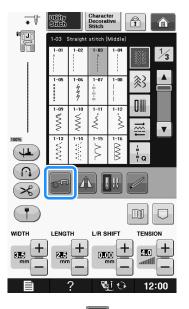


→ The key appears as , the quilting foot is raised to the necessary height, and then the feed dogs are lowered for free motion sewing.

Select a stitch.

Remove the presser foot holder.

Attach free motion open toe quilting foot "O" by positioning the pin of the quilting foot above the needle clamp screw and aligning the lower-left of the quilting foot and the presser bar.

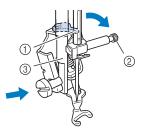

- ① pin
- ② Needle clamp screw
- ③ Presser bar

Ly Note


- Make sure that the quilting foot is not slanted.
- Hold the quilting foot in place with your right hand, and tighten the presser foot holder screw using the disc-shaped screwdriver with your left hand.



① Presser foot holder screw

A CAUTION

- Be sure to securely tighten the screws with the included screwdriver. Otherwise, the needle may touch the quilting foot, causing it to bend or break.
- Use both hands to stretch the fabric taut, and then move the fabric at a consistent pace in order to sew uniform stitches roughly 2.0 mm - 2.5 mm (approx. 1/16 inch - 3/32 inch) in length.

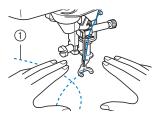



Press 2 to cancel the free motion sewing mode.

→ Rotate the handwheel toward you (counterclockwise) to raise the feed dogs.

Memo

 Do not be discouraged with your initial results. The technique requires practice.

Using free motion quilting foot "C" (optional with some models)

Use the free motion quilting foot "C" with straight stitch needle plate for free motion sewing.



Free motion quilting foot "C"

A CAUTION

• When using free motion quilting foot "C", be sure to use the straight stitch needle plate and sew with the needle in middle (center) needle position. If the needle is moved to any position other than the middle (center) needle position, the needle may break, which may result in injuries.

Memo

• When starting to sew, the internal sensor detects the thickness of the fabric, and the quilting foot is raised to the height specified in the machine settings screen. Press

to display "Free Motion Foot


Height" of the settings screen. Press - or

+ to select the height that the quilting foot is raised above the fabric. Increase the


setting by pressing +, for example, when sewing very stretchy fabric, so that it is easier to sew.

	Pivoting Height	
_ ‡	Free Motion Foot Height	
<u>.</u>	Automatic Fabric Sensor System	ON OFF
← →	Guideline Marker Adjustr	nent START

• In order to sew with a balanced tension, it may be necessary to adjust the upper thread tension. Test with a sample piece of fabric that is similar to your chosen fabric.

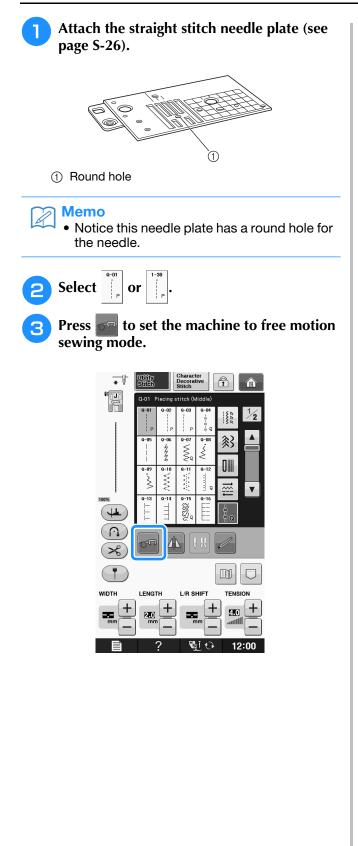


→ The key appears as , the quilting foot is raised to the necessary height, and then the feed dogs are lowered for free motion sewing.

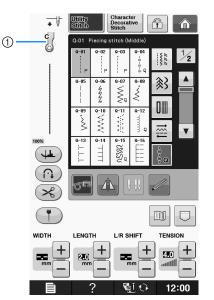

- ① Free motion quilting foot "C"
- → When stitch Q-01 or 1-30 is selected, free motion quilting foot "C" is indicated in the upper-left corner of the screen.



 Attach free motion quilting foot "C" at the front with the presser foot holder screw aligned with the notch in the quilting foot.

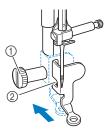


- ① Presser foot holder screw
- ② Notch

🗸 Note

• Make sure that the quilting foot is attached properly and not slanted.

 
Hold the quilting foot in place with your right hand, and tighten the presser foot holder screw using the screwdriver with your left hand.

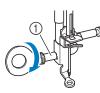

① Presser foot holder screw

A CAUTION

- Be sure to securely tighten the screws with the included screwdriver. Otherwise, the needle may touch the quilting foot, causing it to bend or break.
- **6** Use both hands to stretch the fabric taut, and then move the fabric at a consistent pace in order to sew uniform stitches roughly 2.0 mm - 2.5 mm (approx. 1/16 inch - 3/32 inch) in length.

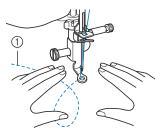

1) Stitch

Press solution to cancel the free motion sewing mode.

→ Rotate the handwheel toward you (counterclockwise) to raise the feed dogs.

8 After sewing, make sure to remove the straight stitch needle plate and presser foot "C", and reinstall the regular needle plate and the needle plate cover.

Vote

- Free motion open toe quilting foot "O" can also be used with the straight stitch needle plate. We recommend using free motion open toe quilting foot "O" with free motion sewing of fabrics of uneven thicknesses.
- When using the straight stitch needle plate, all straight stitches become middle needle position stitches. You cannot change the needle position using the width display.

Memo


- Normally, the feed dogs are raised for regular sewing.
- Do not be discouraged with your initial results. The technique requires practice.

Echo Quilting Using the Free Motion Echo Quilting Foot "E" (optional with some models)

Sewing quilting lines at equal distances around a motif is called echo quilting. The quilting lines, which appear as ripples echoing away from the motif, are the distinguishing characteristic of this quilting style. Use the free motion echo quilting foot "E" for echo quilting. Using the measurement on the presser foot as a guide, sew around the motif at a fixed interval. We recommend attaching the foot controller and sewing at a consistent speed.



Free motion echo quilting foot "E" measurement

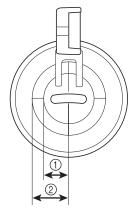

6.4 mm (approx. 1/4 inch)
 9.5 mm (approx. 3/8 inch)

A CAUTION

• With free motion quilting, control the feeding speed of the fabric to match the sewing speed. If the fabric is moved faster than the sewing speed, the needle may break or other damage may result.

Memo

 When starting to sew, the internal sensor detects the thickness of the fabric, and the quilting foot is raised to the height specified in the machine settings screen. Press

Ľ, to display "Free Motion Foot Height" of the settings screen (see page S-15). Press - or + to select the height

that the quilting foot is raised above the


fabric. Increase the setting by pressing +, for example, when sewing very soft fabric, so that it is easier to sew.



• In order to sew with a balanced tension, it may be necessary to adjust the upper thread tension (see page S-12). Test with a sample piece of quilting fabric.



Press or to set the machine to free motion sewing mode.

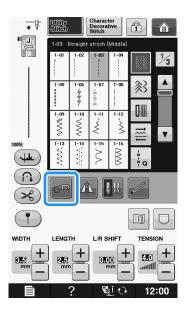

 \rightarrow The key appears as \overline{OO} , the quilting foot is raised to the necessary height, then the feed dogs are lowered for free motion sewing.


Attach the adapter ("CHANGING THE 3

- PRESSER FOOT" of "Basic operations").
- Attach the free motion echo quilting foot 4 "E" on the left side of the adapter with the holes in the quilting foot and adapter aligned.





Tighten the screw with the included screwdriver.

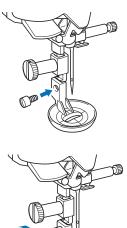





A CAUTION

Be sure to securely tighten the screws with the included screwdriver. Otherwise, the needle may touch the quilting foot, causing it to bend or break.




Using the measurement on the quilting foot as a guide, sew around the motif.

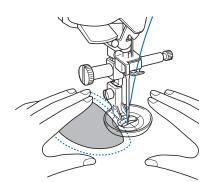

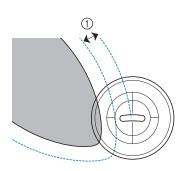

① 6.4 mm (approx. 1/4 inch)

Finished project

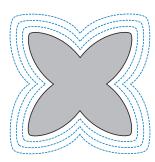

Press or to cancel the free motion sewing mode.

→ Rotate the handwheel toward you (counterclockwise) to raise the feed dogs.

Blind Hem Stitches

Secure the bottoms of skirts and pants with a blind hem. Two stitches are available for blind hem stitching.

Stitch	Stitch name	Presser foot
2-01 / /	Blind hem stitch	
2-02	Blind hem stitch stretch	


Memo

• When the size of cylindrical pieces is too small to slide onto the arm or the length is too short, the fabric will not feed and desired results may not be achieved.

Turn the skirt or pants wrong side out.

- 1 (4) ① Wrong side of fabric
- ② Right side of fabric
- ③ Edge of fabric
- ④ Bottom side

Fold the fabric along the desired edge of the hem, and press.

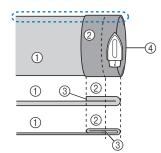


- ① Wrong side of fabric
- ② Right side of Fabric
- ③ Edge of fabric
- ④ Desired edge of hem

<Thick fabric>

<Normal fabric>

<Seen () from the side>

3 Use a chalk to mark on the fabric about 5 mm (3/16 inch) from the edge of the fabric, and then baste it.

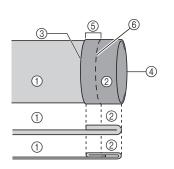

- Wrong side of fabric
 Right side of fabric
- Edge of fabric
- ④ Desired edge of hem
- 5 mm (3/16 inch)
- 6 Basting

<Thick fabric>

<Normal fabric>

<Seen from the side>

Fold back the fabric inside along the basting.

- ① Wrong side of fabric
- ② Right side of fabric
- ③ Edge of fabric
- ④ Desired edge of hem
- (5) 5 mm (3/16 inch)
- ⑥ Basting
- ⑦ Basting point


<Thick fabric>

<Normal fabric>

<Seen from the side>



Unfold the edge of fabric, and position the fabric with the wrong side facing up.

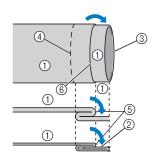

- Wrong side of fabric
 Right side of fabric
- Edge of fabric
- ④ Desired edge of hem
- (5) Basting point
- 6 Basting

<Thick fabric>


<Normal fabric>

<Seen from the side>







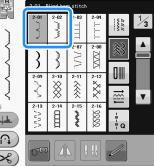


Î

 $\widehat{\mathbf{n}}$




Remove the flat bed attachment to use the free-arm.

9 Slide the item that you wish to sew onto the free arm, make sure that the fabric feeds correctly, and then start sewing.

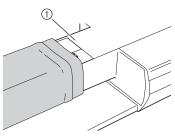


① Free arm

10 Position the fabric with the edge of the folded hem against the guide of the presser foot, and then lower the presser foot lever.

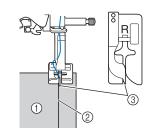

- 1 Wrong side of fabric
- ② Fold of hem
- ③ Guide

 
Adjust the stitch width until the needle slightly catches the fold of the hem.

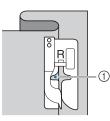

① Needle drop point

When you change the needle drop point, raise the needle, and then change the stitch width.

<Stitch width>

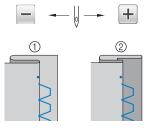

- Thick fabric
- ② Normal fabric

Memo

· Blind hem stitches cannot be sewn if the left needle drop point does not catch the fold. If the needle catches too much of the fold, the fabric cannot be unfolded and the seam appearing on the right side of the fabric will be very large, leaving an unattractive finish. If you experience either of these cases, follow the instructions below to solve the problem.


■ If the Needle Catches Too Much of the Hem Fold

The needle is too far to the left.


Press + to decrease the stitch width so that the needle slightly catches the fold of the hem.



<Thick fabric>

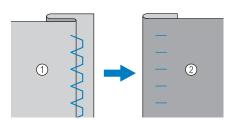

<Normal fabric>

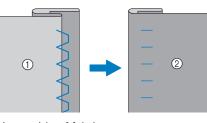

① Wrong side of fabric

② Right side of fabric


■ If the Needle does not Catch the Hem Fold


The needle is too far to the right.

Press – to increase the stitch width so that the needle slightly catches the fold of the hem.




<Thick fabric>

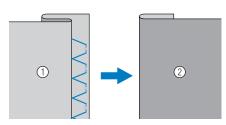

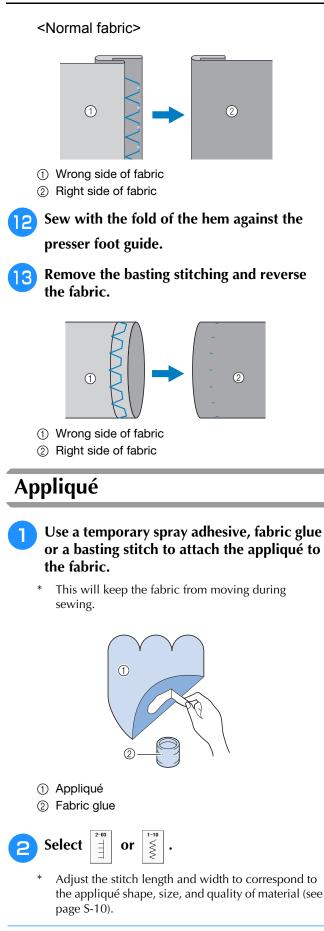


🏹 Memo

• For details on each stitch, refer to the "STITCH SETTING CHART" on page S-67. **3** Attach presser foot "J". Check that the needle drops slightly off the edge of the appliqué, then start sewing.

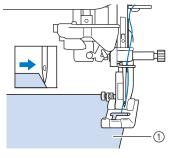


① Appliqué material

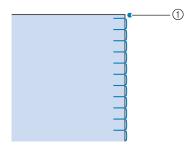

① Needle drop position


Appliqué Sharp Curves

Stop the machine with the needle in the fabric outside the appliqué. Raise the presser foot and turn the fabric a little bit at a time while sewing for an attractive finish to the seam.

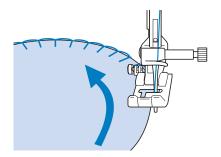


Appliqué Corners

Stop the machine with the needle in the right position of the outside (or inside) corner of the appliqué. Raise the presser foot and pivot the fabric to align the fabric edge. Lower the presser foot and continue stitching.

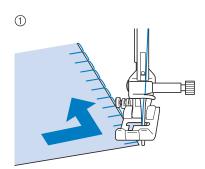



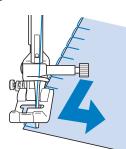


- ① Outside corner
- ② Inside corner

Memo

 Placing a lightweight tear away stabilizer beneath the stitching area will improve the stitch placement along the edge of the appliqué fabric.

Shelltuck Stitches


Shelltuck stitches give an attractive appearance of shells along the curve of a collar. This stitch pattern can be used for edging the neckline or sleeves of dresses and blouses.

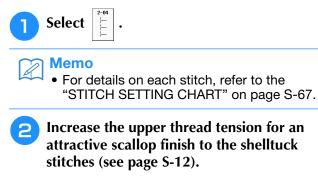

Memo

• If the upper thread tension is too weak, the shelltuck stitches will not scallop.


3 To make rows of shell tuck stitches, fold the fabric in half along the bias.

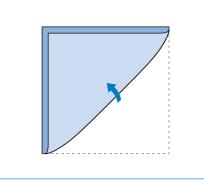


Memo

Use a thin fabric.

 Attach presser foot "J". Set the needle drop point slightly off the edge of the fabric, and start sewing.

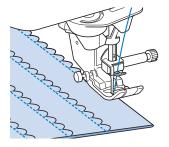


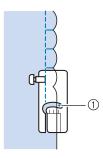

① Needle drop position



Unfold the fabric, and iron the tucks to one

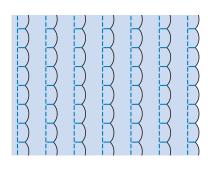

Memo

To make shell tucks at the edge of a collar or neckline, follow the pattern's instructions and then use this stitch to make a decorative finish on the collar or neckline.

Scallop Stitches

This wave-shaped satin stitch is called the scallop stitch. Use this stitch to decorate the edges of blouse collars and handkerchiefs or use it as a hem accent.

Memo

 A temporary spray adhesive may be necessary for lightweight fabrics. Test sew the fabric before sewing a project.




Memo


· For details on each stitch, refer to the "STITCH SETTING CHART" on page S-67.

Attach presser foot "N". Sew scallop stitches along the edge of the fabric.

Do not sew directly on the edge of the fabric.

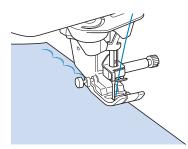

Trim along the seam, making sure not to cut З the stitches.

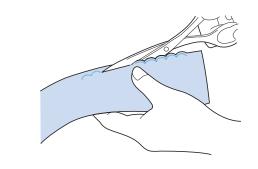

Memo

Use a seam sealant to secure the edges of the scallop stitches.


Crazy Quilting

For a decorative look called "Crazy Quilting", the following stitches can be sewn on top of a pressed seam allowance.



Select a straight stitch and attach presser foot "I".

With the right sides facing each other, sew 2 two pieces of fabric together, and then press open the seam allowance.

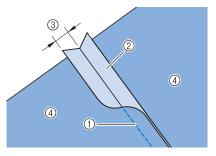


- ① Straight stitch
- ② Seam margins
- ③ 6.5 mm (approx. 1/4 inch)
- (4) Wrong side



Select a stitch for top stitching.



Place the fabric right side up in the machine, and center the presser foot over the seam when sewing.

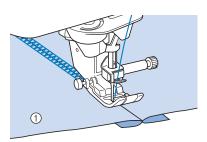


① Right side of fabric

Smocking Stitches


Use smocking stitches for decorative sewing on clothes, etc.


- Select a straight stitch and attach presser foot "J".
- 2 Set the stitch length to 4.0 mm (approx. 3/16 inch) and loosen the upper thread tension to approximately 2.0 (see "Setting the Stitch Length" on page S-10 and "Setting the Thread Tension" on page S-12).
- **3** Pull the bobbin and upper threads out by 50 mm (approx. 2 inches).
- 4 Sew the seams, leaving approximately 10 mm (approx. 3/8 inch) between the seams, then trim excess thread, leaving 50 mm (approx. 2 inches).

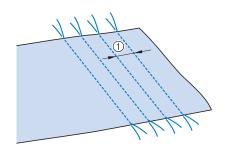

① Approximately 10 mm (approx. 3/8 inch)


5 Pull the bobbin threads to obtain the desired amount of gather, and then smooth the gathers by ironing them.

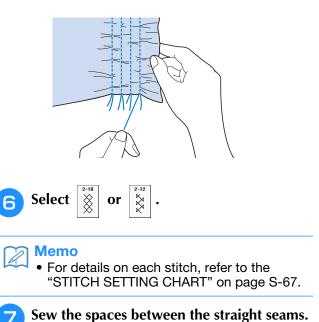

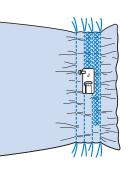



Pull out the straight stitch threads.

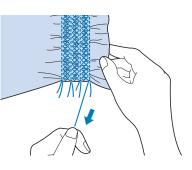


Fagoting

When there is a space between two fabrics with thread sewn over the space to join the fabrics together, it is called fagoting. Use this stitch when sewing blouses or children's clothes.

1

Baste two pieces of fabric onto thin paper, leaving a space of 4 mm (approx. 3/16 inch) between the fabrics.

* If you draw a line down the middle of the thin paper or water-soluble stabilizer, sewing is easier.

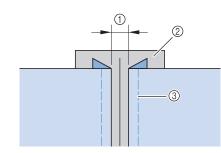

- ① 4.0 mm (approx. 3/16 inch)
- ② Paper
- ③ Basting stitches


$ \begin{array}{c c} \textbf{2} \textbf{Select} \overset{\tiny 2-11}{\swarrow} \textbf{or} \overset{\tiny 2-12}{\swarrow} \textbf{.} \\ \end{array} $	2	Select		or	2-12	•
------------------------------------------------------------------------------------------------------------------------------------------------------------	---	--------	--	----	------	---

🦙 Memo

 For details on each stitch, refer to the "STITCH SETTING CHART" on page S-67.

Attach presser foot "J". Align the center of


the presser foot with the middle of the space between the fabrics and begin sewing.

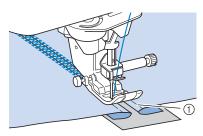

Basting stitches

Memo

 Use a thick thread.

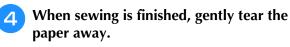

Tape or Elastic Attaching




Select a straight stitch and attach presser foot "J".

2 Set the stitch length to 4.0 mm (approx. 3/16 inch), and loosen the upper thread tension to 2.0 (see "Setting the Stitch Length" on page S-10 and "Setting the Thread Tension" on page S-12).

Memo Be sure that neither automatic reinforcement nor automatic thread

cutting (\nearrow) is selected.


3 Sew two rows of straight stitches on the right side of the fabric, then pull the bobbin thread to create the necessary gather.

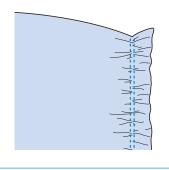

Memo

4

- Before sewing the straight stitch, rotate the handwheel toward you (counterclockwise) and pull up the bobbin thread. Holding the top and bobbin thread, pull a length of thread out from the rear of the machine. (Be sure that the presser foot is raised.)
- Place the tape over the gather, and hold it in place with basting pins.

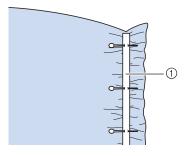







Memo

 For details on each stitch, refer to the "STITCH SETTING CHART" on page S-67.



Sew over the tape (or elastic).

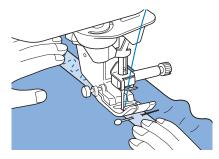

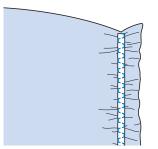


A CAUTION

• Be sure the needle does not strike a basting pin, or any other objects, during sewing. The thread could tangle or the needle could break, causing injury.



Pull out the straight stitch threads.

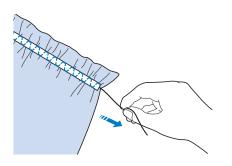

Heirloom

■ Hemstitching (1)

Use for sewing tablecloths, decorative hems, and decorative stitching on shirt fronts.

Memo

• Use a light to medium weight homespun fabric with a little stiffness.

Insert a type 130/705H, size 100/16 Wing needle.


* This specialty sewing needle is not furnished with your machine. Must be purchased separately.

CAUTION

- The "Automatic Threading" button cannot be used. Thread the wing needle by hand, from front to back. Using the "Automatic Threading" button may result in damage to the machine.
- A more attractive finish can be obtained if you use a "130/705H Wing" needle when sewing these patterns. If using a wing needle and the stitch width has been set manually, check that the needle will not touch the presser foot by carefully rotating the handwheel toward you (counterclockwise) before starting to sew.


Select a stitch and attach presser foot "N".

Select any stitch between 3-01 and 3-22.

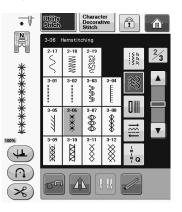


Memo

For details on each stitch, refer to the "STITCH SETTING CHART" on page S-67.

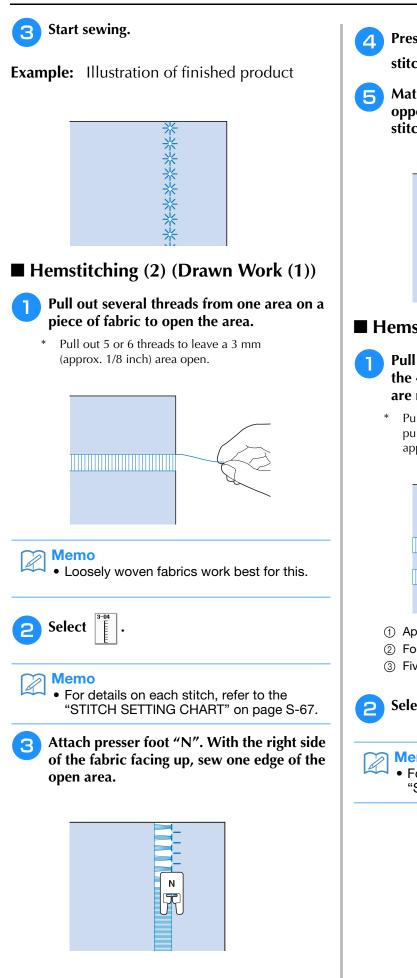


Press **I** to create a mirror image of the stitch.

 Match beginning needle drop points on the opposite edge of the open area to keep the stitching symmetrical.

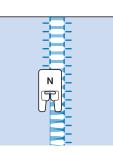

■ Hemstitching (3) (Drawn Work (2))

- Pull out several threads from both sides of the 4 mm (approx. 3/16 inch) area which are not yet open.
 - Pull out four threads, leave five threads, and then pull out four threads. The width of five threads is approximately 4 mm (approx. 3/16 inch) or less.

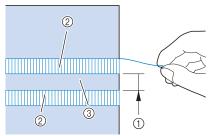

- ① Approx. 4 mm (approx. 3/16 inch) or less
- ② Four threads (pull out)
- ③ Five threads (leave)

 


Memo

For details on each stitch, refer to the "STITCH SETTING CHART" on page S-67.



Sew the decorative stitch in the center of the five threads created above.

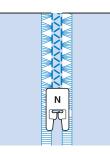

Memo

• A wing needle can be used for Hemstitching (3).

One-step Buttonholes


With one-step buttonholes, you can make buttonholes appropriate to the size of your button.

See page S-67 for the detailed information of stitches.


Stitch	Stitch name	Presser foot
4-01 U	Narrow rounded buttonhole	
4-02 U	Wide round ended buttonhole	
4-03 ()	Tapered round ended buttonhole	
4-04 U	Round ended buttonhole	
4-05 U	Round ended buttonhole	
4-06	Round double ended buttonhole	
4-07	Narrow squared buttonhole	
4-08	Wide squared buttonhole	
4-09	Stretch buttonhole	
4-10	Heirloom buttonhole	

Stitch	Stitch name	Presser foot
4-11	Bound buttonhole	
⁴⁻¹² Д	Keyhole buttonhole	
4-13 ()	Tapered keyhole buttonhole	
4-14 5	Keyhole buttonhole	

One-step buttonholes are sewn from the front of the presser foot to the back, as shown below.

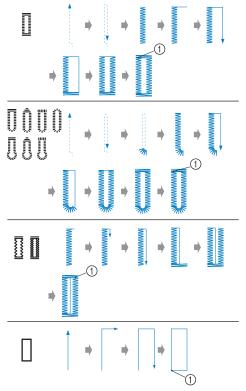


① Reinforcement stitching

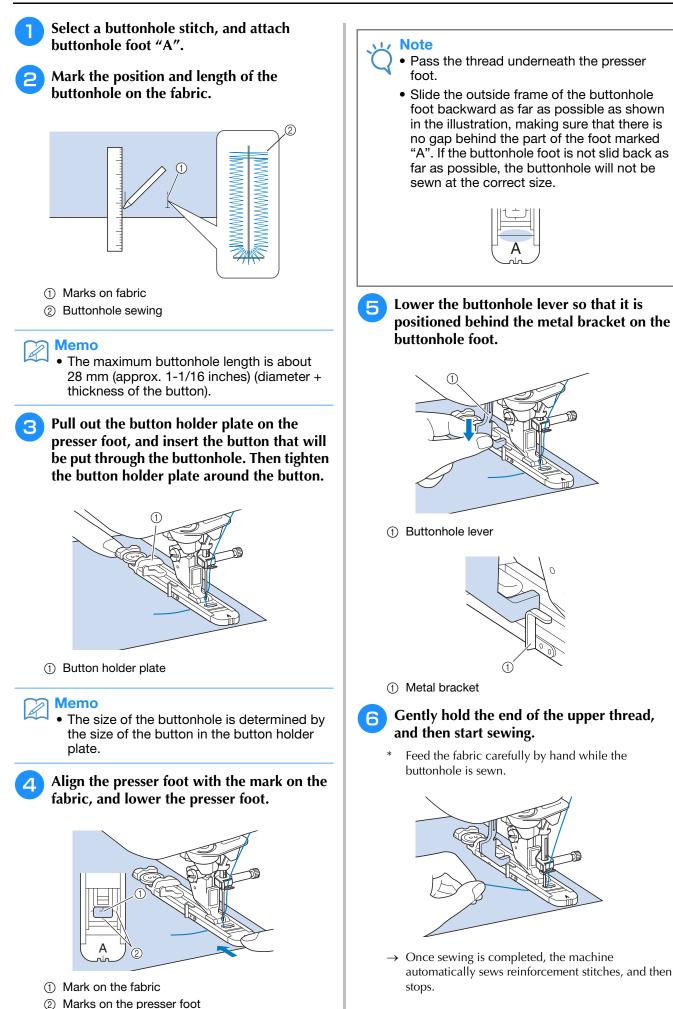

Memo

• If automatic thread cutting is turned on before you start sewing, both threads are automatically cut after the reinforcement stitches are sewn. If the fabric does not feed (for example, because it is too thick), increase the stitch length setting.

Insert a pin along the inside of one of the bar tacks, and then insert the seam ripper into the center of the buttonhole and cut towards the pin.

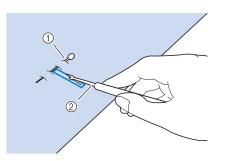


- ① Basting pin
- ② Seam ripper

A CAUTION

• When using the seam ripper to open the buttonhole, do not put your hand or finger in the path of the ripper. The ripper may slip and cause injury. Do not use the seam ripper in any other way than how it is intended.

🔊 Memo

• For keyhole buttonholes, use the eyelet punch to make a hole in the rounded end of the buttonhole. Then insert a pin along the inside of one of the bar tacks, insert a seam ripper into the hole made with the eyelet punch, and cut towards the pin.

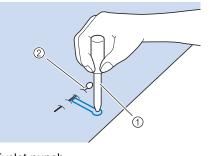


- Eyelet punch
- ② Basting pin

Sewing Stretch Fabrics

When sewing on stretch fabric with 👖 or


sew the buttonhole stitches over a gimp thread.

Hook the gimp thread onto the back of presser foot "A". Insert the ends into the grooves at the front of the presser foot, and then temporarily tie them there.

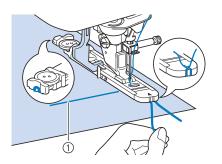

① Upper thread


Lower the presser foot and start sewing.

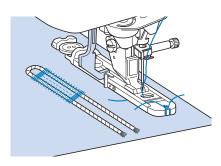



3

- Set the width of the satin stitches to the width of the gimp thread, and set the buttonhole width to be 2-3 times the width of the gimp thread.
- Once sewing is completed, gently pull the gimp thread to remove any slack, and trim off any excess.

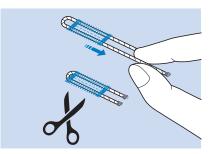

Memo


• After using the seam ripper to cut open the threads over the buttonhole, trim off the threads.

S

Odd Shaped Buttons/Buttons that do Not Fit into the Button Holder Plate

Use the markings on the presser foot scale to set the size of the buttonhole. One mark on the presser foot scale equals 5 mm (approx. 3/16 inch).

Add the button diameter and thickness together, and then set the plate at the calculated value.

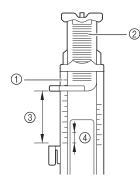

- ① Presser foot scale
- ② Button holder plate
- ③ Completed measurement of diameter + thickness
- ④ 5 mm (approx. 3/16 inch)

F Memo

• For example, for a button with a diameter of 15 mm (approx. 9/16 inch) and a thickness of 10 mm (approx. 3/8 inch), the scale should be set at 25 mm (approx. 1 inch).



- (1) 10 mm (approx. 3/8 inch)
- (2) 15 mm (approx. 9/16 inch)


Darning

Use darning stitches for mending and other applications.

See page S-67 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
4-15 1000	Darning	
4-16	Darning	

Darning is performed by sewing from the front of the presser foot to the back as shown below.

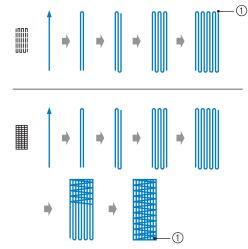


① Reinforcement stitches

"A".

Select a stitch, and attach buttonhole foot

Set the scale to the desired length of the darning.

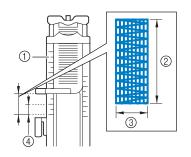


- (1) Presser foot scale
- ② Completed length measurement
- ③ Width 7 mm (approx. 1/4 inch)
- ④ 5 mm (approx. 3/16 inch)

Memo

The maximum length for darning is 28 mm (approx. 1-1/16 inches).

Check that the needle drops at the desired position and lower the presser foot, making sure the upper thread passes underneath the buttonhole foot.

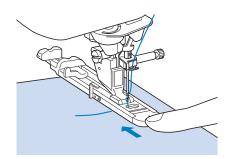

✓ Note


3

- Pass the thread underneath the presser foot.
- Set the presser foot so that there is no gap behind the section marked with an "A" (the shaded area in the illustration below). If there is a gap, the size of the darning will not be correct.






Lower the buttonhole lever so that it is positioned behind the metal bracket on the buttonhole foot.

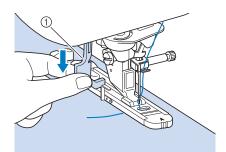


① Buttonhole lever

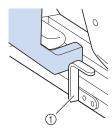 

① Metal bracket

5 Gently hold the end of the upper thread, and then press the "Start/Stop" button to start the machine.

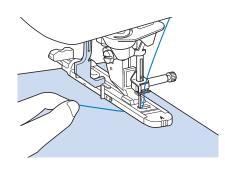

→ Once sewing is completed, the machine automatically sews reinforcement stitches, and then stops.

🥱 Memo

 If automatic thread cutting is turned on before you start sewing, both threads are automatically cut after the reinforcement stitches are sewn. If the fabric does not feed (for example, because it is too thick), increase the stitch length setting.

Bar Tacks


Use bar tacks to reinforce areas that will be subject to strain, such as pocket corners.

See page S-67 for the detailed information of stitches.

Stitch	Stitch name	Presser foot
4-17 #####	Bar tack	



Attach buttonhole foot "A" and set the scale to the length of the bar tack you wish to sew.

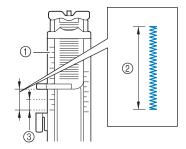


- ① Presser foot scale
- ② Completed length measurement
- ③ 5 mm (approx. 3/16 inch)

Memo

Bar tacks can be between 5 mm (approx. 3/16 inch) and 28 mm (approx. 1-1/16 inches). Bar tacks are usually between 5 mm (approx. 3/16 inch) and 10 mm (approx. 3/8 inch).



Set the fabric so that the pocket moves toward you during sewing.

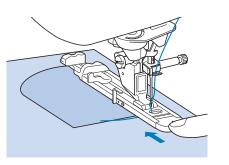


Note

- Pass the thread underneath the presser foot.
- Slide the outside frame of the buttonhole foot backward as far as possible as shown in the illustration, making sure that there is no gap behind the part of the foot marked "A". If the buttonhole foot is not slid back as far as possible, the bar tack will not be sewn to the correct size.





Check the first needle drop point and lower the presser foot.

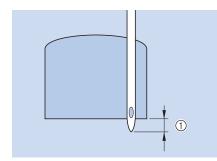

① 2 mm (approx. 1/16 inch)

 5 Lower the buttonhole lever so that it is positioned behind the metal bracket on the buttonhole foot.

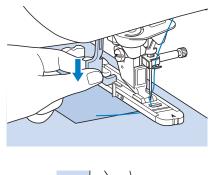


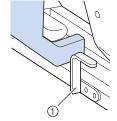

① Metal bracket




Gently hold the end of the upper thread and begin sewing.

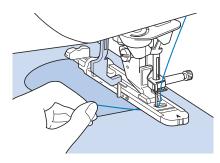

→ When sewing is completed, the machine will sew reinforcement stitches and stop automatically.

Bar Tacks on Thick Fabrics

Place a piece of folded fabric or cardboard beside the fabric being sewn to level the buttonhole foot and allow for easier and even feeding.

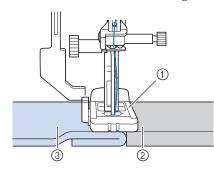

- Presser foot
- ② Thick paper
- ③ Fabric

Memo

 If automatic thread cutting is turned on before you start sewing, both threads are automatically cut after the reinforcement stitches are sewn. If the fabric does not feed (for example, because it is too thick), increase the stitch length setting.

Button Sewing

Buttons with 2 or 4 holes can be attached, using the machine.

See page S-67 for the detailed information of stitches.


Stitch	Stitch name	Presser foot
4-18 ©	Button sewing	

L/ Note


• Do not use the automatic thread cutting function when sewing buttons. Otherwise, you will lose the thread ends.



  \rightarrow The feed dogs are lowered automatically.

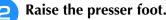

3 Attach button sewing foot "M", slide the button along the metal plate and into the presser foot, and lower the presser foot.

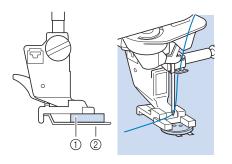

Utility Stitches

① Button

② Metal plate

Rotate the handwheel toward you (counterclockwise) to check that the needle goes into each hole correctly.

 
- * If the needle does not reach the holes on the left side, adjust the stitch width.
- * To attach the button more securely, repeat the process.

 
5 Gently hold the end of the upper thread and start sewing.

→ The machine stops automatically when sewing is finished.

CAUTION


- Make sure the needle does not strike the button during sewing. The needle may break and cause injury.
- **6** From the wrong side of the fabric, pull the end of the bobbin thread to pull the upper thread through to the wrong side of the fabric. Tie the two thread ends together and cut the threads.

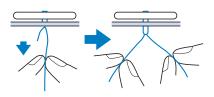

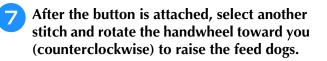

Attaching 4 Hole Buttons

 
Sew the two holes closest to you. Then raise the presser foot and move the fabric so that the needle goes into the next two holes, and sew them in the same way.

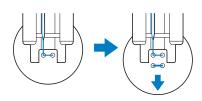


Attaching a Shank to the Button



Pull the shank lever toward you before sewing.

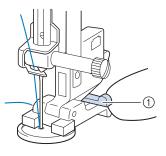

 - ① Shank lever
- Pull the two ends of the upper thread between the button and the fabric, wind them around the shank, and then tie them firmly together.

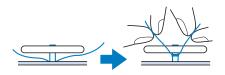

Tie the ends of the bobbin thread from the beginning and end of sewing together on the wrong side of the fabric.

لر Note

• When sewing is completed, be sure to select the other stitch and rotate the handwheel toward you (counterclockwise) to raise the feed dogs.

Cut off any excess thread.

Eyelet


Use this stitch for making belt holes and other similar applications.

See page S-67 for the detailed information of stitches.






Use _ or + in either the stitch width display or the stitch length display to choose the size of the eyelet.

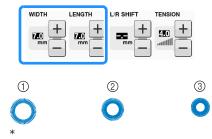

- * Actual size
- ① Large 7 mm (approx. 1/4 inch)
- ② Medium 6 mm (approx. 15/64 inch)
- ③ Small 5 mm (approx. 3/16 inch)
- 3 Attach monogramming foot "N", then rotate the handwheel toward you (counterclockwise) to check the needle drop position.

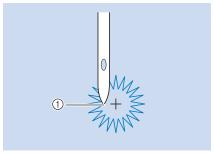


① Needle drop position


Lower the presser foot and start sewing.


 \rightarrow When sewing is finished, the machine sews reinforcement stitches and stops automatically.

🗸 Note

 Δ

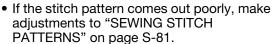

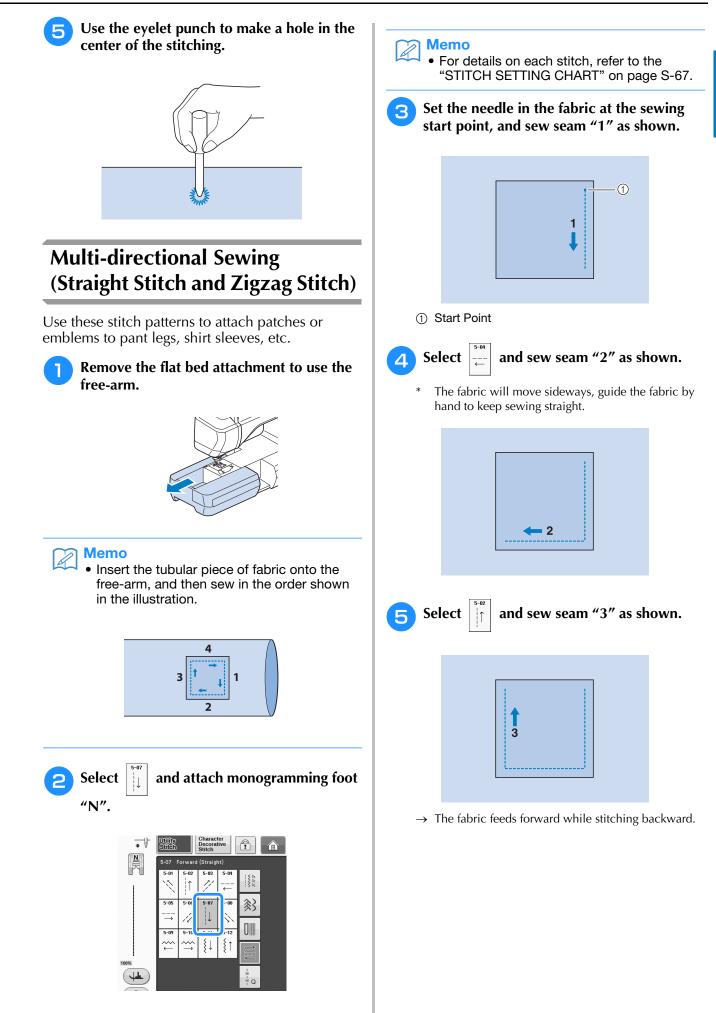

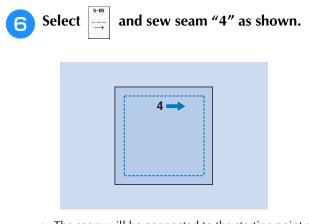

→ The seam will be connected to the starting point of seam 1.

Zipper Insertion

■ Centered Zipper

Use for bags and other such applications.




o Memo آ

• For details on each stitch, refer to the "STITCH SETTING CHART" on page S-67.


ப் Note

- Make sure you sew using the middle needle position.
- Attach presser foot "J" and sew straight stitches up to the zipper opening. Change to a basting stitch (see page S-28) and sew to the top of the fabric.

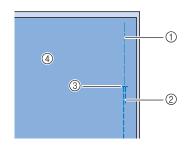


- ① Basting stitches
- ② Reverse stitches
- ③ End of zipper opening
- ④ Wrong side

3 Press the seam allowance open and attach the zipper with a basting stitch in the middle of each side of the zipper tape.

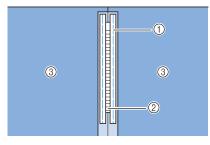

- ① Basting stitches
- Zipper
- ③ Wrong side
- **4** Remove presser foot "J". Align the right side of the pin in zipper foot "I" with the presser foot holder, and attach the zipper foot.

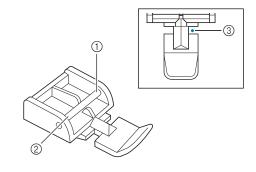


- ① Right
- ② Left
- ③ Needle drop position

A CAUTION

• When using zipper foot "1", make sure the straight stitch, middle needle position is selected. Rotate the handwheel toward you (counterclockwise) to make sure the needle does not strike the presser foot. If another stitch is selected, the needle will strike the presser foot, causing the needle to break and possibly causing injury.



Topstitch 7 mm to 10 mm (approx. 1/4 inch to 3/8 inch) from the seamed edge of the fabric, then remove the basting.

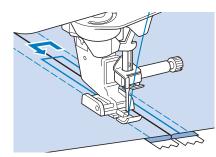

A CAUTION

• Make sure the needle does not strike the zipper during sewing. If the needle strikes the zipper, the needle may break, leading to injury.


Inserting a Side Zipper

Use for side zippers in skirts or dresses.




_とNote

- Make sure you sew using the middle needle position.
- Attach presser foot "J" and sew straight stitches up to the zipper opening. Change to a basting stitch and sew to the top of the fabric.

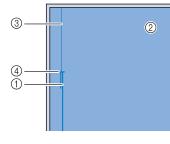

- ① Reverse stitches
- ② Wrong side of fabric
- ③ Basting stitches
- ④ End of zipper opening

Press the seam allowance open and align the folded hem along the teeth of the zipper, while maintaining 3 mm (approx. 1/8 inch) of sewing space.

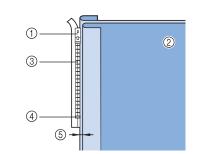


- ① Zipper pull tab
- ② Wrong side of fabric
- ③ Zipper teeth
- ④ End of zipper opening
- (5) 3 mm (approx. 1/8 inch)

Remove presser foot "J".

5

Align the right side of the pin in zipper foot "1" with the presser foot holder, and attach the presser foot.

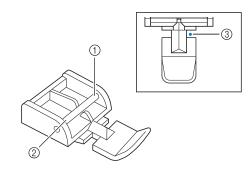


- ① Right
- ② Left
- ③ Needle drop position

A CAUTION

• When using zipper foot "1", make sure the straight stitch, middle needle position is selected. Rotate the handwheel toward you (counterclockwise) to make sure the needle does not strike the presser foot. If another stitch is selected, the needle will strike the presser foot, causing the needle to break and possibly causing injury.

6 Set the presser foot in the 3 mm (approx. 1/8 inch) margin.

- Starting from the end of the zipper opening, sew to a point about 50 mm (approx. 2 inches) from the edge of the fabric, then stop the machine.
- Pull down the zipper slider, then continue sewing to the edge of the fabric.

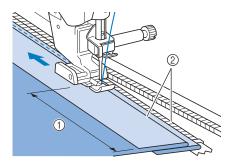


- ① 50 mm (approx. 2 inches)
- ② 3 mm (approx. 1/8 inch)

A CAUTION

 Make sure the needle does not strike the zipper during sewing. If the needle strikes the zipper, the needle may break, leading to injury.


Close the zipper, turn the fabric over, and sew a basting stitch.

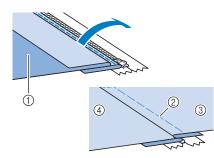

- ① Front of the skirt (wrong side of fabric)
- ② Basting stitches
- ③ Front of the skirt (right side of fabric)
- ④ Back of the skirt (right side of fabric)

10 Remove the presser foot, and reattach it so that the left side of the pin is attached to the presser foot holder.

* When sewing the left side of the zipper, the needle should drop on the right side of the presser foot. When sewing the right side of the zipper, the needle should drop on the left side of the presser foot.

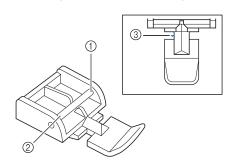


- ① Right
- ② Left

12

14

- ③ Needle drop position
- Set the fabric so that the left edge of the presser foot touches the edge of the zipper teeth.
 - Sew reverse stitches at the top of the zipper, then continue sewing.
- Stop sewing about 50 mm (approx.
 2 inches) from the edge of the fabric, leave the needle in the fabric, and remove the basting stitches.
 - Open the zipper and sew the rest of the seam.

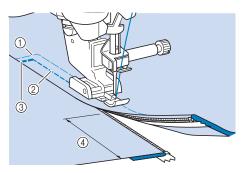

- ① Basting stitches
- 2 7 mm to 10 mm (approx. 1/4 inch to 3/8 inch)
- Reverse stitches
- ④ 50 mm (approx. 2 inches)

STITCH SETTING CHART

The following chart shows information for each utility stitch concerning applications, stitch lengths, stitch widths, and whether or not the twin needle mode can be used.

Stitch	Stitch name	Press	er foot	Applications		ch width n (inch)]		ch length n (inch)]	Twin
onten		60	<u>or</u>	Applications	Auto.	Manual	Auto.	Manual	needle
1-01 	Straight stitch (Left)	₩ J J	Ś	General sewing, gather, pintuck, etc.	0.0 (0)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
1-02	Straight stitch (Left)		Ś	General sewing, gather, pintuck, etc.	0.0 (0)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
1-03 	Straight stitch (Middle)	# F	Ś	General sewing, gather, pintuck, etc.	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
1-04	Straight stitch (Middle)	# F	Ś	General sewing, gather, pintuck, etc.	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	OK (J)
1-05 	Triple stretch stitch		Ś	General sewing for reinforcement and decorative topstitching	0.0 (0)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
1-06 47 47	Stem stitch		Ś	Reinforced stitching, sewing and decorative applications	1.0 (1/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
1-07 	Decorative stitch		Ś	Decorative stitching, top stitching	0.0 (0)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
1-08 	Basting stitch	₩ J	Ś	Basting	0.0 (0)	0.0 - 7.0 (0 - 1/4)	20 (3/4)	5 - 30 (3/16 - 1-3/16)	NO
1-09	Zigzag stitch	H J	Ś	For overcasting, mending.	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	1.4 (1/16)	0.0 - 5.0 (0 - 3/16)	OK (J)
1-10 Š	Zigzag stitch	H J	Ś	For overcasting, mending.	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	1.4 (1/16)	0.0 - 5.0 (0 - 3/16)	OK (J)
1-11 \$	Zigzag stitch (Right)	H J	Ś	Start from right needle position, zigzag sew at left.	3.5 (1/8)	2.5 - 5.0 (3/32 - 3/16)	1.4 (1/16)	0.3 - 5.0 (1/64 - 3/16)	ОК (Ј)
1-12 >>	Zigzag stitch (Left)	₩J]	Ś	Start from left needle position, zigzag sew at right.	3.5 (1/8)	2.5 - 5.0 (3/32 - 3/16)	1.4 (1/16)	0.3 - 5.0 (1/64 - 3/16)	ОК (Ј)
1-13 <` <> <> <> <>	2 steps elastic zigzag	₩J]	Ś	Overcasting (medium weight and stretch fabrics), tape and elastic	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	ОК (Ј)
1–14 <,, <,, <,, <,,	3 steps elastic zigzag	₩J]	Ś	Overcasting (medium, heavyweight and stretch fabrics), tape and elastic	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	ОК (Ј)
	Overcasting stitch		G	Reinforcing of light and medium weight fabrics	3.5 (1/8)	2.5 - 5.0 (3/32 - 3/16)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO

Stitch	Stitch name	Presser fo	er foot	Applications		ch width n (inch)]	Stitch length [mm (inch)]		Twin
Suton		00	<u>v</u> r		Auto.	Manual	Auto.	Manual	needle
1-16	Overcasting stitch	G		Reinforcing of heavyweight fabric	5.0 (3/16)	2.5 - 5.0 (3/32 - 3/16)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
1-17	Overcasting stitch		G	Reinforcing of medium, heavyweight and easily friable fabrics or decorative stitching.	5.0 (3/16)	3.5 - 5.0 (1/8 - 3/16)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
1-18	Overcasting stitch	i J	Ś	Reinforced seaming of stretch fabric	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
1-19	Overcasting stitch	i J	Ś	Reinforcing of medium stretch fabric and heavyweight fabric, decorative stitching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	OK (J)
1-20	Overcasting stitch	i J	Ś	Reinforcement of stretch fabric or decorative stitching	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	ОК (J)
1-21	Overcasting stitch	i J	Ś	Stretch knit seam	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	NO
	Single diamond overcast		Ś	Reinforcement and seaming stretch fabric	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
1-23	Single diamond overcast		Ó	Reinforcement of stretch fabric	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	1.8 (1/16)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
1-24	With side cutter	Ċs		Straight stitch while cutting fabrics	0.0 (0)	0.0 - 2.5 (0 - 3/32)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	NO
1-25 \$ \$	With side cutter		S	Zigzag stitch while cutting fabrics	3.5 (1/8)	3.5 - 5.0 (1/8 - 3/16)	1.4 (1/16)	0.0 - 5.0 (0 - 3/16)	NO
	With side cutter		S	Overcasting stitch while cutting fabrics	3.5 (1/8)	3.5 - 5.0 (1/8 - 3/16)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
1-27	With side cutter		S	Overcasting stitch while cutting fabrics	5.0 (3/16)	3.5 - 5.0 (1/8 - 3/16)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
1-28	With side cutter		S	Overcasting stitch while cutting fabrics	5.0 (3/16)	3.5 - 5.0 (1/8 - 3/16)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
1-29 	Piecing stitch (Right)	HJ)	Ó	Piecework/patchwork 6.5 mm (approx. 1/4 inch) right seam allowance	5.5 (7/32)	0.0 - 7.0 (0 - 1/4)	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
1-30	Piecing stitch (Middle)	i fj	C	Piecework/patchwork	_	-	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
1-31	Piecing stitch (Left)		Ó	Piecework/patchwork 6.5 mm (approx. 1/4 inch) left seam allowance	1.5 (1/16)	0.0 - 7.0 (0 - 1/4)	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
1-32 	Hand-look quilting		Ó	Quilting stitch made to look like hand quilting stitch	0.0 (0)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
1-33 \$ Q	Quilting appliqué zigzag stitch		Ś	Zigzag stitch for quilting and sewing on appliqué quilt pieces	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	1.4 (1/16)	0.0 - 5.0 (0 - 3/16)	NO

Stitch	Stitch name	Press	er foot	Applications		h width (inch)]		ch length n (inch)]	Twin
onten		60	<u>o</u> n		Auto.	Manual	Auto.	Manual	needle
1-34 	Quilting appliqué stitch		Ś	Quilting stitch for invisible appliqué or attaching binding	1.5 (1/16)	0.0 - 7.0 (0 - 1/4)	1.8 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
1-35 දිදි ද	Quilting stippling		Ś	Background quilting	7.0 (1/4)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
2-01	Blind hem stitch	8 P	R	Hemming woven fabrics	00	3← - →3	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
2-02	Blind hem stitch stretch	80 M	R	Hemming stretch fabric	00	3← - →3	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
2-03 	Blanket stitch		Ś	Appliqués, decorative blanket stitch	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-04 	Shell tuck edge		Ś	Shell tuck edge finish on fabrics	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	ОК (Ј)
3	Satin scallop stitch		Ś	Decorating collar of blouse, edge of handkerchief	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	0.5 (1/32)	0.1 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-06 , , , , , , , , , , , , , , , , , , ,	Scallop stitch		Ś	Decorating collar of blouse, edge of handkerchief	7.0 (1/4)	0.0 - 7.0 (0 - 1/4)	1.4 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
2-07	Patchwork join stitch	i J	Ś	Patchwork stitches, decorative stitching	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.2 (1/16)	0.2 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-08	Patchwork double overlock stitch	i J	Ś	Patchwork stitches, decorative stitching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-09 /-^- V^-	Couching stitch	i J	Ś	Decorative stitching, attaching cord and couching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.2 (1/16)	0.2 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-10	Smocking stitch	₩JJ	Ś	Smocking, decorative stitching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-11	Feather stitch	i j	Ś	Fagoting, decorative stitching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-12 K K K K K K K K K K K K K	Fagoting cross stitch	i J	Ś	Fagoting, bridging and decorative stitching	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-13 , , , , , , , , , , , , , , , , , , ,	Tape attaching	i j	Ś	Attaching tape to seam in stretch fabric	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-14	Ladder stitch		Ś	Decorative stitching	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
2-15	Rick-rack stitch		Ś	Decorative top stitching	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-16 00000	Decorative stitch		Ś	Decorative stitching	5.5 (7/32)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)

Stitch	Stitch name	Presser foot		Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin
		60	0n	Αμμισατιστισ	Auto.	Manual	Auto.	Manual	needle
\$	Serpentine stitch	P	Ś	Decorative stitching and attaching elastic	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-18 MMM	Decorative stitch	N	Ś	Decorative stitching and appliqué	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	ОК (Ј)
2-19 2%\$\$\$	Decorative stippling stitch		Ś	Decorative stitching	7.0 (1/4)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
3-01 	Hemstitching		Ś	Decorative hems, triple straight at left	1.0 (1/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-02 	Hemstitching		Ś	Decorative hems, triple straight at center	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-03 MMM	Hemstitching zigzag		Ś	Decorative hems, top stitching	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-04 E	Hemstitching		Ś	Decorative hems, lace attaching pin stitch	3.5 (1/8)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
3-05	Hemstitching		Ś	Decorative hems	3.0 (1/8)	0.0 - 7.0 (0 - 1/4)	3.5 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
3-06 ** **	Hemstitching	N	Ś	Decorative hems daisy stitch	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
^{3−07}	Hemstitching		Ś	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	3.5 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
3-08	Hemstitching		Ś	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	3.5 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
3-09	Hemstitching		Ś	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	3.5 (1/8)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-10	Hemstitching		Ś	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
^{3–11}	Hemstitching		Ś	Heirloom, decorative hems	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-12	Honeycomb stitch		Ś	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-13	Honeycomb stitch		Ś	Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	3.5 (1/8)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-14 ×	Hemstitching		Ś	Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-15	Hemstitching	N	Ś	Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO

Stitch	Stitch name	Presser foot		Applications	Stitch width [mm (inch)]		Stitch length [mm (inch)]		Twin
		60	<u>on</u>	Αμμισαιιστιο	Auto.	Manual	Auto.	Manual	needle
3-16 × ×	Hemstitching	Ř	Ś	Heirloom, decorative hems	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-17 + +	Hemstitching	N	Ś	Heirloom, decorative hems	4.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
3-18	Hemstitching	N	Ś	Heirloom, decorative hems	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-19	Hemstitching	N	Ś	Decorative hems and bridging stitch	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-20	Hemstitching	N	Ś	Decorative hems. Fagoting, attaching ribbon	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	ОК (Ј)
3-21 22 4	Hemstitching	N	Ś	Decorative hems, smocking	6.0 (15/64)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
3-22 5 45 4	Hemstitching	Ň	Ś	Decorative hems, smocking	5.0 (3/16)	0.0 - 7.0 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
4-01 0	Narrow rounded buttonhole			Buttonhole on light to medium weight fabrics	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-02 U	Wide round ended buttonhole			Buttonholes with extra space for larger buttons	5.5 (7/32)	3.5 - 5.5 (1/8 - 7/32)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-03 ()	Tapered round ended buttonhole			Reinforced waist tapered buttonholes	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-04 0	Round ended buttonhole			Buttonholes with vertical bar tack in heavyweight fabrics	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-05 [Round ended buttonhole			Buttonholes with bar tack	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-06 ()	Round double ended buttonhole			Buttonholes for fine, medium to heavyweight fabrics	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-07	Narrow squared buttonhole			Buttonholes for light to medium weight fabrics	5.0 (3/16)	3.0 - 5.0 (1/8 - 3/16)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-08	Wide squared buttonhole			Buttonholes with extra space for larger decorative buttons	5.5 (7/32)	3.5 - 5.5 (1/8 - 7/32)	0.4 (1/64)	0.2 - 1.0 (1/64 - 1/16)	NO
4-09	Stretch buttonhole			Buttonholes for stretch or woven fabrics	6.0 (15/64)	3.0 - 6.0 (1/8 - 15/64)	1.0 (1/16)	0.5 - 2.0 (1/32 - 1/16)	NO
4-10	Heirloom buttonhole			Buttonholes for heirloom and stretch fabrics	6.0 (15/64)	3.0 - 6.0 (1/8 - 15/64)	1.5 (1/16)	1.0 - 3.0 (1/16 - 1/8)	NO
4-11	Bound buttonhole			The first step in making bound buttonholes	5.0 (3/16)	0.0 - 6.0 (0 - 15/64)	2.0 (1/16)	0.2 - 4.0 (1/64 - 3/16)	NO

Stitch	Stitch name	Presser foot		Applications		ch width n (inch)]	Stitch length [mm (inch)]		Twin
		00	5T	Applications	Auto.	Manual	Auto.	Manual	needle
J.	Keyhole buttonhole			Buttonholes in heavyweight or thick fabrics for larger flat buttons	7.0 (1/4)	3.0 - 7.0 (1/8 - 1/4)	0.5 (1/32)	0.3 - 1.0 (1/64 - 1/16)	NO
4-13 ()	Tapered keyhole buttonhole			Buttonholes in medium to heavy weight fabrics for larger flat buttons	7.0 (1/4)	3.0 - 7.0 (1/8 - 1/4)	0.5 (1/32)	0.3 - 1.0 (1/64 - 1/16)	NO
4-14 J	Keyhole buttonhole			Buttonholes with vertical bar tack for reinforcement in heavyweight or thick fabrics	7.0 (1/4)	3.0 - 7.0 (1/8 - 1/4)	0.5 (1/32)	0.3 - 1.0 (1/64 - 1/16)	NO
4–15 Innn uuui	Darning			Darning of medium weight fabric	7.0 (1/4)	2.5 - 7.0 (3/32 - 1/4)	2.0 (1/16)	0.4 - 2.5 (1/64 - 3/32)	NO
4-16	Darning			Darning of heavyweight fabric	7.0 (1/4)	2.5 - 7.0 (3/32 - 1/4)	2.0 (1/16)	0.4 - 2.5 (1/64 - 3/32)	NO
4-17	Bar tack			Reinforcement at opening of pocket, etc.	2.0 (1/16)	1.0 - 3.0 (1/16 - 1/8)	0.4 (1/64)	0.3 - 1.0 (1/64 - 1/16)	NO
4-18 ©	Button sewing			Attaching buttons	3.5 (1/8)	2.5 - 4.5 (3/32 - 3/16)	_	-	NO
4-19 O	Eyelet		Ś	For making eyelets, holes on belts, etc.	7.0 (1/4)	7.0 6.0 5.0 (1/4 15/64 3/16)	7.0 (1/4)	7.0 6.0 5.0 (1/4 15/64 3/16)	NO
5-01	Diagonally left up (Straight)		Ś	For attaching appliqué on tubular pieces of fabric and mitering corners	_	-	_	-	NO
5-02	Reverse (Straight)		Ś	For attaching appliqué on tubular pieces of fabric and mitering corners	-	-	-	-	NO
5-03 7,1	Diagonally right up (Straight)		Ś	For attaching appliqué on tubular pieces of fabric and mitering corners	-	-	_	-	NO
5-04 ←	Sideways to left (Straight)		Ś	For attaching appliqué on tubular pieces of fabric	-	-	_	-	NO
5-05 →	Sideways to right (Straight)		Ś	For attaching appliqué on tubular pieces of fabric	_	-	_	-	NO
5-06	Diagonally left down (Straight)		Ś	For attaching appliqué on tubular pieces of fabric and mitering corners	-	-	-	_	NO
5-07 ↓	Forward (Straight)		Ś	For attaching appliqué on tubular pieces of fabric and mitering corners	-	-	-	-	NO
5-08	Diagonally right down (Straight)		Ś	For attaching appliqué on tubular pieces of fabric and mitering corners	-	-	-	-	NO
5-09 ~~~~ ~~	Sideways to left (Zigzag)		Ś	For attaching appliqué on tubular pieces of fabric	-	-	_	_	NO
5-10 ∧∽∽ →	Sideways to right (Zigzag)		Ś	For attaching appliqué on tubular pieces of fabric	_	-	_	-	NO

Stitch	Stitch name	Press	er foot	Applications		ch width n (inch)]		ch length n (inch)]	Twin needleNONONONONO
Suten	Such hame	60	5C	Applications	Auto.	Manual	Auto.	Manual	needle
5-11 {{↓	Forward (Zigzag)		Ś	For attaching appliqué on tubular pieces of fabric and mitering corners			-	-	NO
5-12 {	Reverse (Zigzag)		Ś	For attaching appliqué on tubular pieces of fabric and mitering corners	_	-	_	-	NO
0-01	Piecing stitch (Middle)	i J	C	Piecework/patchwork	_	-	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-02	Piecing stitch (Right)	₩ J J	Ś	Piecework/patchwork 6.5 mm (approx. 1/4 inch) right seam allowance	5.50 (7/32)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-03 ; ; ; ; ; ;	Piecing stitch (Left)	H J	Ś	Piecework/patchwork 6.5 mm (approx. 1/4 inch) left seam allowance	1.50 (1/16)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-04 -:::- :::- :::- :::- :::- :::- Q	Hand-look quilting		Ś	Quilting stitch made to look like hand quilting stitch	3.50 0.00 - 7.00 (0 - 1/4)		2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-05 	Basting stitch	₩ J	Ś	Basting	3.50 0.00 - 7.00 (1/8) (0 - 1/4)		20 (3/4)	5 - 30 (3/16 - 1-3/16)	NO
Q-06 47 47 47 47 47	Stem stitch	H J	Ś	Reinforced stitching, sewing and decorative applications	1.00 (1/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-07	Quilting appliqué zigzag stitch		Ś	Zigzag stitch for quilting and sewing on appliqué quilt pieces	3.50 (1/8)	0.00 - 7.00 (0 - 1/4)	1.6 (1/16)	0.0 - 5.0 (0 - 3/16)	NO
Q-08	Zigzag stitch (Right)		Ś	Start from right needle position, zigzag sew at left	3.50 (1/8)	2.50 - 5.00 (3/32 - 3/16)	1.6 (1/16)	0.3 - 5.0 (1/64 - 3/16)	NO
Q-09	Zigzag stitch (Left)	H J	Ś	Start from left needle position, zigzag sew at right	3.50 (1/8)	2.50 - 5.00 (3/32 - 3/16)	1.6 (1/16)	0.3 - 5.0 (1/64 - 3/16)	NO
Q-10 <` <> <` <> <`	2 steps elastic zigzag		Ś	Overcasting (medium weight and stretch fabrics), tape and elastic	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-11	3 steps elastic zigzag	i J	Ś	Overcasting (medium, heavyweight and stretch fabrics), tape and elastic	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-12 11110	Quilting appliqué stitch	i i j	Ś	Quilting stitch for invisible appliqué or attaching binding	2.00 (1/16)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-13	Shell tuck edge		Ś	Shell tuck edge finish on fabrics	4.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-14	Blanket stitch	₩IJ G	Ś	Appliqués, decorative blanket stitch	3.50 (1/8)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
۹-15 کېږې	Quilting stippling	e j	Ś	Background quilting	7.00 (1/4)	0.00 - 7.00 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-16 [[[Overcasting stitch	H J	Ś	Stretch knit seam	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	NO

Stitch	Stitch name	Presser foot		Applications		h width (inch)]	Stitc [mn	Twin	
Such	Suten name	69	<u>0</u> 0	Αρριτατιοπο	Auto.	Manual	Auto.	Manual	needle
Q-17 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Tape attaching		Ś	Attaching tape to seam in stretch fabric	5.50 (7/32)	0.00 - 7.00 (0 - 1/4)	1.4 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-18	Serpentine stitch		Ś	Decorative stitching and attaching elastic	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-19	Feather stitch		Ś	Fagoting, decorative stitching	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-20	Fagoting cross stitch		Ś	Fagoting, bridging and decorative stitching	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-21 y-^.v-^.	Couching stitch		Ś	Decorative stitching, attaching cord and couching	5.00 0.00 - 7.00 (3/16) (0 - 1/4)		1.2 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-22	Patchwork double overlock stitch	Ĩ	Ś	Patchwork stitches, decorative stitching	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-23	Smocking stitch		Ś	Smocking, decorative stitching	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-24	Rick-rack stitch		Ś	Decorative top stitching	4.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.5 (3/32)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-25 MMM	Decorative stitch		Ś	Decorative stitching and appliqué	6.00 (15/64)	0.00 - 7.00 (0 - 1/4)	1.0 (1/16)	0.2 - 5.0 (1/64 - 3/16)	NO
Q-26 2000	Decorative stitch	Ĩ	Ś	Decorative stitching	5.50 (7/32)	0.00 - 7.00 (0 - 1/4)	1.6 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-27 1+1+1+1+1+1+1+1+1+1+1+1+1+1+1+1+1+1+1+	Hemstitching		Ś	Heirloom, decorative hems	5.00 (3/16)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-28 ↓↓	Hemstitching		Ś	Decorative hems and bridging stitch	6.00 (15/64)	0.00 - 7.00 (0 - 1/4)	2.0 (1/16)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-29	Single diamond overcast	Ĩ	Ś	Reinforcement and seaming stretch fabric	6.00 (15/64)	0.00 - 7.00 (0 - 1/4)	3.0 (1/8)	0.4 - 5.0 (1/64 - 3/16)	NO
Q-30	Overcasting stitch	" F	Ś	Reinforcement of stretch fabric or decorative stitching	4.00 (3/16)	0.00 - 7.00 (0 - 1/4)	4.0 (3/16)	0.4 - 5.0 (1/64 - 3/16)	NO

S Sewing

Chapter **3** Character/Decorative Stitches


Selecting Decorative Stitch Patterns/7mm Decorative Stitch Patterns/Satin Stitch Patterns/7mm Satin Stitch Patterns/Cross Stitch/Utility Decorative Stitch Patterns

SELECTING STITCH PATTERNS77

Patterns/Cross Stitch/Utility Decorative Stitch Patterns
Characters78
Deleting Characters
Adjusting the Character Spacing 80
SEWING STITCH PATTERNS81
Sewing Attractive Finishes81
Basic Sewing81
Making Adjustments82
EDITING STITCH PATTERNS
Key Functions
Changing the Size
Changing the Length (for 7mm Satin Stitch Patterns Only)86
Creating a Vertical Mirror Image86
Creating a Horizontal Mirror Image86
Sewing a Pattern Continuously
Changing Thread Density (for Satin Stitch Patterns Only)87
Returning to the Beginning of the Pattern
Checking the Image88
COMBINING STITCH PATTERNS
Before Combining89
Combining Various Stitch Patterns89
Combining Large and Small Stitch Patterns
Combining Horizontal Mirror Image Stitch Patterns
Combining Stitch Patterns of Different Length
Making Step Stitch Patterns
(for 7mm Satin Stitch Patterns Only)92
More Examples
USING THE MEMORY FUNCTION
Stitch Data Precautions94
Types of Stitch Data that can be Used
Types of USB Devices/Media that can be Used
 Connecting Your Machine to the Computer
Save Data
Saving Stitch Patterns in the Machine's Memory
■ If the Memory is Full
Saving Stitch Patterns to USB Media
Saving Stitch Patterns in the Computer
Retrieving Stitch Patterns from the Machine's Memory
Recalling from USB Media
Recalling from the Computer100
~ ·

SELECTING STITCH PATTERNS


Press Character/Decorative stitch patterns.

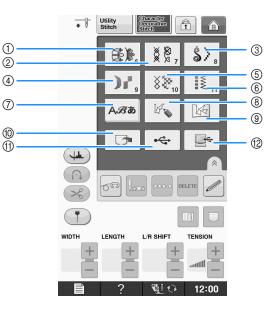


- ① Decorative stitch patterns
- ② 7mm decorative stitch patterns. You can set stitch length and width.
- ③ Satin stitch patterns
- ④ 7mm satin stitch patterns. You can set stitch length and width.
- (5) Cross stitch
- 6 Utility decorative stitch patterns
- ⑦ Characters (Gothic font, Handwriting font, Outline, Cyrillic font, Japanese font)
- (8) Press this key to create your own stitches with the "MY CUSTOM STITCH" function (see page S-102)
- Patterns stored in "MY CUSTOM STITCH" (see page S-102)
- 1 Patterns saved in the machine's memory (see page S-98)
- (1) Patterns saved in USB media (see page S-99)
- (2) Patterns saved on the computer (see page S-100)

Note

• If the screen is locked ([]), unlock the screen by pressing [] . While the screen is locked, no other key can be operated.

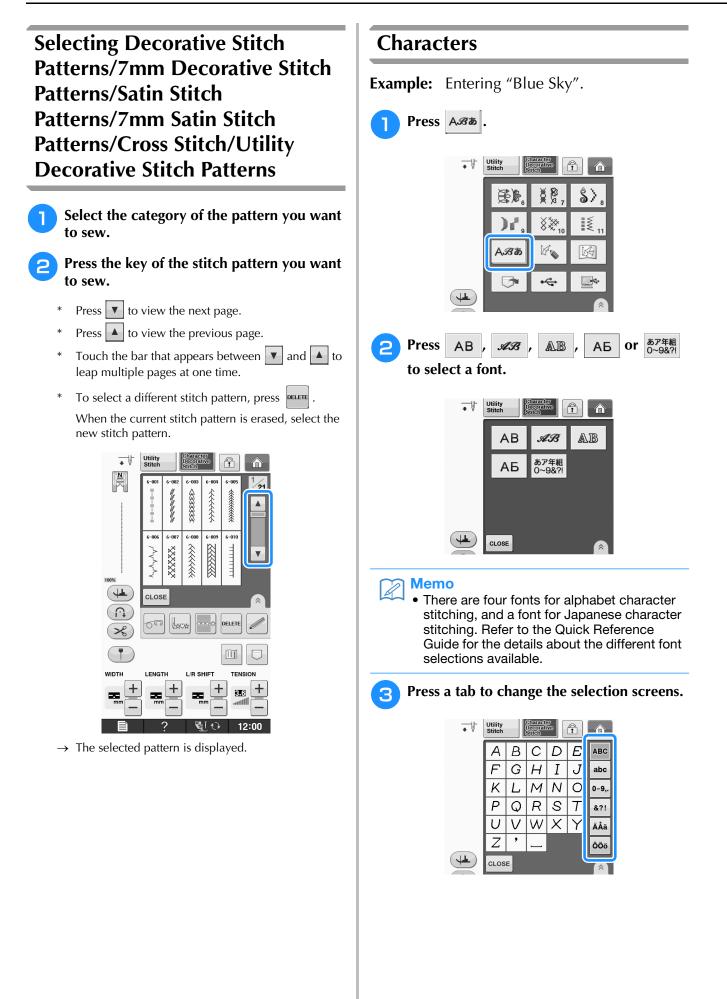

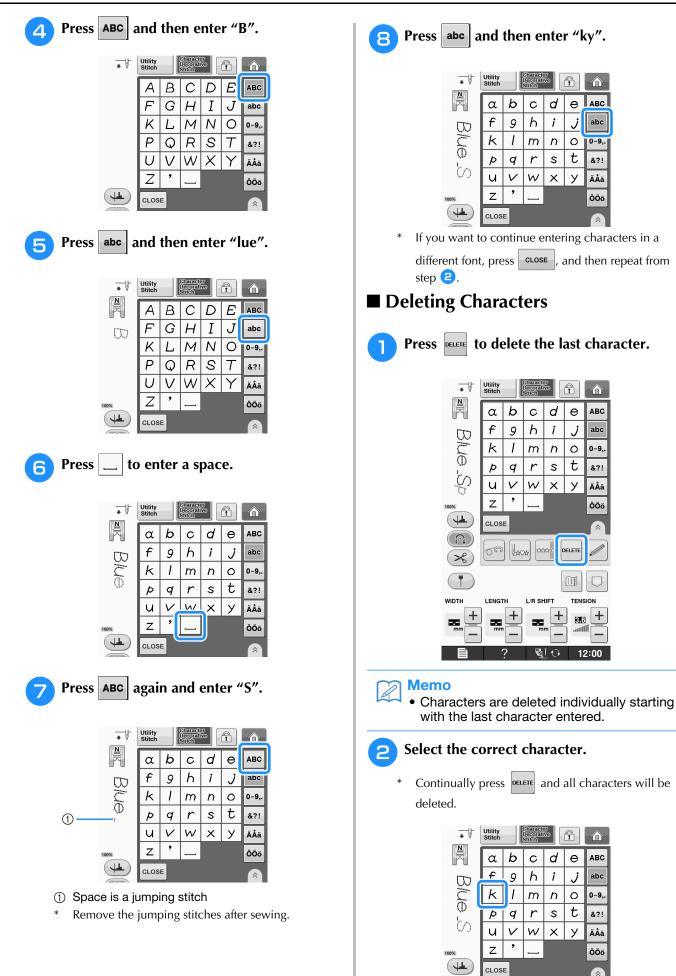

Sewing S-79

■ Adjusting the Character Spacing

The space between the characters can be adjusted.



* Press is to display spacing on the screen.



 \rightarrow The character spacing window appears.

🔁 Press 🗕 or 🕂 to adjust character spacing.



* Press + to increase the character spacing and

press – to decrease the character spacing.

Example:

* Each setting equals a specific distance between characters.

	Value	mm
0 10	0	0
	1	0.18
Blue Blue S	2	0.36
Blu Blue	3	0.54
	4	0.72
Ω Φ	5	0.9
e Sky Sky	6	1.08
Z Z	7	1.26
2	8	1.44
	9	1.62
	10	1.8

- The default setting is "0". No number less than "0" can be set.
- Changing character spacing by this method, pertains to all characters. Spacing changes are valid not only while entering characters but also before and after the entering of characters.


SEWING STITCH PATTERNS

Sewing Attractive Finishes

To achieve attractive results when sewing character/decorative stitches, check the table below for the proper fabric/thread/needle combinations.

Note


- Other factors, such as fabric thickness, stabilizer material, etc., also have an effect on the stitch, so you should always sew a few trial stitches before beginning your project.
 - When sewing satin stitch patterns, there may be shrinking or bunching of stitches, so be sure to attach a stabilizer material.
 - Guide the fabric with your hand to keep the fabric feeding straight and even during sewing.

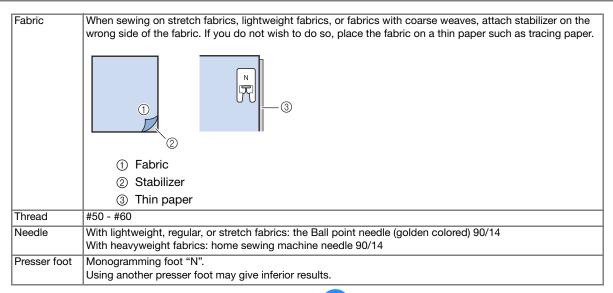


4

Basic Sewing

 - - Select a stitch pattern.
 - Attach monogramming foot "N".
- Place the fabric under the presser foot, pull the upper thread out to the side, and then lower the presser foot.

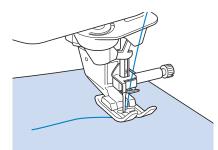



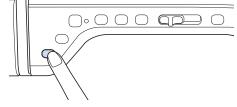

CAUTION


When sewing 7 mm satin stitch patterns and the stitches are bunched, lengthen the stitch length. If you continue sewing when the stitches are bunched, the needle may bend or break ("Setting the Stitch Length" on page S-10).

Memo

 If the fabric is pulled or pushed during sewing, the pattern may not turn out correctly. Also, depending on the pattern, there may be movement to the left and right as well as front and back. Guide the fabric with your hand to keep the fabric feeding straight and even during sewing.


Press the "Start/Stop" button to stop sewing.

Press the "Reverse Stitch" button or "Reinforcement Stitch" button to sew reinforcement stitches.

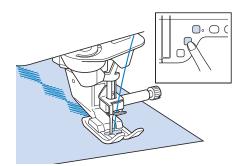

Memo

• When sewing character stitches, the machine automatically sews reinforcement stitches at the beginning and end of each character.

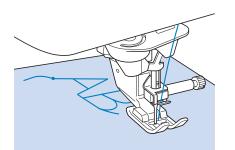

• When sewing is completed, trim any excess thread between letters.



🟒 Note

 When sewing some patterns, the needle will temporarily pause in the raised position while the fabric is fed due to the operation of the needle bar separation mechanism which is used in this machine. At such times, a clicking sound different from the sound generated during sewing will be heard. This sound is normal and is not the sign of a malfunction.


Making Adjustments

Your stitch pattern may sometimes turn out poorly, depending on the type or thickness of fabric, the stabilizer material used, sewing speed, etc. If your sewing does not turn out well, sew trial stitches using the same conditions as the real sewing, and adjust the stitch pattern as explained below. If the pattern does not turn out well even after making

adjustments based on the \bigcirc pattern, make

adjustments for each pattern individually.



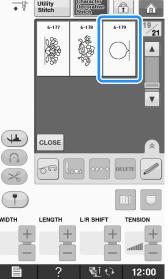


If the pattern is bunched:

Press + in the "Fine Adjust Verti." display.



Attach monogramming foot "N" and sew the pattern.

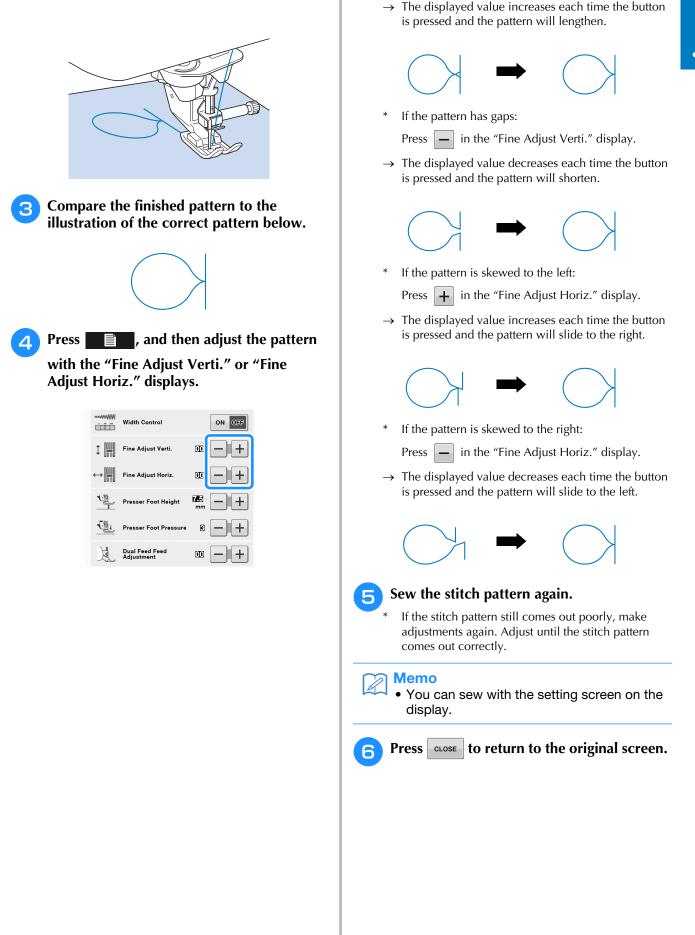

S


EDITING STITCH PATTERNS


Key Functions

You can create just the finish you want using the editing functions. Make patterns larger or smaller, make mirror images, etc.

_{しく}Note

• Some editing functions cannot be used with certain stitch patterns. Only the functions for the displayed keys are available when a pattern is selected.

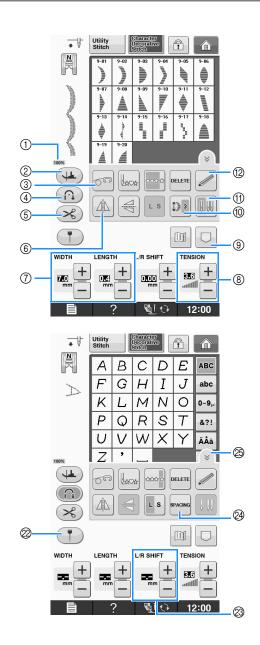

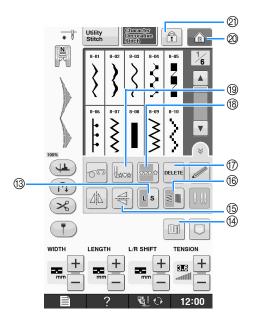

No.	Display	Key Name	Explanation	Page						
1	100%	Pattern display size	Show the approximate size of the pattern selected.	S-21						
			100% : Nearly the same size as the sewn pattern							
			50% : 1/2 the size of the sewn pattern							
			25% : 1/4 the size of the sewn pattern							
			* The actual size of the sewn pattern may differ depending on the type of fabric and thread that is used.							

No.	Display	Key Name	Explanation	Page
2	(Pivot key	Press this key to select the pivot setting. When the pivot setting is selected, stopping the machine lowers the needle and slightly raises the presser foot automatically. In addition, when sewing is restarted, the presser foot is automatically lowered.	S-15
			• If this key appears as , the pivot function cannot be used.	
			 Be sure the "Needle Position - UP/DOWN" of Machine Settings is set to the down position. 	
3	67	Free motion mode key	Press this key to enter free motion sewing mode. The feed dog is lowered and presser foot is raised to a height appropriate for free motion quilting.	S-40
4	$\bigcirc \bigcirc$	Automatic reinforcement stitch key	Press this key to turn on the automatic reinforcement stitching mode.	S-5
5	×	Automatic thread cutting key	Press this key to turn on the automatic thread cutting mode.	S-13
6		Horizontal mirror image key	After selecting the stitch pattern, use this key to create a horizontal mirror image of the stitch pattern.	S-86
7	WIDTH LENGTH	Stitch width and stitch length key	Shows the stitch width and stitch length of the selected stitch pattern. The machine default settings are highlighted.	S-10 to S-12
8		Thread tension key	Shows the thread tension setting for the selected stitch pattern. The machine default settings are highlighted	S-12
9		Memory key	Use this key to save stitch pattern combinations.	S-95 to S-96
10	[] 3	Elongation key	When 7mm satin stitch patterns are selected, press this key to choose from 5 automatic length settings, without changing the stitch zigzag width or stitch length settings.	S-86
1	00	Needle mode selection key (Single/Double)	Press this key to choose single needle sewing or twin needle sewing.	"Basic operations"
12		Sensor function key	Press this key to use the sensor function.	
13	LS	Size selection key	Use this key to select the size of the stitch pattern (large, small).	S-86
14		Image key	Press this key to display an enlarged image of the selected stitch pattern.	S-88
15		Vertical mirror image key	After selecting the stitch pattern, use this key to create a vertical mirror image of the stitch pattern.	S-86
16		Thread density key	After selecting the stitch pattern, use this key to change the thread density of the pattern.	S-87
Ŵ	DELETE	Delete key	When you make a mistake selecting a stitch pattern, use this key to delete the mistake. When you make a mistake in combining stitch patterns, use this key to delete stitch patterns.	S-78, S-79
18		Single/Repeat sewing key	Press this key to choose single stitches or continuous stitches.	S-86
19	Uxox	Back to beginning key	When sewing is stopped, press this key to return to the beginning of the pattern.	S-87
20	Â	Home page screen key	(For embroidery and sewing machine only) Press this key to return to the home page screen.	-
2)	Î	Screen lock key	Press this key to lock the screen. When the screen is locked, the various settings, such as the stitch width and stitch length, are locked and cannot be changed. Press this key again to unlock the settings.	S-18
2		Guideline marker key (For models equipped with the guideline marker)	Press this key to display the guideline marker along the sewing line. The guideline marker makes it easier to align stitches with the fabric edge or other marker on the fabric.	S-14
8		"L/R SHIFT" key	Press + to shift the stitch pattern to the right or press - to shift the pattern to the left. This feature is not available on all patterns. Only those applicable will be shifted. The machine default setting is highlighted.	S-11
24	SPACING	Character spacing key	Press this key to change the spacing of character patterns.	S-80
25	*	Function page key	Press this key to show all the functions available in this screen.	S-80

Changing the Size

Select a stitch pattern, then press **Ls** to change the size of the stitch pattern. The stitch pattern will be sewn in the size highlighted on the key.




Memo

- If you continue entering stitch patterns after changing the size, those patterns will also be sewn in that size.
- You cannot change the size of combined stitch patterns once the stitch pattern is entered.

Actual Stitch Pattern Size


* The size differs depending on the fabric and threads.

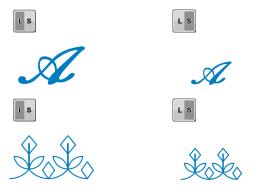

Changing the Length (for 7mm Satin Stitch Patterns Only)


When 7mm satin stitch patterns are selected, press

D³ to choose from 5 automatic length settings, without changing the stitch zigzag width or stitch length settings.

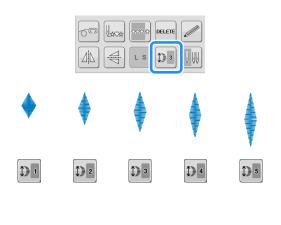

Creating a Vertical Mirror Image

To create a vertical mirror image, select a stitch pattern then press \bigcirc .

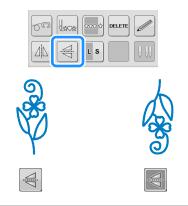


Creating a Horizontal Mirror Image

To create a horizontal mirror image, select a stitch pattern then press $\boxed{1}$.

ಬಜ್ಜಿಎಜ್ಜಿ	<u>क्ष</u> र्य

Sewing a Pattern Continuously

Press to select continuous sewing or single stitch sewing.

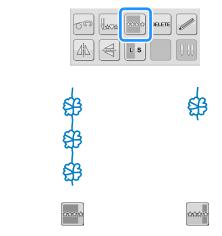


Memo

• To finish a complete motif while sewing the pattern continuously, you can press the

key while sewing. The machine will automatically stop when the motif is finished.

Changing Thread Density (for Satin Stitch Patterns Only)

After selecting a satin stitch pattern, press select your preferred thread density.

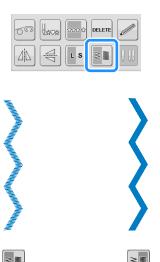

A CAUTION

If the stitches bunch when thread density is

changed to **EXAMPLE**, return the thread density to

If you continue sewing when the stitches are bunched, the needle may bend or break.

Memo

- Even if you select a new pattern after changing the thread density, the thread density remains the same until you change it.
- You cannot change thread density for a combined pattern after additional patterns are added.

Returning to the Beginning of the Pattern

When sewing character/decorative stitches, you can return to the beginning of the pattern after trial sewing or when the stitching is sewn incorrectly.

Press the "Start/Stop" button to stop the

machine, and then press



→ Sewing returns to the beginning of the selected pattern ("W") from the point where sewing was stopped.

Memo

 If this key is pressed when sewing is stopped, patterns can be added at the end of a combined stitch pattern. (In this example, "!" is added.)






Press the "Start/Stop" button to continue sewing.

Checking the Image

You can display an approximate size image of the selected stitch pattern. You can also check and change the colors of the image on the screen.




 \rightarrow An image of the selected pattern is displayed.

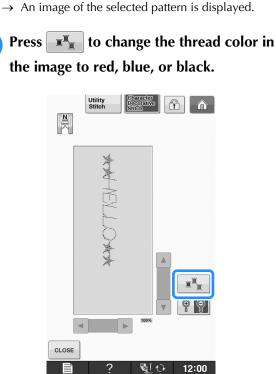


 \rightarrow The color changes every time you press the button.



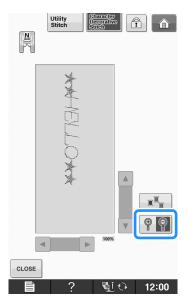

Use **I** / **I** / **I** / **I** to view any part of 4 the image that extends out of the viewable display area.

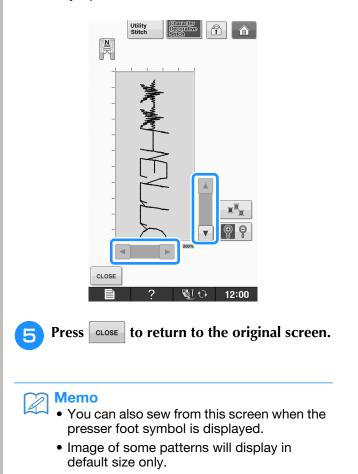

COMBINING STITCH PATTERNS


You can combine many varieties of stitch patterns, such as character stitches, cross stitches, satin stitches, or stitches you design with "MY CUSTOM STITCH" function (see page S-102 for information about "MY CUSTOM STITCH"). You can also combine stitch patterns of different sizes, mirror image stitch patterns and others.


Before Combining

Single stitch sewing is automatically selected for sewing combined patterns. If you want to sew the

pattern continuously, press after finishing the stitch pattern combination.

When changing sizes, creating mirror images, or making other adjustments to a combined stitch pattern, be sure to edit the selected stitch pattern before selecting the next one. You cannot edit a stitch pattern once the next stitch pattern is selected.

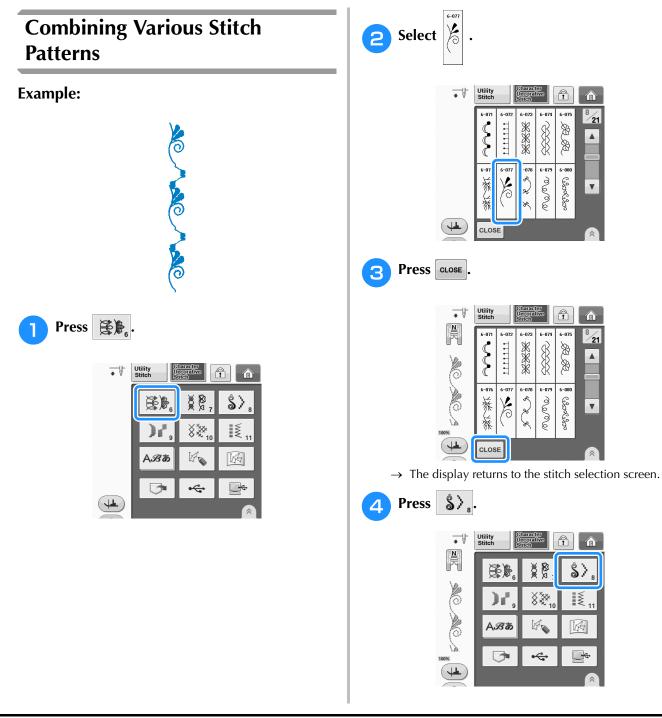

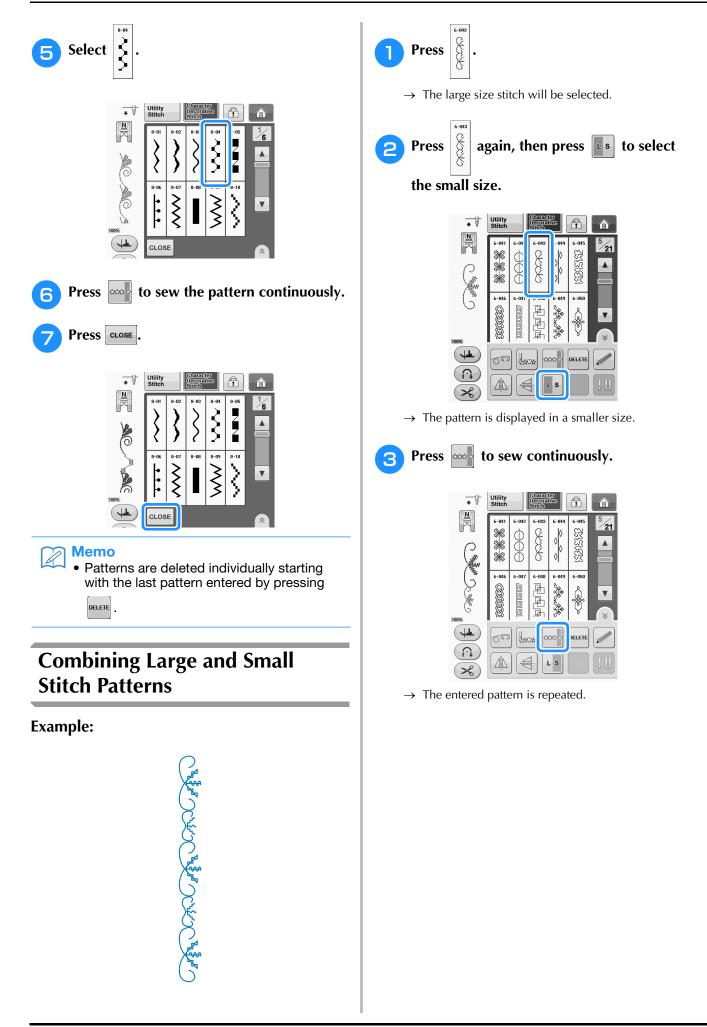


Combining Horizontal Mirror Image Stitch Patterns Example: Example: a mana 3 Press Press 3 again, then press 1. Press • f N PQ anno 金田金田 000 3 50 50 6-09 6-09 6-09 B 53 53 53 53 2002 C R 8 $(\mathbf{\mu})$ DELETE 00 1000 \cap 10 4 s $(\boldsymbol{\varkappa})$ \rightarrow The pattern is flipped along a vertical axis. Press 🎰 3 Utility Stitch • Î ⁰⁄21 Ser Contraction 金田金 202 anno ß Ð 6-099 6-100 6-097 6-09 6-096 63 63 63 808 200200 2002000 \$ V \$


ELETE

 \rightarrow The entered pattern is repeated.

(∩ %


Combining Stitch Patterns of Different Length

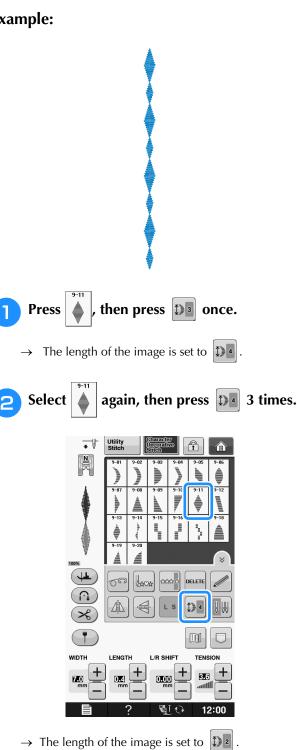

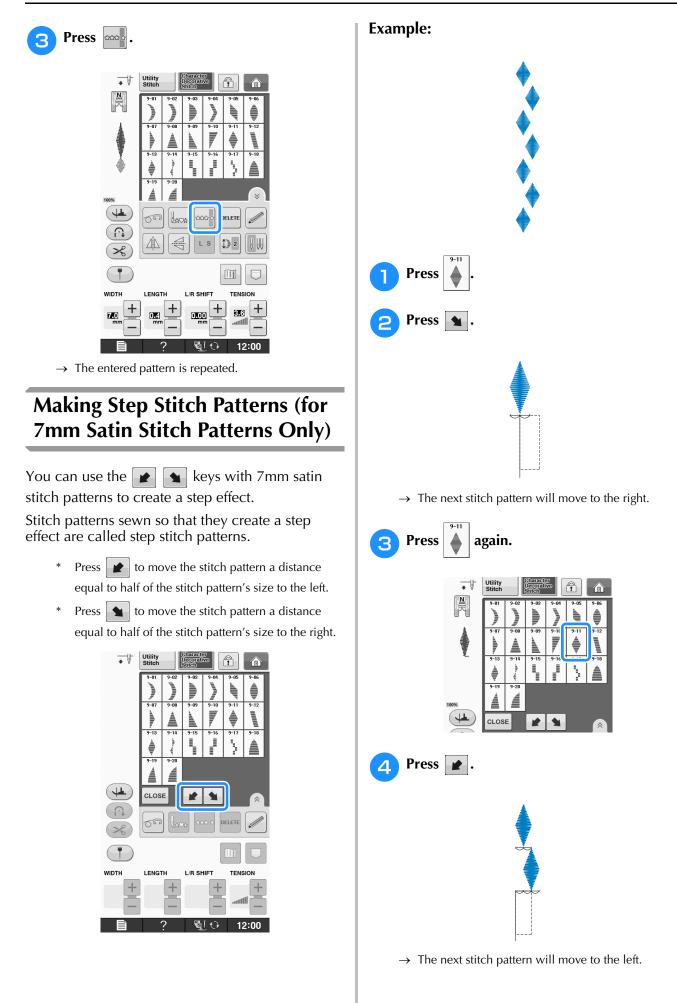

s 3

Character/Decorative Stitches

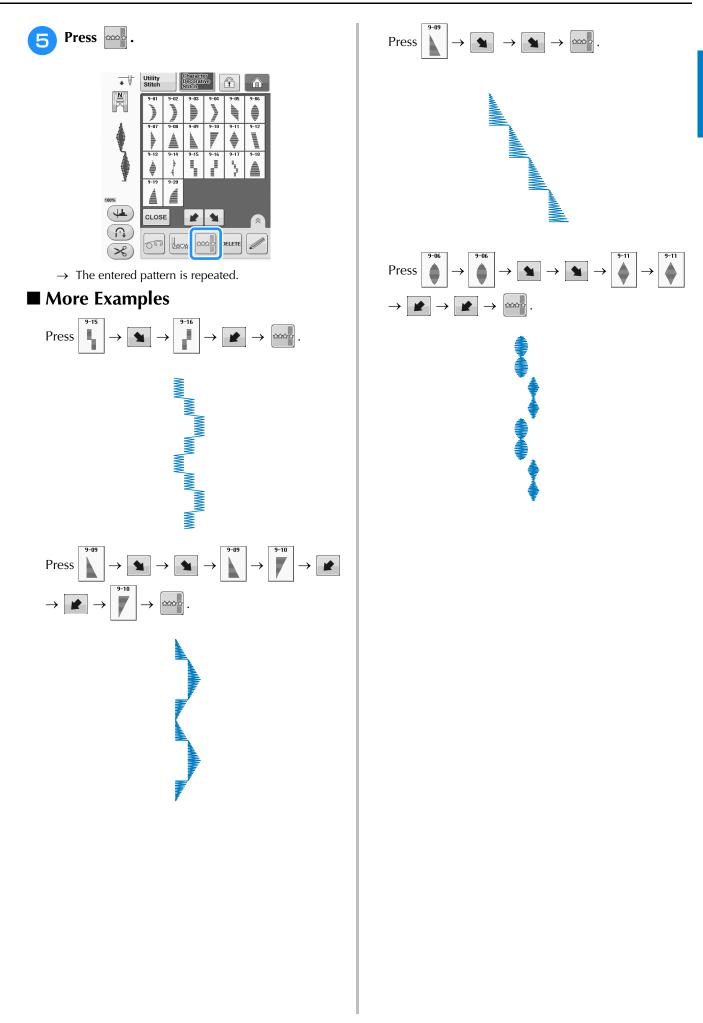

USING THE MEMORY FUNCTION

Stitch Data Precautions

Observe the following precautions when using stitch data other than that created and saved in this machine.

■ Types of Stitch Data that can be Used

• In the Character/Decorative Stitch memory, ".pmv", ".pmx" and ".pmu" stitch data files can be used with this machine. ".pmx" or ".pmu" stitch data files can be retrieved; however, when the machine is used to save the file, it is saved as a ".pmv" stitch data file. Using data other than that saved using our data design systems or machines may cause the machine to malfunction.

■ Types of USB Devices/Media that can be Used

Stitch data can be saved to or recalled from USB external media. Use external media that meets the following specifications.

- USB Flash drive (USB Flash memory)
- USB Floppy disk drive

Stitch data can be recalled only from;

• USB CD-ROM, CD-R, CD-RW drives

You can also use the following types of media with the USB Memory Card Reader/USB card writer module.

- Secure Digital (SD) Card
- CompactFlash
- Memory Stick
- Smart Media
- Multi Media Card (MMC)
- xD-Picture Card

Note

- Some USB media may not be usable with this machine. Please visit our website for more details.
- The access lamp will begin blinking after inserting USB Devices/Media, and it will take about 5 to 6 seconds to recognize the Devices/Media. (Time will differ depending on the USB Device/Media).
- To create file folders, use a computer.

Connecting Your Machine to the Computer

- Compatible models: IBM PC with a USB port as standard equipment IBM PC-compatible computer equipped with a USB port as standard equipment
- Compatible operating systems: Microsoft Windows XP, Windows Vista, Windows 7, Windows 8

■ Precautions on Using the Computer to Create and Save Data

- If the name of the stitch data file/folder cannot be identified, for example, because the name contains special characters, the file/folder is not displayed. If this occurs, change the name of the file/folder. We recommend using the 26 letters of the alphabet (uppercase and lowercase), the numbers 0 through 9, "-", and "_".
- Stitch data in a folder created in USB media can be retrieved.
- Do not create folders in "Removable Disk" on a computer. If stitch data is stored in a folder in "Removable Disk", that stitch data cannot be retrieved by the machine.

Saving Stitch Patterns in the Machine's Memory


You can save often used stitch patterns in the machine's memory. A total of about 511KB of stitch patterns can be saved in the machine's memory.

Note

• Do not turn the main power to OFF while the "Saving" screen is displayed. You will lose the stitch pattern you are saving.

🦙 Memo

- It takes a few seconds to save a stitch pattern.
- See page S-98 for information on retrieving a saved stitch pattern.

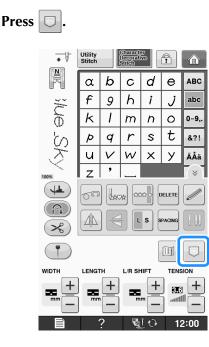



* Press **CLOSE** to return to the original screen without saving.




→ The "Saving" screen is displayed. When the pattern is saved, the display returns to the original screen automatically.

■ If the Memory is Full

If the following screen appears while you are trying to save a pattern on the machine's memory, the memory is too full to hold the currently selected stitch pattern. To save the stitch pattern in the machine's memory, you have to delete a previously saved stitch pattern.




* Press **CANCEL** to return to the original screen without saving.

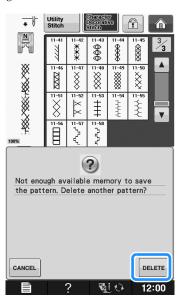




Choose a stitch pattern to delete.

⁶ Press **CLOSE** if you decide not to delete the stitch pattern.

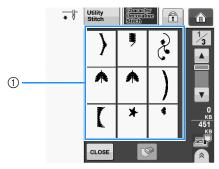

1 Pockets holding saved stitch patterns

S

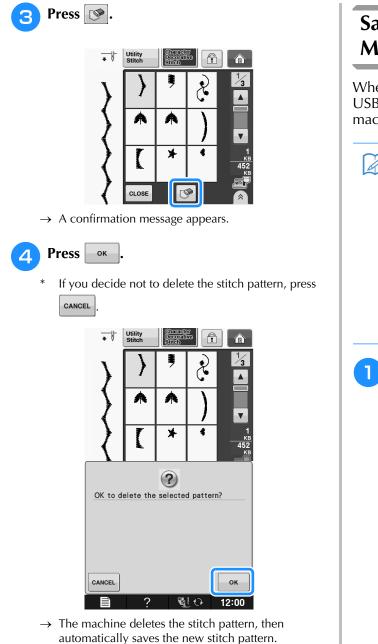

Saving Stitch Patterns to USB Media

When sending stitch patterns from the machine to USB media, plug the USB media into the machine's top USB port.

 
Memo

- USB media is commercially available, but some USB media may not be usable with this machine. Please visit our website for more details.
- Depending on the type of USB media being used, either directly plug the USB device into the machine's USB port or plug the USB media Reader/Writer into the machine's USB port.
- The USB media can be inserted or removed at any time except when saving or deleting.





Insert the USB media into the USB port on the machine.

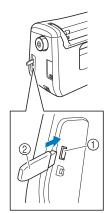

① USB port

② USB media

🟒 Note

• The processing speed may vary by quantity of data.

- 3 Press <
 - * Press **CLOSE** to return to the original screen without saving.



→ The "Saving" screen is displayed. When the pattern is saved, the display returns to the original screen automatically.

🖌 Note

• Do not insert or remove USB media while "Saving" screen is displayed. You will lose some or all of the pattern you are saving.

Saving Stitch Patterns in the Computer

Using the included USB cable, the machine can be connected to your computer, and the stitch patterns can be temporarily retrieved from and saved in the "Removable Disk" folder in your computer. A total of about 772KB of stitch patterns can be saved in the "Removable Disk", but the saved stitch patterns are deleted when the machine is turned OFF.

For Computers and Operating Systems, see "Connecting Your Machine to the Computer" on page S-94.

V Note


• Do not turn the main power to OFF while the "Saving" screen is displayed. You will lose the stitch pattern you are saving.

Plug the USB cable connector into the corresponding USB ports for the computer and for the machine.



Turn on your computer and select "Computer (My computer)".

* The USB cable can be plugged into the USB ports on the computer and machine whether or not they are turned on.

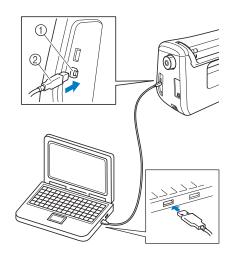


- ① USB port for computer
- ② USB cable connector

→ The "Removable Disk" icon will appear in "Computer (My computer)" on the computer.

_レNote

- The connectors on the USB cable can only be inserted into a port in one direction. If it is difficult to insert the connector, do not insert it with force and check the orientation of the connector.
- For details on the position of the USB port on the computer (or USB hub), refer to the instruction manual for the corresponding equipment.

3 Press 🗔.

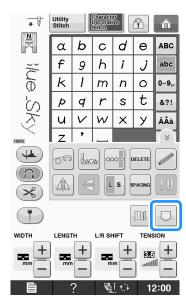

4 Press

* Press **CLOSE** to return to the original screen without saving.



→ The stitch pattern will be temporarily saved to "Removable Disk" under "Computer (My computer)". **5** Select the stitch pattern's .pmv file and copy the file to the computer.

Organize • Dpen Burn Newfolder	E • (
🛠 Favorites	
Gij Libraries	
ug cennes	
1 Computer 999999466.pmx	
Retwork	
- Mermon	

V Note

 Do not turn off the machine while the "Saving" screen is showing. You may lose the data.

Retrieving Stitch Patterns from the Machine's Memory






 \rightarrow The pocket selection screen appears.

Choose a stitch pattern to retrieve.


- * If the entire saved stitch pattern is not displayed, press the thumbnail.
- * Press **CLOSE** to return to the original screen without saving.

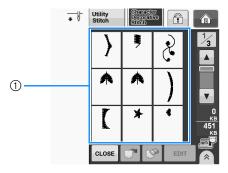

① Saved stitch patterns



* Press 🔝 to delete the stitch pattern.

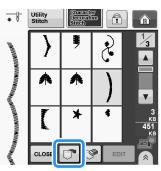


→ The selected stitch pattern is retrieved and the sewing screen will be displayed.

Recalling from USB Media

You can recall a specific stitch pattern from either direct USB media or a folder in the USB media. If the stitch pattern is in a folder, check each folder to find the stitch pattern.



 Insert the USB Media into the USB port on the machine (see page S-96).

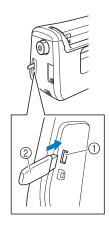

① USB port

② USB media





→ Stitch patterns and a folder in a top folder are displayed.


Press when there is a subfolder to

3


sort two or more stitch patterns to USB

media, the stitch pattern in the subfolder is displayed.

* Press **CLOSE** to return to the original screen without recalling.

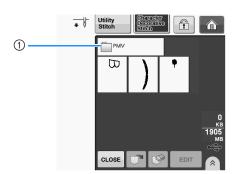

→ Stitch patterns and a subfolder within a folder are displayed. Select the folder to display the patterns in it.

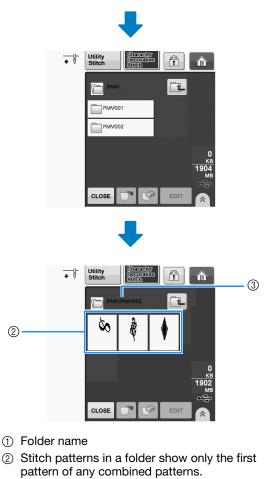

③ Path


- * Press to return to the previous folder.
- * Use the computer to create folders. Folders cannot be created with the machine.

Press the key of the stitch pattern you want to recall.

S




* Press 🕑 to delete the stitch pattern. The pattern will be deleted from the USB media.

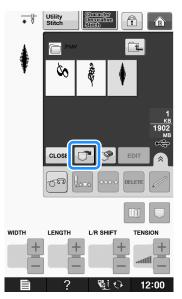


→ The selected stitch pattern is recalled and the sewing screen will be displayed.

Recalling from the Computer

 For Computers and Operating Systems, see "Connecting Your Machine to the Computer" on page S-94

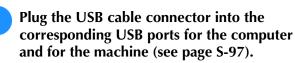

On the computer, open "Computer (My computer)" then go to "Removable Disk".

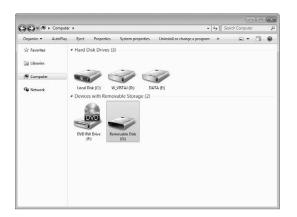

3 Move/copy the pattern data to "Removable Disk".

Organize Share with New folder	z • 🗍
党 Favorites	This folder is empty.
🗊 Libraries	
- Computer	
I Computer	
Ciju Network	
	BODDOG 3 Copy to Removable Disk (G:)

 $\rightarrow\,$ Stitch pattern data in "Removable Disk" is written to the machine.

🟒 Note

- While data is being written, do not disconnect the USB cable.
- Do not create folders within "Removable Disk". Since folders are not displayed, stitch pattern data within folders cannot be recalled.





 \rightarrow The stitch patterns in the computer are displayed on the selection screen.


5 Press the key of the stitch pattern you want to recall.

Press **CLOSE** to return to the original screen without recalling.

2



Press v delete the stitch pattern.
 The pattern will be deleted from the "Removable Disk" folder in your computer.

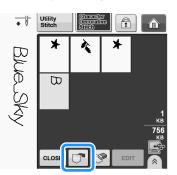

→ The selected stitch pattern is recalled and the sewing screen will be displayed.

Vote

• The pattern recalled from the computer is only temporarily written to the machine. It is erased from the machine when the machine is turned off. If you wish to keep the stitch pattern, store it in the machine ("Saving Stitch Patterns in the Machine's Memory" on page S-95).

S Sewing

Chapter **4** MY CUSTOM STITCH

DESIGNING A STITCH103

ENTERING STITCH DATA	105
Key Functions Moving a Point Moving Part or All of the Design Inserting New Points USING STORED CUSTOM STITCHES	107 108 109
Storing Custom Stitches in Your List ■ If the Memory is Full Retrieving Stored Stitches	110

DESIGNING A STITCH


By using the "MY CUSTOM STITCH" function, you can register stitches you have created yourself. You can also sew designs combining "MY CUSTOM STITCH" creations with built-in characters (see page S-89).

Memo

- Stitches that you create with "MY CUSTOM STITCH" can be a maximum of 7 mm (approx. 9/32 inch) wide and 37 mm (approx. 1-1/3 inches) long.
- Stitches can be designed more easily with "MY CUSTOM STITCH" if you first draw the stitch on the included grid sheet.



Draw the stitch design on the grid sheet (part code SA507, GS3:X81277-151).

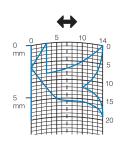

Memo

Simplify the design so that it can be sewn as a continuous line. For a more attractive stitch, close the design by intersecting lines.




If the design is to be repeated and linked, the start point and end point of the design should be at the same height.






Decide the spacing of the stitch.

By adjusting the spacing of a stitch, you can create various patterns with one stitch.

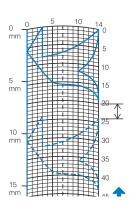

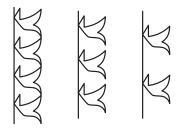

Place points where the pattern intersects 3 with the grid, and connect all the points with a line.

. 0		5	10	14 1 4 1 0
0 mm Ĕ	F/F			
'''' E	Æ			#
K	EH			₫ 5
Ë	NE			Ħ
E		1		10
5 -	E			15
mm E	田			
E	Ħ	1		20
F	Ħ			目20
E	E#		###	125
10 F	田	T i		\$ ²⁵
10 - E	FH		++++	Ħ




be sewn.

Δ

Determine the x and y coordinates of each of the marked points.

This will determine the stitch design that will

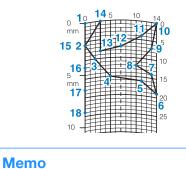

Examples of Custom Stitches

	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
ß	1	0	12	18	22	23	21	17	14	12	9	6	3	1	3	6
	\leftrightarrow	0	0	3	6	10	13	14	13	11	13	14	13	10	6	3
	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
\mathcal{E}	1	12	41	43	40	41	38	35	32	30	32	35	41	45	47	44
	\leftrightarrow	0	0	4	7	11	13	14	13	10	6	3	0	0	4	7
	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	1	45	47	50	54	56	55	51	45	70						
	\leftrightarrow	11	13	14	13	10	6	3	0	0						
									1							
					-	-										


	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
L.	1	0	30	32	32	32	33	35	35	37	35	32	30	30	29	26
pmy .	\leftrightarrow	0	0	1	7	10	12	11	8	12	14	14	11	5	3	8
\square	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
L L	1	24	18	13	12	13	10	12	8	12	7	12	6	10	5	10
	↔	10	13	14	14	12	11	10	9	8	6	6	3	2	0	2
	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	1	16	19	23	22	17	22	23	19	42						
	↔	1	0	0	6	10	6	0	0	0						

	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
\sim	\$	0	3	5	8	12	17	20	24	27	29	31	32	30	27	24
\frown	\leftrightarrow	0	5	8	11	13	14	14	13	12	11	9	6	3	1	0
	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
\mathcal{I}	\$	21	18	16	15	15	16	18	21	25	28	33	37	41	43	44
-	↔	0	1	3	5	8	10	12	13	14	14	13	11	8	5	0
ĺ	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	\$															
	\leftrightarrow															

	Stitch	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
	1	0	5	4	5	8	7	8	11	11	11	16	11	7	4	0
\land	⇔	7	7	3	7	7	0	7	7	3	7	7	3	0	3	7
X	Stitch	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
$\checkmark \not \models$	1	4	7	11	16	21	20	21	24	23	24	27	27	27	32	27
	⇔	11	14	11	7	7	11	7	7	14	7	7	11	7	7	11
	Stitch	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
	1	23	20	16	20	23	27	32								
	⇔	14	11	7	3	0	3	7								


ENTERING STITCH DATA

■ Key Functions

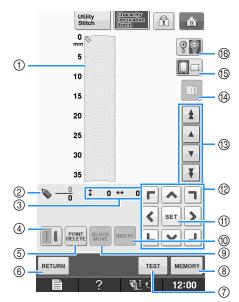


- ① This area displays the stitch being created.
- ② Displays the number of the present set point over the total number of points in the stitch.
- 3 Displays the y-coordinate of 5 over the x-coordinate of 5 .

No.	Display	Key Name	Explanation	Page
4		Single/triple stitching key	Press this key to select whether one or three stitches will be sewn between two points.	S-106
5	POINT DELETE	Point delete key	Press this key to delete a selected point.	S-107
6	RETURN	Return key	Press this key to exit the entering stitch data screen.	-
7	TEST	Test key	Press this key to sew a test of the stitch.	S-107, S-110
8	MEMORY	"MY CUSTOM STITCH" memory key	Press this key to store the stitch being created.	S-110
9	BLOCK MOVE	Block move key	Press this key to group points together and move them together.	S-108
10	INSERT	Insert key	Press this key to insert new points on the stitch design.	S-109
1	SET	Set key	Press this key to set a point on the stitch design.	S-106 to S-108
12	>	Arrow keys	Use these keys to move 🐚 over the display area.	S-106 to S-109
13		Point-to-point key	Use these keys to move v from point to point on the stitch, or to the first or last point entered on the stitch.	S-107 to S-109
14		Image key	Press this key to view an image of the stitch.	S-107
15		Grid direction key	Press this key to change the direction of the grid sheet.	S-106
16		Enlarger key	Press this key to see an enlarged version of the stitch being created.	S-106

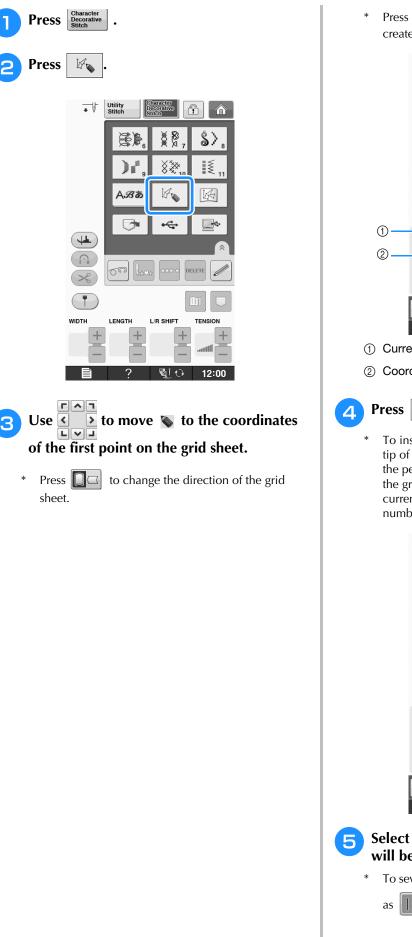


Press Press to enlarge the image of the stitch being created.

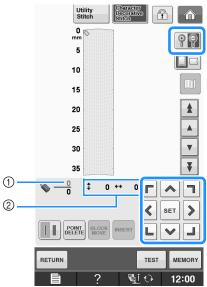

- ① Currently selected point/Total number of points
- Coordinates of

Press SET to add the point indicated by \Im .


To insert coordinates with the touch pen, move the tip of the pen to a desired point. Once you release the pen from the screen a point will be entered into the graph at those coordinates. The number of the currently selected points along with the total number of points will be displayed.

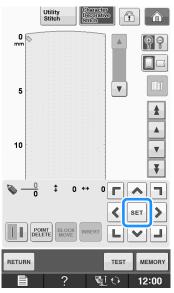

Select whether one stitch or three stitches will be sewn between the first two points.


To sew three stitches, press the key so that it appears



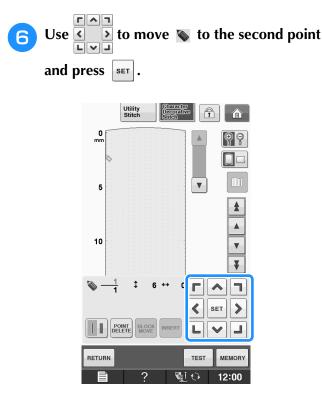


Repeat the steps above for each point that you have drawn on the grid sheet until the stitch design is drawn on the screen as a continuous line.

- * Press **Peint** to delete a selected point entered.
- * Press TEST to sew a test-run of the stitch.
- * Press RETURN to return to the original screen.
- * Press 🔟 to view an image of the stitch.

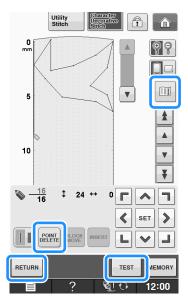

Memo


- If you have entered points that are too close together, the fabric may not feed properly. Edit the stitch data to leave a larger space between points.
- If the stitch design is to be repeated and linked, make sure that linking stitches are added so that the stitch designs will not overlap.

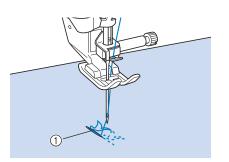

- ① Linking stitches
 - You can touch on the grid sheet to set the point, or you can also use a USB mouse.


Moving a Point

- Press A or v to move to the point that you want to move.
 - * To move 🔖 to the first point, press \blacksquare .
 - * To move 💊 to the last point, press 🚺

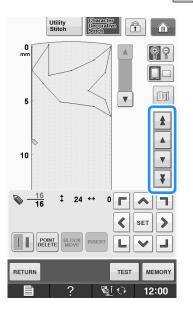

S




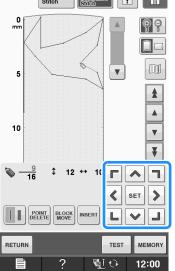


* You can also move 📎 by using the touch pen.

Moving Part or All of the Design

- Press **A** or **v** to move **v** to the first point of the section that you want to move.
 - * To move \mathbf{N} to the first point, press **\mathbf{1}**.
 - * To move 🔖 to the last point, press 🐺 .

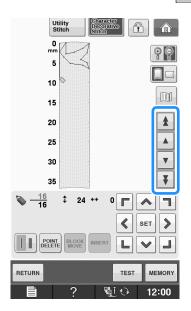


Press BLOCK

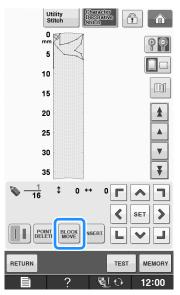


→ The selected point and all points that were entered after it are selected.



Press **A** or **V** to move the section.

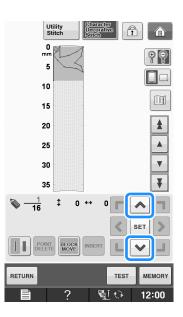

V

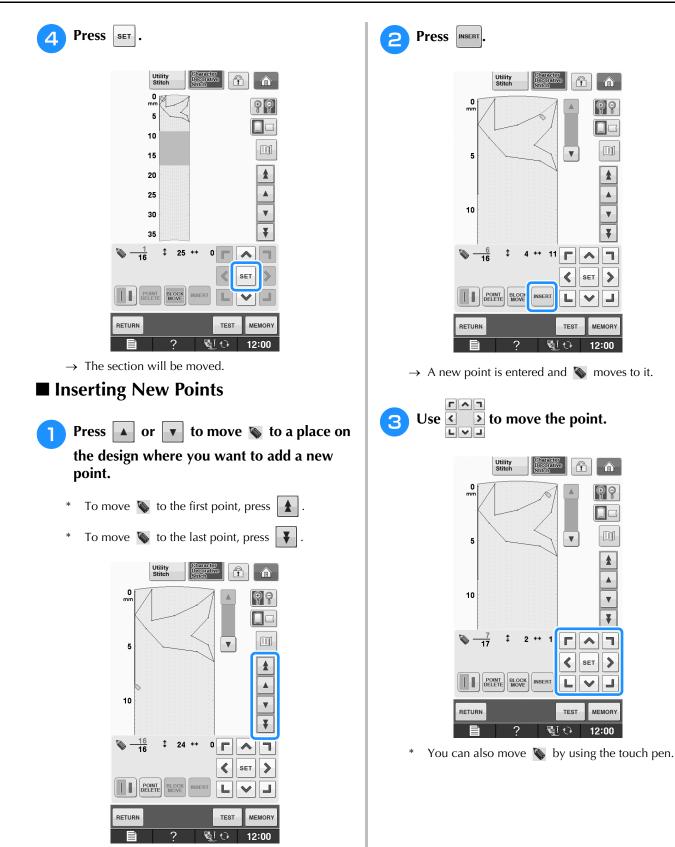

s 4 MY CUSTOM STITCH


USING STORED CUSTOM STITCHES

Storing Custom Stitches in Your List

Stitch patterns created using the "MY CUSTOM STITCH" function can be stored for later use. Once

you finish entering the stitch data, press **MEMORY**. The "Saving" message appears and the stitch will be stored.

Before storing a stitch, press **TEST** to sew a test-run of the stitch.

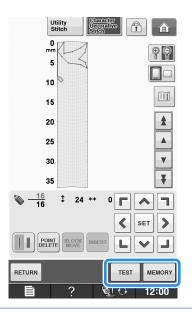

א Memo


- Storing a stitch pattern takes a few seconds.
- For details on retrieving a stored stitch pattern, see page S-111.

Note

• Do not turn off the machine while the "Saving" message is displayed, otherwise the stitch pattern data being saved may be lost.

■ If the Memory is Full

If the following message appears after **MEMORY** is pressed, the stitch pattern cannot be stored because either the machine's memory is full or the stitch pattern being stored is larger than the amount of space available in the memory. To be able to store the stitch pattern in the machine's memory, a previously stored stitch pattern must be deleted.

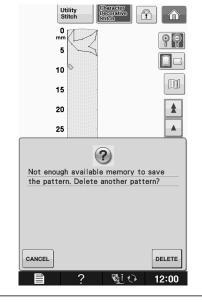

V Note

To save custom stitches to USB media or in the computer, follow the previously described procedure to store the custom stitch, and then press is to select the stitch (see the following "Retrieving Stored Stitches" section). Press is to save the stitch to USB media or in the computer. (For details, "Saving Stitch Patterns to USB Media" on page S-96 or "Saving Stitch Patterns in the Computer" on page S-97.)

Retrieving Stored Stitches




Press 🖾 .




 \rightarrow A list of stored stitch patterns is displayed.

2 Select the stitch pattern.

* Press **CLOSE** to return to the previous screen without retrieving.

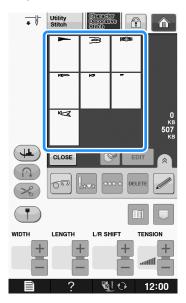

- 3 Press CLOSE .
 - * To delete the stored stitch pattern, press \bigcirc
 - * To edit the stored stitch pattern, press

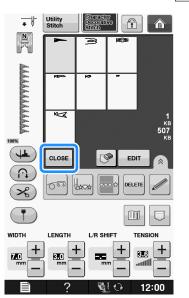



This section provides important information for operating this machine. Please read this section to find troubleshooting tips and pointers as well as how to keep your machine in the best working order.

Page number starts with "A" in this section.

The screen display and machine illustration may vary slightly, depending on the countries or regions.

Chapter1 How to Create Bobbin Work A	-2
Chapter2 Maintenance and Troubleshooting A-	14


A Appendix

Chapter **1** How to Create Bobbin Work


ABOUT BOBBIN WORK
PREPARING FOR BOBBIN WORK3
Required Materials3
Bobbin case and bobbin cover
Lower thread
Upper thread 4
Needle
Presser foot
Fabric 4
Upper Threading4
Preparing the Bobbin Thread5
When tension is applied to the bobbin thread
■ When tension is not applied to the bobbin thread
CREATING BOBBIN WORK9
Positioning the Fabric and Sewing
Positioning the Fabric and Sewing9
Positioning the Fabric and Sewing9 Finishing the thread ends
Positioning the Fabric and Sewing9 ■ Finishing the thread ends
Positioning the Fabric and Sewing
Positioning the Fabric and Sewing 9 Finishing the thread ends 11 Bobbin Work Free Motion Sewing 11 ADJUSTING THE THREAD TENSION 12 Adjusting the upper thread tension 12 Adjusting the tension of the bobbin thread 12 TROUBLESHOOTING 13 The thread was accidentally cut automatically and the bobbin

ABOUT BOBBIN WORK


Beautiful embroidery work, with a three-dimensional appearance, can be created by winding the bobbin with medium to heavy weight thread or ribbon, which is too thick to be threaded through the machine's needle. The decorative thread or ribbon will stitch out on the underneath side of fabric while sewing with the fabric wrong side facing up.

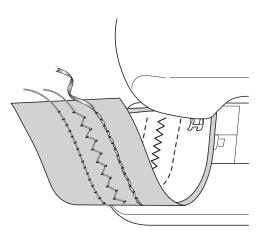

1. Utility stitches

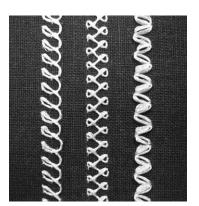

2. Decorative stitches

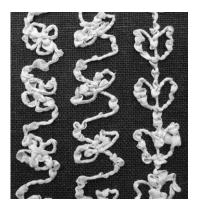

3. Free motion sewing



 
PREPARING FOR BOBBIN WORK

Required Materials

Bobbin case and bobbin cover



 Bobbin case (gray) There is a notch at the location indicated by the letter "A".

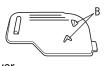

 Bobbin cover There are two small v-shaped tabs on the back of the bobbin cover as indicated by the letter "B". The tabs help hold the bobbin in place so it does not lift up while thick thread is being pulled through. A

Lower thread

We recommend the following types of threads for bobbin work.



No.5 or finer hand embroidery thread or decorative thread



Flexible woven ribbon



Fine embroidery ribbon (silk or silk-like material) (3.5 mm (approx. 1/8 inch) or less is recommended)

* When wide ribbon or heavy weight threads are being used, we recommend test sewing with and without bobbin case tension being applied to see which gives the best stitching results. If wide ribbon such as 3.5mm (approx. 1/8 inch) is to be used, we recommend that bobbin case tension not be applied. Refer to page A-7 for more detailed instructions.

ப் Note

- Do not use thread heavier than No.5 hand embroidery thread.
- Some threads may not be appropriate for bobbin work. Be sure to sew trial stitches before sewing on your project.

Upper thread

Sewing machine embroidery thread (polyester thread) or monofilament (transparent nylon) thread. If you do not wish for the upper thread to be visible, we recommend using transparent nylon monofilament thread or polyester light weight thread (50wt. or above) that is the same color as the lower thread.

Needle

Use a needle appropriate for the upper thread and fabric being used. Refer to "Fabric/Thread/Needle Combinations" on page B-52.

Presser foot

Utility stitches or decorative stitches: Monogramming foot "N"



Free motion sewing:

Free motion quilting foot "C", Free motion echo quilting foot "E or Free motion open toe quilting foot "O"





🔳 Fabric

Be sure to sew trial stitches on a piece of scrap fabric, which includes the same threads and fabric as what is being used in your project.

Vie Note

• The sewing results may be affected by the type of fabric used. Before sewing your project, be sure to sew trial stitches on a piece of scrap fabric that is the same as the fabric used in the project.

Upper Threading



Install a needle appropriate for the upper thread and fabric to be used.

For details on installing the needle, refer to "CHANGING THE NEEDLE" on page B-51.



3

Attach the presser foot.

Thread the machine with the upper thread.

For details on threading the machine, refer to "Upper Threading" on page B-42.

Preparing the Bobbin Thread

In order to create bobbin work, the bobbin case must be replaced with the one for bobbin work.

Before creating bobbin work, clean the bobbin case and the race.



Raise the needle and presser foot, and then turn off the machine.




Remove the flat bed attachment.



Grasp both sides of the needle plate cover,


and then slide it toward you to remove it.

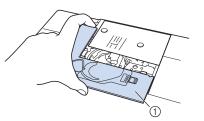


Needle plate cover



 Remove the bobbin case.

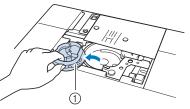


- Bobbin case
- Use the cleaning brush included with the machine or a vacuum cleaner to remove any lint and dust from the race and its surrounding area.

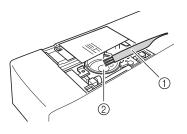


① Cleaning brush


② Race

 - Wipe the bobbin case (gray) with a soft lint 6 free cloth to clean it.
- Insert the bobbin case so that the **A** mark on the bobbin case aligns with the ● mark on the machine.

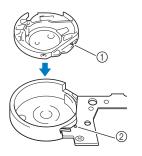

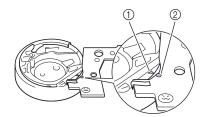

Align the \blacktriangle and \bullet marks.

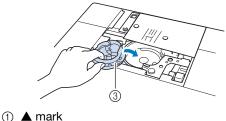

- ② mark
- ③ Bobbin case

Note

The bobbin case (gray) cannot be used for sewing in any way other than bobbin work. After sewing bobbin work, refer back to the steps in "Preparing the Bobbin Thread" on page A-5 for removing and cleaning the bobbin case (gray), and then reinstall the standard bobbin case.

A CAUTION


- Be sure to use the bobbin case (gray) when creating bobbin work. Using any other bobbin case may result in the thread becoming tangled or damage to the machine.
- Make sure that the bobbin case is correctly installed. If the bobbin case is incorrectly installed, the thread may become tangled or the machine may be damaged.

8 Wind a decorative thread around the bobbin by hand. After winding the bobbin so it is filled as shown below (about 80%), cut the thread.



A CAUTION

• Be sure to use the machine's included bobbin or one designed specifically for this machine. Using any other bobbin may result in damage or injuries.

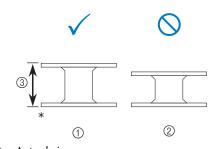

Actual size

- ① This model
- ② Other models
- ③ 11.5 mm (approx. 7/16 inch)

Note

- Slowly and evenly wind the thread around the bobbin.
- For best results, wind the bobbin so the thread is snug and not twisted.

Using scissors carefully trim the thread tail as close to the bobbin as possible.



① Beginning of wound thread

A CAUTION

• If thread extends beyond the top of the bobbin too much, the thread may become tangled or the needle may break.


10

Install the bobbin wound with thread.

Whether or not tension should be applied to the bobbin thread depends on the type of thread being used.

When tension is applied to the bobbin thread


Insert bobbin into bobbin case so the thread unwinds from the left side. Then correctly pass the thread through the tension spring as shown below.

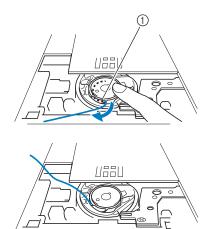

① Tension spring

A CAUTION

 
- When winding the bobbin, make sure the thread is not frayed. Sewing with frayed thread may result in the thread catching on the tension spring of the bobbin case, the thread completely becoming tangled or damage to the machine.
- Do not guide the bobbin thread through the groove in the needle plate cover, otherwise the lower threading cannot be done correctly.

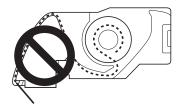


When tension is not applied to the bobbin thread

If the bobbin thread in the trial stitching is too tight and adjusting the bobbin case tension does not help, do not pass the thread through the tension spring.


Hold the bobbin with your left hand so the thread unwinds from the right side and hold the end of the thread with your right hand.

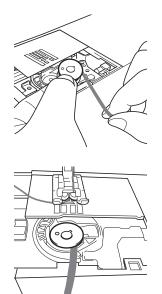

- Pull out about 8 cm (approx. 3 inches) of bobbin thread.
 - Lightly hold the end of the upper thread while turning the handwheel toward you (counterclockwise) until the mark on the handwheel aligns with the center top of machine.

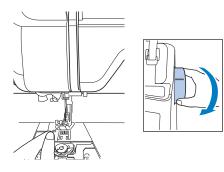


Gently pull the upper thread to bring the bobbin thread up through the needle plate.

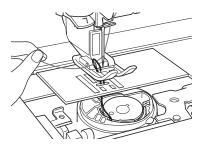

 \rightarrow A loop of the bobbin thread comes out through the hole in the needle plate.

4 Insert tweezers through bobbin thread loop and pull bobbin thread above the needle plate.


Align the upper thread and bobbin thread, and then pull out about 10 cm (approx. 4 inches) of the threads and pass them under the presser foot toward the rear of the machine.

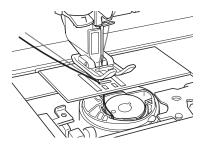



Install the needle plate cover and bobbin cover with tabs.

For details on installing the needle plate cover, refer to "Cleaning the Race" on page A-15.

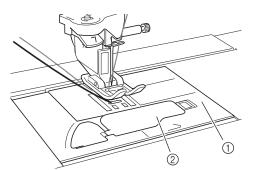

- ① Bobbin cover
- ② Bobbin cover with tabs

A CAUTION

• When creating bobbin work, use the bobbin cover with tabs, otherwise the thread may become tangled or the needle may break.

🟒 Note

• When installing the needle plate cover, do not allow it to pinch the thread.

Install the flat bed attachment.

🗸 Note

- When installing the flat bed attachment, do not allow it to pinch the thread.
- When the bobbin thread is replaced with a new one, be sure to repeat the procedure from 1, otherwise the lower threading will not be done correctly.
- \rightarrow This completes the upper and lower threading.

CREATING BOBBIN WORK

Positioning the Fabric and Sewing

🟒 Note

- Recommended stitches for bobbin work are open "airy" type stitches.
- Be sure to sew trial stitches using same fabric and threads as project in order to check the sewing results.
- The bobbin thread may become tangled due to the type of pattern and thread that are being used. Since this may cause the needle to break, immediately stop sewing if this occurs. Turn off the machine and cut out the tangled thread with scissors. Then, clean the race and bobbin case as described in "Fabric is caught in the machine and cannot be removed" on page A-23.

Turn on the machine.

Select a stitch in the Utility and Decorative

Stitches mode. For this example, press

🦙 Memo

• For best results, select a longer stitch length and a wider stitch width. Depending on the selected stitch, it may not be possible to change the stitch length and stitch width settings.



• Depending on the fabric, bunched stitches may result. We recommend selecting a simple stitch and sewing trial stitches to check the sewing results.

 
Examples of simple stitches:





3 Increase the upper thread tension. Upper thread tension setting between 6 and 8 is recommended for bobbin work.

For details on adjusting the upper thread tension, refer to "Setting the Thread Tension" of "Sewing".

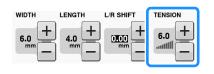

Note

• Before sewing, check that there is enough thread in the bobbin.

Make sure the automatic thread cutting (S) and automatic reinforcement stitching (A) have been turned off.

CAUTION

Before sewing, make sure the automatic thread cutting has been turned off. If sewing is started with automatic thread cutting turned on, the thread may become tangled or the machine may be damaged.


Place stabilizer on top (wrong side) of the fabric.


🗸 Note

5

• Type and weight of stabilizer will depend on fabric and thread being used.

6 If thread is too thick to pull through fabric to machine surface use an awl to punch a small hole in the fabric at the beginning of stitching so the bobbin thread can be fed through the opening.

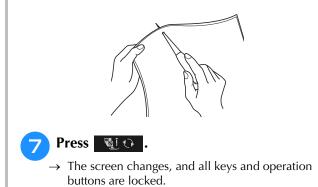

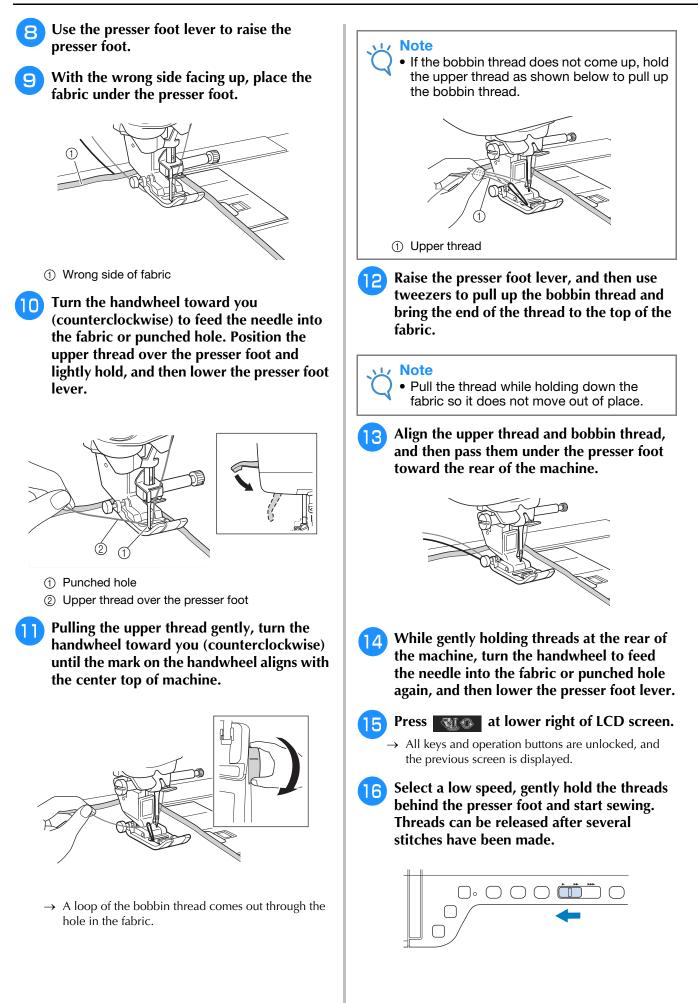




When you have reached the end of the stitching area, stop the machine.

Note

- Do not sew reverse/reinforcement stitches at the end of the stitching, otherwise the threads may become tangled or the needle may break. In addition, it will be difficult to pull the bobbin thread up to the wrong side of the fabric.
- Raise the needle and presser foot.
- Leaving about 10 cm (approx. 4 inches) of thread at the ends, use scissors to cut the threads.

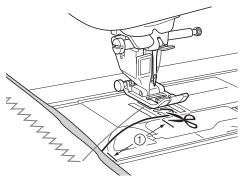


① 10 cm (approx. 4 inches)

Note

• Do not press the "Thread Cutter" button to cut the threads, otherwise the machine may be damaged.

Finishing the thread ends

At the end of the stitching, use a hand sewing needle to bring the bobbin thread up to the wrong side of the fabric.

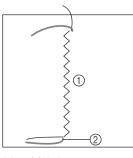


- Wrong side of fabric
- ② Bobbin thread

Note

 If it is difficult to place bobbin thread through the eye of a hand sewing needle, use a ribbon embroidery needle to pull the thread up to the wrong side of the fabric. Otherwise, use an awl to pull up the bobbin thread.

Working from the wrong side of the fabric, tie the bobbin and upper threads together by hand. Cut away excess threads with scissors.

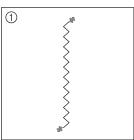



- (1) Wrong side of fabric
- ② Right side of fabric

Note

- To ensure threads do not come undone after being tied place a drop of fabric glue on knots.
- If the desired results could not be achieved, adjust the tension of the bobbin thread and of the upper thread, and then try sewing the stitching again.

For more details, refer to "ADJUSTING THE THREAD TENSION" on page A-12.

Bobbin Work Free Motion Sewing

If so desired, use a template or draw your design on the stabilizer to allow for ease of stitching. Remember, your stitches with your decorative thread will be on the underneath side of your fabric and the stabilizer will be on the top of the wrong side of your fabric.

For information about using free motion open toe quilting foot "O" refer to "Free Motion Quilting" on page S-40.

ADJUSTING THE THREAD TENSION

After sewing trial stitches and checking the sewing results, adjust the thread tensions if necessary. After adjusting the tensions, be sure to sew trial stitches again in order to check the sewing results.

Adjusting the upper thread tension

We recommend a setting between 6 and 8 for the upper thread tension when sewing bobbin work. Refer to "Setting the Thread Tension" on page S-12.

 
■ Adjusting the tension of the bobbin thread

If the desired stitching cannot be achieved after adjusting the upper thread tension, adjust the tension of the bobbin thread. The tension of the bobbin thread can be adjusted by turning the slotted-head (–) screw on the bobbin case (gray) for bobbin work.




- 1 Do not turn the phillips screw (+).
- Adjust with a small screwdriver.

To increase the tension of the bobbin thread, turn the slotted-head (–) screw 30° to 45° clockwise.

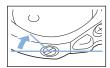

 
To decrease the tension of the bobbin thread, turn the slotted-head (–) screw 30° to 45° counterclockwise.

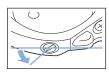

ير Note

 Turning the screw on the bobbin case (gray) may push up the spring plate, as shown below.

If this occurs, gently press down the spring plate with a screwdriver so it is lower than the top surface of the bobbin case (gray), and then insert the bobbin case into the machine.

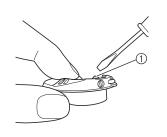

① Spring plate

A CAUTION

- DO NOT adjust the position of the phillips (+) screw on the bobbin case (gray) as this may result in damage to the bobbin case, rendering it useless.
- If the slotted-head screw (-) is difficult to turn, do not use force. Turning the screw too much or providing force in either (rotational) direction may cause damage to the bobbin case. Should damage occur, the bobbin case may not maintain proper tension.

🕂 Note


• If the bobbin thread tension is tight, the thread cannot be passed through the tension spring when the bobbin is installed in the bobbin case. (Refer to "When tension is not applied to the bobbin thread" on page A-7.)

TROUBLESHOOTING


Several solutions for minor problems are described below. If the problem persists, contact your dealer or nearest authorized Brother dealer.


The thread was accidentally cut automatically and the bobbin thread is caught inside the machine

Cut the thread near the fabric above the needle plate, and then remove the fabric.

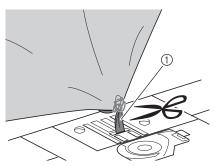

① Thread

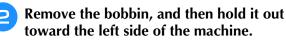 


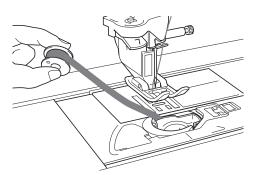

З

Lower the presser foot.

Apply slight tension on bobbin thread by holding thread out to the left side of presser foot. Press the "Thread Cutter" button again.

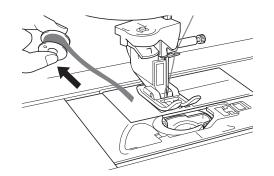




Do not pull on the thread with excessive force, otherwise the machine may be damaged.

■ Correcting bobbin work tension

- * If the top thread shows on the bobbin side of the fabric, increase the upper tension (Refer to "ADJUSTING THE THREAD TENSION" on page A-12).
- If the top thread still shows on the bobbin side of the fabric, reduce the tension of the bobbin thread or bypass the bobbin tension. (Refer to "ADJUSTING THE THREAD TENSION" on page A-12.)
- * Some bobbin threads are too coarse to pass through to wrong side of fabric. In this case, be sure to color match top thread with bobbin threads.

Example: Decorative Stitch

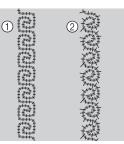

- ① Correct tension
- ② The upper thread tension is too loose, or the bobbin thread tension is too tight.

The bobbin thread catches on the tension spring of the bobbin case

Sew with no tension applied to the bobbin thread. (Refer to "When tension is not applied to the bobbin thread" on page A-7.)

A Appendix

Chapter **2** Maintenance and Troubleshooting

CARE AND MAINTENANCE15

Restrictions on oiling15
Precautions on storing the machine15
Cleaning the LCD Screen15
Cleaning the Machine Casing15
Cleaning the Race15
Cleaning the Cutter in the Bobbin Case Area
About the Maintenance Message17
ADJUSTING THE SCREEN
Adjusting the Brightness of the Screen Display
Touch Panel is Malfunctioning18
TROUBLESHOOTING
Frequent troubleshooting topics19
Upper thread tightened up19
Symptom
Cause 19
Remedy/check details
Tangled thread on wrong side of fabric20
Symptom 20
Cause 20
Remedy/check details
Incorrect thread tension22
Symptoms 22
Cause/Remedy 22
Fabric is caught in the machine and cannot be removed23
Removing the fabric from the machine
Checking machine operations
List of Symptoms26
ERROR MESSAGES
SPECIFICATIONS
UPGRADING YOUR MACHINE'S SOFTWARE32
Upgrade Procedure Using USB Media
Upgrade Procedure Using Computer
INDEX

CARE AND MAINTENANCE

A CAUTION

Be sure to unplug the machine before cleaning it. Otherwise, electric shock or injury may result.

Restrictions on oiling

In order to prevent damaging this machine, it must not be oiled by the user. This machine was manufactured with the necessary amount of oil applied to ensure correct operation, making periodic oiling unnecessary.

If problems occur, such as difficulty turning the handwheel or an unusual noise, immediately stop using the machine, and contact your authorized dealer or the nearest authorized service center.

Precautions on storing the machine

Do not store the machine in any of the locations described below, otherwise damage to the machine may result, for example, rust caused by condensation.

- Exposed to extremely high temperatures
- Exposed to extremely low temperatures
- Exposed to extreme temperature changes
- Exposed to high humidity or steam
- Near a flame, heater or air conditioner
- Outdoors or exposed to direct sunlight
- Exposed to extremely dusty or oily environments

Note

 In order to extend the life of this machine, periodically turn it on and use it. Storing this machine for an extended period of time without using it may reduce its efficiency.

Cleaning the LCD Screen

If the screen is dirty, gently wipe it with a soft, dry cloth. Do not use organic solvents or detergents.

Note

 Do not wipe the LCD screen with a damp cloth.

Memo

Occasionally, condensation may form on the LCD screen or it may become fogged up; however, this is not a malfunction. After a while, the cloudiness will disappear.

Cleaning the Machine Casing

If the surface of the machine is dirty, lightly soak a cloth in a neutral detergent, squeeze it out firmly, and then wipe the surface. Then wipe again with a dry cloth.

Cleaning the Race

If dust or bits of dirt collect in the race or bobbin case, the machine will not run well, and the bobbin thread detection function may not operate. Keep the machine clean for best results.

 
Press the "Needle Position" button to raise the needle.



- Turn the main power to OFF.
- Remove the needle, presser foot, and presser foot holder (see page B-49 through **B-51**).
 - Remove the flat bed attachment.




Grasp both sides of the needle plate cover, and then slide it toward you.

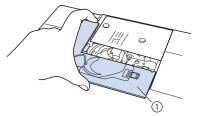


- Needle plate cover
- \rightarrow The needle plate cover is removed.

 Grasp the bobbin case, and then pull it out. 6

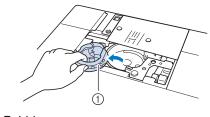

Bobbin case


7 Use the cleaning brush or a vacuum cleaner to remove any lint and dust from the race and bobbin thread sensor and the surrounding area.

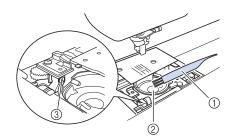


- ① Cleaning brush
- ② Race
- ③ Bobbin thread sensor


🗸 Note

- Do not apply oil to the bobbin case.
- If lint or dust collects on the bobbin thread sensor, the sensor may not operate correctly.
- Insert the bobbin case so that the \blacktriangle mark on the bobbin case aligns with the \bullet mark on the machine.

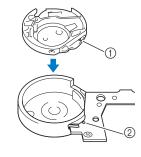

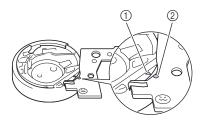

 * Align the \blacktriangle and \bigcirc marks.

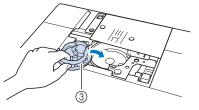

- ▲ mark
- ③ Bobbin case

* Make sure that the indicated points are aligned before installing the bobbin case.

A CAUTION

- Never use a bobbin case that is scratched; otherwise, the upper thread may become tangled, the needle may break, or sewing performance may suffer. For a new bobbin case (part code: XE5342-101 (green marking on the screw), XE8298-001 (gray, for bobbin work)), contact your dealer or nearest authorized dealer.
- Make sure that you fit the bobbin case properly, otherwise the needle may break.
- 9 Insert the tabs on the needle plate cover into the needle plate, and then slide the cover back on.



Vice Note

• If the needle plate has been removed it is especially important to reinstall the needle plate and tighten the screws prior to installing the bobbin case.


Cleaning the Cutter in the Bobbin Case Area

The cutter below the needle plate should be cleaned. If dust or lint accumulate on the cutter, it will be difficult to cut the thread when the "Thread Cutter" button is pressed or the automatic thread cutting function is used. Clean the cutter when the thread is not easily cut.


1

Follow steps 1 through 5 in "Cleaning the Race" to remove the needle plate cover.

Use the screwdriver included with the machine to unscrew and remove the needle plate.

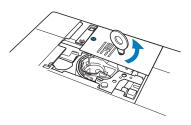

Use the cleaning brush or a vacuum cleaner to remove any lint and dust from the cutter in the bobbin case area.

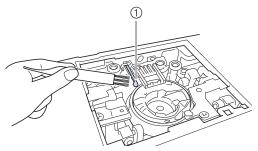


① Cutter

CAUTION Do not touch the cutter otherwise init

• Do not touch the cutter, otherwise injuries may result.

4 Use the screwdriver included with the machine to screw and attach the needle plate.

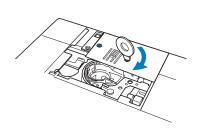

5 Insert the tabs on the needle plate cover into the needle plate, and then slide the cover back on.

About the Maintenance Message



Once this message appears, it is recommended to take your machine to an authorized dealer or nearest authorized service center for a regular maintenance check. Although this message will disappear and the machine will continue to

function once you press , the message will display several more times until the appropriate maintenance is performed.

Please take the time to arrange the maintenance your machine requires once this message appears. Such steps will help to ensure you receive continued, uninterrupted hours of machine operation for the future.

ADJUSTING THE SCREEN

Adjusting the Brightness of the Screen Display

If the screen does not look very clear under certain situation, you can adjust the brightness of the screen display.

	Press → The s	ettings	• screen ap	opears.			
2	Displa	y pag	ge 6 of tl	he setti	ings sc	reen.	
3			r + to display.	adjust	the br	ightness	; of
			Light Screen Display Brightness Sensor Function] 8	-+		
			Calibration	l	+		
		CLOSE		∕7 ►			
	I	Ē	?	₩ [•	12:00		

* The screen appears dim as the number on the settings screen decreases. The screen appears brighter as the number increases.

Touch Panel is Malfunctioning

If the screen does not respond correctly when you touch a key (the machine does not perform the operation or performs a different operation), follow the steps below to make the proper adjustments.



Holding your finger on the screen, turn the main power switch to OFF and back to ON.



 \rightarrow The touch panel adjustment screen is displayed.



Using the included touch pen, lightly touch the center of each +, in order from 1 to 5.

_L Note

• Only use the included touch pen to touch the screen. Do not use a mechanical pencil, pin, or other sharp object. Do not press too hard on the screen. Otherwise, damage may result.





Turn the main power to OFF, then turn it back to ON.

_とNote

• If you finish the screen adjustment and the screen still does not respond, or if you cannot do the adjustment, contact your authorized dealer.

TROUBLESHOOTING

If the machine stops operating correctly, check the following possible problems before requesting service. You can solve most problems by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips. Visit us at " <u>support.brother.com</u> ".

If the problem persists, contact your dealer or the nearest authorized service center.

Frequent troubleshooting topics


Detailed causes and remedies for common troubleshooting topics are described below. Be sure to refer to this before contacting your dealer.

Upper thread tightened up	page A-19
Tangled thread on wrong side of fabric	page A-20
Incorrect thread tension	page A-22
Fabric is caught in the machine and cannot be removed	page A-23

Upper thread tightened up

Symptom

- * The upper thread appears as a single continuous line.
- * The lower thread is visible from the upper side of the fabric. (Refer to the illustration below.)
- * The upper thread has tightened up, and comes out when pulled.
- * The upper thread has tightened up, and wrinkles appear in the fabric.
- The upper thread tension is tight, and the results do not change even after the thread tension is adjusted.

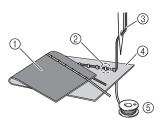

- ① Lower side of fabric
- ② Lower thread visible from upper side of fabric
- ③ Upper thread
- ④ Upper side of fabric
- Lower thread

Cause

Incorrect lower threading

If the lower thread is incorrectly threaded, instead of the appropriate tension being applied to the lower thread, it is pulled through the fabric when the upper thread is pulled up. For this reason, the thread is visible from the upper side of the fabric.

Remedy/check details

Correctly install the lower thread.

Turn off the sewing machine.



Remove the bobbin from the bobbin case.




- Place the bobbin in the bobbin case so that the thread unwinds in the correct direction.
- * Hold the bobbin with your right hand with the thread unwinding to the left, and hold the end of the thread with your left hand. Then, with your right hand, place the bobbin in the bobbin case.



If the bobbin is inserted with the thread unwinding in the wrong direction, sewing will be done with an incorrect thread tension.


While holding the bobbin in place with your finger, pass the thread through the slit in the needle plate.

* Hold down the bobbin with your right hand, and then pull the end of the thread around the tab with your left hand.

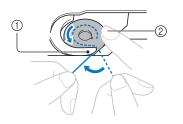

- ① Tab
- ② Hold down the bobbin with your right hand.

Pull the thread to pass it through the slit in the needle plate, then cut it with the cutter.

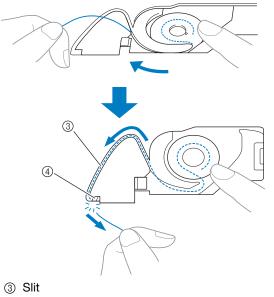


④ Cutter

Sewing with the correct thread tension is possible after the bobbin has been correctly installed in the bobbin case.


Tangled thread on wrong side of fabric

Symptom

* The thread becomes tangled on the lower side of the fabric.

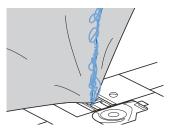

- * After starting sewing, a rattling noise is made and sewing cannot continue.
- * Looking under the fabric, there is tangled thread in the bobbin case.

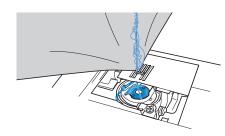

Cause

Incorrect upper threading

 
If the upper thread is incorrectly threaded, the upper thread passed through the fabric cannot be firmly pulled up and the upper thread becomes tangled in the bobbin case, causing a rattling noise.


■ Remedy/check details

Remove the tangled thread, and then correct the upper threading.


Remove the tangled thread. If it cannot be removed, cut the thread with scissors.

- * Refer to "Cleaning the Race" in "CARE AND MAINTENANCE" on page A-15.
- Remove the upper thread from the machine.
- Refer to the following steps to correct the upper threading.
 - If the bobbin was removed from the bobbin case, refer to "LOWER THREADING" on page B-34 and "Remedy/check details" in the section "Upper thread tightened up" on page A-19 to correctly install the bobbin.

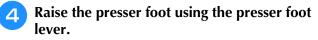

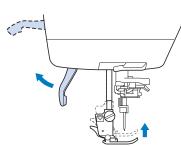


- * If the presser foot is not raised, the sewing machine cannot be threaded correctly.
- 5 Raise the needle by turning the handwheel toward you (counterclockwise) so that the mark on the wheel points up, or press "Needle Position" button once or twice to raise the needle.

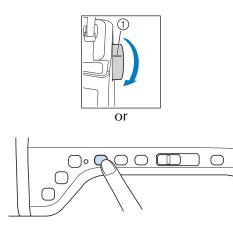


① Mark

While holding the thread with both hands, pull the thread up from under the thread guide plate.

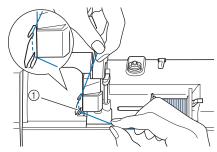


① Thread guide plate

7 While holding the thread in your right hand, pass the thread through the thread guide in the direction indicated.

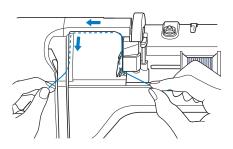


B Guide the thread down, up, then down through the groove, as shown in the illustration.

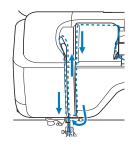


Memo

• Look in the upper groove area to check if the thread catches on the take-up lever visible inside the upper groove area.

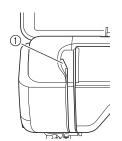

① Look in the upper groove area

9 Pass the thread through the needle bar thread guide (marked "6") by holding the thread with both hands and guiding it as shown in the illustration.

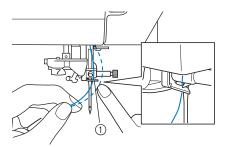

① Needle bar thread guide

10 Thread the needle according to steps **10** and **15** in "Upper Threading" on page B-42.

 
Incorrect thread tension


Symptoms

- Symptom 1: The lower thread is visible from the upper side of the fabric.
- Symptom 2: The upper thread appears as a straight line on the upper side of the fabric.
- Symptom 3: The upper thread is visible from the lower side of the fabric.
- Symptom 4: The lower thread appears as a straight line on the lower side of the fabric.
- Symptom 5: The stitching on the lower side of the fabric is loose or has slack.

□ Symptom 1/2

Symptom 3/4

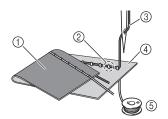

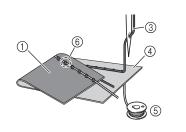

① Lower side of fabric

- Lower thread visible on upper side of fabric
- ③ Upper thread
- ④ Upper side of fabric
- 5 Lower thread
- Upper thread visible from lower side of fabric

■ Cause/Remedy

Cause 1

The machine is not correctly threaded.

<With symptoms 1 and 2 described above>

The lower threading is incorrect.

Adjust the upper thread tension and then refer to "Upper Thread is Too Tight" on page S-12.

<With symptoms 3 through 5 described above>

The upper threading is incorrect.

Adjust the upper thread tension and then refer to "Tangled thread on wrong side of fabric" on page A-20 to correct the upper threading.

Cause 2

A needle and thread appropriate for the fabric are not being used.

The sewing machine needle that should be used depends on the type of fabric sewn and the thread thickness. If a needle and thread appropriate for the fabric are not being used, the thread tension will not be adjusted correctly, causing wrinkles in the fabric or skipped stitches.

* Refer to "Fabric/Thread/Needle Combinations" on page B-52 to check that a needle and thread appropriate for the fabric that is being used.

□ Cause 3

An appropriate upper tension is not selected.

 
Adjust the upper thread tension to select an appropriate thread tension.

- The appropriate thread tension differs according to the type of fabric and thread being used.
 - * Adjust the thread tension while test sewing on a piece of scrap fabric that is the same as that used in your project.

🗸 Note

• If the upper threading and lower threading are incorrect, the thread tension cannot be adjusted correctly, even by adjusting the upper thread tension. Check the upper threading and lower threading first, and then adjust the thread tension.

- * When the lower thread is visible on the upper side of the fabric. Set the upper thread tension to a lower number. (Loosen the thread tension.)
- * When the upper thread is visible on the lower side of the fabric. Set the upper thread tension to a higher number. (Tighten the thread tension.)

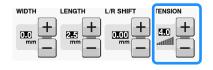

Fabric is caught in the machine and cannot be removed

If the fabric is caught in the sewing machine and cannot be removed, the thread may have become tangled under the needle plate. Follow the procedure described below to remove the fabric from the machine. If the operation could not be completed according to the procedure, instead of attempting to complete it forcefully, contact your dealer or nearest authorized service center.

Removing the fabric from the machine



Turn off the sewing machine.

Remove the needle.

 
If the needle is lowered into the fabric, turn the handwheel away from you (clockwise) to raise the needle out of the fabric, and then remove the needle.

- * Refer to "CHANGING THE NEEDLE" on page B-51.
- **4** Remove the presser foot and presser foot holder.
 - * Refer to "CHANGING THE PRESSER FOOT" on page B-49.
 - Lift up the fabric and cut the threads below it.


If the fabric can be removed, remove it. Continue with the following steps to clean the race.



Remove the needle plate cover.

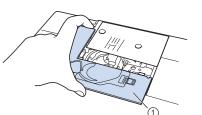

① Needle plate cover

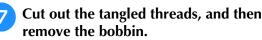 





8 Remove the bobbin case.

If threads remain in the bobbin case, remove them.



  ① Bobbin case

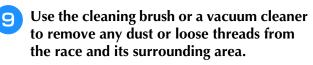

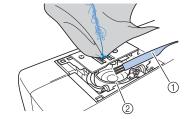

- ① Cleaning brush
- ② Race

	Continue with step 16.
If the fabric could not be removed	Continue with step 10.

10 Use the enclosed disc-shaped screwdriver to loosen the two screws on the needle plate.



Note

• Be careful not to drop the removed screws in the machine.

Slightly lift up the needle plate, cut any tangled threads, and then remove the needle plate.

Remove the fabric and threads from the needle plate.




If the fabric cannot be removed, even after completing these steps, contact your dealer or nearest authorized service center.

Remove any threads in the race and around the feed dogs.




Turn the handwheel to raise the feed dogs.

- Align the two screw holes in the needle plate with the two holes at the needle plate mounting base, and then fit the needle plate onto the machine.
- 15 Lightly finger-tighten the screw on the right side of the needle plate. Then, use the disc-shaped screwdriver to firmly tighten the screw on the left side. Finally, firmly tighten the screw on the right side.

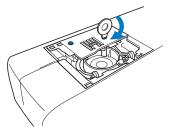

 Turn the handwheel to check that the feed dogs move smoothly and do not contact the edges of the slots in the needle plate.

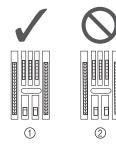



- ① Correct position of feed dogs
- ② Incorrect position of feed dogs

ابر Note


• Be careful not to drop the removed screws in the machine.

16 Insert the bobbin case so that the ▲ mark on the bobbin case aligns with the ● mark on the machine.

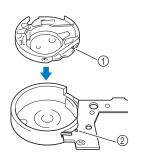

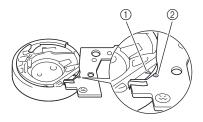


* Align the \blacktriangle and ullet marks.

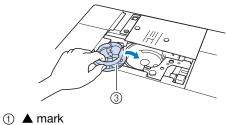

- ② mark
- Bobbin case
- * Make sure that the indicated points are aligned before installing the bobbin case.

A CAUTION

 - Never use a bobbin case that is scratched; otherwise, the upper thread may become tangled, the needle may break, or sewing performance may suffer. For a new bobbin case (part code: XE5342-101 (green marking on the screw), XE8298-001 (gray, for bobbin work)), contact your nearest authorized dealer.
- Make sure that you fit the bobbin case properly, otherwise the needle may break.

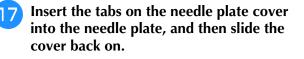



Vote

 If the needle plate has been removed it is especially important to reinstall the needle plate and tighten the screws prior to installing the bobbin case.

18

Check the condition of the needle, and then install it.

If the needle is in a poor condition, for example, if it is bent, be sure to install a new needle.

* Refer to "CHANGING THE NEEDLE" on page B-51.

A CAUTION

• Never use bent needles. Bent needles can easily break, possibly resulting in injuries.

_上、Note

• After completing this procedure, continue with the following procedure in "Checking machine operations" to check that the machine is operating correctly.

 
Memo

 Since the needle may have been damaged when the fabric was caught in the machine, we recommend replacing it with a new one.

Checking machine operations

If the needle plate has been removed, check machine operations to confirm that installation has been completed correctly.



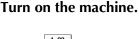




Note

• Do not yet install the presser foot and thread.

Slowly turn the handwheel toward you (counterclockwise), and look from all sides to check that the needle falls at the center of the hole in the needle plate.

If the needle contacts the needle plate, remove the needle plate, and then install it again, starting with step 13 in "Removing the fabric from the machine" on page A-24.

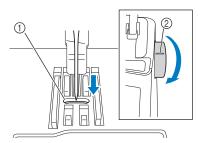

- ① Hole in the needle plate
- ② Handwheel

4

6

Select zigzag stitch | \leq |. At this time,

increase the stitch length and width to their maximum settings.

5 Slowly turn the handwheel toward you (counterclockwise) and check that the needle bar and feed dogs operate correctly.

If the needle or feed dogs contact the needle plate, the machine may be malfunctioning; therefore, contact your dealer or nearest authorized service center.

Turn off the machine, and then install the bobbin and presser foot.

* Refer to "Setting the Bobbin" and "CHANGING THE PRESSER FOOT" on page B-49.

Correctly thread the machine.

* For details on the machine, refer to "Upper Threading" on page B-42.

🗸 Note

• The thread may have become tangled as a result of incorrect upper threading. Make sure that the machine is correctly threaded.

8 Per

Perform trial sewing with normal fabric.

Vote

 Incorrect sewing may be the result of incorrect upper threading or sewing thin fabrics. If there are poor results from the trial sewing, check the upper threading or the type of fabric being used.

List of Symptoms

Problem	Cause	Solution	Page
The thread is tangled on the wrong side of	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	B-42
he fabric.	Using improper needle or thread for the selected fabric.	Check the "Fabric/Thread/Needle Combinations" chart.	B-52
he upper thread is oo tight.	The bobbin thread is incorrectly installed.	Correctly install the bobbin thread.	B-39
Cannot thread the needle	Needle is not in the correct position.	Press the "Needle Position" button to raise the needle.	B-13
	Needle is installed incorrectly.	Reinstall the needle correctly.	B-51
	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
Cannot lower the presser foot with the presser foot lever	Presser foot was raised using the "Presser Foot Lifter" button.	Press the "Presser Foot Lifter" button to lower the presser foot.	B-13
Thread tension is ncorrect	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	B-42
	Bobbin is set incorrectly.	Reset the bobbin. (If needle plate was removed, reinstall needle plate and tighten screws prior to installing bobbin case.)	B-39
	Using improper needle or thread for the selected fabric.	Check the "Fabric/Thread/Needle Combination" chart.	B-52
	Presser foot holder is not attached correctly.	Reattach the presser foot holder correctly.	B-49
	Thread tension is set incorrectly.	Adjust the thread tension.	S-12
	Bobbin thread is incorrectly wound.	Use a correctly wound bobbin.	B-34
	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
Jpper thread breaks	Machine is not threaded correctly (used the wrong spool cap, spool cap is loose, the thread did not catch the needle bar threader, etc.)	Rethread the machine correctly.	B-42
	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
	There are scratches on the bobbin case.	Replace the bobbin case, or consult your authorized dealer.	A-15
	Upper thread tension is too strong.	Adjust the thread tension.	S-12
	Using improper needle or thread for the selected fabric.	Check the "Fabric/Thread/Needle Combinations" chart.	B-52
	Thread is twisted.	Use scissors, etc., to cut the twisted thread and remove it from the race, etc.	-
	There are scratches near the hole of the needle plate.	Replace the needle plate, or consult your authorized dealer.	S-26
	There are scratches near the hole in the presser foot.	Replace the presser foot, or consult your authorized dealer.	B-49
	Needle is installed incorrectly.	Reinstall the needle correctly.	B-51
	Thread is knotted or tangled.	Rethread upper and lower thread.	B-39, B-42
	A bobbin designed specifically for this machine is not used.	Incorrect bobbins will not work properly. Only use a bobbin designed specifically for this machine.	B-39
Bobbin thread breaks	Bobbin is set incorrectly.	Reset the bobbin thread correctly.	B-39
	There are scratches on the bobbin or it doesn't rotate properly.	Replace the bobbin.	B-39
	Thread is twisted.	Use scissors, etc. to cut the twisted thread and remove it from the race, etc.	_
	A bobbin designed specifically for this machine is not used.	Incorrect bobbins will not work properly. Only use a bobbin designed specifically for this machine.	B-39
Bobbin thread does not wind neatly on the	The thread is not passed through the bobbin winding thread guide correctly.	Correctly pass the thread through the bobbin winding thread guide.	B-35
oobbin.	Bobbin spins slowly.	Press [+] in the bobbin winding window to increase the bobbin winding speed.	B-37
	The thread that was pulled out was not wound onto the bobbin correctly.	Wind the thread that was pulled off around the bobbin 5 or 6 times clockwise.	B-36

Problem	Cause	Solution	Page
Skipped stitches	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
	Using improper needle or thread for the selected fabric.	Check the "Fabric/Thread/Needle Combination" chart.	B-52
	Machine is threaded incorrectly.	Check the steps for threading the machine and rethread it correctly.	B-42
	Dust or lint has collected under the needle plate.	Remove the dust or lint with the brush.	A-15
	Needle is installed incorrectly.	Reinstall the needle correctly.	B-51
	Needle is defective.	Replace the needle.	B-51
	Thin or stretch fabrics are being sewn.	Sew with one sheet of thin paper under the fabric.	S-9
leedle breaks	Needle is installed incorrectly.	Reinstall the needle correctly.	B-51
	Needle clamp screw is not tightened.	Tighten the needle clamp screw.	B-51
	Needle is turned or bent.	Replace the needle.	B-51
	Using improper needle or thread for the selected fabric.	Check the needle and fabric combination.	B-52
	Wrong presser foot was used.	Use the recommended presser foot.	S-67
	Upper thread tension is too strong.	Adjust the thread tension setting.	S-12
	Fabric is pulled during sewing.	Do not pull the fabric during sewing.	_
	Spool cap is set incorrectly.	Check the method for attaching the spool cap, then reattach the spool cap.	B-42
	There are scratches around the holes in the needle plate.	Replace the needle plate, or consult your authorized dealer.	A-15
	There are scratches around the hole(s) in the presser foot.	Replace the presser foot, or consult your authorized dealer.	B-49
	There are scratches on the bobbin case.	Replace the bobbin case, or consult your authorized dealer.	A-15
	Needle is defective.	Replace the needle.	B-51
	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	B-42
	Bobbin is set incorrectly.	Reset the bobbin thread correctly.	B-39
	Presser foot is attached incorrectly.	Attach the presser foot correctly.	B-49
	Screw of the presser foot holder is loose.	Securely tighten the screw of the presser foot.	B-49
	Fabric is too thick.	Use fabric that the needle can pierce when the handwheel is turned.	S-7
	Fabric is fed forcefully when sewing thick fabric or thick seams.	Allow the fabric to be fed without being forcefully pushed.	
	Stitch length is too short.	Adjust the stitch length.	S-10
	Bobbin thread is incorrectly wound.	Use a correctly wound bobbin.	B-34
abric does not feed frough the machine	Feed dogs are set in the down position.	Press of , and then turn the handwheel to raise the feed dogs.	S-40
	Stitches are too close together.	Lengthen the stitch length setting.	S-10
	Wrong presser foot was used.	Use the correct presser foot.	S-67
	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
	Thread is entangled.	Cut the entangled thread and remove it from the race.	A-23
abric puckers	There is a mistake in the upper or bobbin threading.	Check the steps for threading the machine and rethread it correctly.	B-39, B-42
	Thread tension is set incorrectly.	Adjust the thread tension.	S-12
	Stitches are too long when sewing thin fabrics.	Shorten the stitch length.	S-10
	Needle is turned, bent or the point is dull.	Replace the needle.	B-51
	Spool cap is set incorrectly.	Check the method for attaching the spool cap, then reattach the spool cap.	B-42
	Wrong presser foot.	Use the correct presser foot.	S-67

Problem	Cause	Solution	Page
High-pitched sound	Dust or lint is caught in the feed dogs.	Remove the dust or lint.	A-15
vhile sewing	Pieces of thread are caught in the race.	Clean the race.	A-15
	Upper threading is incorrect.	Check the steps for threading the machine and rethread the machine.	B-42
	There are scratches on the bobbin case.	Replace the bobbin case, or consult your authorized dealer.	A-15
	A bobbin designed specifically for this machine is not used.	Incorrect bobbins will not work properly. Only use a bobbin designed specifically for this machine.	B-39
Character pattern	Wrong presser foot was used.	Attach the correct presser foot.	S-67
loes not turn out	Pattern adjustment settings were set incorrectly.	Revise the pattern adjustment settings.	S-82
	Did not use a stabilizer material on thin fabrics or stretch fabrics.	Attach a stabilizer material.	S-81
	Thread tension is set incorrectly.	Adjust the thread tension.	S-12
	Fabric was pulled, pushed or fed at an angle while it was being sewn.	Sew while guiding the fabric with your hands so that the fabric is fed in a straight line.	S-3
Aachine does not	There is no pattern selected.	Select a pattern.	S-21, S-77
perate	"Start/Stop" button was not pushed.	Press the "Start/Stop" button.	B-13
	Main power switch is not turned on.	Turn the main power to ON.	B-19
	Presser foot is not lowered.	Lower the presser foot.	B-13
	"Start/Stop" button was pushed with the foot controller attached.	Remove the foot controller, or use the foot controller to operate the machine.	S-4
	The "Start/Stop" button was pressed while the machine is set for the sewing speed controller to control the zigzag stitch width.	Use the foot controller instead of the "Start/Stop" button to operate the machine, or set the "Width Control" to "OFF" in the settings screen.	B-25, S-4
	All keys and buttons have been locked by	Press to unlock all keys and buttons.	B-49, B-51
Nothing happens,	The screen has been locked.	Press either of the following keys to unlock	_
even if the LCD lisplay is pressed		the screen.	
he fabric feeds in the pposite direction.	The feed mechanism is damaged.	Contact your dealer or the nearest authorized service center.	_
The LCD screen is ogged up.	Condensation has formed on the LCD screen.	After a while, the cloudiness will disappear.	_
Specifying with ensor pen cannot be	The sensor pen has not been calibrated.	Before using the sensor pen for the first time, be sure to calibrate it.	B-62
done accurately	The pen is being held differently than when it was calibrated.	When using the sensor pen, be sure to hold it at the same angle as when it was calibrated. The specification location may be misaligned if the pen is held at a slightly different angle. In this case, make fine adjustments after making the selection.	B-62

A CAUTION

- This machine is equipped with a thread detection device. If the "Start/Stop" button is pushed before the upper threading is done, the machine will not operate properly. Also, depending on the pattern selected, the machine may feed the fabric even if the needle is raised. This is due to the needle bar release mechanism. At these times, the machine will make a sound different from what is made during normal sewing. This is not the sign of a malfunction.
- If the power is disconnected during sewing: Turn the main power to OFF and unplug the machine. If you restart the machine, follow the instructions for operating the machine correctly.

ERROR MESSAGES

If the machine is not properly set and the "Start/Stop" button or the "Reverse Stitch" button is pressed, or if the operation procedure is incorrect, the machine does not start. An alarm sounds and an error message is displayed on the LCD. If an error message displays, follow the instructions in the message.

Below is an explanation of error messages. Refer to these when necessary (if you press or do the operation correctly while the error message is displayed, the message disappears).

A CAUTION

• Be sure to rethread the machine. If you press the "Start/Stop" button without rethreading the machine, the thread tension may be wrong or the needle may break and cause injury.

Marks	Error Messages	Cause/Solution
	A malfunction occurred.Turn the machine off, then on again.	This message is displayed if some malfunction occurs.
	An invalid area was touched by the sensor pen. Touch again within the active sensor area. (130mm x 200mm / 5"X 8")	This message appears when you touch the invalid area of sensor pen. Touch the active area. (see page B-64)
	An invalid sewing area was touched by the sensor pen. Touch again within the valid sewing area.	This message appears when you touch the invalid area of sewing with the sensor pen. Touch the active area. (see page B-64)
(i)	Can not change the configuration of the characters	This message is displayed when there are too many characters and the curved character configuration is impossible.
	Check and rethread the upper thread.	This message is displayed when the upper thread is broken or not threaded correctly, and the "Start/Stop" button or the "Reverse Stitch" button is pressed.
	Data volume is too large for this pattern.	This message is displayed when the patterns you are editing take up too much memory, or if you are editing too many patterns for the memory.
	Failed to save file.	This message appears when you try to save more than 100 settings screen image files in the USB media. In this case, delete a file from the USB media or use different USB media. (see page B-29)
	In twin needle mode, the automatic needle threading button cannot be used.	This message is displayed when the automatic needle threading button is pushed while twin needle sewing is set.
	Lower the buttonhole lever.	This message is displayed when the buttonhole lever is up, a buttonhole stitch is selected, and the "Start/Stop" button or "Reverse Stitch" button is pushed.
	Lower the presser foot lever.	This message is displayed when the "Presser Foot Lifter" button is pushed while the presser foot lever is raised/the needle is lowered.
٢	Move the sensor pen away from the currently marked position.	This message appears when you press down the sensor pen tip before pressing and keep pressing for the certain period. Move the sensor pen away from the current position.
?	Not enough available memory to save the pattern. Delete another pattern?	This message is displayed when the memory is full and the stitch or pattern cannot be saved.
\odot	OK to automatically lower the presser foot?	This message is displayed when the presser foot is raised).
?	OK to delete the ending point setting?	This message appears when you try to change or add a pattern, or change the settings applied to the pattern while specifying the sewing end point using the sensor function. (see page B-69)
?	OK to delete the selected pattern?	This message is displayed when, after selecting a pattern, Utility stitch or Character becorative is pressed and the pattern is about to be deleted.

Marks	Error Messages	Cause/Solution
?	OK to delete the setting?	This message appears when DELETE or ALL DELETE or DELETE is pressed to delete the settings for a utility stitch. To delete the selected
	Preventive maintenance is recommended.	settings, press ок. This message is displayed when the machine needs to be
?		maintained. (see page A-15)
	Raise the buttonhole lever.	This message is displayed when the buttonhole lever is down, a stitch other than a buttonhole is selected, and the "Start/Stop" button or the "Reverse Stitch" button is pushed.
	Sensor module error.	This message appears when something is wrong with the sensor unit of the machine. Consult your authorized dealer.
\bigcirc	Set the clock.	This message appears when the time/date is not set. Set time/date. (see page B-20)
?	The bobbin thread is almost empty.	This message is displayed when the bobbin thread is running out.
	The bobbin winder safety device has activated. Is the thread tangled?	This message is displayed when the bobbin is being wound, and the motor locks because the thread is tangled, etc.
	The ending point cannot be selected for this stitch.	This message appears when the function to specify the sewing end point cannot be used with the current stitch. Select other stitch. (see page B-69)
	The needle position cannot be changed for this stitch.	This message appears when the function to specify the needle drop position cannot be used with the current stitch. Select other stitch. (see page B-69)
	The needle will move. Keep your hands etc. away from the needle area.	This message appears when you touch the point closer than 2 cm from the needle drop point with the sensor pen in the sensor function. (see page B-61)
?	The pockets are full. Delete a pattern.	This message is displayed when the memory is full and a pattern must be deleted.
	The safety device has been activated.Is the thread tangled? Is the needle bent?	This message is displayed when the motor locks due to tangled thread or for other reasons related to thread delivery.
	The shutoff support mode has been activated. Turn off the machine.	This message appears when the machine is in the shutoff support mode. Turn off the machine once to start the machine again. (see page B-28)
	The "Start/Stop" button does not operate with the foot controller attached. Remove the foot controller.	This message is displayed when the "Start/Stop" button is pushed to sew Utility stitches or Character/Decorative stitches while the foot controller is connected.
	The upper thread may not be threaded correctly. Thread the upper thread from the beginning.	This message is displayed when it seems that the upper thread has not been threaded correctly.
	The USB media was changed. Do not change the USB media while it is being read.	This message is displayed when you attempt to select a pattern after the USB media in which the pattern is saved has been changed.
	There is no needle plate cover. Attach a needle plate cover.	This message is displayed when the needle plate cover is not attached.
	This file cannot be used.	This message appears if the file format is incompatible with this machine. Check the list of compatible file formats. (see page S-94)
	This file exceeds the data capacity and cannot be used. Use a suitable size file.	This message is displayed when the file size exceeds the data capacity of the machine. Confirm the file size and format. (see page S-95)
	This function cannot be used while in the sensor mode.	This message appears when the selected function is not available with the sensor function. (see page B-59)
	This key cannot be used at this time.	This message is displayed when you press Sewing Guide in
9		the screen other than the Utility Stitch, or press Pattern Explanation in the screen other than the Utility Stitch or
		Character/Decorative Stitch.

Marks	Error Messages	Cause/Solution
	This key does not operate when the needle is down. Raise the needle and press the key again.	This message is displayed when a key on the LCD display is touched while the needle is in the down position.
	This pattern cannot be sewn with this mode.	This message is displayed when the selected stitch is not available for the specific function.
	This stitch is not "Dual Feed Mode" compatible.	This message appears when the dual feed foot cannot be used with the current stitch. Select other stitch. (see page B-54)
	This USB media cannot be used.	This message is displayed when you try to use incompatible media.
?	This USB media is incompatible.	This message is displayed when you try to use incompatible USB media. For a list of compatible USB media, visit " support.brother.com ".
	To thread the needle, please remove the fabric from under the presser foot.	This message is displayed if you press the "Automatic Threading" button while the dual feed foot is attached and the presser foot height is 3 mm (1/8 inch) or higher. Remove the fabric, and then press the "Automatic Threading" button again.
\odot	Transmitting by USB	This message is displayed while the USB media is transmitting.
	Turn off the power and replace the needle plate.	This message is displayed when you try to sew with a stitch other than a middle needle position stitch while the single-hole needle plate is installed.
	USB media error	This message is displayed when an error occurs with the USB media.
	USB media is not loaded. Load USB media.	This message is displayed when you try to recall or save a pattern while no USB media is loaded.
	Use the presser foot lifter button to lower the presser foot.	This message is displayed when a button, such as the "Start/Stop" button, is pushed while the presser foot is raised.
	When the speed controller is set to control the zigzag stitch width, the "Start/Stop" button does not operate.	This message is displayed when the speed control lever is set to control the zigzag stitch width, and the "Start/Stop" button is pushed. Use the foot controller to operate the machine.

SPECIFICATIONS

	Item	Specification
Sewing Machine and Accessories (Box 1 of 2)	Dimensions of machine	Approx. 57.1 cm (W) \times 33.2 cm (H) \times 28.4 cm (D) (approx. 22-1/2 inches (W) \times 13-1/16 inches (H) \times 11-3/16 inches (D))
	Dimensions of box	Approx. 68.5 cm (W) \times 55.0 cm (H) \times 37.7 cm (D) (approx. 26-15/16 inches (W) \times 21-5/8 inches (H) \times 14-13/16 inches (D))
	Weight of machine	Approx. 15.4 kg (approx. 33.9 lb)
	Weight of box (for shipping)	Approx. 22.0 kg (approx. 48.5 lb)
	Sewing speed	70 to 1050 stitches per minute
	Needles	Home sewing machine needles (HA \times 130)
Wide table box (Box 2 of 2)	Dimensions of Wide table	Approx. 63.6 cm (W) \times 9.8 cm (H) \times 40.6 cm (D) (approx. 25-1/16 inches (W) \times 3-7/8 inches (H) \times 16 inches (D))
	Dimensions of machine with Wide table	Approx. 81.1 cm (W) × 33.2 cm (H) × 40.6 cm (D) (approx. 32-1/16 inches (W) × 13-1/16 inches (H) × 16 inches (D))
	Dimensions of box	Approx. 66.3 cm (W) \times 42.7 cm (H) \times 5.8 cm (D) (approx. 25-1/16 inches (W) \times 16-13/16 inches (H) \times 2-5/16 inches (D))
	Weight of Wide table	Approx. 2.2 kg (approx. 4.9 lb)
	Weight of box (for shipping)	Approx. 3.0 kg (approx. 6.7 lb)
Total Shipping Weight		Approx. 27 kg (approx. 59.6 lb)


* Please be aware that some specifications may change without notice.

UPGRADING YOUR MACHINE'S SOFTWARE

You can use USB media or a computer to upgrade software for your sewing machine. When an upgrade program is available on "<u>support.brother.com</u>", please download the files following the instructions on the website and steps below.

Note

 When using USB media to upgrade the software, check that no data other than the upgrade file is saved on the USB media being used before starting to upgrade.

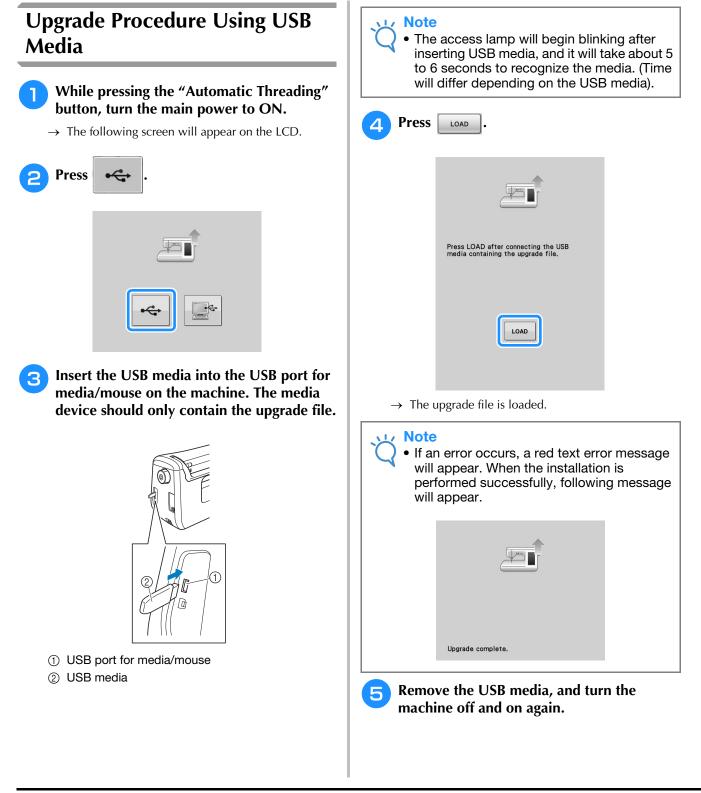

Maintenance and Troubleshooting


Upgrade Procedure Using Computer

Do not connect any additional USB media devices to your computer when using the USB cable.



While pressing the "Automatic Threading" button, turn the main power to ON.

 \rightarrow The following screen will appear on the LCD.

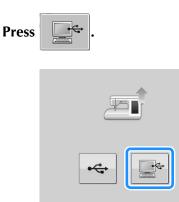

Plug the USB cable connector into the 3 corresponding USB ports for the computer and for the machine.

- \rightarrow "Removable Disk" will appear in "Computer (My computer)".
- Copy the upgrade file to "Removable Disk".

Organize Share with New folder	
🔆 Favorites	This folder is empty.
词 Libraries	
(붹 Computer	
C Network	
	156Copt + Copy to Removable Disk (G:)

 \rightarrow The following message will appear.

	Connected to PC. Do not disconnect the USB cable.	
5 When	the message disappears, p	oress
LOAD	J.	
	Press LOAD after saving the upgrade file in the machine.	
	LOAD	
	ıpgrade file is loaded.	
will will	a error occurs, a red text erro appear. When the installatio formed successfully, followir appear.	n is
	Upgrade complete.	
🛛 👩 Unplu	g the USB cable, and turn	the

Unplug the USB cable, and turn the machine off and on again.

INDEX

A

Accessories	
included accessories B-	
options B-	-16
Accessory compartment B-	-13
Adapter B-	-50
Air vent B-	-11
Alphabet characters	
character/decorative stitches	
Appliqué S-	-48
quiltingS	
using a zigzag stitch S	-31
Arrow keys S-1	106
Automatic fabric sensor system S-	-17
Automatic reinforcement stitch key	S-6
Automatic thread cutting key S	-13
Automatic Threading button B-13, B-	-42

B

Back to beginning key S-87
Bar tacks
Basting S-28
Blind hem stitches
Block move key S-108
Bobbin
pulling up the bobbin thread
setting B-39
winding B-34
Bobbin case
cleaning A-15
Bobbin clip B-15
Bobbin cover
Bobbin holder (switch) B-36
Bobbin winder
Bobbin work
Button sewing
4 hole buttons
shank
Buttonhole lever
Buttonholes
odd-shaped/buttons that do not fit the button holder plate S-58
one-step
one-step

С

Calibrating the sensor pen B-62
Character/Decorative Stitches
adjustments S-82
combining S-89
editing
key functions S-84
retrieving S-98, S-99
saving S-95, S-96, S-97
selecting S-77
sewing S-81
Cleaning
LCD screen A-15
machine casing A-15
race A-15
Combining Patterns
character/decorative stitches
Cord guide bobbin cover S-32
Crazy quilt S-32

D

Darning	S-58
Dart seam	S-28
Dual feed foot	B-54

Ε

Eco mode	B-28
Editing	
character/decorative stitches	S-84
MY CUSTOM STITCH	S-105
Elastic zigzag stitches	S-33
Elongation key	S-86
Enlarger key	
Error messages	
Eyelet	S-62
•	

F

Fabrics	
fabric/thread/needle combinations B-5	2
sewing heavyweight fabrics S-	-7
sewing lightweight fabrics S-	.9
sewing stretch fabrics S-9, S-5	7
Fagoting S-5	
Feed dogs B-12, S-4	0
Flat bed attachment B-1	
Flat fell Seam S-2	9
Foot controller B-11, S-	4
Free motion quilting	
free motion echo quilting foot "E" S-4	3
free motion open toe quilting foot "O" S-4	0
free motion quilting foot "C" S-4	1
Free motion sewing mode S-4	0

G

Gathering	S-29
Grid direction key	
Guideline marker	S-14

н

Handle B	3-11
Handwheel B	3-11
Heirloom S	S-53
Hemstitching	
daisy stitch S	S-53
drawn work S	S-54

I

Image key S-22, S-88,	S-107
Insert key	

K

Key functions	
character/decorative stitches	S-84
MY CUSTOM STITCH	S-105
utility stitches	B-23
Knee lifter	

INDEX

L

L/R SHIFT	S-11
LCD screen	B-11, B-22
cleaning	A-15
locking	S-18
Lower threading	
pulling up the bobbin thread	B-41
setting the bobbin	B-39
winding the bobbin	B-34

Μ

Address and the	
Main power switch	, ,
Mirror image key	S-21, S-86
Multi-directional sewing	S-63
MY CUSTOM STITCH	
designing	S-103
entering data	S-105
key functions	S-105
retrieving	
saving	S-110
storing in your list	

Ν

Needle	
changing the needle	B-51
changing the needle position	S-25
fabric/thread/needle combinations	B-52
mode	B-22
twin needle	B-45
Needle bar thread guides	B-12, B-46
Needle clamp screw	B-12
Needle mode selection key	B-45
Needle plate	B-12
Needle position	S-18, S-25
Needle Position button	B-13

0

Operation buttons	B-11,	B-13
Overcasting	S-31,	S-33

Р

Patchwork S-32
Piecing S-36
1/4" quilting foot with guide S-37
Pintuck S-30
Pivoting S-15
Point delete key S-107
Power cord
Power cord receptacle B-11
Presser foot
adapter B-49
attaching B-49
pressure S-17
removingB-49
types
Presser foot holder
Presser foot holder screw B-12
Presser foot lever B-11, S-8
Presser Foot Lifter button
Presser foot/Needle exchange key B-46, B-49, B-51, B-55
Pre-tension disk B-11, B-36, B-38

Q	
Quilting	S-35
free motion	S-40
with satin stitches	S-39

R

Race A-15
Reinforcement Stitch button B-13, S-5
Retrieving
character/decorative stitch patterns S-98
computer S-100
machine's memory S-98
MY CUSTOM STITCH designs S-111
stitch settings S-23
USB media S-99
utility stitches S-23
Reverse Stitch button B-13, S-5
Reverse/Reinforcement stitches S-5

S

Satin stitches S-39,	S-87
Saving	
character/decorative stitches	S-95
computer	S-97
machine's memory	
MY CUSTOM STITCH designs S-	-110
stitch settings	S-22
USB media	
utility stitches	
Scallop stitches	
Screen brightness /	A-18
Sensor functions I	
guideline marker I	B-64
Ľ/R SHIFT	
needle drop position	
sewing end point I	
Sensor pen I	
Sensor pen holder I	
Set key S-	
Settings	
automatic reinforcement stitching	S-5
automatic thread cutting	
display language	
machine setting mode key I	
stitch length	S-10
stitch width	
thread tension	
Sewing machine help key I	
Sewing speed controller (speed control slide) B-11, B-13,	S-3
Sewing type selection key	
Shelltuck stitches	S-49
Shutoff support mode	
Single/Repeat sewing key	S-86
Single/Triple stitching key	-106
Size selection key	S-86
Smocking stitches	
Speaker	B-26
Special spool cap	
Specifications	
Spool cap	
Spool net	
Spool pin	
Start/Stop button	
Step stitch patterns	
Stitch setting chart	
Straight stitch foot	
Straight stitch needle plate	
Straight stitches	
Supplemental spool pin	
Supplemental spool pin B-11, B-34, 1	0-40

т
Tape attaching
Tape or elastic attaching S-52
Test key S-107, S-110
Thread
fabric/thread/needle combinations B-52
thread tension S-12
Thread cutter
Thread Cutter button B-13
Thread density key S-87
Thread guide B-11, B-35, B-38, B-46
Thread guide plate B-11, B-38, B-42
Top cover B-11
Top stitching S-50
Touch pen S-106, A-18
Troubleshooting A-19
Twin needle B-45

U

Upgrading A-32
Upper threading
twin needle mode B-45
using the "Automatic Threading" button B-42
using the spool net B-47
USB cable
USB media
recalling S-99
saving S-96
usable S-94
USB mouse B-28, B-54
USB port connector
for computer B-11, S-97
for media S-96
Utility stitches
key functions B-23
pattern explanation key B-33
retrieving S-23
saving S-22
selecting S-21
sewing type selection key B-32
stitch setting chart S-67

W

Walking foot	B-49
--------------	------

Ζ

Zigzag stitches	S-31
Zipper insertion	
centered	S-64
side	S-65

Please visit us at **<u>support.brother.com</u>** where you can get product support and answers to frequently asked questions (FAQs).



