

RC 390

Art. no. 3213559en



KTM

DEAR KTM CUSTOMER

Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art sports motorcycle that will give you enormous pleasure if you service and maintain it properly.

We hope you enjoy your new vehicle!

Enter the serial numbers of your vehicle below.

Chassis number (📖 p. 26)	Dealer's stamp
Engine number (📖 p. 27)	
Key number (📖 p. 28)	

The Owner's Manual contained the latest information for this model series at the time of going to print. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications are non-binding. KTM Sportmotorcycle GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, deviations from illustrations and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2017 KTM Sportmotorcycle GmbH, Mattighofen Austria
All rights reserved



3213559en

01/2017

DEAR KTM CUSTOMER

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

According to the international quality management standard ISO 9001, KTM uses quality assurance processes that lead to the maximum possible quality of the products.

Issued by: TÜV Management Service

REG.NO. 12 100 6061

KTM Sportmotorcycle GmbH
5230 Mattighofen, Austria

This document is valid for the following models:

RC 390 US (F5375Q1)

TABLE OF CONTENTS

1	MEANS OF REPRESENTATION	7	5	SERIAL NUMBERS	26
	1.1 Symbols used	7	5.1	Chassis number	26
	1.2 Formats used.....	8	5.2	Type label	26
2	SAFETY ADVICE.....	9	5.3	Engine number	27
	2.1 Use definition.....	9	5.4	Key number.....	28
	2.2 Misuse.....	9	6	CONTROLS.....	29
	2.3 Safety advice.....	9	6.1	Clutch lever	29
	2.4 Degrees of risk and symbols	10	6.2	Hand brake lever.....	29
	2.5 Overview of labels	12	6.3	Throttle grip	30
	2.6 Reporting safety defects	15	6.4	Horn button.....	30
	2.7 Noise emission warranty	15	6.5	Light switch	31
	2.8 Operating noise warning	16	6.6	High beam flasher button	31
	2.9 Consumer rights.....	16	6.7	Turn signal switch.....	32
	2.10 Tampering warning.....	16	6.8	Emergency OFF switch	32
	2.11 Safe operation	17	6.9	Electric starter button.....	33
	2.12 Protective clothing	18	6.10	Ignition/steering lock	33
	2.13 Work rules.....	18	6.11	Locking the steering.....	34
	2.14 Environment.....	18	6.12	Unlocking the steering.....	34
	2.15 Owner's Manual	19	6.13	Opening the filler cap.....	35
3	IMPORTANT NOTES.....	20	6.14	Closing the filler cap	36
	3.1 Manufacturer and implied warranty.....	20	6.15	Seat lock.....	37
	3.2 Operating and auxiliary substances	20	6.16	Tool set.....	37
	3.3 Spare parts, accessories	20	6.17	Grab handles	38
	3.4 Service	21	6.18	Passenger footrests	38
	3.5 Figures	21	6.19	Shift lever	39
	3.6 Customer service.....	21	6.20	Foot brake lever	40
4	VIEW OF VEHICLE	22	6.21	Side stand.....	40
	4.1 View of vehicle, front left (example)	22	7	COMBINATION INSTRUMENT	41
	4.2 View of vehicle, rear right (example)	24	7.1	Overview	41

TABLE OF CONTENTS


7.2	Activation and test	42	9	RIDING INSTRUCTIONS	67
7.3	Warning notes.....	43	9.1	Checks and maintenance when preparing for use	67
7.4	Function buttons.....	46	9.2	Starting.....	68
7.5	Indicator lamps.....	47	9.3	Starting off.....	70
7.6	Display	48	9.4	Shifting, riding	70
7.7	Filling level display of the fuel tank	49	9.5	Applying the brakes.....	73
7.8	TRIP F display.....	50	9.6	Stopping, parking.....	75
7.9	Coolant temperature indicator	51	9.7	Transport	76
7.10	Info display	52	9.8	Refueling	77
7.11	Riding time/average speed menu	53	10	SERVICE SCHEDULE	80
7.12	Average speed/average fuel consumption 1 menu.....	53	10.1	Additional information.....	80
7.13	Average fuel consumption 1/average fuel consumption 2 menu	54	10.2	Required work	80
7.14	Average fuel consumption 2/service menu	55	10.3	Recommended work	82
7.15	Service/range menu.....	56	11	TUNING THE CHASSIS	83
7.16	Range/riding time menu	57	11.1	Adjusting the spring pretension of the shock absorber 	83
7.17	Total distance menu ODO	58	11.2	Adjusting the shift lever.....	84
7.18	Distance menu 1 TRIP 1	59	12	SERVICE WORK ON THE CHASSIS.....	86
7.19	Distance menu 2 TRIP 2	59	12.1	Raising the motorcycle with the rear lifting gear	86
7.20	Setting kilometers or miles.....	60	12.2	Removing the rear of the motorcycle from the lifting gear	86
7.21	Setting the time.....	61	12.3	Lifting the motorcycle with the front lifting gear	87
7.22	Adjusting the shift speed RPM 1	61	12.4	Taking the motorcycle from the front lifting gear ...	88
7.23	Adjusting the shift speed RPM 2	62	12.5	Cleaning the dust boots of the fork legs.....	89
8	PREPARING FOR USE.....	63	12.6	Removing the front rider's seat	90
8.1	Advice on first use	63	12.7	Mounting the front rider's seat.....	91
8.2	Running in the engine	64	12.8	Removing the passenger seat	91
8.3	Loading the vehicle	65	12.9	Mounting the passenger seat.....	92
			12.10	Checking for chain dirt accumulation.....	93

TABLE OF CONTENTS




















12.11	Cleaning the chain	93	14.4	Installing the rear wheel 	127
12.12	Checking the chain tension	94	14.5	Checking the rear hub rubber dampers 	130
12.13	Adjusting the chain tension	96	14.6	Checking the tire condition	131
12.14	Checking the chain, rear sprocket, and engine sprocket	98	14.7	Checking the tire air pressure	133
12.15	Removing the battery cover	100	15	ELECTRICAL SYSTEM	134
12.16	Mounting the battery cover	101	15.1	Removing the battery 	134
12.17	Removing the front spoiler	101	15.2	Installing the battery 	135
12.18	Fitting front spoiler	103	15.3	Recharging the battery 	136
12.19	Removing the left side cover 	104	15.4	Changing the ABS fuses	139
12.20	Installing the left side cover 	106	15.5	Changing the fuses of individual power consumers	141
12.21	Removing the right side cover 	107	15.6	Changing the low beam bulb	143
12.22	Installing the right side cover 	108	15.7	Changing the high beam bulb	145
13	BRAKE SYSTEM	110	15.8	Changing the turn signal bulb	147
13.1	Antilock braking system (ABS)	110	15.9	Checking the low beam headlight adjustment	148
13.2	Checking the brake discs	111	15.10	Checking the high beam headlight adjustment	149
13.3	Checking the brake fluid level of the front brake	112	15.11	Adjusting the headlight range of the low beam	150
13.4	Adding front brake fluid 	113	15.12	Adjusting the headlight range of the high beam	150
13.5	Checking the front brake linings	115	15.13	Diagnostics connector	151
13.6	Checking the rear brake fluid level	116	16	COOLING SYSTEM	152
13.7	Adding rear brake fluid 	117	16.1	Cooling system	152
13.8	Checking the rear brake linings	119	16.2	Checking the coolant level in the compensating tank	154
13.9	Checking the free travel of foot brake lever	120	16.3	Checking the antifreeze and coolant level	155
13.10	Adjusting the free travel of the foot brake lever 	121	16.4	Correcting the coolant level in the compensating tank	158
14	WHEELS, TIRES	123	16.5	Draining the coolant 	159
14.1	Removing the front wheel 	123	16.6	Filling/bleeding the cooling system 	161
14.2	Installing the front wheel 	124			
14.3	Removing the rear wheel 	126			

TABLE OF CONTENTS

17	TUNING THE ENGINE.....	164	23	SUBSTANCES	193
	17.1 Checking the clutch lever play.....	164	24	AUXILIARY SUBSTANCES	196
	17.2 Adjusting play in the clutch lever 	165	25	STANDARDS	198
18	SERVICE WORK ON THE ENGINE	166	26	INDEX OF SPECIAL TERMS	199
	18.1 Checking the engine oil level.....	166	27	LIST OF ABBREVIATIONS.....	200
	18.2 Changing the engine oil and oil filter, cleaning the oil screens 	166	28	LIST OF SYMBOLS.....	201
	18.3 Adding engine oil	170		28.1 Red symbols.....	201
19	CLEANING, CARE	171		28.2 Yellow and orange symbols.....	201
	19.1 Cleaning the motorcycle	171		28.3 Green and blue symbols.....	201
	19.2 Checks and maintenance steps for winter operation.....	173		INDEX	202
20	STORAGE.....	175			
	20.1 Storage	175			
	20.2 Preparing for use after storage.....	176			
21	TROUBLESHOOTING	177			
22	TECHNICAL DATA.....	180			
	22.1 Engine.....	180			
	22.2 Engine tightening torques	181			
	22.3 Capacities	184			
	22.3.1 Engine oil	184			
	22.3.2 Coolant	184			
	22.3.3 Fuel	184			
	22.4 Chassis	184			
	22.5 Electrical system.....	186			
	22.6 Tires	187			
	22.7 Fork.....	187			
	22.8 Shock absorber	187			
	22.9 Chassis tightening torques	188			

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



All work marked with this symbol requires specialist knowledge and technical understanding. In the interest of your own safety, have these jobs performed by an authorized KTM workshop. There, your motorcycle will be optimally cared for by specially trained experts using the specialist tools required.



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.

1 MEANS OF REPRESENTATION

1.2 Formats used

The typographical formats used in this document are explained below.

Specific name	Identifies a proprietary name.
Name®	Identifies a protected name.
Brand™	Identifies a brand available on the open market.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms that are explained in the glossary.

2.1 Use definition

KTM sport motorcycles are designed and constructed to meet the normal demands of regular road operation but not for use on race courses or offroad.



Info

The motorcycle is authorized for public road traffic in the homologous version only.

2.2 Misuse

The vehicle must only be used as intended.

Dangers can arise for people, property and the environment through use not as intended.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

2.3 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.4 Degrees of risk and symbols

**Danger**

Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.

**Warning**

Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.

**Caution**

Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.


Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.

**Warning**

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.5 Overview of labels

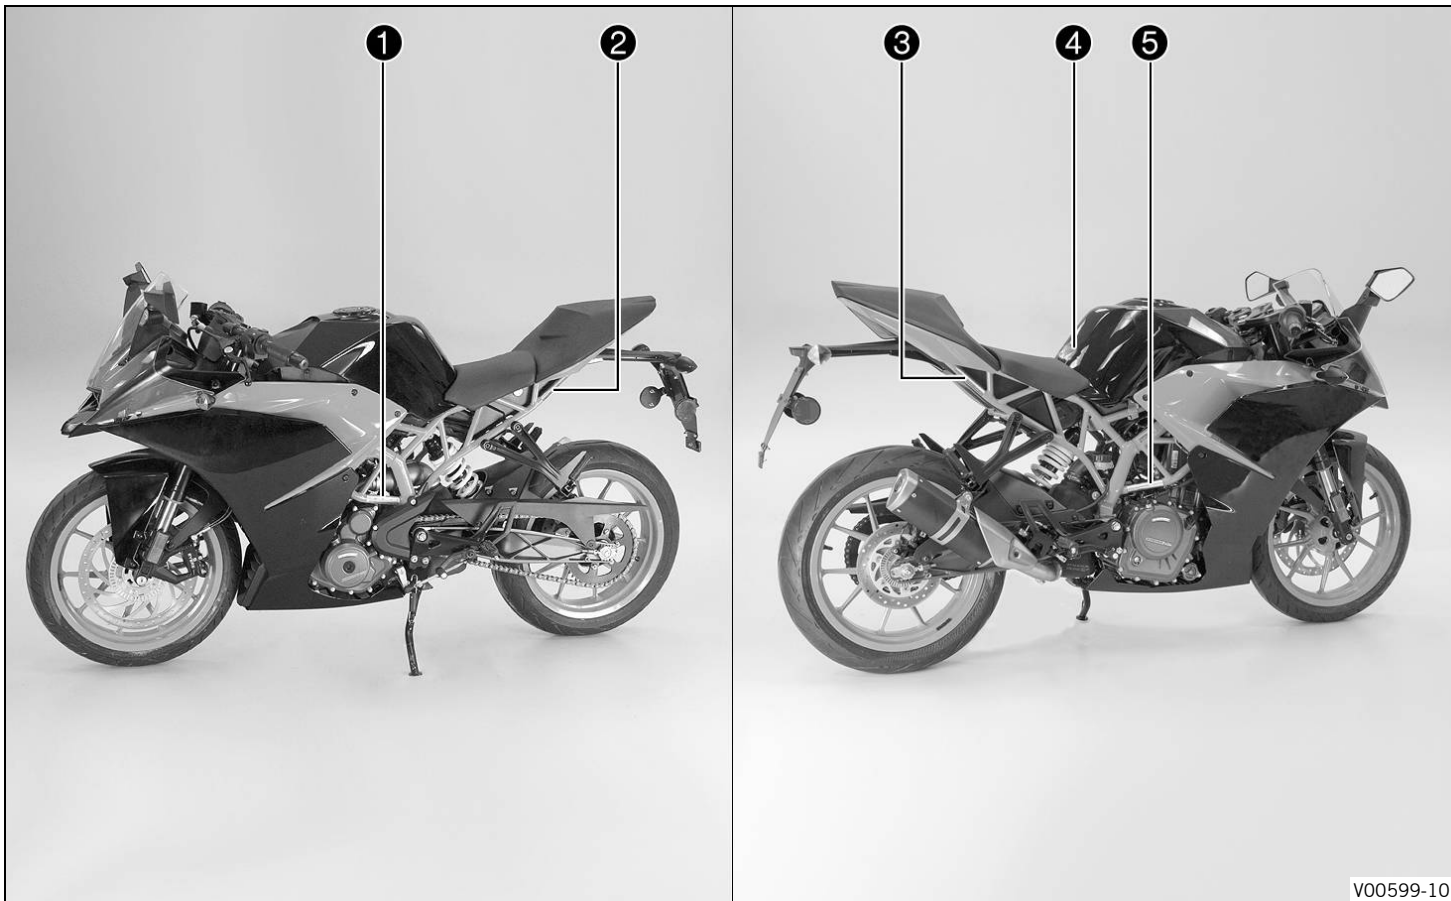

2 SAFETY ADVICE

1	Type label for Canada
2	Information on noise emissions
3	Type label for USA
4	Information on preparations for use
5	Information on emissions control

MANUFACTURED BY/FABRIQUÉ PAR:		BAJAJ AUTO LTD. INDIA FOR KTM AG	
GVWR/PNBV:	335 KG	DATE:	mm/jj
V.I.N./N.I.V.: VBKJxxxxxCxxxxx			
TYPE:		MC	
GAWR/PNBE	TIRE/PNEU-DIMENSION-RIM/JANTE	COLD INFL. PRESS. PRESS. DE GONFL. À FROID	
		PSI/LPC	KPA
1st	125 KG	110/70R17 3.00-17	29 200
2nd	210 KG	150/60R17 4.00-17	29 200
THIS VEHICLE CONFORMS TO ALL APPLICABLE STANDARDS PRESCRIBED UNDER THE CANADIAN SAFETY REGULATIONS IN EFFECT ON THE DATE OF MANUFACTURE - CE VÉHICULE EST CONFORME À TOUTES LES NORMES QUI LUI SONT APPLICABLES EN VERTU DU RÈGLEMENT SUR LA SÉCURITÉ DES VÉHICULES AUTOMOBILES DU CANADA EN VIGUEUR À LA DATE DE SA FABRICATION			

M01430-01


Type label for Canada

MOTORCYCLE NOISE EMISSION CONTROL INFORMATION	
BAJAJ AUTO LTD. INDIA FOR KTM AG	
THIS 2017 KTM MOTORCYCLE, 902.05.083.100 MEETS U.S. EPA NOISE EMISSION REQUIREMENTS OF 80 dBA AT 4500 RPM BY THE U.S. FEDERAL TEST PROCEDURE. MODIFICATIONS WHICH CAUSE THIS MOTORCYCLE TO EXCEED FEDERAL NOISE STANDARDS ARE PROHIBITED BY U.S. FEDERAL LAW. SEE OWNER'S MANUAL.	
Motorcycle Type : RC 390	

V00647-01

Information on noise emissions

2 SAFETY ADVICE

		MFD. BY BAJAJ AUTO LTD. INDIA FOR KTM AG		
MOTORCYCLE		DATE mm/jj		
GVWR	740 lbs	335 kg		
GAWR FRONT	276 lbs	125 kg WITH	110/70R17 TIRE,	54W TYPE,
	3.00-17 RIM, AT	29 psi 2.0	bar COLD	
GAWR REAR	464 lbs	210 kg WITH	150/60R17 TIRE,	66W TYPE,
	4.00-17 RIM, AT	29 psi 2.0	bar COLD	
THIS VEHICLE CONFORMS TO ALL APPLICABLE U.S. FEDERAL MOTOR VEHICLE SAFETY STANDARDS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE.				
VBKJxxxxxxCxxxxxx				

M01431-01

Type label for USA

Information on preparations for use

ACHTUNG

Lesen Sie vor der ersten Inbetriebnahme des Fahrzeuges die gesamte Bedienungsanleitung aufmerksam durch!

IMPORTANT

Please read the entire owner's manual carefully before putting the vehicle into operation for the first time.

ATTENZIONE

Prima della messa in funzione iniziale del veicolo, leggere con attenzione l'intero manuale d'uso!

ATTENTION


Lire attentivement l'ensemble du manuel d'utilisation avant de mettre le véhicule en service!

ATENCIÓN

Lea completa y atentamente el manual de instrucciones antes de poner en servicio por primera vez el vehículo!

S00725-01

Information on emissions control

VEHICLE EMISSION CONTROL INFORMATION			
 MANUFACTURER: BAJAJ AUTO LTD. INDIA FOR KTM AG IMPORTER: KTM NORTH AMERICA, INC.			
ENGINE DISPLACEMENT	373 cc	ENGINE EXHAUST EMISSION CONTROL SYSTEM	
ENGINE FAMILY	GKTXC.373RCD	TWC, TBI, HO2S	
EVAPORATIVE FAMILY	GKTXU0014RCD		
PERMEATION FAMILY	GKTXPMETALBC	MODEL NAME	RC 390
THIS VEHICLE CONFORMS WITH US EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2016 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.8 GKM HC+NOX, 12 GKM CO EXHAUST EMISSION STANDARDS IN CALIFORNIA			
ENGINE TUNEUP SPECIFICATIONS:			
IGNITION TIMING:	NON ADJUSTABLE		
IDLE SPEED:	1600 +/- 50 RPM IN NEUTRAL		
IDLE MIXTURE:	NON ADJUSTABLE		
VALVE CLEARANCE:	0.08 - 0.12 mm INTAKE	0.13 - 0.17 mm EXHAUST	
SPARK PLUG:	BOSCH VR5NE		
SPARK PLUG GAP:	0.8 mm		
FUEL:	UNLEADED GASOLINE ONLY - 91 (R+M)2 OCTANE OR HIGHER		
OIL:	SAE 16 W 50		
M01432-01			

2.6 Reporting safety defects

If you believe that your vehicle has a defect which could cause an accident resulting in injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying KTM North America, Inc.

If NHTSA receives multiple similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or KTM North America, Inc.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-888-327-4236 or visit the website www.nhtsa.dot.gov, or write to: NHTSA Headquarters, 1200 New Jersey Avenue, SE, West Building, Washington, DC 20590. You can also obtain other information about motor vehicle safety from the Hotline.

2.7 Noise emission warranty

KTM Sportmotorcycle AG warrants that this exhaust system, at the time of sale, meets all applicable U.S. EPA Federal noise standards. This warranty extends to the first person who buys this exhaust system for purposes other than resale, and to all subsequent buyers.

Warranty claims should be directed to:

KTM North America, Inc., Customer Support, 1119 Milan Ave., Amherst, OH 44001, USA

Phone: (440) 985-3553

www.ktmusa.com

KTM Canada, Inc., Customer Support, 1375-1 Marie-Victorin, Saint-Bruno, QC J3V 6B7

Phone: (450) 441-4451 x 4250

www.ktmcanada.com

2.8 Operating noise warning

This product should be checked for necessary repair or replacement parts if the motorcycle noise has increased significantly through use. Otherwise, the owner may become subject to penalties under the applicable ordinances.

2.9 Consumer rights

Warranty claims should be submitted to a KTM workshop. If you are not satisfied, please contact:

KTM North America, Inc., Customer Support, 1119 Milan Ave., Amherst, OH 44001, USA

Phone: (440) 985-3553

www.ktmusa.com

KTM Canada, Inc., Customer Support, 1375-1 Marie-Victorin, Saint-Bruno, QC J3V 6B7

Phone: (450) 441-4451 x 4250

www.ktmcanada.com

Different rights may apply, according to national or regional legislation.

2.10 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

- 1 The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- 2 the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- 1 Removal or puncturing of the main silencer, baffles, header pipes or any other components which conduct exhaust gases.
- 2 Removal or puncturing of parts of the intake system.
- 3 Lack of proper maintenance.
- 4 Replacing moving part of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

2.11 Safe operation



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

An appropriate driver's license is needed to ride the vehicle on public roads.

Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.

Adhere to the information and warning labels on the vehicle.

2.12 Protective clothing



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

In the interest of your own safety, KTM recommends that you only operate the vehicle while wearing protective clothing.

2.13 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite**®) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

2.14 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized KTM dealer will be glad to advise you.

2.15 Owner's Manual

It is important that you read this Owner's Manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and maintain your motorcycle. Only then will you find out how to customize the vehicle ideally for your own use and how you can protect yourself from injury.

Keep the Owner's Manual in an accessible place to enable you to refer to it as needed.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized KTM dealer.

The Owner's Manual is an important component of the vehicle and must be handed over to the new owner if the vehicle is sold.

3.1 Manufacturer and implied warranty

The work specified in the service schedule may only be performed in an authorized KTM workshop and must be recorded in both the Service & Warranty Booklet and in **KTM Dealer.net**, otherwise any warranty coverage will become void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the warranty. Additional information on the manufacturer or implied warranty and the procedures involved can be found in the Service & Warranty Booklet.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

Use operating and auxiliary substances (such as fuel and lubricants) as specified in the Owner's Manual.

3.3 Spare parts, accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by KTM and have them installed by an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss. Certain spare parts and accessory products are specified in parentheses in the descriptions. Your authorized KTM dealer will be glad to advise you.

The current **KTM PowerParts** for your vehicle can be found on the KTM website.
International KTM Website: <http://www.ktm.com>

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. Incorrect adjustment and tuning of the engine and chassis can lead to damage and breakage of components.

Use of the vehicle under difficult conditions, such in rain, high heat or with a heavy load, can lead to considerably more rapid wear of components such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

3.6 Customer service


Your authorized KTM dealer will be happy to answer any questions you may have on your vehicle and KTM.

A list of authorized KTM dealers can be found on the KTM website.

International KTM Website: <http://www.ktm.com>

4 VIEW OF VEHICLE

4.1 View of vehicle, front left (example)

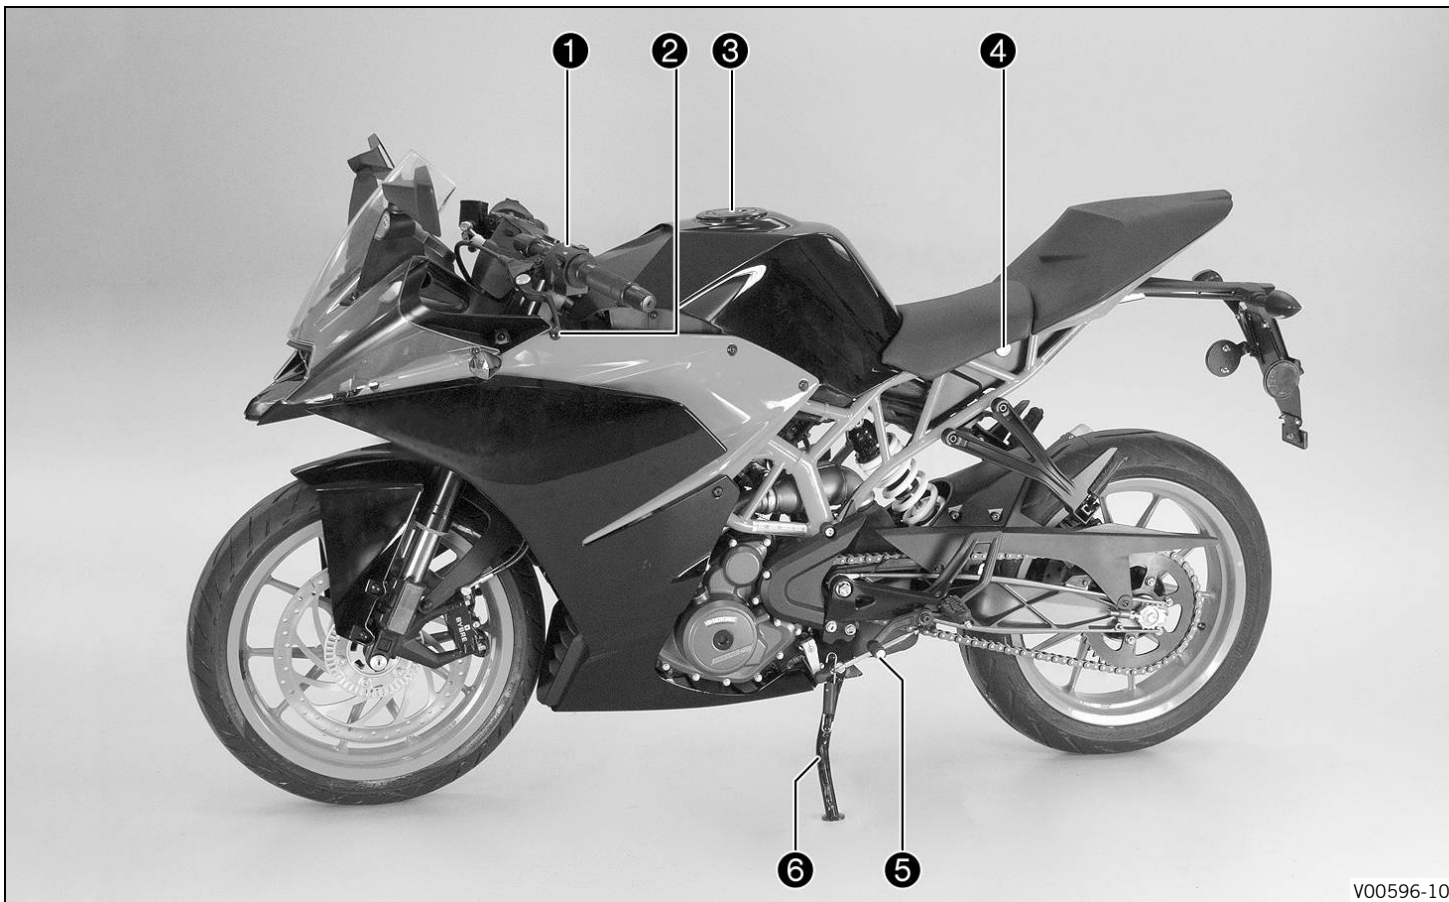


4 VIEW OF VEHICLE

1	Horn button (📖 p. 30)
1	Light switch (📖 p. 31)
1	High beam flasher button (📖 p. 31)
1	Turn signal switch (📖 p. 32)
2	Clutch lever (📖 p. 29)
3	Filler cap
4	Seat lock (📖 p. 37)
5	Shift lever (📖 p. 39)
6	Side stand (📖 p. 40)

4 VIEW OF VEHICLE


4.2 View of vehicle, rear right (example)

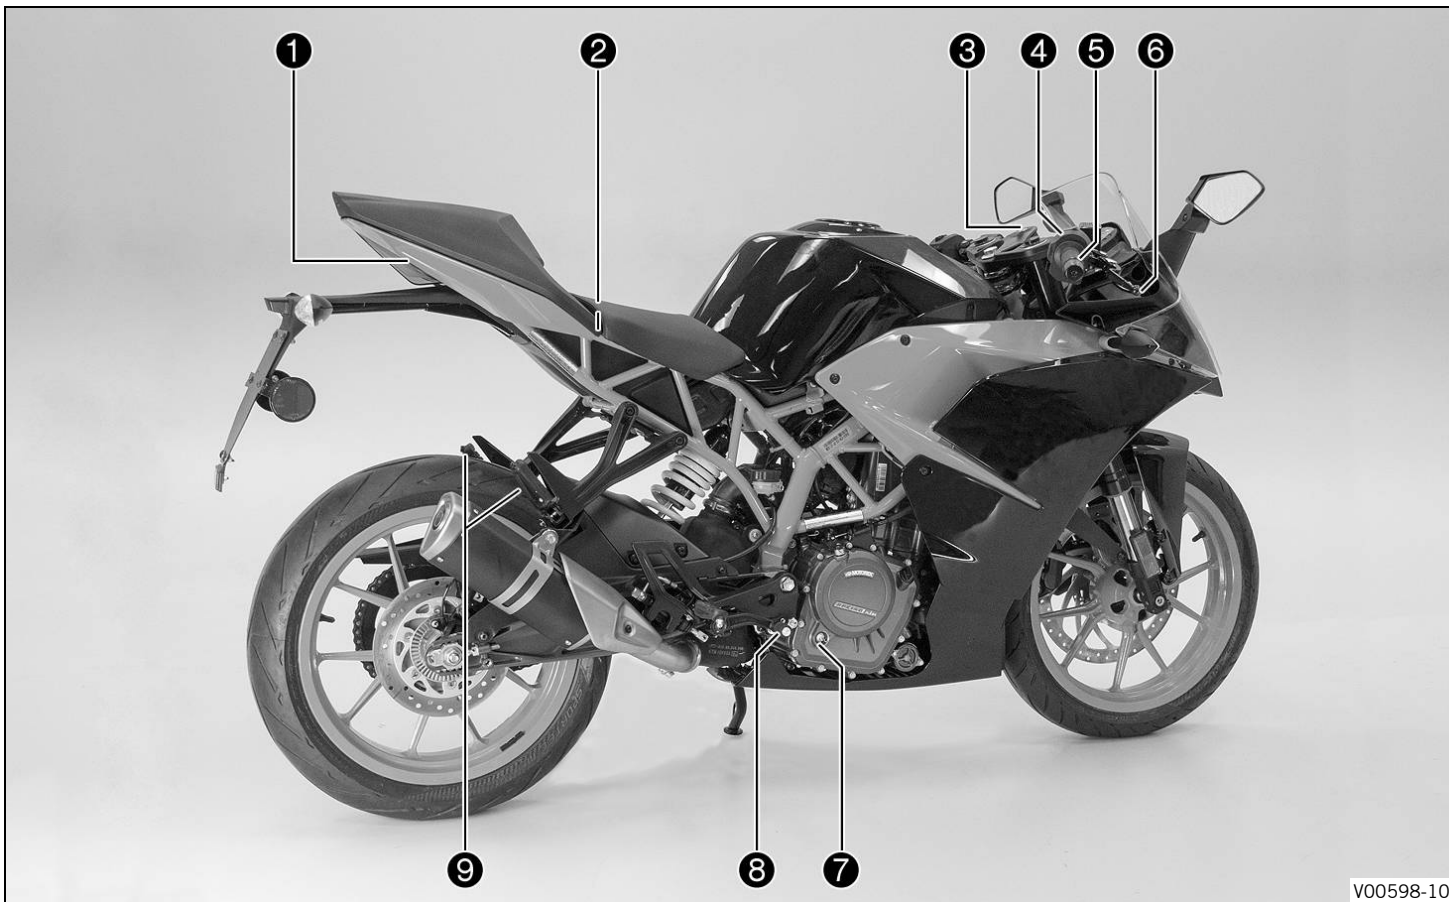

4 VIEW OF VEHICLE


1	Grab handles (📖 p. 38)
2	Tool set (📖 p. 37)
3	Ignition/steering lock (📖 p. 33)
4	Emergency OFF switch (📖 p. 32)
4	Electric starter button (📖 p. 33)
5	Throttle grip (📖 p. 30)
6	Hand brake lever (📖 p. 29)
7	Engine oil level viewer
8	Foot brake lever (📖 p. 40)
9	Passenger footrests (📖 p. 38)

5.1 Chassis number

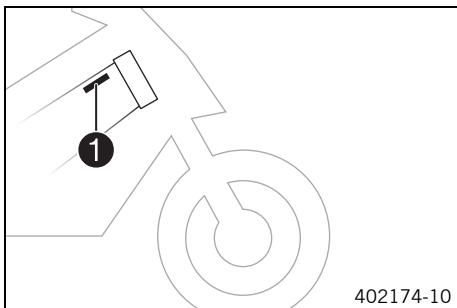


The vehicle chassis number ❶ is stamped on the frame behind the steering head on the right.

5.2 Type label

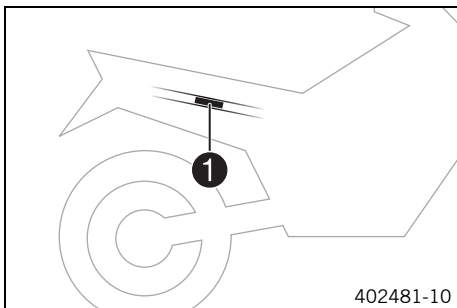


The USA type label ❶ is located under the passenger seat on the right.

5 SERIAL NUMBERS

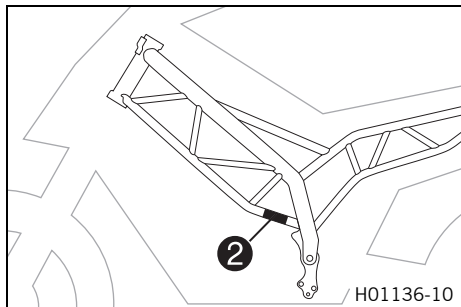


The type label Canada ② is located on the bottom frame on the left.

5.3 Engine number

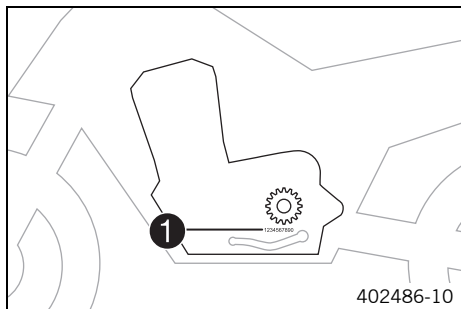

The engine number ① is stamped on the left side of the engine under the engine sprocket.

5.4 Key number

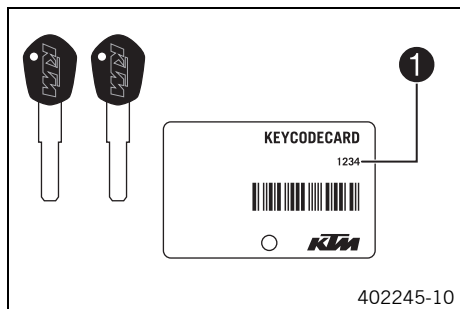


The key number **1** can be found on the **KEYCODECARD**.



Info

You need the key number to order a spare key. Keep the **KEYCODECARD** in a safe place.

6.1 Clutch lever

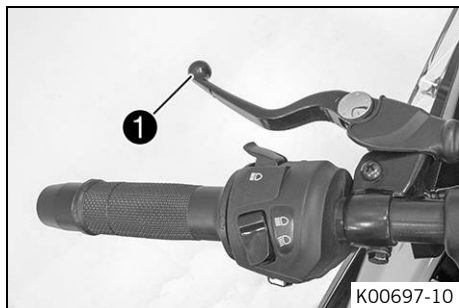


The clutch lever ❶ is fitted on the left side of the handlebar.

6.2 Hand brake lever




The hand brake lever ❶ is fitted on the right side of the handlebar.
The front brake is engaged using the hand brake lever.

6.3 Throttle grip

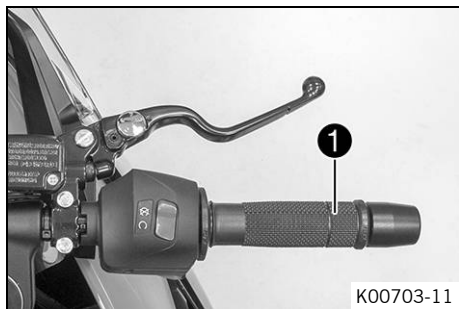



The throttle grip ❶ is fitted on the right side of the handlebar.

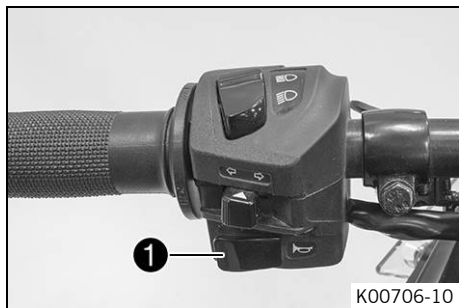6.4 Horn button




The horn button ❶ is fitted on the left side of the handlebar.

Possible states



- Horn button  in neutral position
- Horn button  pressed – The horn is operated in this position.

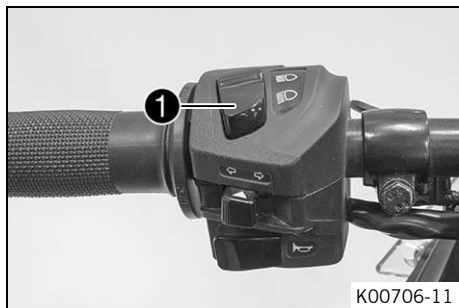6.5 Light switch




The light switch ❶ is fitted on the left side of the handlebar.

Possible states

	Low beam on – Light switch is turned downward. In this position, the low beam and tail light are switched on.
	High beam on – The light switch is turned upwards. In this position, the low beam, the high beam and the tail light are switched on.

6.6 High beam flasher button

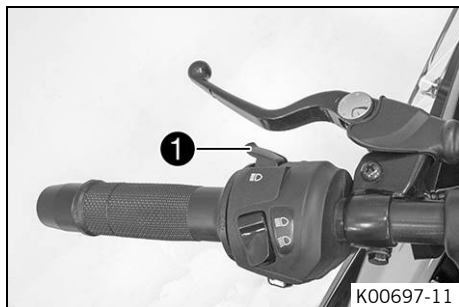


The high beam flasher button ❶ is fitted on the left side of the handlebar.

Possible states



- High beam flasher button in neutral position
- High beam flasher button pressed – In this position, the headlight flasher (high beam) is actuated.

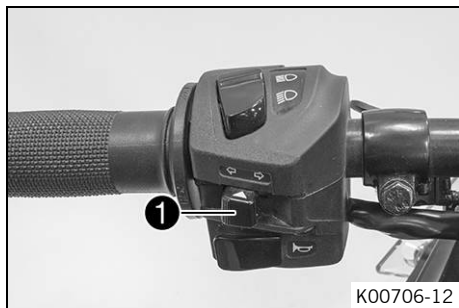6.7 Turn signal switch




The turn signal switch ❶ is fitted on the left side of the handlebar.

Possible states

	Turn signal off
	Turn signal, left, on – Turn signal switch pressed to the left. The turn signal switch returns automatically to the central position after use.
	Turn signal, right, on – Turn signal switch pressed to the right. The turn signal switch returns automatically to the central position after use.



To switch off the turn signal, press the turn signal switch towards the switch case.

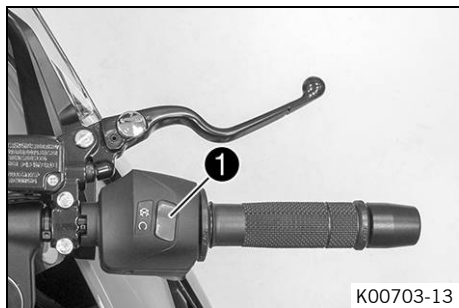6.8 Emergency OFF switch




The emergency OFF switch ❶ is fitted on the right side of the handlebar.

Possible states

	Emergency OFF switch off – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine cannot be started.
	Emergency OFF switch on – This position is required for operation; the ignition circuit is closed.

6.9 Electric starter button

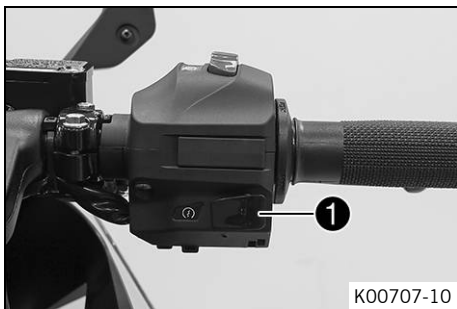

The electric starter button ❶ is fitted on the right side of the handlebar.

Possible states

- Electric starter button ❸ in basic position
- Electric starter button ❸ pressed – In this position, the electric starter is actuated.

6.10 Ignition/steering lock



The ignition/steering lock is in front of the upper triple clamp.

Possible states

	<p>Ignition OFF – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start. The ignition key can be removed.</p>
	<p>Ignition ON – In this position, the ignition circuit is closed and the engine can be started.</p>
	<p>Steering locked – In this position, the ignition circuit is interrupted and the steering locked. The ignition key can be removed.</p>

6.11 Locking the steering

Note


Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.



- Park the vehicle.
- Turn the handlebar all the way to the left.
- Insert the key into the ignition/handlebar lock, press in, and turn to the left. Remove the key.
- ✓ Steering is no longer possible.

6.12 Unlocking the steering

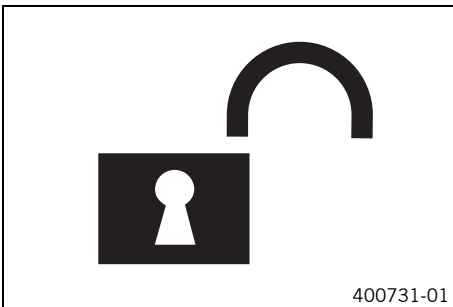

- Insert the key into the ignition/handlebar lock, press in, and turn to the right. Remove the key.
- ✓ You can now steer the bike again.

6.13 Opening the filler cap



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

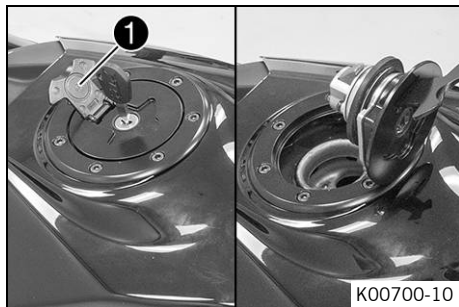


- Lift the cover ❶ of the filler cap and insert the ignition key in the lock.

Note

Danger of damage The ignition key may break if overloaded.
Damaged ignition keys must be replaced.

- Push down on the filler cap to take pressure off the ignition key.
-
- Turn the ignition key 90° clockwise.
 - Open the filler cap.
 - Remove the ignition key.

6.14 Closing the filler cap

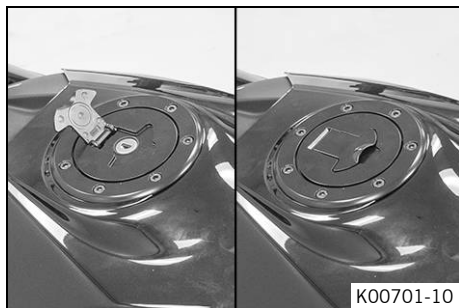

Warning

Fire hazard Fuel is highly flammable, toxic and a health hazard.


- Check the filler cap is locked correctly after closing.
 - Change your clothing in case of fuel spills on them.
 - Rinse the affected area immediately with plenty of water in the event of contact with the skin.
-
- Close the filler cap.
 - Push down the filler cap until the lock engages.

6.15 Seat lock



The seat lock **1** is located to the left of the seat.
The seat lock can be unlocked using the ignition key.

6.16 Tool set

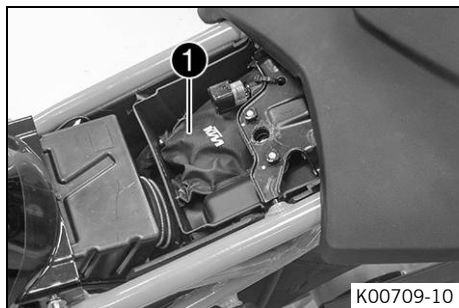


The tool set **1** is in the storage compartment under the seat.

6.17 Grab handles



The grab handles ❶ are used for moving the motorcycle around.
If you carry a passenger, the passenger can hold onto the grab handles during the trip.

6.18 Passenger footrests

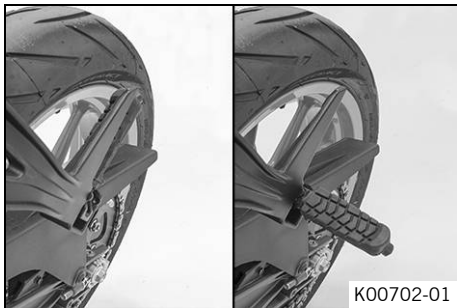


The passenger footrests can be folded in and out.


Possible states

- Passenger footrests folded up – For operation without a passenger.
- Passenger footrests folded down – For operation with a passenger.

6.19 Shift lever

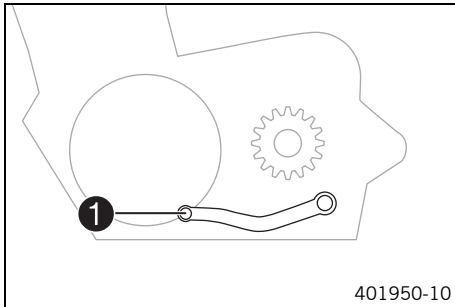


Shift lever ❶ is mounted on the left side of the engine.

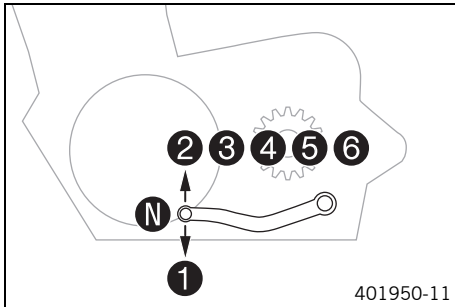


The gear positions can be seen in the photograph.
The neutral or idle position is between the first and second gears.

6.20 Foot brake lever

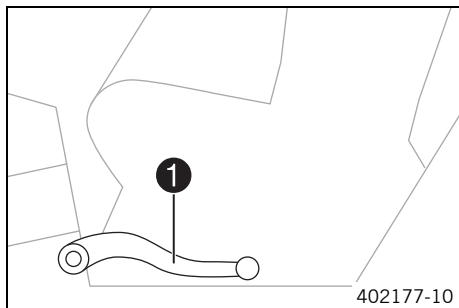

Foot brake lever ❶ is located in front of the right footrest. The foot brake lever is used to activate the rear brake.

6.21 Side stand

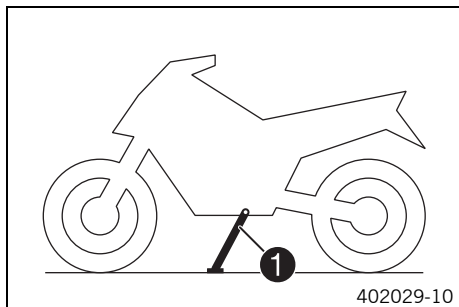

The side stand ❶ is on the left side of the vehicle. The side stand is used to park the motorcycle.




Info

The side stand must be folded up during motorcycle use. Side stand is coupled with the safety start system; see the riding instructions.

Possible states

- Side stand folded out – The vehicle can be leaned on the side stand. The safety start system is active.
- Side stand folded in – This position is mandatory for all trips. The safety start system is inactive.

7.1 Overview

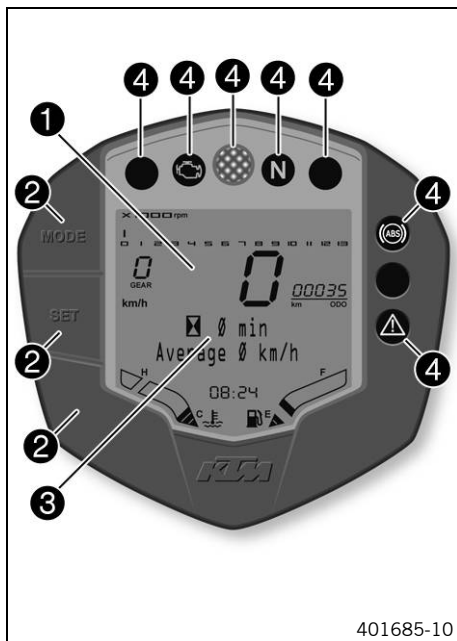

- | | |
|---|----------------------------|
| 1 | Display (📖 p. 48) |
| 2 | Function buttons (📖 p. 46) |
| 3 | Info display (📖 p. 52) |
| 4 | Indicator lamps (📖 p. 47) |

7.2 Activation and test



Activation

The combination instrument is activated when the ignition is switched on.

Test


The segments of the tachometer and the gear display light up and switch off in sequence. The speed display counts from 0 to 199 and back.

The remaining display segments outside the info display light up briefly.


The **READY TO RACE >>** logo appears on the info display.

The display then changes to the last selected mode.

7.3 Warning notes

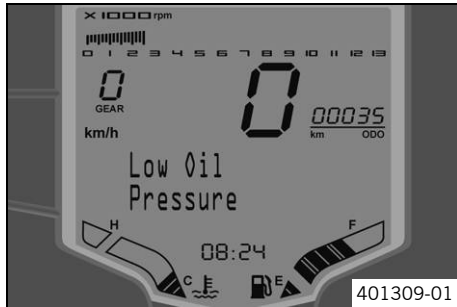


Low Oil Pressure appears on the info display if the oil pressure is too low.

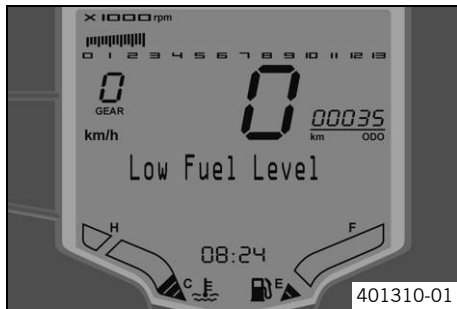


Low Fuel Level appears on the info display if the fuel level reaches the reserve mark.

7 COMBINATION INSTRUMENT

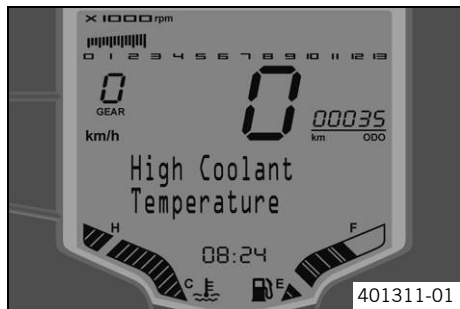

High Coolant Temperature appears on the info display if the coolant temperature rises above the specified value.

Coolant temperature	110 °C (230 °F)
---------------------	-----------------

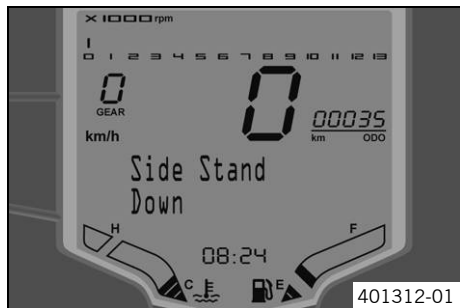


Side Stand Down appears on the info display if the side stand is folded down.



Low Battery appears on the info display if the battery voltage falls below the specified value.


Battery voltage	10.80 V
-----------------	---------

7 COMBINATION INSTRUMENT

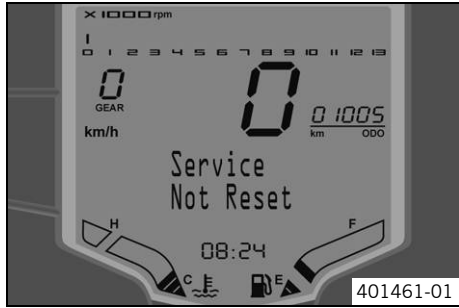

Service Not Reset appears on the info display for 10 seconds when the ignition is switched on and the distance interval between service appointments has been exceeded or the service interval display was not reset during a service appointment.

7.4 Function buttons

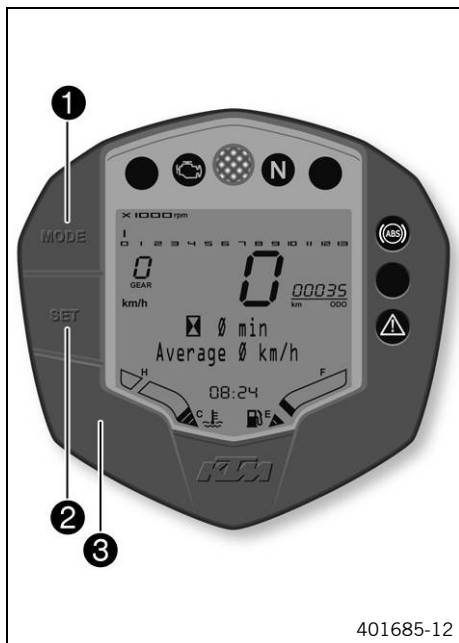

You can change the display mode with the **MODE** button ①.

Possible display modes are total distance traveled (**TRIP 1**), distance 1 (**ODO**) and distance 2 (**TRIP 2**).

Pressing and holding the **SET** button ② resets distance 1 (**TRIP 1**) and distance 2 (**TRIP 2**) functions to **0.0** and briefly pressing the **SET** button ② changes the info display to the next display mode.

The ABS can be switched off with the button ③.

7.5 Indicator lamps




401686-01

Possible states

	The turn signal indicator lamp flashes green simultaneously with the turn signal – The turn signal is switched on.
	Malfunction indicator lamp lights up yellow – The <u>OB</u> D has detected an emission- or safety-critical fault.
	The shift warning lights up/flashes red – The set shift speed has been reached.
	The idling speed indicator lamp lights up green – The transmission is in idle.
	The high beam indicator lamp lights up blue – The high beam is switched on.
	The immobilizer indicator lamp lights up or flashes red – Status or error message for immobilizer/alarm system (optional).
	The general warning lamp lights up yellow – An operating safety (warning) message was detected. This is also shown in the info display.
	ABS warning lamp lights up yellow – Status or error messages relating to <u>ABS</u> .

7.6 Display

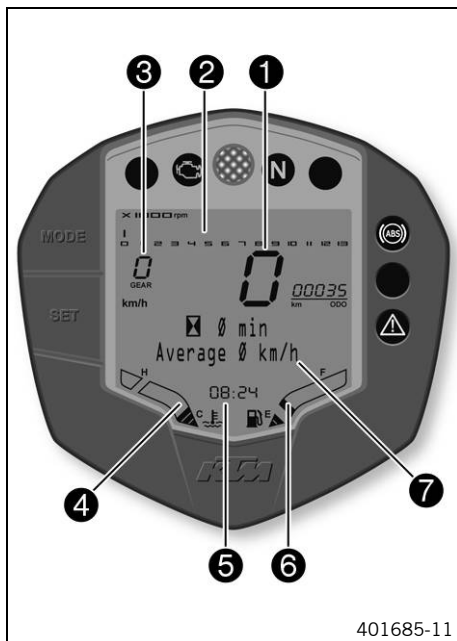

The speed **1** is shown in kilometers per hour **km/h** or in miles per hour **mph**.

The tachometer **2** shows the engine speed in revolutions per minute.

The gear display **3** shows the engaged gear.

The coolant temperature appears in segment **4**.

The time appears in segment **5**.

The filling level in the fuel tank is displaced in segment **6**.

The info display **7** shows additional information.



Info

The time must be reset after the battery was disconnected or the fuse was removed.

The intensity of the LED display depends on the ambient brightness.

7.7 Filling level display of the fuel tank

The filling level display consists of 9 bars. The more bars are lit, the more fuel is in the fuel tank.




7.8 TRIP F display



If the fuel level drops to the reserve mark, the display mode automatically changes to **TRIP F** and starts to count from **0.0**, regardless of the previous display mode.



Info

At the same time as the display mode **TRIP F**, the general warning lamp  lights up and the warning note **Low Fuel Level** appears on the info display.

7.9 Coolant temperature indicator



The temperature display consists of 13 bars. The more bars that light up, the hotter the coolant. When all bars light up, the following warning note appears on the info display:

High Coolant Temperature.


Possible states

- Engine cold – Up to three bars light up.
- Engine warm – Four to ten bars light up.
- Engine hot – Eleven to thirteen bars light up.


7.10 Info display



Various warning notes appear on info display ❶.

If the general warning lamp  lights up, the corresponding warning note is shown on the info display.

7.11 Riding time/average speed menu

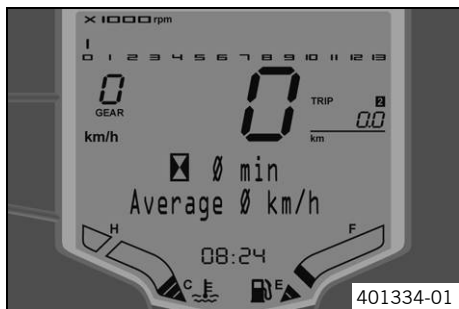

Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.
- The riding time and average speed are displayed in this menu.




Info

If the ignition was switched off for over 60 minutes, the display is reset to 0.

Press the **SET** button briefly.

Next display mode on the info display

7.12 Average speed/average fuel consumption 1 menu

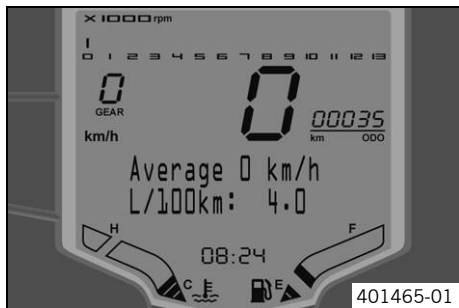

Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.

In this menu, the average speed and the average fuel consumption 1 are displayed in L/100 km (or L/100 miles).



Info


The average fuel consumption 1 is displayed after several 100 meters of travel after the ignition is switched on.

If the ignition was switched off for over 60 minutes, the display of the average speed and average fuel consumption 1 is reset to 0.

Press the **SET** button briefly.

Next display mode on the info display

7.13 Average fuel consumption 1/average fuel consumption 2 menu

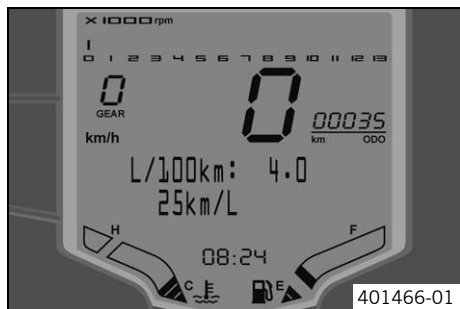

Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
- The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.

In this menu, the average fuel consumption 1 in L/100 km (or L/100 miles) and the average fuel consumption 2 in km/L (or miles/L) are displayed.



Info

The average fuel consumptions 1 and 2 are displayed after several 100 meters of travel after the ignition is switched on.

If the ignition was switched off for over 60 minutes, the display of the average fuel consumption 1 and 2 is reset to 0.

Press the SET button briefly.	Next display mode on the info display
--------------------------------------	---------------------------------------

7.14 Average fuel consumption 2/service menu



Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.


The average fuel consumption 2 in km/L (or miles/L) and the distance to the next service are displayed in this menu.

Info

The average fuel consumption 2 is displayed after several 100 meters of travel after the ignition is switched on.
If the ignition was switched off for over 60 minutes, the display of the average fuel consumption 2 is reset to 0.

Press the SET button briefly.	Next display mode on the info display
--------------------------------------	---------------------------------------

7.15 Service/range menu

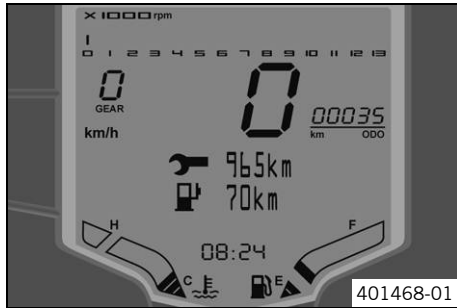

Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.

This menu shows the distance to the next service and the range.



Info

The range depends on the average fuel consumption and the fuel quantity in the fuel tank.


The range is displayed after several 100 meters of travel after the ignition is switched on.

If the ignition was switched off for over 60 minutes, the display of the range and riding time is reset to 0.

Press the **SET** button briefly.

Next display mode on the info display

7.16 Range/riding time menu

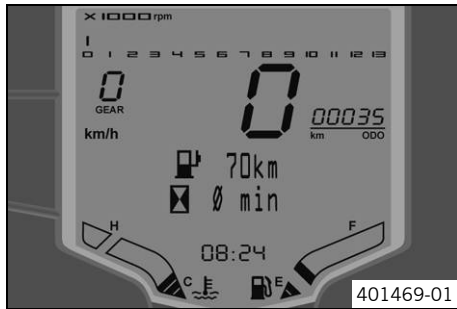

Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **SET** button briefly and repeatedly until the desired info display appears.

The range and the riding time are displayed in this menu.



Info

The range depends on the average fuel consumption and the fuel quantity in the fuel tank.


The range is displayed after several 100 meters of travel after the ignition is switched on.

If the ignition was switched off for over 60 minutes, the display of the range and riding time is reset to 0.

Press the **SET** button briefly.

Next display mode on the info display

7.17 Total distance menu ODO

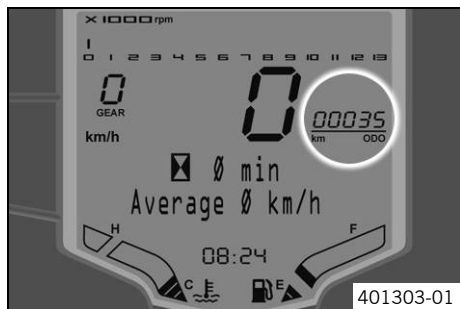

Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
- The motorcycle is moving.
- Press the **MODE** button briefly and repeatedly until **ODO** appears on the display.

ODO shows the total distance covered.




Info

This value is retained, even if the battery is disconnected from the vehicle and/or the fuse blows.

Press the **MODE** button.

Next display mode on the display

7.18 Distance menu 1 TRIP 1

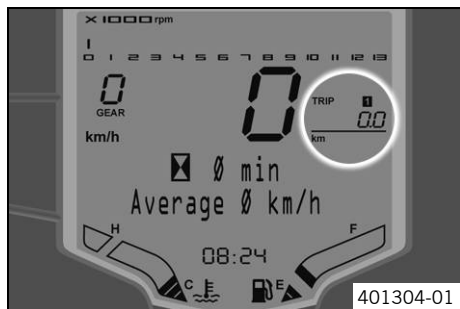

Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.


Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **MODE** button briefly and repeatedly until **TRIP 1** appears on the display.

TRIP 1 shows the distance since the last reset, such as between two refueling stops. **TRIP 1** is always running and counts up to **999.9**.

Press the SET button for 5 - 10 seconds.	Display of TRIP 1 is reset
Press the MODE button.	Next display mode on the display

7.19 Distance menu 2 TRIP 2

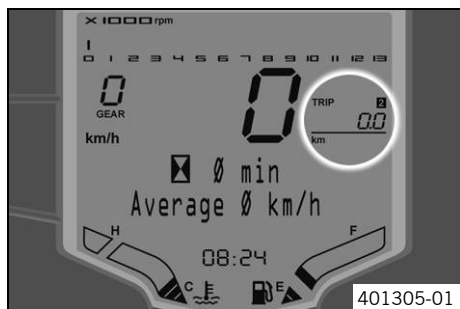

Condition

Alternative 1

- The ignition is on.
- The motorcycle is stationary.

Alternative 2

- The ignition is on.
 - The motorcycle is moving.
- Press the **MODE** button briefly and repeatedly until **TRIP 2** appears on the display.

TRIP 2 shows the distance since the last reset, such as between two refueling stops. **TRIP 2** is always running and counts up to **999.9**.

Press the SET button for 5 - 10 seconds.	Display of TRIP 2 is reset
Press the MODE button.	Next display mode on the display

7.20 Setting kilometers or miles



Info

Make the country-specific setting.

Condition


The ignition is on.

The motorcycle is stationary.

- Press the **MODE** button briefly and repeatedly until **ODO** appears on the display.
- Press the **MODE** button for 5 - 10 seconds.
- ✓ The display changes from **km/h** to **mph** or from **mph** to **km/h**.



7.21 Setting the time

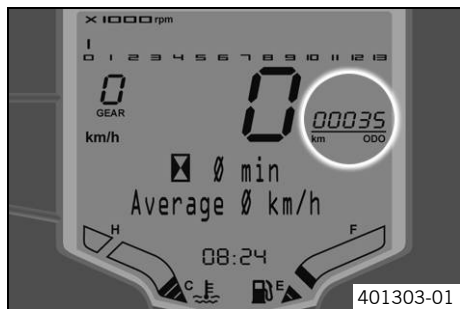


Condition

The ignition is on.

The motorcycle is stationary.

- Press the **MODE** button briefly and repeatedly until **ODO** appears on the display.
- Press the **MODE** and **SET** buttons for 5 - 10 seconds.
 - ✓ The time display begins to flash.
- Set the hours display using the **MODE** button.
- Set the minutes display using the **SET** button.
- Press the **MODE** and **SET** buttons for 5 - 10 seconds.
 - ✓ The time is set.

7.22 Adjusting the shift speed RPM 1

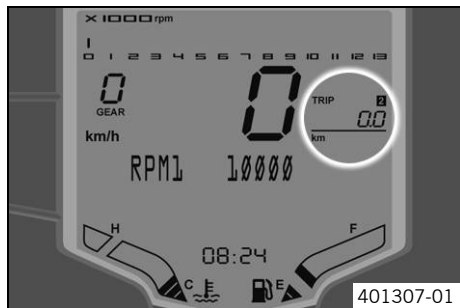

Condition

The ignition is on.

The motorcycle is stationary.

- Press the **MODE** button briefly and repeatedly until **TRIP 2** appears on the display.
- Press the **MODE** button for 5 - 10 seconds.
 - ✓ The display **RPM 1** appears.

Info

The engine speed can be set at intervals of 50.

RPM 1 is the engine speed above which the shift warning light starts flashing.

- Set the speed with the **MODE** and **SET** buttons.




Info

The **MODE** button increases the value.
The **SET** button decreases the value.

- Do not activate the two buttons for approx. 15 seconds.
- ✓ The display **RPM 1** goes out and the set speed is stored.

7.23 Adjusting the shift speed RPM 2

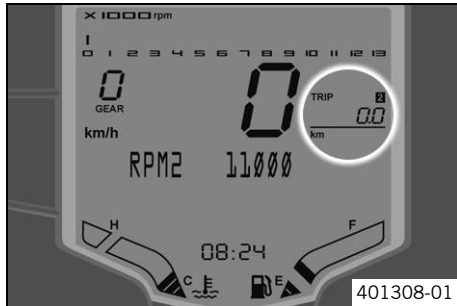

Condition

The ignition is on.
The motorcycle is stationary.

- Press the **MODE** button briefly and repeatedly until **TRIP 2** appears on the display.
- Press the **SET** button for 5 - 10 seconds.
- ✓ The display **RPM 2** appears.



Info

The engine speed can be set at intervals of 50.
RPM 2 is the engine speed above which the shift warning light lights up constantly.
The speed **RPM 2** must always be higher than the speed **RPM 1**.

- Set the speed with the **MODE** and **SET** buttons.



Info

The **MODE** button increases the value.
The **SET** button decreases the value.

- Do not activate the two buttons for approx. 15 seconds.
- ✓ The display **RPM 2** goes out and the set speed is stored.

8.1 Advice on first use



Danger

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



Warning

Risk of injury Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



Warning

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic. Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



Warning

Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.

- Only use tires/wheels approved by KTM with the corresponding speed index.



Warning


Danger of accidents New tires have reduced road grip. The contact surface on new tires is not yet roughened.

- Run in new tires with moderate riding at alternating angles.
Running-in phase

200 km (124 mi)

Info

When using your vehicle, remember that others may feel disturbed by excessive noise.

- Make sure that the pre-delivery inspection work has been carried out by an authorized KTM workshop.
 - ✓ You receive a delivery certificate and the Service and Warranty Booklet at vehicle handover.
- Before your first trip, read the entire operating instructions carefully.
- Get to know the controls.
- Get used to handling the motorcycle on a suitable piece of land before making a longer trip. Try also to ride as slowly as possible to get a better feel for the vehicle.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
- Run the engine in. ( p. 64)

8.2 Running in the engine



- During the running-in phase, do not exceed the specified engine speed.

Guideline

Maximum engine speed	
During the first: 1,000 km (620 mi)	7,500 rpm

Tip

During the running-in phase, set the shift warning light to the specified engine speed.

- Adjust the shift speed **RPM 1**. ( p. 61)
- Adjust the shift speed **RPM 2**. ( p. 62)
- Avoid fully opening the throttle!

8.3 Loading the vehicle



Warning

Danger of accidents Total weight and axle loads influence the handling characteristic.

The overall weight consists of: motorcycle ready for operation and with a full tank, driver and passenger with protective clothing and helmet, and luggage.

- Do not exceed the maximum permissible overall weight or the axle loads.



Warning

Danger of accidents Improper mounting of cases or the tank rucksack impairs the handling characteristic.

- Mount and secure cases and tank rucksack according to the manufacturer's instructions.



Warning

Danger of accidents The luggage system will be damaged if it is overloaded.

- Read the manufacturer information on maximum payload when mounting cases.



Warning

Danger of accidents Luggage which has slipped impairs visibility.

If the tail light is covered, you are less visible to traffic behind you, especially when it is dark.

- Check that your luggage is fixed properly at regular intervals.



Warning

Danger of accidents A high payload alters the handling characteristic and increases the stopping distance.

- Adapt your speed to your payload.



Warning

Danger of accidents Pieces of luggage which have slipped impair the handling characteristic.

- Check that your luggage is fixed properly at regular intervals.

8 PREPARING FOR USE

- If you carry any baggage, make sure it is fixed firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.
- Do not exceed the overall maximum permitted weight and the axle loads.

Guideline

Maximum permissible overall weight	335 kg (739 lb.)
Maximum permissible front axle load	125 kg (276 lb.)
Maximum permissible rear axle load	210 kg (463 lb.)

9.1 Checks and maintenance when preparing for use



Info

Before every trip, check the condition of the vehicle and ensure that it is roadworthy. The vehicle must be in perfect technical condition when used.

- Check the engine oil level. (📖 p. 166)
- Check the brake fluid level of the front brake. (📖 p. 112)
- Check the rear brake fluid level. (📖 p. 116)
- Check the front brake linings. (📖 p. 115)
- Check the rear brake linings. (📖 p. 119)
- Check the brake system function.
- Check the coolant level in the compensating tank. (📖 p. 154)
- Check for chain dirt accumulation. (📖 p. 93)
- Check the chain tension. (📖 p. 94)
- Check the tire condition. (📖 p. 131)
- Check the tire air pressure. (📖 p. 133)
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check the functioning of the electrical equipment.
- Check that baggage is correctly secured.
- Sit on the motorcycle and check the rear mirror setting.
- Check the fuel level.

9.2 Starting



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.



Caution

Danger of accidents Electronic components and safety devices will be damaged if the battery is discharged or missing.

- Never operate the vehicle with a discharged battery or without a battery.

Note

Engine damage Unfiltered intake air has a negative effect on the service life of the engine.


Dust and dirt will enter the engine without an air filter.

- Never start to use the vehicle without an air filter.

Note

Engine damage High revving speed with a cold engine negatively impacts the lifespan of the engine.

- Always run the engine warm at a low speed.
-

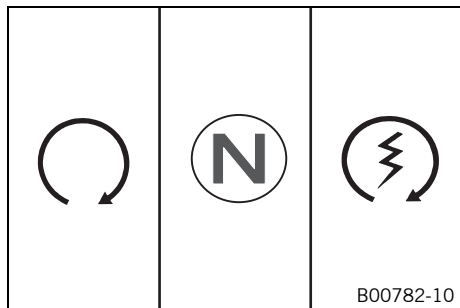

- Unlock the steering. (🔓 p. 34)
- Sit on the vehicle, take the weight off of the side stand, and move up all the way.
- Turn the emergency OFF switch to the position ○.
- Switch on the ignition by turning the ignition key to the position ○.
 - ✓ After you switch on the ignition, you can hear the fuel pump working for about two seconds. The function check of the combination instrument is run at the same time.
- Shift gear to neutral.
 - ✓ The green idling speed indicator lamp **N** lights up.
 - ✓ The ABS warning lamp lights up and goes back out after starting off.
- Press the electric starter button (🔌).


i Info

Do not press the electric starter button until the combination instrument function check is finished.

When starting, **DO NOT** open the throttle. If you open the throttle during the starting procedure, fuel is not injected by the engine management system and the engine cannot start.

Press the starter for a maximum of 5 seconds. Wait for a least 5 seconds before trying again.

This motorcycle is equipped with a safety starting system. You can only start the engine if the transmission is in neutral or if the clutch lever is pulled when a gear is engaged. If the side stand is folded out and you shift into gear and release the clutch, the engine stops.

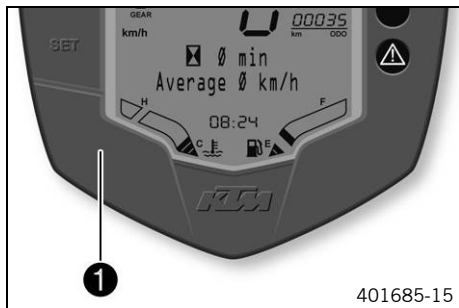

Switching off ABS

Condition

Vehicle stationary, engine running.

- Press button **1** for 3 – 5 seconds.
- ✓ The ABS warning lamp lights up; ABS is deactivated.

9.3 Starting off

- Pull the clutch lever, engage 1st gear, release the clutch lever slowly, and simultaneously open the throttle carefully.

Tip

If the engine dies while starting off, only pull the clutch lever and press the electric starter button. You do not need to shift into neutral.

9.4 Shifting, riding



Warning

Danger of accidents Abrupt load alterations can cause the vehicle to get out of control.

- Avoid abrupt load alterations and sudden braking actions.
- Adapt your speed to the road conditions.



Warning

Danger of accidents If you change down at high engine speed, the rear wheel blocks and the engine races.

- Do not change into a low gear at high engine speed.



Warning

Danger of accidents An incorrect ignition key position causes malfunctions.

- Do not change the ignition key position while driving.



Warning

Danger of accidents Adjustments to the vehicle distract attention from traffic activity.

- Make all adjustments when the vehicle is at a standstill.



Warning

Risk of injury The passenger may fall from the motorcycle if they conduct themselves incorrectly.

- Ensure that the passenger sits correctly on the passenger seat, places his or her feet on the passenger foot rest and holds on to the rider or the grab handles.
- Note the regulations governing the minimum age of passengers in your country.



Warning

Danger of accidents A risky riding style constitutes a major risk.

- Comply with traffic regulations and ride defensively and with foresight to detect sources of danger as early as possible.



Warning

Danger of accidents Cold tires have reduced road grip.

- Ride the first miles carefully on every journey at moderate speed until the tires reach operating temperature.



Warning

Danger of accidents New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

- Run in new tires with moderate riding at alternating angles.

Running-in phase

200 km (124 mi)



Warning

Danger of accidents Pieces of luggage which have slipped impair the handling characteristic.

- Check that your luggage is fixed properly at regular intervals.



Warning

Danger of accidents A fall can damage the vehicle more seriously than it may first appear.

- Check the vehicle after a fall as you do when preparing for use.

Note


Engine failure Overheating damages the engine.

- If the coolant temperature warning is displayed, stop immediately and take care not to endanger yourself or other traffic participants in the process.
- Allow the engine and cooling system to cool down.
- Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.



Info

If you hear unusual noises while riding, stop immediately, switch off the engine and contact an authorized KTM workshop.

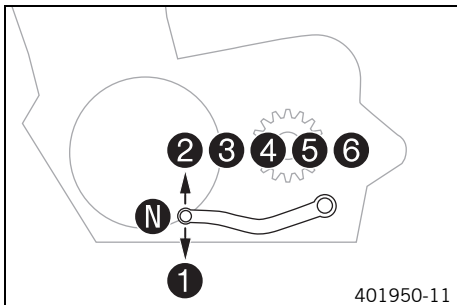


- When conditions allow (incline, road situation, etc.), you can shift into a higher gear.
- Release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch and open the throttle.



Info

You can see the positions of the 6 forward gears in the figure. The neutral or idle position is between the first and second gears. First gear is used for starting off or for steep inclines.

The operating temperature is reached when 4 bars of the temperature indicator light up.

- Accelerate only up to a speed suitable for the road surface and weather conditions. Particularly in bends, do not shift, and accelerate very carefully.
- To shift down, brake if necessary and close the throttle at the same time.
- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly and open the throttle or shift again.
- Switch off the engine if you expect to be standing for a long time.
- If the malfunction indicator lamp  lights up during a trip, stop immediately, switch off the engine, and contact an authorized KTM workshop.

9.5 Applying the brakes



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.



Warning

Danger of accidents A spongy pressure point on the front or rear brake reduces braking efficiency.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents The brake system fails in the event of overheating.

If the foot brake lever is not released, the brake linings drag continuously.

- Take your foot off the foot brake lever when you are not braking.



Warning

Danger of accidents Higher total weight increases the stopping distance.

- Take the longer stopping distance into account when carrying a passenger or luggage with you.



Warning

Danger of accidents Salt on the roads impairs the brake system.

- Brake carefully several times to remove salt from the brake linings and the brake discs.
-



Warning

Danger of accidents ABS may increase the stopping distance in certain situations.

- Adjust application of the brakes to the respective riding situation and riding surface conditions.



Warning

Danger of accidents Excessively forceful application of the brakes blocks the wheels.

The ABS effectiveness is only ensured if it is switched on.

- Leave the ABS switched on in order to benefit from the protective effect.
-

- When braking, release the throttle and apply the front and rear brakes at the same time.
-



Info

When the ABS is enabled, you can achieve maximum braking power even on low grip surfaces such as sandy, wet, or slippery terrain without locking of the wheels.



Warning

Danger of accidents The rear wheel can lock due to the engine braking effect.

- Pull in the clutch, if you perform emergency or full braking, or if you brake on a slippery ground.



Warning

Danger of accidents Banked or laterally sloping ground reduces the maximum possible delay.

- If possible finish braking before going into a bend.
-

- Always finish braking before you go into a bend. Change down to a lower gear appropriate to your road speed.

- Use the braking effect of the engine on long downhill stretches. Change down one or two gears, but do not over-rev the engine. In this way, you have to brake far less and the brakes do not overheat.

9.6 Stopping, parking



Warning

Risk of injury People who act without authorization endanger themselves and others.

- Do not leave the vehicle unattended if the engine is running.
- Protect the vehicle against access by unauthorized persons.
- Lock the steering and remove the ignition key if you leave the vehicle unattended.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Note

Material damage The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
 - Allow the vehicle to cool down before covering it.
-

- Apply the brakes on the motorcycle.
 - Shift gear to neutral.
 - Switch off the ignition by turning the ignition key to the position ☒.
-



Info

If the engine is switched off with the emergency OFF switch and the ignition remains switched on at the ignition lock, power continues to flow to most power consumers and the battery will discharge. You should therefore always switch off the engine with the ignition key – the emergency OFF switch is intended for emergencies only.

- Park the motorcycle on a firm surface.
- Swing the side stand forward with your foot as far as it will go and lean the vehicle on it.
- Lock the steering. (📖 p. 34)

9.7 Transport

Note


Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
 - Allow the vehicle to cool down before covering it.
-

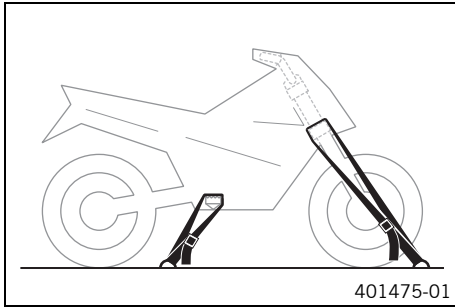

- Switch off the engine and remove the ignition key.
- Use tension belts or other suitable devices to secure the motorcycle against accidents or falling over.

9.8 Refueling



Danger

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



Warning

Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.

Note

Material damage Inadequate fuel quality causes the fuel filter to quickly become clogged.

In some countries and regions, the available fuel quality and cleanliness may not be sufficient. This will result in problems with the fuel system.

- Refuel only with clean fuel that meets the specified standards. (Your authorized KTM workshop will be glad to help.)




Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.
-

9 RIDING INSTRUCTIONS

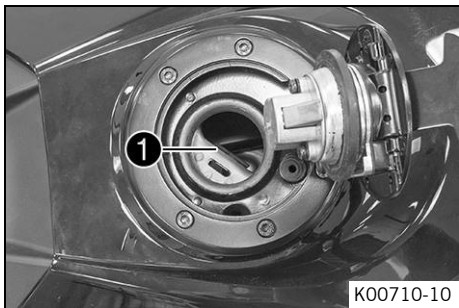

K00710-10

- Switch off the engine.
- Open the filler cap. (📖 p. 35)
- Fill the fuel tank with fuel up to the lower edge **1** of the fuel filler.

Total fuel tank capacity, approx.	9.5 l (2.51 US gal)	Super unleaded (ROZ 95/RON 95/PON 91) (📖 p. 195)
-----------------------------------	---------------------	--



- Close the filler cap. (📖 p. 36)

10.1 Additional information

Any further work that results from the required work or from the recommended work must be ordered separately and can be invoiced separately.

Depending on local operating conditions, service intervals may vary in your country.

10.2 Required work

	Every two years				
	Every year				
	every 15,000 km (9,300 mi)				
	every 7,500 km (4,650 mi)				
	after 1,000 km (620 mi)				
Read out the fault memory using the KTM diagnostics tool. 	○	●	●	●	●
Check that the electrical system is functioning properly.	○	●	●	●	●
Change the engine oil and oil filter and clean the oil screens.  (📖 p. 166)	○	●	●	●	●
Check the brake discs. (📖 p. 111)	○	●	●	●	●
Check the front brake linings. (📖 p. 115)	○	●	●	●	●
Check the rear brake linings. (📖 p. 119)	○	●	●	●	●
Check the tire condition. (📖 p. 131)	○	●	●	●	●
Check the tire air pressure. (📖 p. 133)	○	●	●	●	●
Check the brake lines for damage and leakage.	○	●	●	●	●
Check the brake fluid level of the front brake. (📖 p. 112)	○	●	●	●	●
Check the rear brake fluid level. (📖 p. 116)	○	●	●	●	●
Check the shock absorber and fork for leaks. Carry out maintenance according to requirements and purpose.	○	●	●	●	●
Clean the dust boots of the fork legs. (📖 p. 89)		●	●		
Check the chain, rear sprocket, and engine sprocket. (📖 p. 98)		●	●	●	●

10 SERVICE SCHEDULE

	Every two years				
	Every year				
	every 15,000 km (9,300 mi)				
	every 7,500 km (4,650 mi)				
	after 1,000 km (620 mi)				
Check the chain tension. (📖 p. 94)	○	●	●	●	●
Check the coolant level in the compensating tank. (📖 p. 154)	○	●	●	●	●
Check that the radiator fan is functioning properly. 🛠️	○	●	●	●	●
Change the air filter, clean the air filter box. 🛠️		●	●		
Check that the throttle cables are undamaged, routed without sharp bends, and set correctly. 🛠️	○	●	●	●	●
Check the cables for damage and routing without sharp bends. 🛠️	○	●	●	●	●
Check the valve clearance. 🛠️	○				
Check the valve clearance, change the spark plugs. 🛠️			●		
Change the front brake fluid. 🛠️					●
Change the rear brake fluid. 🛠️					●
Check the play of the steering head bearing. 🛠️	○	●	●	●	●
Check the low beam headlight adjustment. (📖 p. 148)	○	●	●		
Check the high beam headlight adjustment. (📖 p. 149)	○	●	●		
Final check: Final check: Check the vehicle for safe operation and take a test ride. 🛠️	○	●	●	●	●
Read out the error memory after the test ride using the KTM diagnostics tool. 🛠️	○	●	●	●	●
Reset the service interval display. 🛠️	○	●	●		
Make the service entry in the KTM Dealer.net and in the Service and Warranty Booklet. 🛠️	○	●	●	●	●

- One-time interval
- Periodic interval

10.3 Recommended work


		Every four years			
		Every year			
		every 30,000 km (18,600 mi)			
		every 7,500 km (4,650 mi)			
		after 1,000 km (620 mi)			
Check the frame. 🛠️			•		
Check the swingarm. 🛠️			•		
Check the swingarm bearing. 🛠️		•	•		
Check the wheel bearings. 🛠️		•	•		
Grease all moving parts (e.g. side stand, hand lever, chain, ...) and check for smooth operation. 🛠️	○	•	•	•	•
Empty the drainage hoses. 🛠️	○	•	•	•	•
Check all hoses (e.g. fuel, cooling, bleeder, drainage, etc.) and sleeves for cracking, leaks, and correct routing. 🛠️	○	•	•	•	•
Check the antifreeze. 🛠️	○	•	•	•	
Change the coolant. 🛠️					•
Check the screws and nuts for tightness. 🛠️	○	•	•	•	•

- One-time interval
- Periodic interval

11.1 Adjusting the spring pretension of the shock absorber ↴

- Warning**
Danger of accidents Modifications to the suspension settings can seriously alter the vehicle's ride behavior.
- Following modifications, ride slowly at first to get the feel of the new ride behavior.

- Info**
The spring pretension defines the initial status of the spring operation on the shock absorber. The best spring pretension setting is achieved when it is set for the weight of the rider and that of any baggage and a passenger, thus ensuring an ideal compromise between maneuverability and stability.

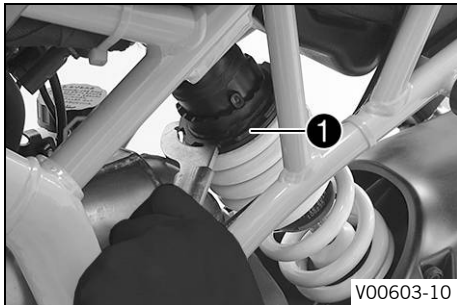

- Set the spring pretension by turning adjusting ring **1** using the hook wrench and the extension from the tool set.

Guideline

Spring preload	
Standard	4 clicks

Hook wrench, shock absorber (90529077000)

Extension for hook wrench (90129099025)


- Info**
The spring pretension can be set to 10 different positions.

11.2 Adjusting the shift lever



Info

The adjustment range of the shift lever is limited.

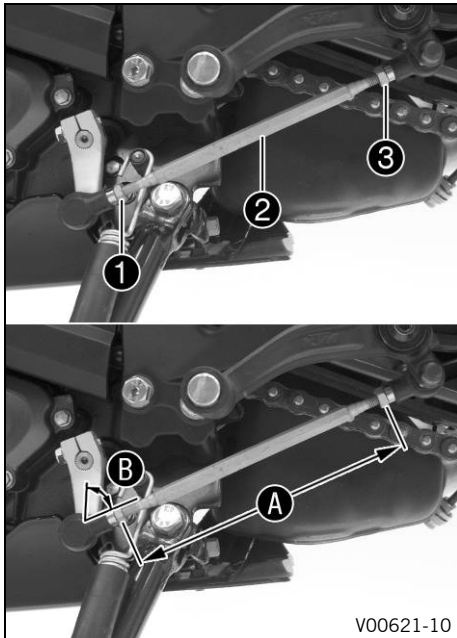

V00621-10

- Loosen nut **1**, holding threaded rod **2**.



Info

Nut **1** has a left-handed thread.

- Loosen nut **3**, holding threaded rod **2**.
- Adjust the shift lever by turning shift rod **2**.

Guideline

Shift rod adjustment range A	150... 162 mm (5.91... 6.38 in)
-------------------------------------	---------------------------------



Info

Make the same adjustments on both sides.

At least five screw threads must be screwed into the seating.

- Check adjusting angle **B**.

Guideline

Adjusting angle B shift rod - bell crank - shift lever	75°
---	-----

- Tighten nut **3** while holding threaded rod **2**.

Guideline

Nut, shift rod	M6	10 Nm (7.4 lbf ft)
----------------	----	--------------------

11 TUNING THE CHASSIS

- Tighten nut ❶, holding threaded rod ❷.

Guideline

Nut, shift rod	M6LH	10 Nm (7.4 lbf ft)
----------------	------	--------------------


- Check the shift lever to ensure it is functioning properly and can move freely.

12.1 Raising the motorcycle with the rear lifting gear

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

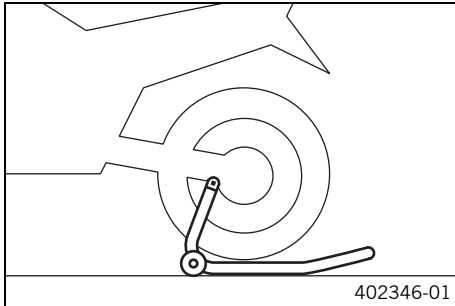

- Mount the supports of the lifting gear.
- Insert the adapter in the rear lifting gear.

Retaining adapter (61029955244)

Lifting gear, rear (69329955000)

- Stand the motorcycle upright, align the lifting gear with the swingarm and the adapters, and lift the motorcycle.


12.2 Removing the rear of the motorcycle from the lifting gear

Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

12 SERVICE WORK ON THE CHASSIS

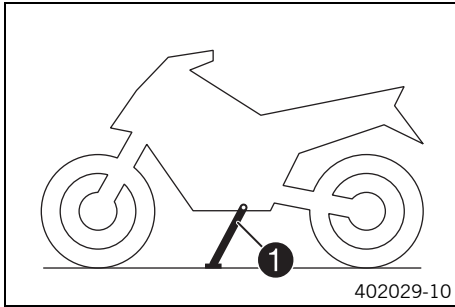

- Secure the motorcycle against falling over.
- Remove the rear lifting gear and lean the vehicle on side stand ❶.
- Remove bushings kit.

12.3 Lifting the motorcycle with the front lifting gear

Note

Danger of damage The parked vehicle can roll away or fall over.


- Park the vehicle on a firm and level surface.


Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 86)

Condition

- Remove protection cap ❶.

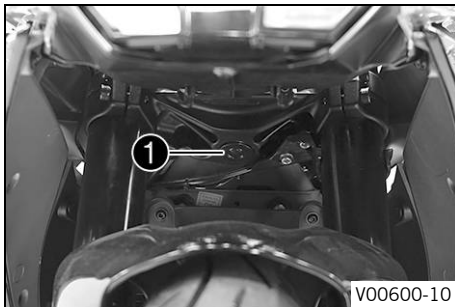

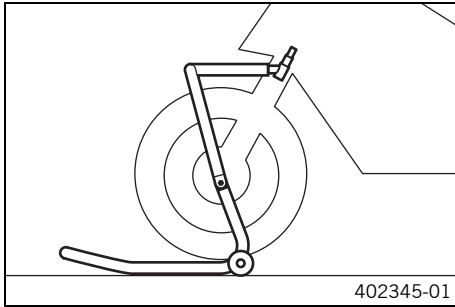

- Move the handlebar to the straight-ahead position. Position the lifting gear.

Mounting pin (69329965030)

Lifting gear, front (69329965000)

**Info**

Always raise the motorcycle at the rear first.


- Raise the motorcycle at the front.

12.4 Taking the motorcycle from the front lifting gear


Note

Danger of damage The parked vehicle can roll away or fall over.

- Park the vehicle on a firm and level surface.

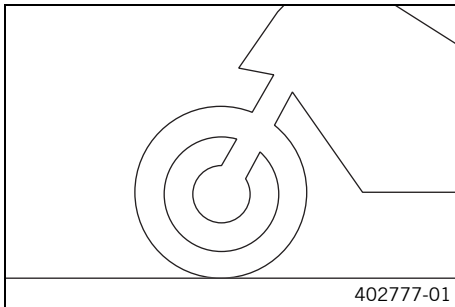**Main work**

- Secure the motorcycle against falling over.
- Remove the front lifting gear.

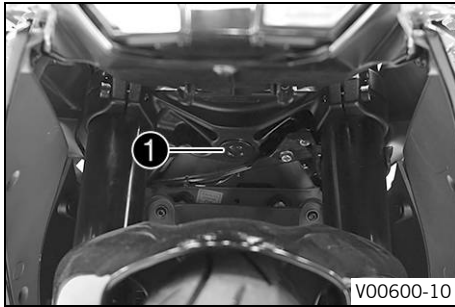

- Mount protection cap ①.

Finishing work

- Remove the rear of the motorcycle from the lifting gear. (🛠️ p. 86)

12.5 Cleaning the dust boots of the fork legs

Preparatory work


- Raise the motorcycle with the rear lifting gear. (🛠️ p. 86)
- Lift the motorcycle with the front lifting gear. (🛠️ p. 87)

Main work

- Push dust boots ① of both fork legs downward.

i Info

The dust boots should remove dust and coarse dirt particles from the fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.

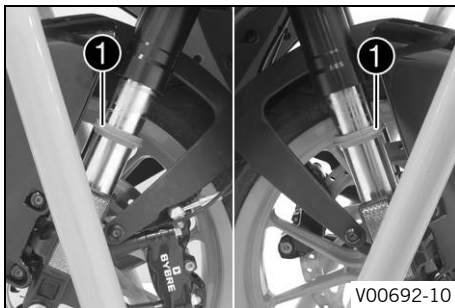



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

- Clean and oil the dust boots and inner fork tubes of both fork legs.


Universal oil spray (📖 p. 197)

- Press the dust boots back into their installation position.
- Remove excess oil.

Finishing work


- Take the motorcycle from the front lifting gear. (📖 p. 88)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 86)

12.6 Removing the front rider's seat

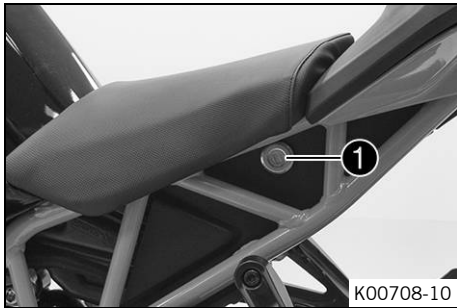


- Insert the ignition key in seat lock ① and turn it clockwise.
- Raise the rear of the front rider's seat, pull it toward the rear, and remove it upward.
- Remove the ignition key from the seat lock.

12.7 Mounting the front rider's seat

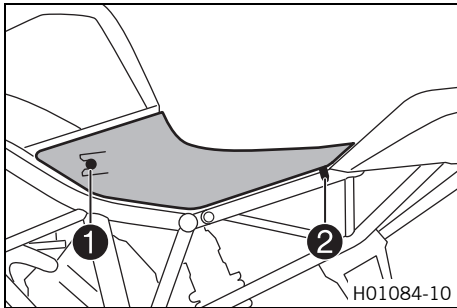

- Attach recesses **1** on the front rider's seat to the fuel tank, push the front rider's seat forward, and lower at the rear.
- ✓ The pin **2** locks audibly in place.
- Check that the front rider's seat is correctly mounted.

12.8 Removing the passenger seat

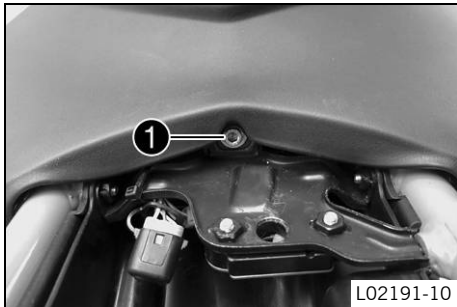


Preparatory work

- Remove the front rider's seat. (🔧 p. 90)

Main work


- Remove screw **1** with the washer.
- Lift and take off the passenger seat.

12.9 Mounting the passenger seat

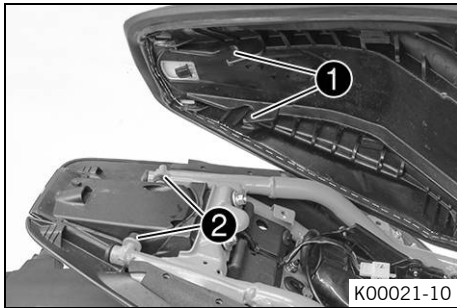

Main work

- Attach hook ① into bracket ②.
- Lower the passenger seat and push back.

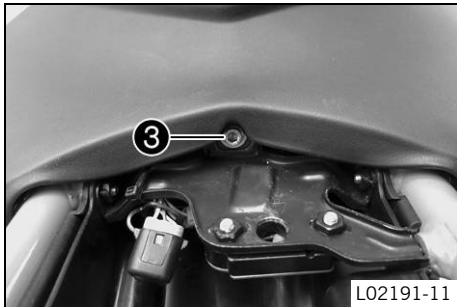

- Mount and tighten screw ③ with the washer.

Guideline

Screw, passenger seat	M6	7 Nm (5.2 lbf ft)
-----------------------	----	-------------------



Warning

Danger of accidents The passenger seat can come loose from the anchoring if it is not mounted correctly.


- After mounting the passenger seat, check that it is locked correctly by pulling up.

- Check that the passenger seat is correctly mounted.

Finishing work

- Mount the front rider's seat. (📖 p. 91)

12.10 Checking for chain dirt accumulation

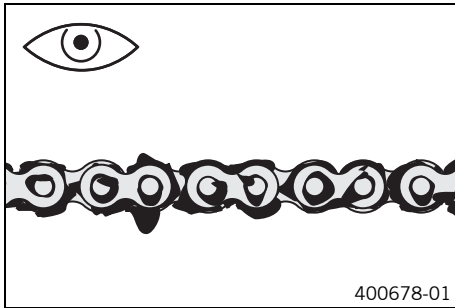

- Check the chain for coarse dirt accumulation.
 - » If the chain is very dirty:
 - Clean the chain. (📖 p. 93)

12.11 Cleaning the chain



Warning

Danger of accidents Oil or grease on the tires reduces the road grip.

- Remove the lubricant from the tires using a suitable cleaning agent.



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

The service life of the chain depends largely on its maintenance.

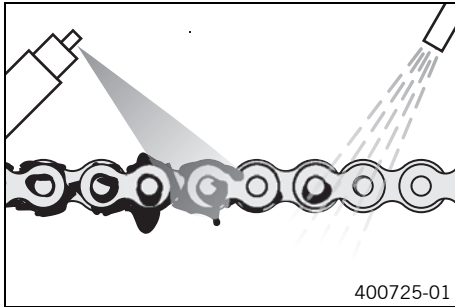

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 86)

Main work

- Clean the chain regularly.
- Rinse off loose dirt with a soft jet of water.
- Remove old grease remains with chain cleaner.

Chain cleaner (📖 p. 196)

- After drying, apply chain spray.

Chain lube for road use (📖 p. 196)

Finishing work

- Remove the rear of the motorcycle from the lifting gear. (📖 p. 86)

12.12 Checking the chain tension





Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.

If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

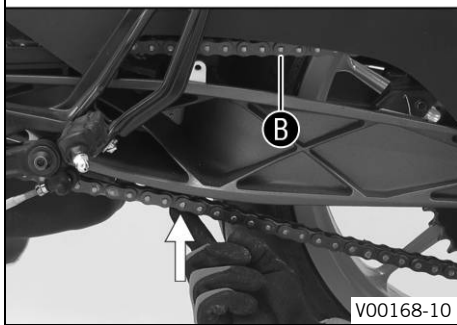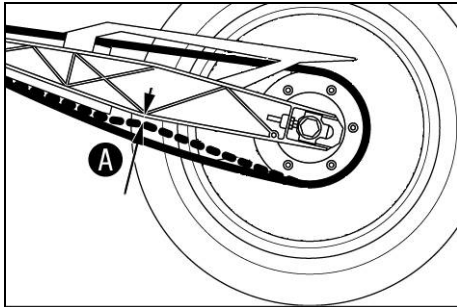

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 86)

Main work

- Shift gear to neutral.
- In the area of the chain sliding guard, press the chain upward toward the swingarm and determine chain tension **A**.

i Info

Upper chain section **B** must be taut.

Chain wear is not always even, so you should repeat this measurement at different chain positions.

Chain tension	5... 7 mm (0.2... 0.28 in)
---------------	----------------------------

- » If the chain tension does not meet the specification:
 - Adjust the chain tension. (📖 p. 96)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 86)

12.13 Adjusting the chain tension



Warning

Danger of accidents Incorrect chain tension damages components and results in accidents.


If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 86)
- Check the chain tension. (📖 p. 94)

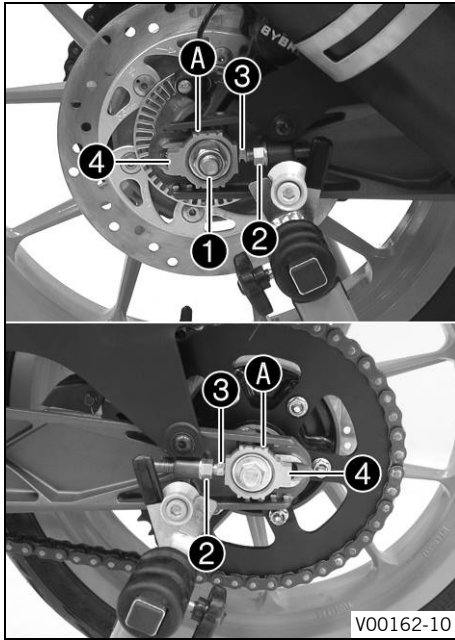

Main work

- Loosen nut ①.
- Loosen nuts ②.
- Adjust the chain tension by turning adjusting screws ③ left and right.

Guideline

Chain tension	5... 7 mm (0.2... 0.28 in)
Turn the adjusting screws ③ on the left and right so that the markings on the left and right chain adjusters ④ are in the same position relative to the reference marks A. The rear wheel is then correctly aligned.	



Info

The upper part of the chain must be taut.
Chain wear is not always even, so you should check the setting at different chain positions.

- Tighten nuts ②.
- Make sure that chain adjusters ④ are fitted correctly on adjusting screws ③.
- Tighten nut ①.


Guideline

Nut, rear wheel spindle	M14x1.5	90 Nm (66.4 lbf ft)
-------------------------	---------	------------------------

Finishing work

- Remove the rear of the motorcycle from the lifting gear. (📖 p. 86)

12.14 Checking the chain, rear sprocket, and engine sprocket

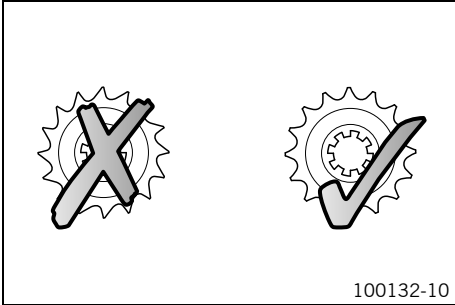

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 86)


Main work

- Shift gear to neutral.
- Check the rear sprocket and engine sprocket for wear.
 - » If the rear sprocket and engine sprocket are worn:
 - Change the drivetrain kit. 🛠️



Info

The engine sprocket, rear sprocket and chain should always be replaced together.

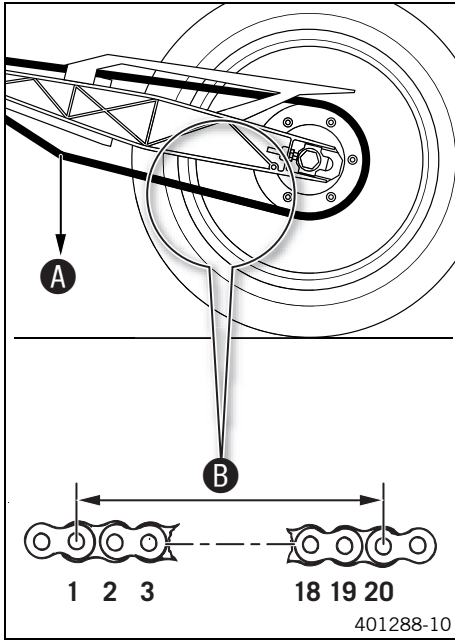

- Pull the lower chain section with specified weight **A**.

Guideline

Weight, chain wear measurement	15 kg (33 lb.)
--------------------------------	----------------

- Measure distance **B** of 20 chain rollers in the lower chain section.

i Info

Chain wear is not always even, so you should repeat this measurement at different chain positions.


Maximum distance B at the longest chain section	301.6 mm (11.874 in)
--	----------------------

- » If distance **B** is greater than the specified measurement:

- Change the drivetrain kit. 🛠️

i Info

When a new chain is mounted, the rear sprocket and engine sprocket should also be changed.
New chains wear out faster on old, worn sprockets.

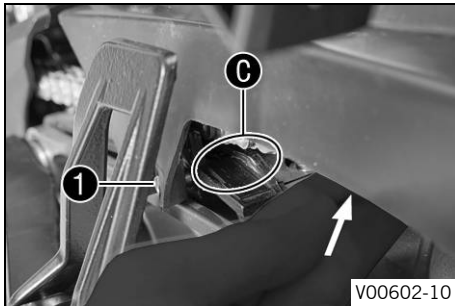

- Push the chain up in the area behind the chain guide.
- Check the chain sliding guard for wear.
 - » If the chain sliding guard has lost material due to wear to the extent that, in area **C**, the drilled hole of screw **1** is visible from above:
 - Change the chain sliding guard. 🛠️
- Check that the chain sliding guard is firmly seated.
 - » If the chain sliding guard is loose:
 - Tighten the screws on the chain sliding guard.

Finishing work

- Remove the rear of the motorcycle from the lifting gear. (📖 p. 86)


12.15 Removing the battery cover

Preparatory work


- Remove the front rider's seat. (📖 p. 90)

Main work

- Pull loop ❶ toward the rear.
- Pull battery cover ❷ forward and remove toward the top.

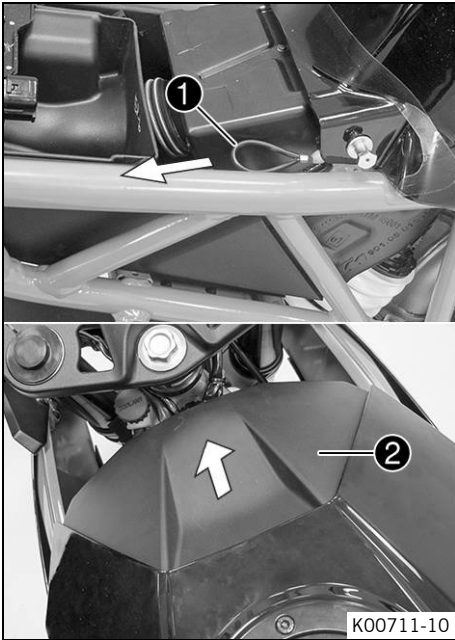

12.16 Mounting the battery cover

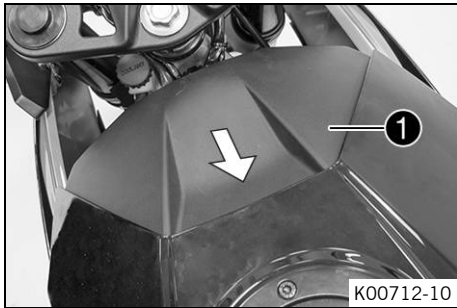


Main work

- Position battery cover ① and pull toward the rear.
 - ✓ The battery cover engages with an audible click.
- Check the battery cover is seated correctly.

Finishing work


- Mount the front rider's seat. (🗨️ p. 91)

12.17 Removing the front spoiler

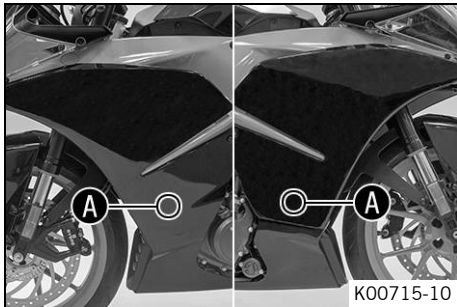

- Pull off holding lug in area ①.

12 SERVICE WORK ON THE CHASSIS

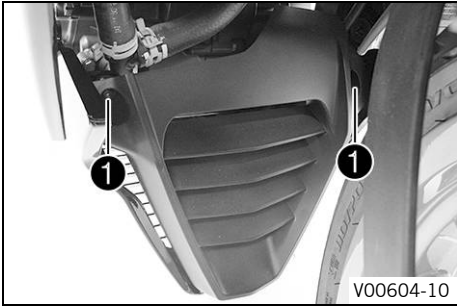


- Remove screws ①.



- Remove screws ②.
- Take off the front spoiler.


12.18 Fitting front spoiler

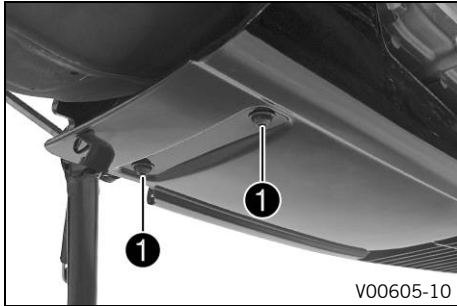

- Position the front spoiler.
- Mount and tighten screws ①.

Guideline

Screw, front spoiler rear	M6	6 Nm (4.4 lbf ft)
---------------------------	----	-------------------

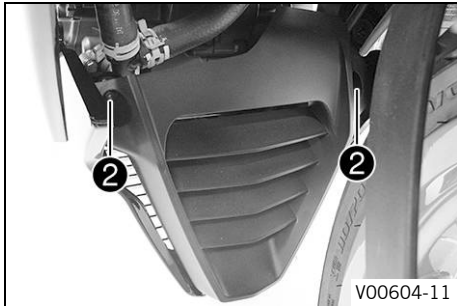


- Mount and tighten screws ②.

Guideline


Screw, front spoiler top front	M6	7 Nm (5.2 lbf ft)
--------------------------------	----	-------------------

12 SERVICE WORK ON THE CHASSIS

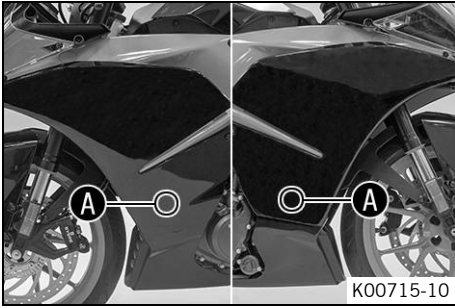


- Press lightly on the side cover in the **A** area in order to snap the side cover on.
✓ The holding lugs engage in the holes on the front spoiler.

12.19 Removing the left side cover 🛠️

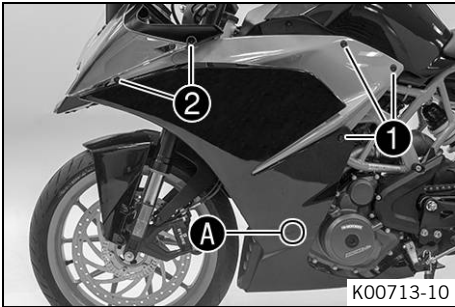


- Remove turn signal.
- Remove screws **1**.
- Remove screws **2**.
- Pull off holding lug in area **A**.

12 SERVICE WORK ON THE CHASSIS

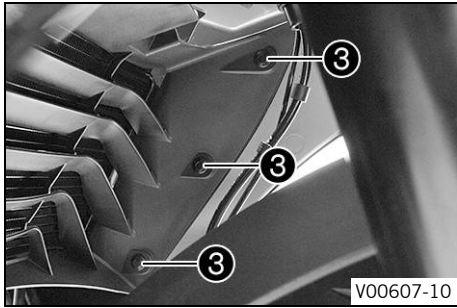

- Remove expanding rivet ③.

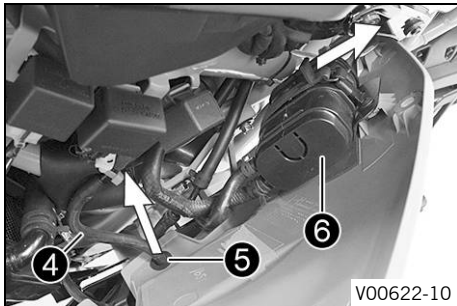


- Swing the side cover outward.
- Pull hose ④ out of hose guide ⑤.
- Detach active carbon filter ⑥.

i **Info**

The assistance of a second person can be useful.

- Take off the side cover.

12.20 Installing the left side cover ↘

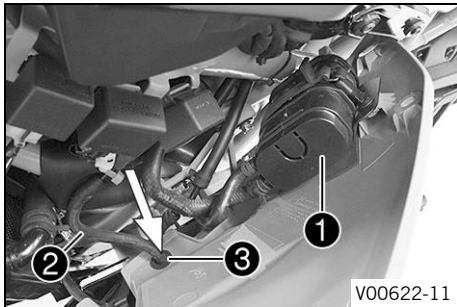


- Position activated charcoal filter **1**.



Info

The assistance of a second person can be useful.

- Position hose **2** in hose guide **3**.

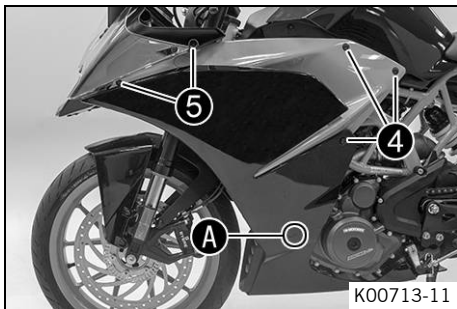

- Position the side cover.



Info

Ensure that the turn signal cable is placed correctly.

- Mount and tighten screws **4**.

Guideline

Screw, side cover	M6	6 Nm (4.4 lbf ft)
-------------------	----	-------------------

- Press lightly on the side cover in the **A** area in order to snap the side cover on.
 ✓ The holding lug engages in the hole on the front spoiler.


- Mount and tighten screws **5**.

Guideline

Screw, side cover on front fairing	M6	6 Nm (4.4 lbf ft)
------------------------------------	----	-------------------


- Mount turn signal.

12 SERVICE WORK ON THE CHASSIS

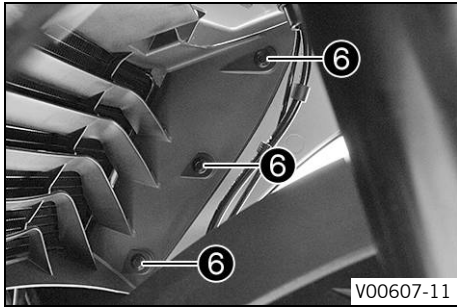


- Mount expanding rivet 6.

12.21 Removing the right side cover ↩

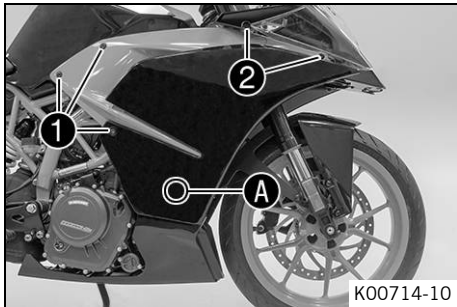


- Remove turn signal.
- Remove screws 1.
- Remove screws 2.
- Pull off holding lug in area A.

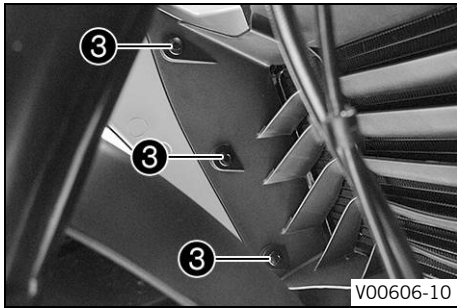

- Remove expanding rivet ③.
- Take off the side cover.

12.22 Installing the right side cover ↘

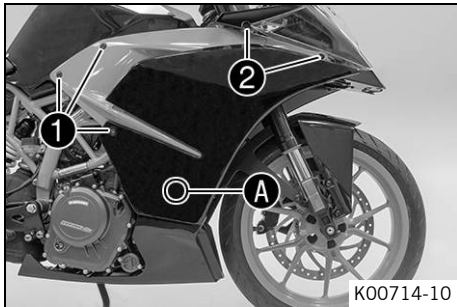

- Position the side cover.



Info

Ensure that the turn signal cable is placed correctly.

- Mount and tighten screws ①.

Guideline

Screw, side cover	M6	6 Nm (4.4 lbf ft)
-------------------	----	-------------------

- Press lightly on the side cover in the A area in order to snap the side cover on.

✓ The holding lug engages in the hole on the front spoiler.


- Mount and tighten screws ②.

Guideline

Screw, side cover on front fairing	M6	6 Nm (4.4 lbf ft)
------------------------------------	----	-------------------


- Mount turn signal.

12 SERVICE WORK ON THE CHASSIS

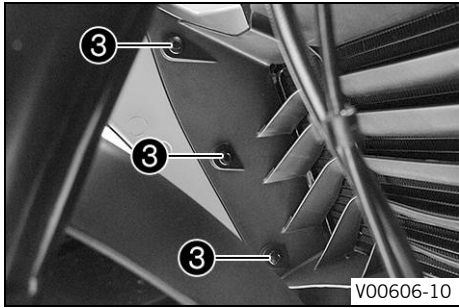

- Mount expanding rivet ③.

13.1 Antilock braking system (ABS)

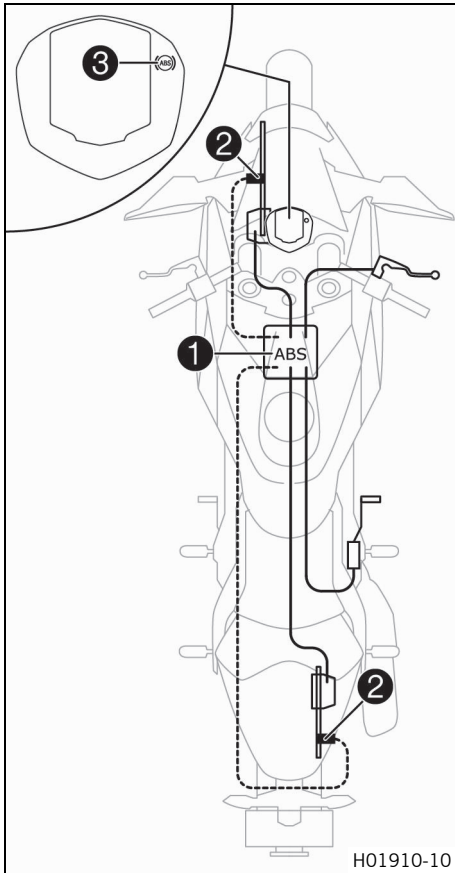

The ABS unit **1**, which consists of a hydraulic unit, ABS control unit, and return pump, is installed under the seat. One wheel speed sensor **2** is located in each case on the front and the rear wheel.



Warning

Danger of accidents Changes to the vehicle impair the function of the ABS.

- Only allow the rear wheel to spin with the front brake applied away from public road traffic if the ABS is switched off.
- Do not make any changes to the suspension travel.
- Only use spare parts on the brake system which have been approved and recommended by KTM.
- Only use tires/wheels approved by KTM with the corresponding speed index.
- Maintain the specified tire air pressure.
- Service work and repairs must be performed professionally. (Your authorized KTM workshop will be glad to help.)



Warning

Voiding of the government approval for road use and the insurance coverage If the ABS is switched off completely, the vehicle's approval for road use is invalidated.

- Only operate the vehicle in closed-off areas remote from public road traffic if the ABS is switched off completely.

The ABS is a safety system that prevents locking of the wheels when driving straight ahead without the influence of lateral forces.




Warning

Danger of accidents Driving aids can only prevent a rollover within the physical limitations.

It is not always possible to compensate for extreme riding situations, for example with luggage loaded with a high center of gravity, varying road surfaces, steep descents or full braking without disengaging the gear.

- Adapt your riding style to the road conditions and your driving ability.

The ABS operates with two independent brake circuits (front and rear brakes). During normal operation, the brake system operates like a conventional brake system without ABS. When the ABS control unit detects a locking tendency in a wheel, ABS begins regulating the brake pressure. The regulating process causes a slight pulsing of the hand and foot brake levers.

ABS warning lamp  must light up after the ignition is switched on and go out after starting off. If it does not go out after starting off or if it lights up while riding, this indicates a fault in the ABS. In this case, the ABS is no longer enabled and the wheels may lock during braking. The brake system itself stays functional; only ABS control is not available.

The ABS warning lamp may also light up if the rotating speeds of the front and rear wheels differ greatly under extreme riding conditions, for example when making wheelies or if the rear wheel spins. This causes the ABS to switch off.

To reactivate the ABS, the vehicle must be stopped and the ignition switched off. The ABS is reactivated when the vehicle is switched on again. The ABS warning lamp goes out when you start off.


13.2 Checking the brake discs



Warning

Danger of accidents Worn-out brake discs reduce the braking effect.

- Make sure that worn-out brake discs are replaced immediately. (Your authorized KTM workshop will be glad to help.)

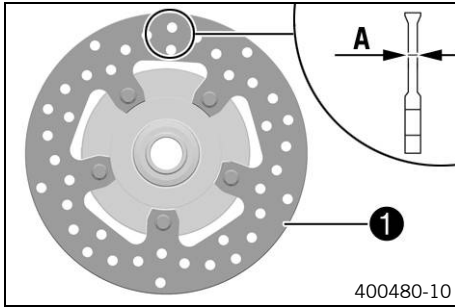

- Check the thickness of the front and rear brake discs at multiple points on each brake disc to ensure it is at least thickness **A**.



Info

Wear will reduce the thickness of the brake disc at contact surface **1** of the brake linings.

Brake discs - wear limit	
Front	4.0 mm (0.157 in)
Rear	3.6 mm (0.142 in)

- » If the brake disc thickness is less than the specified value.
 - Change the front brake disc. 🛠️
 - Change the rear brake disc. 🛠️
- Check the front and rear brake discs for damage, cracking, and deformation.
 - » If the brake disc exhibits damage, cracking, or deformation:
 - Change the front brake disc. 🛠️
 - Change the rear brake disc. 🛠️

13.3 Checking the brake fluid level of the front brake



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.


- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)

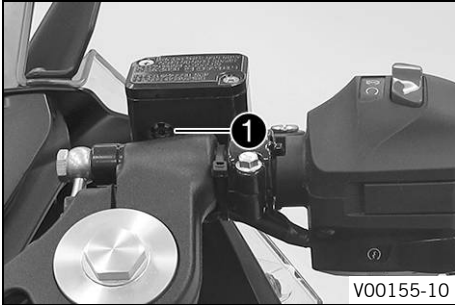

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in viewer **1**.
 - » If the brake fluid level is below the **MIN** marking:
 - Add front brake fluid. 🛠️ (📖 p. 113)

13.4 Adding front brake fluid 🛠️



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info


Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

Preparatory work

- Check the front brake linings. (📖 p. 115)

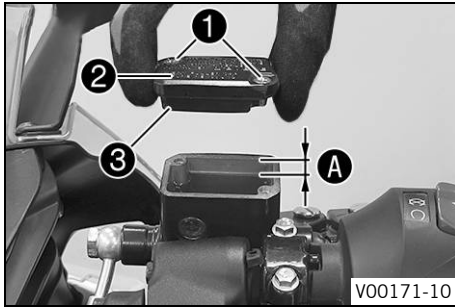

Main work

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ①.
- Remove cover ② with membrane ③.
- Add brake fluid to level A.

Guideline

Level A	5 mm (0.2 in)
---------	---------------

Brake fluid DOT 4 / DOT 5.1 (📖 p. 193)
--

- Position the cover with the membrane. Mount and tighten the screws.

Info

Clean up overflowed or spilled brake fluid immediately with water.

13.5 Checking the front brake linings

Warning

Danger of accidents Worn-out brake linings reduce the braking effect.


- Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)

Warning

Danger of accidents Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

- Check the brake linings regularly.

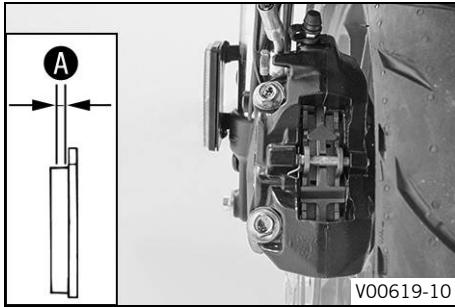

- Check the brake linings for minimum thickness **A**.

Minimum thickness A	$\geq 1 \text{ mm } (\geq 0.04 \text{ in})$
----------------------------	---

- » If the minimum thickness is less than specified:
 - Change the front brake linings. 🛠️
- Check the brake linings for damage and cracking.
 - » If there is damage or cracking:
 - Change the front brake linings. 🛠️

13.6 Checking the rear brake fluid level



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.


- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)

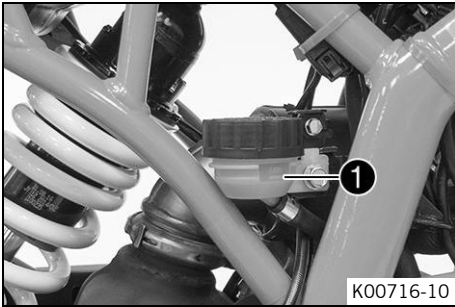

- Stand the vehicle upright.
- Check the brake fluid level in the brake fluid reservoir.
 - » If the fluid level reaches the **MIN** marking ❶:
 - Add rear brake fluid. 🛠️ (📖 p. 117)

13.7 Adding rear brake fluid 🛠️



Warning

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

- Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



Warning

Danger of accidents Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



Info

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

Preparatory work


- Check the rear brake linings. (📖 p. 119)


Main work

Condition

The screw cap is locked.

- Remove screw ① and take off the screw cap lock.

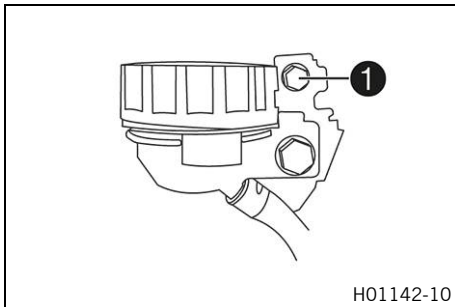

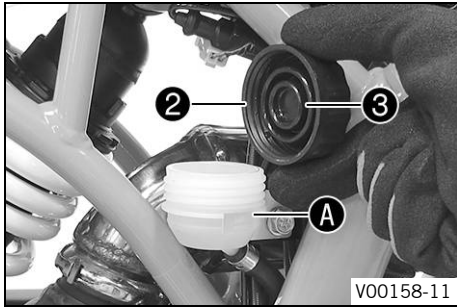

- Stand the vehicle upright.
- Remove screw cap ② with membrane ③.
- Add brake fluid to level A.


Brake fluid DOT 4 / DOT 5.1 (📖 p. 193)

- Mount screw cap with membrane.



Info

Clean up overflowed or spilled brake fluid immediately with water.

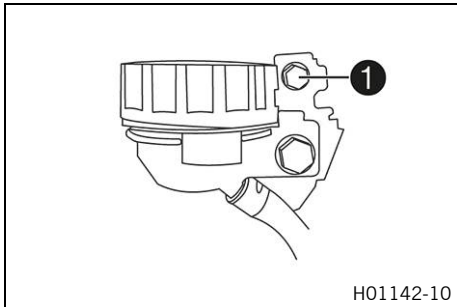

Condition

The screw cap is locked.

- Position the screw cap lock and mount and tighten screw ①.

Guideline

Screw, compensating tank cap lock, rear brake	M5	7 Nm (5.2 lbf ft)
---	----	-------------------

13.8 Checking the rear brake linings



Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

- Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)




Warning

Danger of accidents Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

- Check the brake linings regularly.

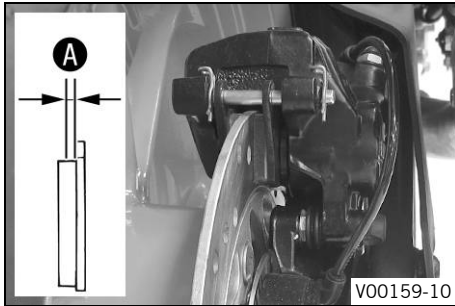

- Check the brake linings for minimum thickness **A**.

Minimum thickness A	$\geq 1 \text{ mm } (\geq 0.04 \text{ in})$
----------------------------	---

- » If the minimum thickness is less than specified:

- Change the rear brake linings. 🛠️

- Check the brake linings for damage and cracking.

- » If there is wear or tearing:

- Change the rear brake linings. 🛠️

13.9 Checking the free travel of foot brake lever





Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.

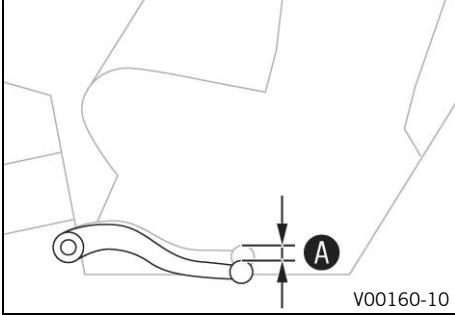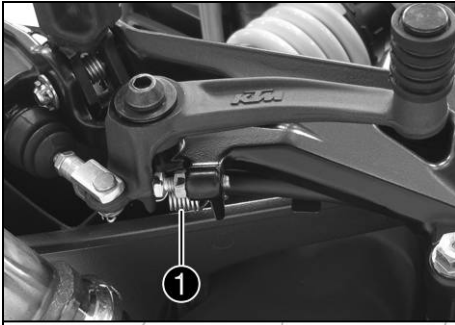

- Disconnect spring ❶.
- Move the foot brake lever back and forth between the end stop and the contact to the foot brake cylinder piston and check free travel ❸.

Guideline

Free travel at foot brake lever	3... 5 mm (0.12... 0.2 in)
---------------------------------	----------------------------

- » If the free travel does not meet specifications:
 - Adjust the free travel of the foot brake lever. 🛠️ (📖 p. 121)
- Reconnect spring ❶.

13.10 Adjusting the free travel of the foot brake lever 🛠️





Warning

Danger of accidents The brake system fails in the event of overheating.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.

13 BRAKE SYSTEM

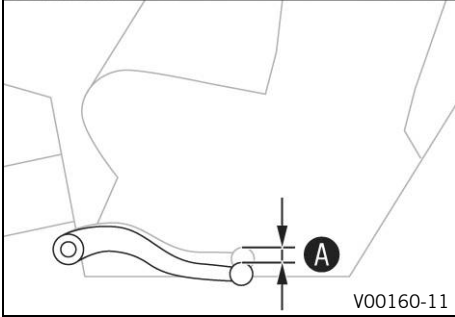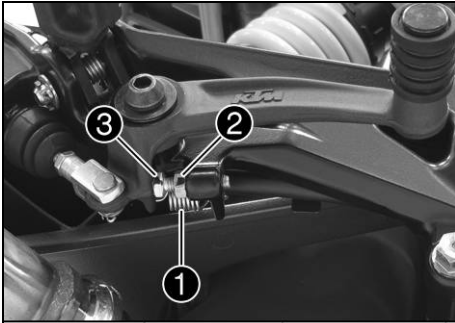

V00160-11

- Detach spring ①.
- Release nut ② and use screw ③ to adjust the specified free travel A.


Guideline

Free travel at foot brake lever	3... 5 mm (0.12... 0.2 in)
---------------------------------	----------------------------

i Info
The range of adjustment is limited.

- Hold screw ③ and tighten nut ②.
- Attach spring ①.

14.1 Removing the front wheel ↩

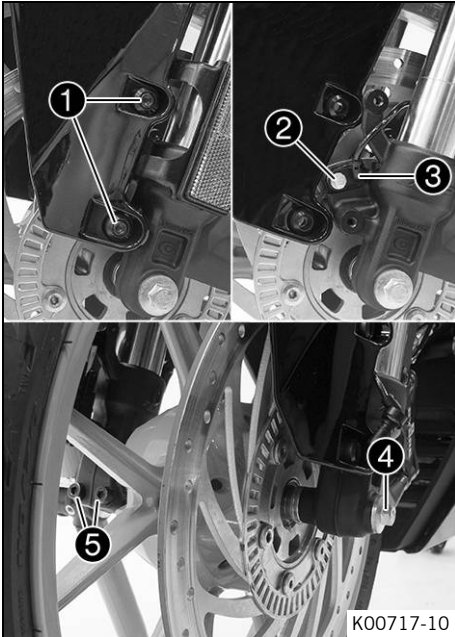

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 86)
- Lift the motorcycle with the front lifting gear. (📖 p. 87)

Main work

- Remove screws ①, take off reflector and push the fender to the side.
- Remove screw ② and pull wheel speed sensor ③ out of the hole.
- Loosen screw ④.
- Loosen screws ⑤.
- Unscrew screw ④ about 6 turns and press your hand on the screw to push the wheel spindle out of the axle clamp.
- Remove screw ④.



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.

- Holding the front wheel, withdraw the wheel spindle. Take the front wheel out of the fork.



Info

Do not pull the hand brake lever when the front wheel is removed.


14.2 Installing the front wheel ↗



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

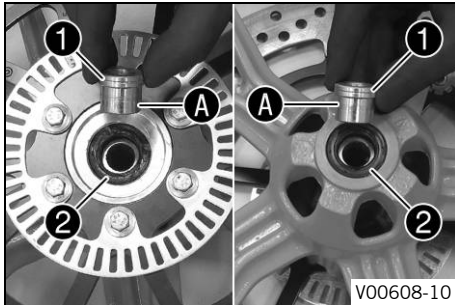


Main work

- Remove spacers ①.
- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the front wheel bearing. ↗
- Clean and grease shaft seal rings ② and mating surfaces ① of the spacers.

Long-life grease (📖 p. 196)

- Insert the spacers.

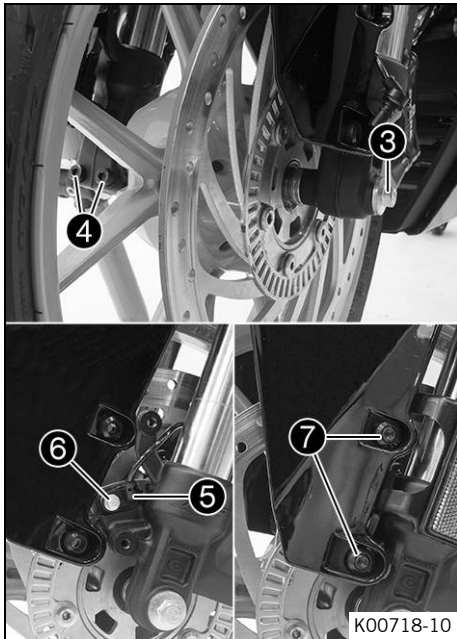

- Clean the thread of the wheel spindle and screw ③.
- Clean and grease wheel spindle.

Long-life grease (📖 p. 196)

- Position the front wheel and insert the wheel spindle.
✓ The brake linings are correctly positioned.
- Tighten screws ④.

Guideline

Screw, fork stub	M8	15 Nm (11.1 lbf ft)
------------------	----	------------------------

- Mount and tighten screw ③.

Guideline

Screw, front wheel spindle	M8	26 Nm (19.2 lbf ft)
----------------------------	----	------------------------

- Loosen screws ④.
- Position wheel speed sensor ⑤ in the drill hole. Mount and tighten screw ⑥.

Guideline

Screw, wheel speed sensor holder	M6	8 Nm (5.9 lbf ft)
----------------------------------	----	-------------------

- Position the reflector and fender.
- Mount and tighten screws ⑦.

Guideline

Screw, front fender	M6	7 Nm (5.2 lbf ft)
---------------------	----	-------------------

- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.
- Take the motorcycle from the front lifting gear. (📖 p. 88)

- Operate the front brake and compress the fork a few times firmly.
 - ✓ The fork legs straighten.
- Tighten screws ④.

Guideline

Screw, fork stub	M8	15 Nm (11.1 lbf ft)
------------------	----	------------------------


Finishing work

- Remove the rear of the motorcycle from the lifting gear. (📖 p. 86)

14.3 Removing the rear wheel 🛠️

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 86)

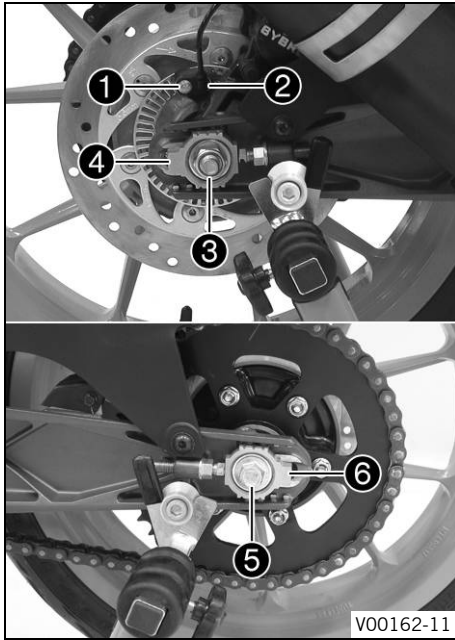

Main work

- Remove screw ① and pull wheel speed sensor ② out of the hole.
- Remove nut ③ with the washer. Remove chain adjuster ④.
- Holding the rear wheel, withdraw wheel spindle ⑤ with the washer and chain adjuster ⑥.
- Push the rear wheel forward as far as possible and take the chain off the rear sprocket.



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.
- Pull the rear wheel back and take it out of the swingarm.



Info

Do not operate the foot brake lever when the rear wheel is removed.

14.4 Installing the rear wheel 🛠️



Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.


- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



Warning

Danger of accidents There is no braking effect to start with at the rear brake after installing the rear wheel.

- Actuate the foot brake several times before going on a ride until you can feel a firm pressure point.

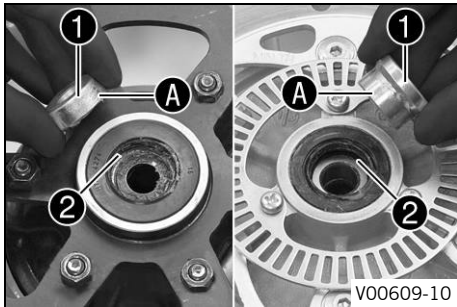


Main work

- Check the rear hub rubber dampers. 🛠️ (📖 p. 130)
- Remove spacers ①.
- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the rear wheel bearing. 🛠️
- Clean and grease shaft seal rings ② and mating surfaces ① of the spacers.

Long-life grease (📖 p. 196)

- Insert the spacers.

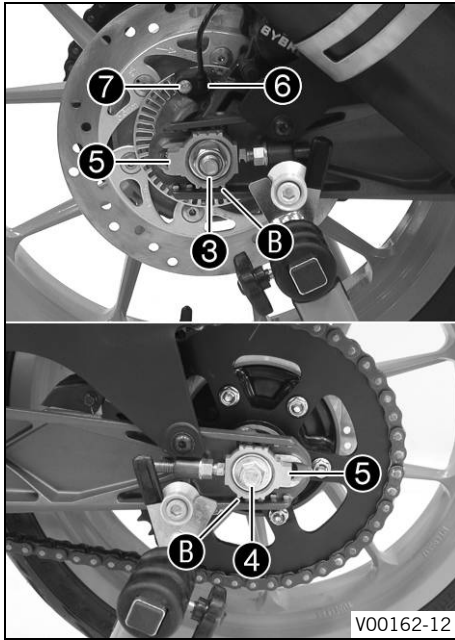

- Clean the thread of the wheel spindle and nut **3**.
- Clean and grease wheel spindle.

Long-life grease (📖 p. 196)

- Clean the mating surfaces of the brake caliper support and swingarm.
- Position the rear wheel.
- ✓ The brake linings are correctly positioned.
- Push the rear wheel forward as far as possible and lay the chain on the rear sprocket.
- Pull the rear wheel back and mount wheel spindle **4** with the washers and chain adjusters **5**.

i Info

Mount left and right chain adjusters **5** in the same position.

- Mount nut **3**, but do not tighten it yet.
- Ensure that the chain adjusters lie flat on the screws and tighten the nut **3**.

Guideline

In order for the rear wheel to be correctly aligned, the markings on the left and right chain adjusters must be in the same position relative to reference markings **B**.

Nut, rear wheel spindle	M14x1.5	90 Nm (66.4 lbf ft)
-------------------------	---------	------------------------

- Position wheel speed sensor **6** in the drill hole. Mount and tighten screw **7**.

Guideline

Screw, wheel speed sensor holder	M6	8 Nm (5.9 lbf ft)
----------------------------------	----	-------------------

Finishing work



- Check the chain tension. (📖 p. 94)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 86)

14.5 Checking the rear hub rubber dampers



Info

The engine power is transmitted from the rear sprocket to the rear wheel via 6 rubber dampers. They eventually wear out during operation. If the rubber dampers are not changed in time, the rear sprocket carrier and the rear hub become damaged.

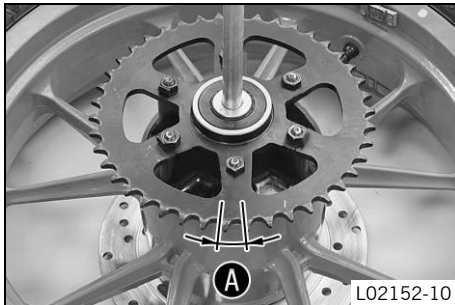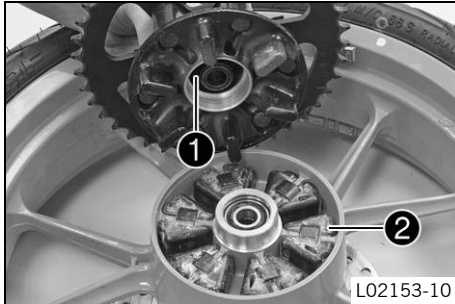

Preparatory work

- Raise the motorcycle with the rear lifting gear. (📖 p. 86)
- Remove the rear wheel. 🛠️ (📖 p. 126)

Main work

- Check bearing ①.
 - » If the bearing is damaged or worn:
 - Change the rear wheel bearing. 🛠️
- Check rubber dampers ② of the rear hub for damage and wear.
 - » If the rubber dampers of the rear hub are damaged or worn:
 - Change all rubber dampers in the rear hub.



Warning

Danger of accidents Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.
-
- Lay the rear wheel on a workbench with the rear sprocket facing upwards and insert the wheel spindle in the hub.
 - To check the play **A**, hold the rear wheel tight and try to rotate the rear sprocket.




**Info**

Measure the play on the outside of the rear sprocket.

Play in rubber dampers, rear wheel	≤ 5 mm (≤ 0.2 in)
------------------------------------	-------------------

- » If the clearance **A** is larger than the specified value:
 - Change all rubber dampers in the rear hub.

Finishing work

- Install the rear wheel.  (p. 127)
- Check the chain tension.  (p. 94)
- Remove the rear of the motorcycle from the lifting gear.  (p. 86)

14.6 Checking the tire condition

**Warning**

Danger of accidents If a tire bursts while riding, the vehicle becomes uncontrollable.

- Ensure that damaged or worn tires are replaced immediately. (Your authorized KTM workshop will be glad to help.)

**Warning**

Danger of crashing Different tire tread patterns on the front and rear wheel impair the handling characteristic. Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.

**Warning**


Danger of accidents Non-approved or non-recommended tires and wheels impact the handling characteristic.

- Only use tires/wheels approved by KTM with the corresponding speed index.



Info

The type, condition, and air pressure of the tires all have a major impact on the handling characteristics of the motorcycle. Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

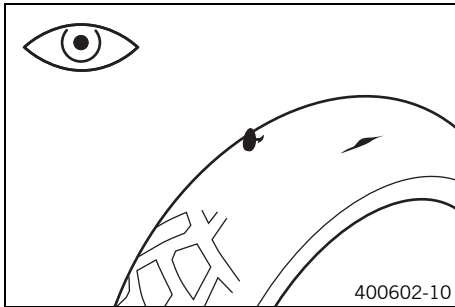

- Check the front and rear tires for cuts, run-in objects, and other damage.
 - » If the tires have cuts, run-in objects, or other damage:
 - Change the tires.
- Check the tread depth.




Info

Adhere to the legally required minimum tread depth.

Minimum tread depth	$\geq 2 \text{ mm } (\geq 0.08 \text{ in})$
---------------------	---

- » If the tread depth is less than the minimum tread depth:
 - Change the tires.
- Check the tire age.

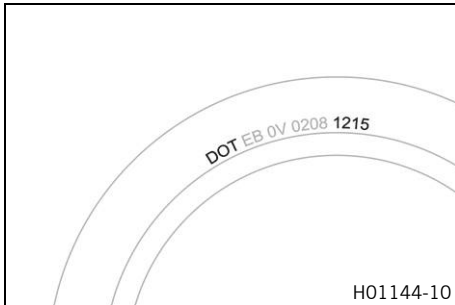

Info

The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture. KTM recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.


- » If the tires are more than 5 years old:
 - Change the tires.

14.7 Checking the tire air pressure



Info

Low tire air pressure leads to abnormal wear and overheating of the tire.
Correct tire air pressure ensures optimal riding comfort and maximum tire service life.

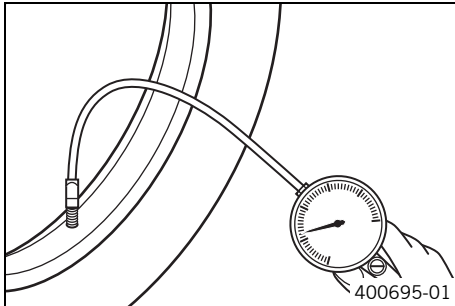

- Remove the dust cap.
- Check tire air pressure when the tires are cold.

Tire air pressure, solo	
Front	2.0 bar (29 psi)
Rear	2.0 bar (29 psi)

Tire air pressure with passenger/full payload	
Front	2.0 bar (29 psi)
Rear	2.1 bar (30 psi)

- » If the tire air pressure does not meet specifications:
 - Correct the tire air pressure.
- Mount the dust cap.

15.1 Removing the battery ↩



Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.


- Keep batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery acid and battery gases.
- Keep sparks or open flames away from the battery.
- Only charge batteries in well-ventilated rooms.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.


Preparatory work

- Switch off the ignition by turning the ignition key to the position ⌘.
- Remove the front rider's seat. (📖 p. 90)
- Remove the battery cover. (📖 p. 100)

Main work

- Disconnect negative cable ❶ from the battery.

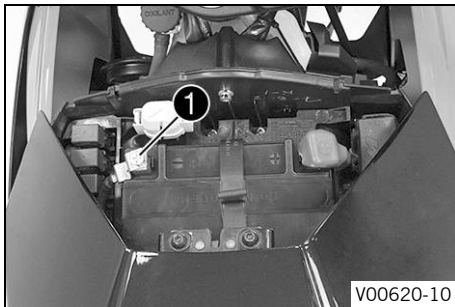

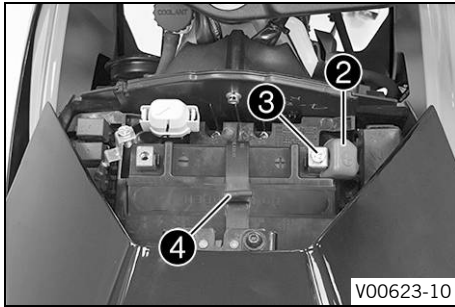


- Pull back positive terminal cover ❶.
- Disconnect positive cable ❷ from the battery.
- Detach rubber band ❸.
- Pull the battery up and out of the battery holder.



Info

Never operate the motorcycle with a discharged battery or without a battery. In both cases, electrical components and safety devices can be damaged. In this case the vehicle is no longer roadworthy.

15.2 Installing the battery ↗

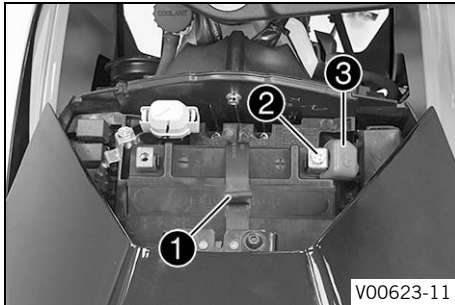

Main work


- Position the battery in the battery holder.

Guideline

The terminals of the battery must face upwards.

Battery (ETZ-9-BS) (📖 p. 186)

- Reconnect rubber band ❶.
- Position positive cable ❷ and mount and tighten the screw.
- Position positive terminal cover ❸.

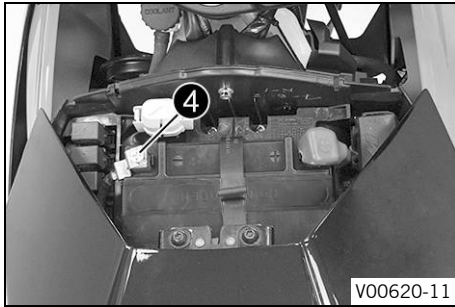

- Position negative cable ④; mount and tighten the screw.

Finishing work

- Mount the battery cover. (📖 p. 101)
- Mount the front rider's seat. (📖 p. 91)
- Set the clock. (📖 p. 61)

15.3 Recharging the battery ↩



Warning

Risk of injury Battery acid and battery gases cause serious chemical burns.

- Keep batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery acid and battery gases.
- Keep sparks or open flames away from the battery.
- Only charge batteries in well-ventilated rooms.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.



Warning

Environmental hazard Batteries contain environmentally-hazardous materials.

- Do not dispose of batteries as household waste.
 - Dispose of batteries at a collection point for used batteries.
-



Info

Even when there is no load on the battery, it discharges steadily.

The charging level and the method of charging are very important for the service life of the battery.

Rapid recharging with a high charging current shortens the service life of the battery.

If the charging current, charging voltage, or charging time is exceeded, electrolyte escapes through the safety valves. This reduces the battery capacity.

If the battery is depleted by repeated starting, the battery must be charged immediately.

If the battery is left in a discharged state for an extended period, it will become over-discharged and sulfated, destroying the battery.

The battery is maintenance-free. The acid level does not have to be checked.

Preparatory work

- Switch off the ignition by turning the ignition key to the position ☒.
- Remove the front rider's seat. (📖 p. 90)
- Remove the battery cover. (📖 p. 100)
- Disconnect the negative cable of the battery to avoid damage to the onboard electronics.



Main work

- Connect the battery charger to the battery. Switch on the battery charger.

Battery charger (58429074000)

You can also use the battery charger to test the open-circuit voltage and start potential of the battery, and to test the alternator. With this device, you cannot overcharge the battery.

Info

Never remove cover ①.

- Switch off the battery charger after charging and disconnect from the battery.

Guideline

The charging current, charging voltage, and charging time must not be exceeded.	
---	--

Charge the battery regularly when the motorcycle is not in use	3 months
--	----------

- Position the negative cable and mount and tighten the screw.

Finishing work

- Mount the battery cover. (📖 p. 101)
- Mount the front rider's seat. (📖 p. 91)
- Set the clock. (📖 p. 61)

15.4 Changing the ABS fuses



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.



Info

Two fuses for the ABS are located under the protective cap next to the negative terminal of the battery. These fuses protect the return pump and the hydraulic unit of the ABS. The third fuse, which protects the ABS control unit, is located in the fuse box.

Preparatory work

- Switch off the ignition by turning the ignition key to the position \otimes .
- Remove the front rider's seat. (📖 p. 90)
- Remove the battery cover. (📖 p. 100)

To change the fuse of the ABS hydraulic unit:

- Take off the protection cap and remove fuse ①.



Info


You can recognize a faulty fuse by a burned-out fuse wire ①.



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

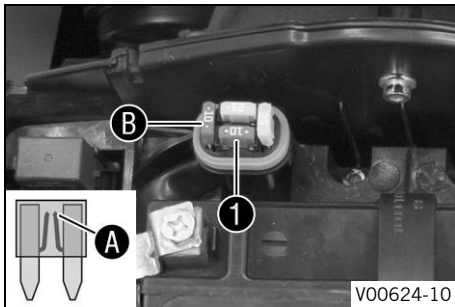

- Use spare fuses with the correct rating only.

Fuse (75011088010) (📖 p. 186)

i **Tip**

Replace spare fuse **B** in the fuse box so that it is available if needed.

- Mount the protection cap.

To change the fuse of the ABS return pump:

- Take off the protection cap and remove fuse **2**.

i **Info**

You can recognize a faulty fuse by a burned-out fuse wire **A**.



Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.

- Use spare fuses with the correct rating only.

Fuse (90111088025) (📖 p. 186)


i **Tip**

Replace spare fuse **C** in the fuse box so that it is available if needed.

- Mount the protection cap.

Finishing work

- Mount the battery cover. (📖 p. 101)
- Mount the front rider's seat. (📖 p. 91)

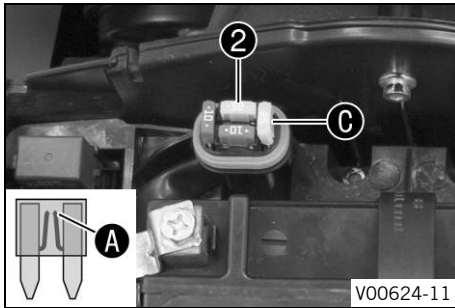

15.5 Changing the fuses of individual power consumers



Info

The fuse box with the main fuse and fuses of the individual power consumers is located next to the positive terminal of the battery.

Preparatory work


- Switch off the ignition by turning the ignition key to the position \otimes .
- Remove the front rider's seat. (📖 p. 90)
- Remove the battery cover. (📖 p. 100)

Main work

- Open fuse box cover.
- Remove the defective fuse.

Guideline

Fuse 1 - 30 A - main fuse
Fuse 2 - 10 A - combination instrument
Fuse 3 - 10 A - power relay
Fuse 4 - 15 A - ignition coil, fuel pump
Fuse 5 - 10 A - radiator fan
Fuse 6 - 10 A - horn, brake light, turn signal, high beam, low beam, parking light, tail light, license plate lamp
Fuse 7 - 10 A - combination instrument, control unit, ABS control unit
Fuse 8 - 10 A - alarm system (optional)
Fuse 9 - 10 A - auxiliary equipment
Fuse 10 - 10 A - auxiliary equipment

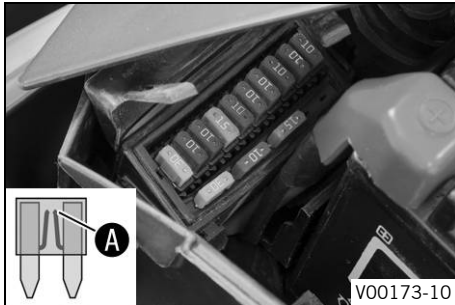

**Info**

You can recognize a faulty fuse by a burned-out fuse wire **A**.

**Warning**

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
 - Do not bypass or repair fuses.
-

- Use spare fuses with the correct rating only.

Fuse (75011088010) (📖 p. 186)

Fuse (75011088015) (📖 p. 186)

Fuse (75011088030) (📖 p. 186)

**Tip**

Replace the spare fuse in the fuse box so that it is available if needed.

- Check that the power consumer is functioning properly.
- Close the fuse box cover.

Finishing work

- Mount the battery cover. (📖 p. 101)
- Mount the front rider's seat. (📖 p. 91)

15.6 Changing the low beam bulb

Note




Damage to reflector Grease on the reflector reduces the brightness.

Grease on the bulb will evaporate due to the heat and be deposited on the reflector.

- Clean and degrease the bulbs before mounting.
 - Do not touch the bulbs with your bare hands.
-

Preparatory work

- Switch off the ignition by turning the ignition key to the position ☒.

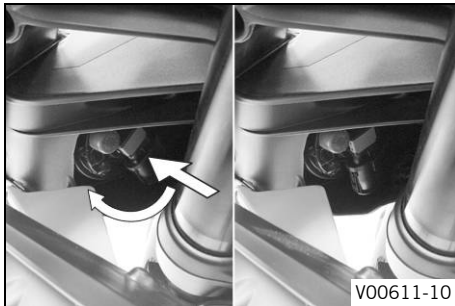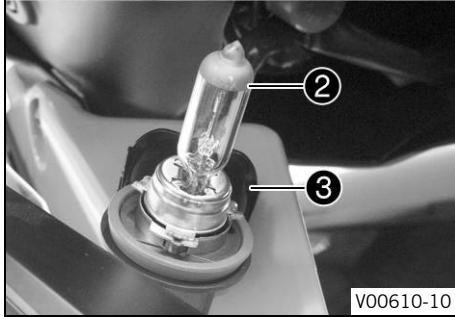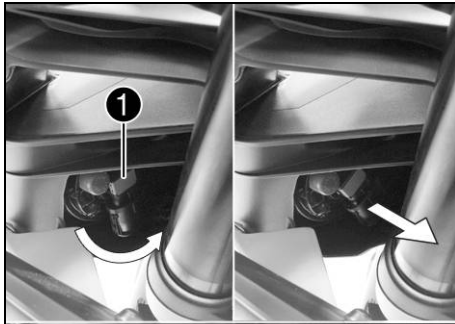

Main work

- Turn socket ① counterclockwise.
- Pull the socket with low beam bulb ② out of the headlight housing.
- Disconnect the socket with the low beam bulb from connector ③ and remove.
- Connect the new socket with the low beam bulb to the connector.

Low beam (H11/socket PGJ19-2) (📖 p. 186)

- Position the socket with the low beam bulb in the headlight housing.
- Turn the socket clockwise.
- Check that the lighting is functioning properly.

Finishing work

- Check the low beam headlight adjustment. (📖 p. 148)

15.7 Changing the high beam bulb

Note



Damage to reflector Grease on the reflector reduces the brightness.

Grease on the bulb will evaporate due to the heat and be deposited on the reflector.


- Clean and degrease the bulbs before mounting.
 - Do not touch the bulbs with your bare hands.
-

Preparatory work

- Switch off the ignition by turning the ignition key to the position ☒.

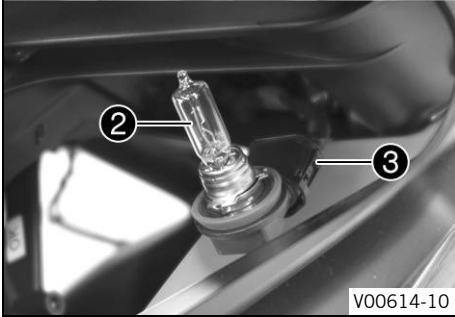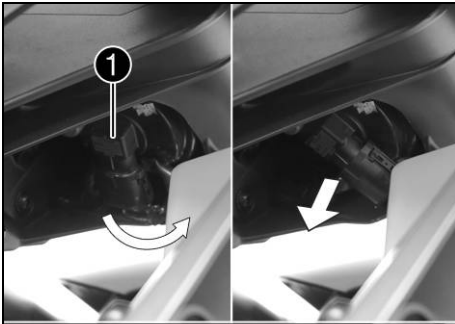

V00614-10

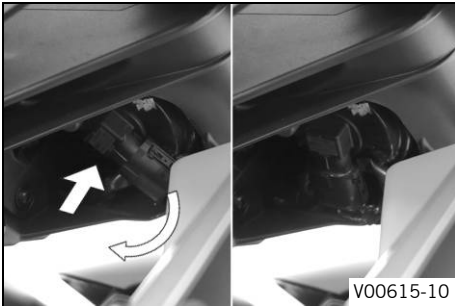

V00615-10

Main work

- Turn socket ① counterclockwise.
- Pull the socket with high beam bulb ② out of the headlight housing.
- Disconnect the socket with the high beam bulb from connector ③ and remove.
- Connect the new socket with the high beam bulb to the connector.

High beam (H9/socket PGJ19-5) (📖 p. 186)

- Position the socket with the high beam bulb in the headlight housing.
- Turn the socket clockwise.
- Check that the lighting is functioning properly.

Finishing work

- Check the high beam headlight adjustment. (📖 p. 149)


15.8 Changing the turn signal bulb

Note

Damage to reflector Grease on the reflector reduces the brightness.

Grease on the bulb will evaporate due to the heat and be deposited on the reflector.

- Clean and degrease the bulbs before mounting.
- Do not touch the bulbs with your bare hands.

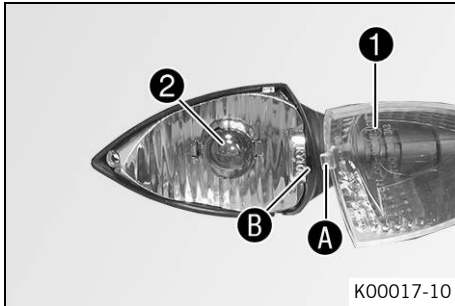

- Remove the screw on the rear of the turn signal housing.
- Carefully remove diffuser ①.
- Push bulb ② lightly into the socket, turn approx. 30° counterclockwise, and pull it out of the socket.

Info

Do not touch the reflector with your fingers and keep it free from grease.

- Lightly push the new lamp into the socket and turn all the way clockwise.

Turn signal (RY10W / socket BAU15s) (📖 p. 186)


- Check that the turn signal is functioning properly.
- Position the diffuser.

Info

Insert catch ① into recess ②.

- Insert the screw and first turn counterclockwise until it engages in the thread with a small jerk. Tighten the screw lightly.

15.9 Checking the low beam headlight adjustment

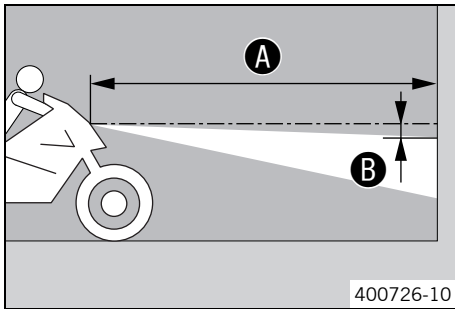

- Position the vehicle upright on a horizontal surface in front of a light wall and make a mark at the height of the center of the low beam headlight.

- Make another mark at a distance **B** under the first mark.

Guideline

Distance B	5 cm (2 in)
-------------------	-------------

- Position the vehicle perpendicular to the wall at a distance **A** from the wall and switch on the low beam.

Guideline


Distance A	5 m (16 ft)
-------------------	-------------

- The rider, with luggage and passenger if applicable, now mounts the motorcycle.
- Check the low beam headlight adjustment.

The light-dark boundary must lie exactly on the lower mark when the motorcycle is ready to operate with the rider mounted along with any luggage and a passenger if applicable.

- » If the light-dark border does not meet specifications:
 - Adjust the headlight range of the low beam. (📖 p. 150)

15.10 Checking the high beam headlight adjustment

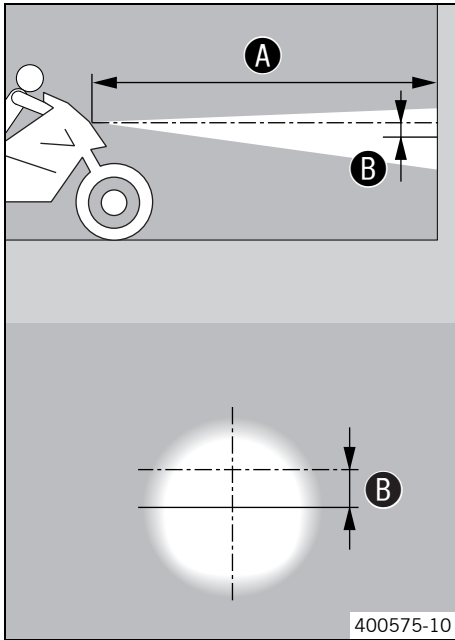

- Position the vehicle upright on a horizontal surface in front of a light wall and make a mark at the height of the center of the low beam headlight.

- Make another mark at a distance **B** under the first mark.

Guideline

Distance B	5 cm (2 in)
-------------------	-------------

- Position the vehicle perpendicular to the wall at a distance **A** from the wall and switch on the high beam.

Guideline


Distance A	5 m (16 ft)
-------------------	-------------

- The rider, with luggage and passenger if applicable, now mounts the motorcycle.
- Check the high beam headlight adjustment.

The center of the light cone must lie exactly on the lower mark when the motorcycle is ready to operate with the rider mounted along with any luggage and a passenger if applicable.
--

- » If the center of the light cone is not located where specified:
 - Adjust the headlight range of the high beam. (📖 p. 150)

15.11 Adjusting the headlight range of the low beam

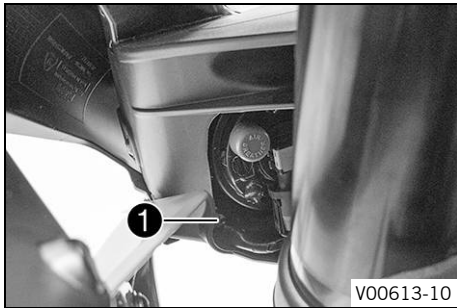

Main work

- Adjust the beam range of the low beam by turning screw ①.

Guideline

For a motorcycle with rider, and with luggage and a passenger if applicable, the light/dark boundary must be exactly on the lower mark (applied in: Checking the low beam headlight setting).

Info

Turn clockwise to increase the headlight range; turn counterclockwise to reduce the headlight range.

Finishing work

- Check the low beam headlight adjustment. (📖 p. 148)

15.12 Adjusting the headlight range of the high beam



Main work

- Adjust the beam distance of the high beam by turning screw ①.

Guideline

For a motorcycle with rider, and with luggage and a passenger if applicable, the light/dark boundary must be exactly on the lower mark (applied in: Checking the high beam headlight setting).


Info

Turn clockwise to increase the headlight range; turn counterclockwise to reduce the headlight range.

Finishing work


- Check the high beam headlight adjustment. (📖 p. 149)

15.13 Diagnostics connector

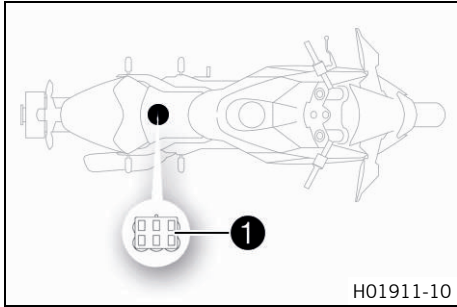

Diagnostics connector ① is located under the front rider's seat.


16.1 Cooling system

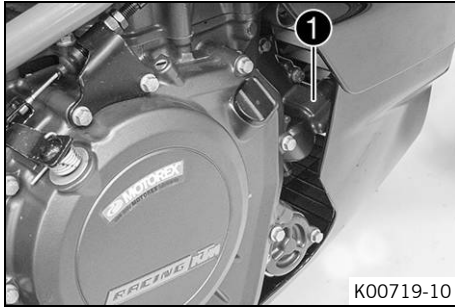

Water pump **1** in the engine ensures forced circulation of the coolant. The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap **2**. Heat expansion causes excess coolant to flow into compensating tank **3**. When the temperature falls, this surplus coolant is sucked back into the cooling system. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

110 °C (230 °F)

16 COOLING SYSTEM

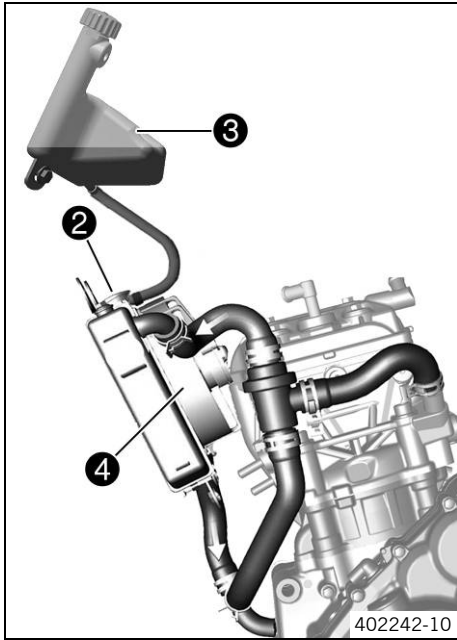

The coolant is cooled by the air stream and a radiator fan (4), which is controlled by a thermostat.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.

16.2 Checking the coolant level in the compensating tank



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning


Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

The radiator is completely full.

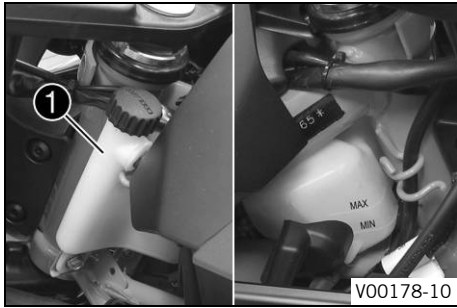

- Stand the motorcycle upright on a horizontal surface.
- Check the coolant level in the compensating tank ①.

The coolant level must be between **MIN** and **MAX**.

- » If there is no coolant in the compensating tank:
 - Check the cooling system for leaks. 🛠️



Info

Do not start up the motorcycle!

- Fill/bleed the cooling system. 🛠️ (📖 p. 161)
- » If the coolant in the compensating tank is not at the required level, but the tank is not empty:
 - Correct the coolant level in the compensating tank. (📖 p. 158)

16.3 Checking the antifreeze and coolant level



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.


- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

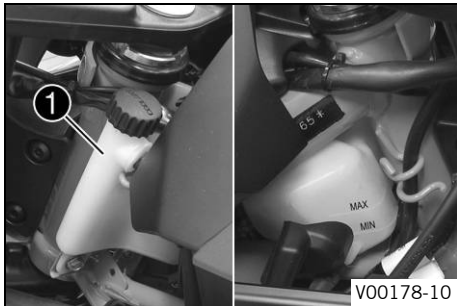

Condition

The engine is cold.

Preparatory work

- Remove the right side cover. 🛠️ (📖 p. 107)

Main work

- Stand the motorcycle upright on a horizontal surface.
- Take off the cover of the compensating ❶ tank.
- Check the antifreeze in the coolant.

–25... -45 °C (-13... -49 °F)


- » If the antifreeze in the coolant does not match the specified value:
 - Correct the antifreeze in the coolant.

- Check the coolant level in the compensating tank.

The coolant level must be between **MIN** and **MAX**.

- » If the coolant level does not match the specified value:
 - Correct the coolant level.

Coolant (📖 p. 193)

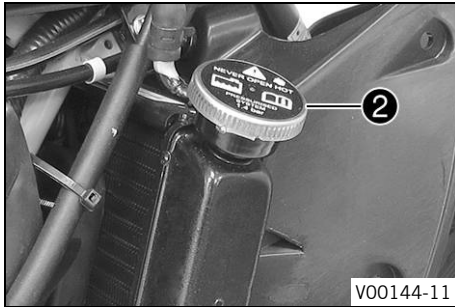

- Mount the cover of the compensating tank.
- Take off radiator cap ②.
- Check the antifreeze in the coolant.

-25... -45 °C (-13... -49 °F)

- » If the antifreeze in the coolant does not match the specified value:
 - Correct the antifreeze in the coolant.

- Check the coolant level in the radiator.

The radiator must be filled completely.

- » If the coolant level does not match the specified value:
 - Check the coolant level and the reason for the loss.

Coolant (📖 p. 193)

- » If you had to add more coolant than the specified amount:
 - > 0.20 l (> 0.21 qt.)
 - Fill/bleed the cooling system. 🛠️ (📖 p. 161)

- Mount the radiator cap.

Finishing work

- Install the right side cover. 🛠️ (📖 p. 108)

16.4 Correcting the coolant level in the compensating tank



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.


Condition

The engine is cold.

The radiator is completely full.

Preparatory work

- Check the coolant level in the compensating tank. (📖 p. 154)

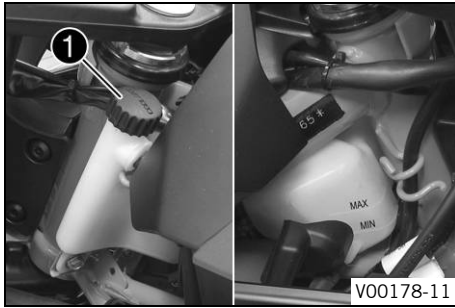

Main work

- Remove cover ① of the compensating tank.
- Add coolant to the **MAX** marking.

Coolant (📖 p. 193)

- Mount the cover of the compensating tank.

16.5 Draining the coolant 🛠



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

Condition

The engine is cold.

Preparatory work


- Remove the left side cover. 🛠️ (📖 p. 104)
- Remove the right side cover. 🛠️ (📖 p. 107)
- Remove the front spoiler. (📖 p. 101)

Main work

- Position the motorcycle upright.
- Place a suitable container under the engine.
- Remove screw ❶.
- Remove the radiator cap.
- Completely drain the coolant.
- Mount and tighten screw ❶ with a new seal ring.

Guideline

Screw plug, water pump drain hole	M6	10 Nm (7.4 lbf ft)
-----------------------------------	----	--------------------

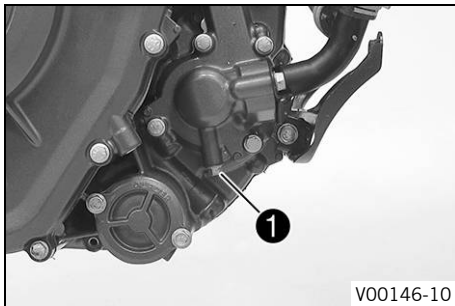


16.6 Filling/bleeding the cooling system



Warning


Danger of poisoning Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

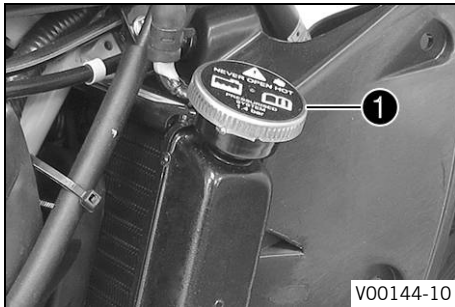

Main work

- Remove radiator cap **1**.

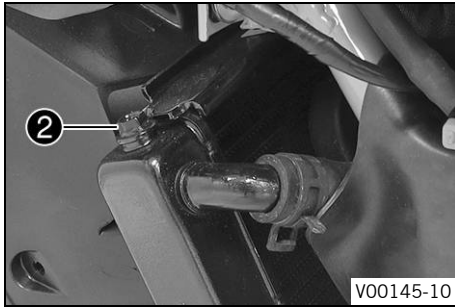

- Loosen bleeder screw ②.

Guideline

3 turns

- Tilt the vehicle slightly to the right.
- Pour in coolant until it emerges without bubbles at the bleeder screw, and then mount and tighten the bleeder screw immediately.

Coolant (📖 p. 193)


- Completely fill the radiator with coolant. Mount the radiator cap.
- Rest the vehicle on the side stand.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.

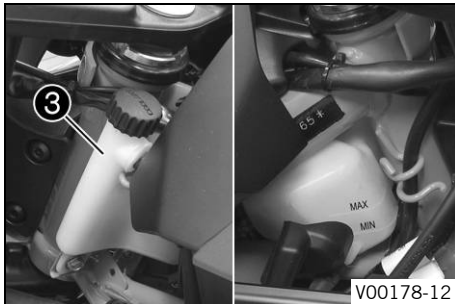

- Start the engine and let it warm up.
- Stop the engine and allow it to cool down.
- When the engine is cool, check the coolant level in the radiator and, if necessary, add coolant.
- Remove the cover of compensating tank ③ and top up the coolant level up to the **MAX** marking.
- Mount the cap of the compensating tank.

Finishing work


- Fit the front spoiler. (📖 p. 103)
- Install the left side cover. 🛠️ (📖 p. 106)
- Install the right side cover. 🛠️ (📖 p. 108)

17.1 Checking the clutch lever play

Note

Clutch damage If there is no play on the clutch lever, the clutch will begin to slip.

- Before operating the motorcycle, always check the clutch lever play.

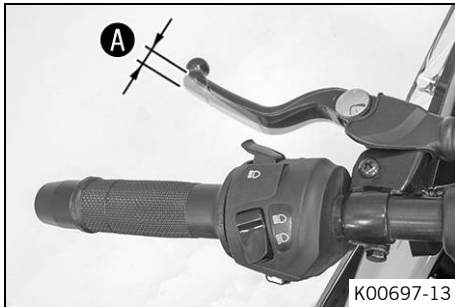

- Check the clutch lever for smooth operation.
- Move the handlebar to the straight-ahead position.
- Pull the clutch lever until resistance is perceptible, and determine the play in the clutch lever **A**.


Clutch lever play A	1... 3 mm (0.04... 0.12 in)
----------------------------	-----------------------------

- » If the clutch lever play does not meet the specified value:
 - Adjust play in the clutch lever. 🛠️ (p. 165)
- Move the handlebar to and fro over the entire steering range.

The clutch lever play must not change.
--

- » If the clutch lever play changes:
 - Check the routing of the clutch cable.

17.2 Adjusting play in the clutch lever

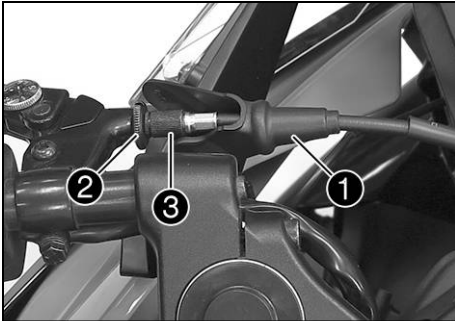

- Move the handlebar to the straight-ahead position.
- Push back sleeve ①.
- Loosen lock nut ②.
- Adjust the play in the clutch level **A** by turning adjusting screw ③.


Guideline

Clutch lever play A	1... 3 mm (0.04... 0.12 in)
----------------------------	-----------------------------

- Tighten lock nut ②.
- Position bellows ①.



18.1 Checking the engine oil level

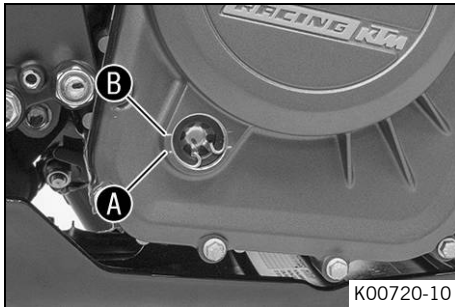

Condition

The engine is at operating temperature.

Preparatory work

- Stand the motorcycle upright on a horizontal surface.

Main work

- Check the engine oil level.



Info

After switching off the engine, wait one minute before checking the level.

The engine oil must be between the **A** and **B** markings .

- » When the engine oil level is below the **A** marking:
 - Add the engine oil. (📖 p. 170)
- » When the engine oil level is above the **B** marking:
 - Correct the engine oil level.

18.2 Changing the engine oil and oil filter, cleaning the oil screens 🛠️



Warning

Danger of scalding Engine and gear oil get very hot when the motorcycle is ridden.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.
-
-





Info


Drain the engine oil while the engine is at operating temperature.

Preparatory work

- Remove the front spoiler. (📖 p. 101)
- Stand the motorcycle on its side stand on a horizontal surface.

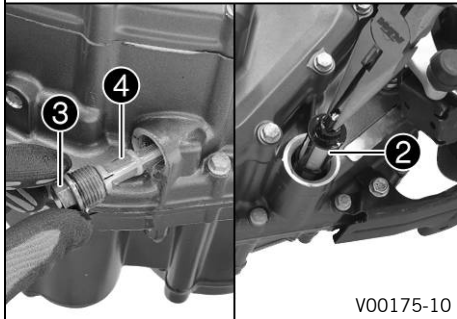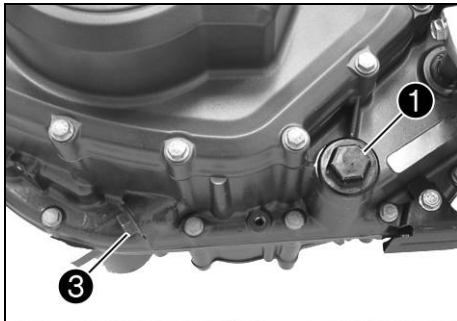

V00175-10

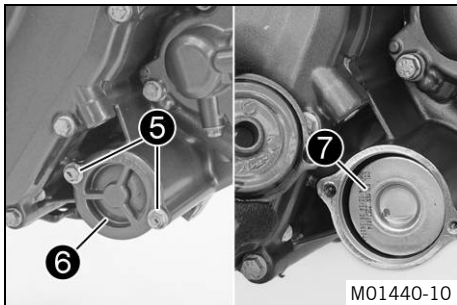

M01440-10

Main work

- Place a suitable container under the engine.
- Remove oil drain plug ① with the O-ring.
- Remove oil screen ② with the O-ring.
- Remove screw plug ③ with oil screen ④.
- Completely drain the engine oil.
- Thoroughly clean the oil drain plugs and oil screens.
- Position oil screen ② and mount and tighten oil drain plug ① with the O-ring.

Guideline


Oil drain plug	M24x1.5	15 Nm (11.1 lbf ft)
----------------	---------	------------------------

- Mount and tighten screw plug ③ with oil screen ④ and the O-ring.

Guideline

Oil screen screw plug, small	M17x1.5	12 Nm (8.9 lbf ft)
------------------------------	---------	--------------------

- Remove screws ⑤. Remove oil filter cover ⑥ with the O-ring.
- Pull oil filter ⑦ out of the oil filter housing.
- Completely drain the engine oil.
- Thoroughly clean the parts and sealing surface.

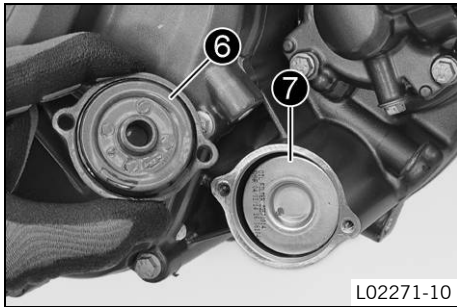

- Insert new oil filter **7**.
- Lubricate the O-ring of the oil filter cover. Mount oil filter cover **6**.
- Mount and tighten the screws.


Guideline

Screw, oil filter cover	M6	12 Nm (8.9 lbf ft)
-------------------------	----	--------------------



Info

Too little engine oil or poor-quality engine oil results in premature wear of the engine.

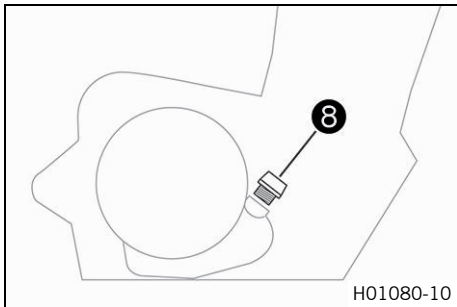

- Remove filler plug **8** and the O-ring from the clutch cover, and fill up with engine oil.

Engine oil	1.7 l (1.8 qt.)	Engine oil (SAE 15W/50) (📖 p. 194)
------------	-----------------	------------------------------------

- Install and tighten the oil filler plug with O-ring.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use an effective exhaust extraction system when starting or running the engine in an enclosed space.

- Start the engine and check that it is oil-tight.

Finishing work


- Fit the front spoiler. (📖 p. 103)
- Check the engine oil level. (📖 p. 166)

18.3 Adding engine oil



Info

Too little engine oil or poor-quality engine oil results in premature wear to the engine.

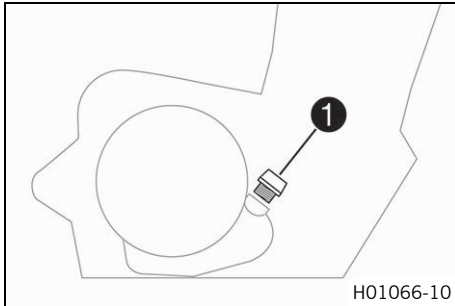

Main work

- Remove the oil filler plug ❶ with the O-ring from the clutch cover and fill up with engine oil.

Engine oil (SAE 15W/50) (📖 p. 194)



Info

In order to achieve optimal engine performance, it is not advisable to mix different engine oils.
We recommend changing the engine oil when necessary.

- Install and tighten the oil filler plug with the O-ring.



Danger

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
 - Use an effective exhaust extraction system when starting or running the engine in an enclosed space.
- Start the engine and check that it is oil-tight.

Finishing work

- Check the engine oil level. (📖 p. 166)

19.1 Cleaning the motorcycle

Note

Material damage Components become damaged or destroyed if a pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, connectors, throttle cables, and bearings, etc. Pressure which is too high causes malfunctions and destroys components.

- Do not direct the water jet directly on to electrical components, connectors, throttle cables or bearings.
- Maintain a minimum distance between the nozzle of the pressure cleaner and the component.

Minimum clearance 60 cm (23.6 in)



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.
-



Info

If you clean the motorcycle regularly, its value and appearance will be maintained over a long period. Avoid direct sunshine on the motorcycle during cleaning.

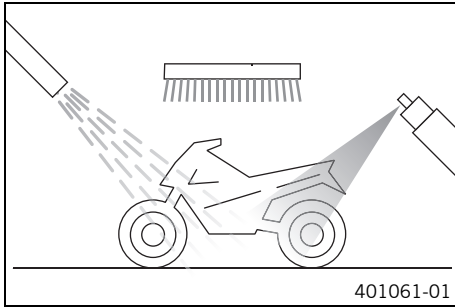

- Seal the exhaust system to keep water out.
- First remove coarse dirt particles with a gentle spray of water.
- Spray very dirty areas with a normal motorcycle cleaner and then clean with a paintbrush.

Motorcycle cleaner (🗨️ p. 196)

i Info

Use warm water containing normal motorcycle cleaner and a soft sponge. Never apply motorcycle cleaner to a dry vehicle; always rinse the vehicle with water first. If the vehicle was operated in road salt, clean it with cold water. Warm water would enhance the corrosive effects of salt.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the closure of the exhaust system.



Warning

Danger of accidents Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.
- After cleaning, ride the vehicle a short distance until the engine warms up.



Info

The heat produced causes water at inaccessible locations in the engine and on the brake system to evaporate.

- Push back the sleeves of the handlebar controls to allow any water that has penetrated to evaporate.
- After the motorcycle has cooled off, lubricate all moving parts and bearings.

- Clean the chain. (📖 p. 93)
- Treat bare metal parts (except for brake discs and exhaust system) with anti-corrosion materials.

Preserving materials for paints, metal and rubber (📖 p. 197)

- Treat all painted parts with a mild paint polish.

Perfect Finish and high gloss polish for paints (📖 p. 197)

Info

Do not polish parts that were matte when delivered as this would strongly impair the material quality.

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces (📖 p. 197)


- Oil the ignition/steering lock.

Universal oil spray (📖 p. 197)

19.2 Checks and maintenance steps for winter operation

Info

If the motorcycle is used in the winter, salt can be expected on the roads. Precautions need to be taken against road salt corrosion. If the vehicle was operated in road salt, clean it with cold water after riding. Warm water would enhance the corrosive effects of salt.

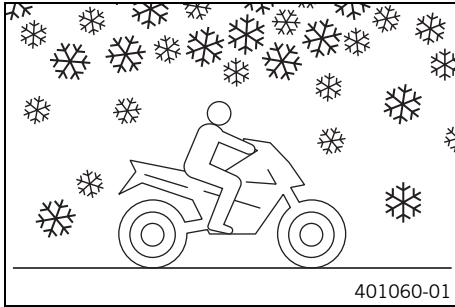

- Clean the motorcycle. (📖 p. 171)
 - Clean the brakes.
-

i **Info**

After **EVERY** trip on salted roads, thoroughly wash the brake calipers and brake linings with cold water and dry carefully. This should be done after the parts are cooled down and while they are installed.
After riding on salted roads, thoroughly wash the motorcycle with cold water and dry it well.

- Treat the engine, swingarm, and all other bright and zinc-plated parts (except for the brake discs) with a wax-based corrosion inhibitor.
-

i **Info**


Corrosion inhibitor is not permitted to come in contact with the brake discs as this would greatly reduce the braking force.

- Clean the chain. (📖 p. 93)

20.1 Storage

i Info

If you want to garage the motorcycle for a longer period, take the following steps. Before storing the motorcycle, check all parts for function and wear. If service, repairs or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

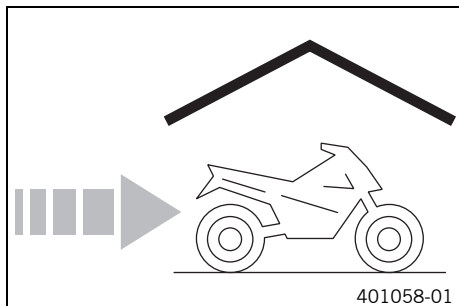

- When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive (📖 p. 196)

- Refuel. (📖 p. 77)
- Clean the motorcycle. (📖 p. 171)
- Change the engine oil and oil filter and clean the oil screens. 🛠️ (📖 p. 166)
- Check the antifreeze and coolant level. (📖 p. 155)
- Check the tire air pressure. (📖 p. 133)
- Remove the battery. 🛠️ (📖 p. 134)
- Recharge the battery. 🛠️ (📖 p. 136)

Guideline

Storage temperature of battery without direct sunlight	0... 35 °C (32... 95 °F)
--	--------------------------

- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.

i Info

KTM recommends jacking up the motorcycle.

- Raise the motorcycle with the rear lifting gear. (📖 p. 86)

- Lift the motorcycle with the front lifting gear. (📖 p. 87)
- Cover the motorcycle with a tarp or similar cover that is permeable to air.




Info

Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion.

Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and exhaust system to rust.

20.2 Preparing for use after storage

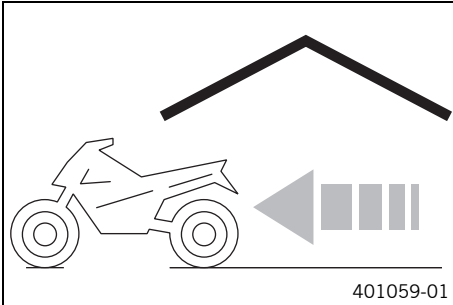

- Take the motorcycle from the front lifting gear. (📖 p. 88)
- Remove the rear of the motorcycle from the lifting gear. (📖 p. 86)
- Install the battery. 🛠️ (📖 p. 135)
- Set the clock. (📖 p. 61)
- Perform checks and maintenance steps when preparing for use. (📖 p. 67)
- Take a test ride.

Faults	Possible cause	Action
Engine does not crank when the electric starter button is pressed	Operating error	– Carry out the start procedure. (📖 p. 68)
	Battery discharged	– Recharge the battery. 🛠️ (📖 p. 136)
	Fuse 1 , 3 , 4 , or 7 is blown	– Change the fuses of individual power consumers. (📖 p. 141)
	No ground connection present	– Check the ground connection.
Engine turns only if the clutch lever is drawn	The vehicle is in gear	– Shift gear to neutral.
	The vehicle is in gear and the side stand is folded out	– Shift gear to neutral.
Engine turns but does not start	Operating error	– Carry out the start procedure. (📖 p. 68)
	Fault in fuel injection system	– Read out the fault memory using the KTM diagnostics tool. 🛠️
Engine has too little power	Air filter is very dirty	– Change the air filter.
	Fuel filter is very dirty	– Check the fuel pressure. 🛠️
	Fault in fuel injection system	– Read out the fault memory using the KTM diagnostics tool. 🛠️
Engine overheats	Too little coolant in cooling system	– Check the cooling system for leakage. – Check the coolant level in the compensating tank. (📖 p. 154)
	Radiator fins very dirty	– Clean the radiator fins.
	Foam formation in cooling system	– Drain the coolant. 🛠️ (📖 p. 159) – Fill/bleed the cooling system. 🛠️ (📖 p. 161)
	Thermostat defective	– Check the thermostat. 🛠️
	Fuse 5 blown	– Change the fuses of individual power consumers. (📖 p. 141)
	Defect in radiator fan system	– Check the radiator fan system. 🛠️

Faults	Possible cause	Action
Malfunction indicator lamp lights up red	Fault in fuel injection system	– Read out the fault memory using the KTM diagnostics tool. 🛠️
Engine dies during the trip	Lack of fuel	– Refuel. (📖 p. 77)
	Fuse 1 , 3 , 4 , or 7 is blown	– Change the fuses of individual power consumers. (📖 p. 141)
The ABS warning lamp lights up	ABS fuse is blown	– Change the ABS fuses. (📖 p. 139)
	Large difference in wheel speeds of the front and rear wheels	– Stop the vehicle, switch off the ignition, and start it again.
	Malfunction in ABS	– Read out the ABS fault memory using the KTM diagnostics tool. 🛠️
High oil consumption	Engine vent hose bent	– Route the vent hose without bends or change it if necessary.
	Engine oil level too high	– Check the engine oil level. (📖 p. 166)
	Engine oil too thin (low viscosity)	– Change the engine oil and oil filter and clean the oil screens. 🛠️ (📖 p. 166)
Headlight and parking light are not functioning	Fuse 6 blown	– Change the fuses of individual power consumers. (📖 p. 141)
Turn signal, brake light, and horn are not functional	Fuse 6 blown	– Change the fuses of individual power consumers. (📖 p. 141)
Time is not (correctly) displayed	Fuse 7 is blown	– Change the fuses of individual power consumers. (📖 p. 141)
		– Set the clock. (📖 p. 61)
Battery discharged	Ignition was not switched off when vehicle was parked	– Recharge the battery. 🛠️ (📖 p. 136)
	Battery is not being charged by alternator	– Check the charging voltage. 🛠️ – Check the open-circuit current. 🛠️

Faults	Possible cause	Action
The combination instrument shows nothing on the display	Fuse 7 is blown	<ul style="list-style-type: none">- Change the fuses of individual power consumers. (📖 p. 141)- Set the clock. (📖 p. 61)
Speedometer in combination instrument not functioning	Speedometer wiring harness is damaged or plug-in connector is oxidized	<ul style="list-style-type: none">- Check the wiring harness and plug-in connector.

22.1 Engine

Design	1-cylinder 4-stroke engine, water-cooled
Displacement	373 cm ³ (22.76 cu in)
Stroke	60 mm (2.36 in)
Bore	89 mm (3.5 in)
Compression ratio	12.6:1
Control	DOHC, 4 valves controlled via cam lever, chain drive
Valve diameter, intake	36 mm (1.42 in)
Valve diameter, exhaust	29 mm (1.14 in)
Valve clearance, intake, cold	0.08... 0.12 mm (0.0031... 0.0047 in)
Valve clearance, exhaust, cold	0.13... 0.17 mm (0.0051... 0.0067 in)
Crankshaft bearing	2 slide bearings
Conrod bearing	Sleeve bearing
Pistons	Forged light alloy
Piston rings	1 compression ring, 1 tapered compression piston ring, 1 oil scraper ring
Engine lubrication	Pressure circulation lubrication with two rotary pumps
Primary transmission	30:80
Clutch	Slipper clutch in oil bath/mechanically operated
Transmission	6-gear, claw shifted
Transmission ratio	
1st gear	12:32
2nd gear	14:26
3rd gear	19:27

4th gear	21:24
5th gear	23:22
6th gear	25:21
Mixture preparation	Electronically controlled fuel injection
Ignition	Contactless controlled fully electronic ignition with digital ignition adjustment
Alternator	12 V, 296 W
Spark plug	BOSCH Super R6 VR 5 NE
Spark plug electrode gap	0.8 mm (0.031 in)
Spark plug	BOSCH Super R6 VR 5 NEW
Spark plug electrode gap	1 mm (0.04 in)
Cooling	Water cooling, permanent circulation of coolant by water pump
Idle speed	1,650... 1,750 rpm
Starting aid	Electric starter

22.2 Engine tightening torques

Oil nozzle	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, gear sensor	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, ignition pulse generator	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, retaining bracket	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, retaining bracket, stator cable	M5	8 Nm (5.9 lbf ft)	Loctite® 243™
Screw, stator	M5	8 Nm (5.9 lbf ft)	Loctite® 243™
Cylinder head screw	M6	12 Nm (8.9 lbf ft)	–
Nut, water pump impeller	M6	10 Nm (7.4 lbf ft)	Loctite® 243™

22 TECHNICAL DATA

Oil nozzle	M6	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw plug, water pump drain hole	M6	10 Nm (7.4 lbf ft)	–
Screw, alternator cover	M6	12 Nm (8.9 lbf ft)	–
Screw, bearing retainer	M6	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, camshaft bearing support	M6	10 Nm (7.4 lbf ft)	–
Screw, camshaft, decompression shaft	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, chain securing guide	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, clutch cover	M6	12 Nm (8.9 lbf ft)	–
Screw, clutch spring	M6	10 Nm (7.4 lbf ft)	–
Screw, engine case	M6x35	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, engine case	M6x75	12 Nm (8.9 lbf ft)	–
Screw, engine vent plate	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, freewheel gear retaining bracket	M6	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, lock washer, engine sprocket	M6	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, locking lever	M6	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, oil filter cover	M6	12 Nm (8.9 lbf ft)	–
Screw, oil pump	M6	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, retaining bracket	M6	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, retaining bracket, shaft seal ring, clutch cover	M6	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, shift drum locating	M6	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, starter motor	M6	12 Nm (8.9 lbf ft)	–
Screw, timing chain tensioner	M6	12 Nm (8.9 lbf ft)	–
Screw, timing chain tensioning rail	M6	12 Nm (8.9 lbf ft)	Loctite® 243™

Screw, unlocking of timing chain tensioner	M6	6 Nm (4.4 lbf ft)	–
Screw, valve cover	M6	12 Nm (8.9 lbf ft)	–
Screw, water pump cover	M6	12 Nm (8.9 lbf ft)	–
Nut, exhaust flange	M8	22 Nm (16.2 lbf ft)	–
Nut, manifold on cylinder head	M8	8 Nm (5.9 lbf ft)	–
Screw plug	M8	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, balancer shaft gear	M8	40 Nm (29.5 lbf ft)	Loctite® 243™
Screw, return spring, quick shifter	M8	20 Nm (14.8 lbf ft)	Loctite® 243™
Stud, exhaust flange	M8	22 Nm (16.2 lbf ft)	–
Screw, conrod bearing	M8x1	34 Nm (25.1 lbf ft)	–
Oil pressure sensor	M10	14 Nm (10.3 lbf ft)	–
Screw, camshaft drive sprocket	M10	36 Nm (26.6 lbf ft)	Loctite® 243™
Screw, cylinder head	M10	1st stage 30 Nm (22.1 lbf ft) 2nd stage 60 Nm (44.3 lbf ft)	Thread is oiled, head flat is greased
Screw, rotor	M10	105 Nm (77.4 lbf ft)	Loctite® 243™
Water temperature sensor	M10	14 Nm (10.3 lbf ft)	–
Screw plug, cam lever axis	M10x1	10 Nm (7.4 lbf ft)	–
Spark plug	M12	15 Nm (11.1 lbf ft)	–
Nut, inner clutch hub	M16LHx1.5	120 Nm (88.5 lbf ft)	Loctite® 243™
Nut, primary gear/timing chain sprocket	M16x1.5	120 Nm (88.5 lbf ft)	Loctite® 243™
Oil screen screw plug, small	M17x1.5	12 Nm (8.9 lbf ft)	–
Screw plug, alternator cover	M18x1.5	10 Nm (7.4 lbf ft)	–

22 TECHNICAL DATA

Oil drain plug	M24x1.5	15 Nm (11.1 lbf ft)	–
Screw plug, alternator cover	M24x1.5	10 Nm (7.4 lbf ft)	–

22.3 Capacities

22.3.1 Engine oil

Engine oil	1.7 l (1.8 qt.)	Engine oil (SAE 15W/50) (📖 p. 194)
------------	-----------------	------------------------------------

22.3.2 Coolant

Coolant	1.2 l (1.3 qt.)	Coolant (📖 p. 193)
---------	-----------------	--------------------

22.3.3 Fuel

Total fuel tank capacity, approx.	9.5 l (2.51 US gal)	Super unleaded (ROZ 95/RON 95/PON 91) (📖 p. 195)
-----------------------------------	---------------------	--

Fuel reserve, approx.	1.5 l (1.6 qt.)
-----------------------	-----------------

22.4 Chassis

Frame	Lattice frame of steel tubes, powder-coated
Fork	WP Suspension
Shock absorber	WP Suspension
Brake system	
Front	Disc brake with four-pot brake caliper
Rear	Disc brake with single-piston brake caliper, floating
Suspension travel	

22 TECHNICAL DATA

front	120 mm (4.72 in)
rear	150 mm (5.91 in)
Brake discs - diameter	
Front	320 mm (12.6 in)
Rear	230 mm (9.06 in)
Brake discs - wear limit	
Front	4.0 mm (0.157 in)
Rear	3.6 mm (0.142 in)
Tire air pressure, solo	
Front	2.0 bar (29 psi)
Rear	2.0 bar (29 psi)
Tire air pressure with passenger/full payload	
Front	2.0 bar (29 psi)
Rear	2.1 bar (30 psi)
Secondary ratio	15:45
Chain	5/8 x 1/4" (520) O-ring
Steering head angle	66.5°
Wheelbase	1,340±15 mm (52.76±0.59 in)
Seat height, unloaded	820 mm (32.28 in)
Ground clearance, unloaded	178 mm (7.01 in)
Weight without fuel, approx.	159 kg (351 lb.)
Maximum permissible front axle load	125 kg (276 lb.)
Maximum permissible rear axle load	210 kg (463 lb.)
Maximum permissible overall weight	335 kg (739 lb.)

22.5 Electrical system

Battery	ETZ-9-BS	Battery voltage: 12 V Nominal capacity: 8 Ah Maintenance-free
Fuse	75011088005	5 A
Fuse	75011088010	10 A
Fuse	75011088015	15 A
Fuse	90111088025	25 A
Fuse	75011088030	30 A
Low beam	H11/socket PGJ19-2	12 V 55 W
High beam	H9/socket PGJ19-5	12 V 65 W
Parking light	LED	
Instrument lights and indicator lamps	LED	
Turn signal	RY10W / socket BAU15s	12 V 10 W
Brake/tail light	LED	
License plate lamp	LED	

22.6 Tires

Front tires	Rear tires
110/70 R 17 M/C 54H TL Metzeler SPORTEC M5 Interact	150/60 R 17 M/C 66H TL Metzeler SPORTEC M5 Interact
110/70 R 17 M/C 54H TL Michelin Pilot Power Street	150/60 R 17 M/C 66H TL Michelin Pilot Power Street
The tires specified represent one of the possible series production tires. Additional information is available in the Service section under: http://www.ktm.com	

22.7 Fork

Fork article number	93801001000	
Fork	WP Suspension	
Fork length	736 mm (28.98 in)	
Fork oil	460 ml (15.55 fl. oz.)	Fork oil (SAE 5) (📖 p. 194)

22.8 Shock absorber

Shock absorber article number	93704010000	
Shock absorber	WP Suspension	
Spring preload		
Standard	4 clicks	
Static sag	15 mm (0.59 in)	
Riding sag	45... 50 mm (1.77... 1.97 in)	
Fitted length	304 mm (11.97 in)	

22.9 Chassis tightening torques

Screw, chain guard	EJOT PT® K60x30	4 Nm (3 lbf ft)	–
Remaining screws, chassis	M4	4 Nm (3 lbf ft)	–
Screw, engine electronics control unit	M4	3 Nm (2.2 lbf ft)	–
Nut, chain guard	M5	7 Nm (5.2 lbf ft)	–
Nut, reflector on retaining plate	M5	5 Nm (3.7 lbf ft)	–
Remaining nuts, chassis	M5	5 Nm (3.7 lbf ft)	–
Remaining screws, chassis	M5	5 Nm (3.7 lbf ft)	–
Screw, anti-rotation lock, handlebar stub	M5	4 Nm (3 lbf ft)	–
Screw, battery compartment	M5	4 Nm (3 lbf ft)	–
Screw, cover in front of battery compartment	M5	4 Nm (3 lbf ft)	–
Screw, fuel tank cover	M5	4 Nm (3 lbf ft)	–
Screw, retaining plate on license plate holder	M5	4 Nm (3 lbf ft)	–
Screw, side stand switch	M5	5 Nm (3.7 lbf ft)	Loctite® 243™
Screw, tail end lower part	M5	4 Nm (3 lbf ft)	–
ABS fitting	M6	7 Nm (5.2 lbf ft)	Loctite® 243™
Battery compartment cover lock	M6	6 Nm (4.4 lbf ft)	–
Nut, license plate holder	M6	7 Nm (5.2 lbf ft)	–
Nut, radiator	M6	5 Nm (3.7 lbf ft)	–
Nut, tail light	M6	7 Nm (5.2 lbf ft)	–
Remaining nuts, chassis	M6	15 Nm (11.1 lbf ft)	–
Remaining screws, chassis	M6	9 Nm (6.6 lbf ft)	–

22 TECHNICAL DATA

Screw, air filter box lid	M6	6 Nm (4.4 lbf ft)	–
Screw, air filter box, on frame	M6	6 Nm (4.4 lbf ft)	–
Screw, battery compartment	M6	6 Nm (4.4 lbf ft)	–
Screw, brake fluid reservoir, rear brake	M6	8 Nm (5.9 lbf ft)	–
Screw, brake hose clamp	M6	6 Nm (4.4 lbf ft)	–
Screw, brake line guide on bottom triple clamp	M6	7 Nm (5.2 lbf ft)	Loctite® 243™
Screw, chain guard	M6	6 Nm (4.4 lbf ft)	–
Screw, chain sliding guard	M6	7 Nm (5.2 lbf ft)	–
Screw, compensating tank	M6	8 Nm (5.9 lbf ft)	–
Screw, engine electronics control unit retaining bracket	M6	6.5 Nm (4.79 lbf ft)	–
Screw, engine sprocket cover on frame	M6	8 Nm (5.9 lbf ft)	–
Screw, footrest bracket	M6	7 Nm (5.2 lbf ft)	–
Screw, front fairing	M6	7 Nm (5.2 lbf ft)	–
Screw, front fairing structure on headlight bracket	M6	7 Nm (5.2 lbf ft)	–
Screw, front fender	M6	7 Nm (5.2 lbf ft)	–
Screw, front seat fixing	M6	6 Nm (4.4 lbf ft)	–
Screw, front spoiler bottom front	M6	6 Nm (4.4 lbf ft)	–
Screw, front spoiler rear	M6	6 Nm (4.4 lbf ft)	–
Screw, front spoiler top front	M6	7 Nm (5.2 lbf ft)	–
Screw, fuel tank trim	M6	6 Nm (4.4 lbf ft)	–
Screw, ground cable, on frame	M6	7 Nm (5.2 lbf ft)	–
Screw, handlebar stub	M6	8 Nm (5.9 lbf ft)	Loctite® 243™

22 TECHNICAL DATA

Screw, handlebar weight	M6	8 Nm (5.9 lbf ft)	–
Screw, license plate holder on license plate bracket	M6	7 Nm (5.2 lbf ft)	–
Screw, magnetic holder on side stand	M6	5 Nm (3.7 lbf ft)	Loctite® 243™
Screw, passenger seat	M6	7 Nm (5.2 lbf ft)	–
Screw, radiator shield	M6	6 Nm (4.4 lbf ft)	–
Screw, rear ABS sensor wheel	M6	8 Nm (5.9 lbf ft)	–
Screw, rear fender	M6	7 Nm (5.2 lbf ft)	–
Screw, rollover sensor	M6	7 Nm (5.2 lbf ft)	Loctite® 243™
Screw, rubber damper for radiator	M6	6 Nm (4.4 lbf ft)	–
Screw, side cover	M6	6 Nm (4.4 lbf ft)	–
Screw, side cover on front fairing	M6	6 Nm (4.4 lbf ft)	–
Screw, side cover retaining bracket	M6	7 Nm (5.2 lbf ft)	–
Screw, wheel speed sensor holder	M6	8 Nm (5.9 lbf ft)	–
Screw, windshield	M6	7 Nm (5.2 lbf ft)	–
Exhaust clamp	M8	20 Nm (14.8 lbf ft)	–
Remaining nuts, chassis	M8	30 Nm (22.1 lbf ft)	–
Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)	–
Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)	–
Screw, chain guard	M8	11 Nm (8.1 lbf ft)	–
Screw, foot brake lever	M8	17 Nm (12.5 lbf ft)	Loctite® 243™
Screw, front brake disc	M8	32 Nm (23.6 lbf ft)	Loctite® 243™
Screw, front wheel spindle	M8	26 Nm (19.2 lbf ft)	–
Screw, fuel tank attachment, rear, on frame	M8	17 Nm (12.5 lbf ft)	–

Screw, horn	M8	9 Nm (6.6 lbf ft)	–
Screw, main silencer	M8	18 Nm (13.3 lbf ft)	–
Screw, passenger footrest bracket	M8	20 Nm (14.8 lbf ft)	Loctite® 243™
Screw, presilencer on frame	M8	24 Nm (17.7 lbf ft)	–
Screw, rear brake disc	M8	21 Nm (15.5 lbf ft)	Loctite® 243™
Screw, retaining bracket on fuel tank	M8	13 Nm (9.6 lbf ft)	–
Screw, shift lever	M8	17 Nm (12.5 lbf ft)	Loctite® 243™
Screw, top triple clamp	M8	15 Nm (11.1 lbf ft)	–
Screw, front brake caliper	M8x1	30 Nm (22.1 lbf ft)	Loctite® 204™
Nut, rear sprocket screw	M8x1.25	27 Nm (19.9 lbf ft)	Loctite® 243™
Fitting side stand	M10	35 Nm (25.8 lbf ft)	Loctite® 243™
Remaining nuts, chassis	M10	50 Nm (36.9 lbf ft)	–
Remaining screws, chassis	M10	45 Nm (33.2 lbf ft)	–
Screw, side stand pivot	M10	35 Nm (25.8 lbf ft)	–
Screw, front footrest bracket / engine bearer	M10x1.25	49 Nm (36.1 lbf ft)	–
Screw, side stand bracket	M10x1.25	33 Nm (24.3 lbf ft)	Loctite® 243™
Nut, rear wheel spindle	M14x1.5	90 Nm (66.4 lbf ft)	–
Nut, swingarm pivot	M14x1.5	100 Nm (73.8 lbf ft)	–
Screw, steering head, top	M16x1.5	53 Nm (39.1 lbf ft)	Loctite® 204™
Lambda sensor	M18x1.5	19 Nm (14 lbf ft)	–
Swingarm bearing adjusting ring	M22x1	Tighten and ensure that there is no play	–

22 TECHNICAL DATA

Nut, steering head	M30x1	<ol style="list-style-type: none">1. 55 Nm (40.6 lbf ft)2. Loosen (counterclockwise) 2 turns3. 5 Nm (3.7 lbf ft)	-
--------------------	-------	--	---

Brake fluid DOT 4 / DOT 5.1

Standard/classification

- DOT

Guideline

- Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

Recommended supplier

Castrol

- REACT PERFORMANCE DOT 4

Motorex®

- Brake Fluid DOT 5.1

Coolant

Guideline

- Only use high-grade, silicate-free coolant with corrosion inhibitor additive for aluminum motors. Low grade and unsuitable antifreeze causes corrosion, deposits and frothing.
- Do not use pure water as only coolant is able to meet the requirements needed in terms of corrosion protection and lubrication properties.
- Only use coolant that complies with the requirements stated (see specifications on the container) and that has the relevant properties.

Antifreeze protection to at least	-25 °C (-13 °F)
-----------------------------------	-----------------

The mixture ratio must be adjusted to the necessary antifreeze protection. Use distilled water if the coolant needs to be diluted.

The use of premixed coolant is recommended.

Observe the coolant manufacturer specifications for antifreeze protection, dilution and miscibility (compatibility) with other coolants.

Recommended supplier

Motorex®

- COOLANT M3.0

Engine oil (SAE 15W/50)

Standard/classification

- JASO T903 MA (📖 p. 198)
- SAE (📖 p. 198) (SAE 15W/50)

Guideline

- Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Partially synthetic engine oil

Recommended supplier

Motorex®

- Formula 4T

Fork oil (SAE 5)

Standard/classification

- SAE (📖 p. 198) (SAE 5)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Recommended supplier

Motorex®

- Racing Fork Oil

Super unleaded (ROZ 95/RON 95/PON 91)

Standard/classification

- DIN EN 228 (ROZ 95/RON 95/PON 91)

Guideline

- Only use unleaded super fuel that matches or is equivalent to the specified fuel grade.
- Fuel with an ethanol content of up to 10 % (E10 fuel) is safe to use.



Info

Do **not** use fuel containing methanol (e. g. M15, M85, M100) or more than 10 % ethanol (e. g. E15, E25, E85, E100).

Chain cleaner

Recommended supplier

Motorex®

- Chain Clean

Chain lube for road use

Guideline

Recommended supplier

Motorex®

- Chainlube Road

Fuel additive

Recommended supplier

Motorex®

- Fuel Stabilizer

Long-life grease

Recommended supplier

Motorex®

- Bike Grease 2000

Motorcycle cleaner

Recommended supplier

Motorex®

- Moto Clean

Perfect Finish and high gloss polish for paints

Recommended supplier

Motorex®

- Moto Polish & Shine

Preserving materials for paints, metal and rubber

Recommended supplier

Motorex®

- Moto Protect

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces

Recommended supplier

Motorex®

- Quick Cleaner

Universal oil spray

Recommended supplier

Motorex®

- Joker 440 Synthetic

JASO T903 MA

Different technical development directions required a separate specification for 4-stroke motorcycles – the **JASO T903 MA** standard. Earlier, engine oils from the automobile industry were used for 4-stroke motorcycles because there was no separate motorcycle specification.

Whereas long service intervals are demanded for automobile engines, the focus for motorcycle engines is on high performance at high engine speeds.

In most motorcycle engines, the transmission and the clutch are lubricated with the same oil.

The **JASO MA** standard meets these special requirements.

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

26 INDEX OF SPECIAL TERMS


ABS	ABS	Safety system that prevents locking of the wheels when driving straight ahead without the influence of lateral forces
OBD	On-board diagnosis	Vehicle system that monitors emission- and safety-related values

27 LIST OF ABBREVIATIONS

Art. no.	Article number
ca.	circa
cf.	compare
e.g.	for example
etc.	et cetera
i.a.	inter alia
no.	number
poss.	possibly




28.1 Red symbols

Red symbols indicate an error condition that requires immediate intervention.

	The immobilizer indicator lamp lights up or flashes red – Status or error message for immobilizer/alarm system (optional).
--	--




28.2 Yellow and orange symbols

Yellow and orange symbols indicate an error condition that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

	Malfunction indicator lamp lights up yellow – The OBD has detected an emission- or safety-critical fault.
	The general warning lamp lights up yellow – An operating safety (warning) message was detected. This is also shown in the info display.
	ABS warning lamp lights up yellow – Status or error messages relating to ABS.

28.3 Green and blue symbols

Green and blue symbols reflect information.

	The turn signal indicator lamp flashes green simultaneously with the turn signal – The turn signal is switched on.
	The idling speed indicator lamp lights up green – The transmission is in idle.
	The high beam indicator lamp lights up blue – The high beam is switched on.

A	
ABS	110
Accessories	20
Antifreeze	
checking	155
Antilock brake system	110
Applying the brakes	73
Auxiliary substances	20
B	
Baggage	65
Battery	
installing	135
recharging	136
removing	134
Battery cover	
mounting	101
removing	100
Brake discs	
checking	111
Brake fluid	
front brake, adding	113
rear brake, adding	117
Brake fluid level	
front brake, checking	112
rear brake, checking	116

Brake linings	
front brake, checking	115
rear brake, checking	119
Brakes	73
C	
Capacity	
coolant	184
engine oil	184
fuel	79, 184
Chain	
chain dirt accumulation, checking	93
checking	98
cleaning	93
Chain tension	
adjusting	96
checking	94
Chassis number	26
Clutch lever	29
Clutch lever play	
checking	164
Combination instrument	
activation and test	42
average fuel consumption 1/average fuel consumption 2 menu	54
average fuel consumption 2/service menu	55
average speed/average fuel consumption 1 menu	53
coolant temperature indicator	51

display	48
display TRIP F	50
distance menu 1 TRIP 1	59
distance menu 2 TRIP 2	59
filling level display of the fuel tank	49
function buttons	46
indicator lamps	47
info display	52
range/riding time menu	57
riding time/average speed menu	53
service/range menu	56
total distance menu ODO	58
warning notes	43

Coolant

draining	159
----------	-----

Coolant level

checking	155
compensating tank, checking	154
compensating tank, correcting	158

Cooling system 152

filling/bleeding	161
------------------	-----

Customer service 21

D

Diagnostics connector 151

E

Electric starter button 33

Emergency OFF switch 32

Engine

running in	64
------------	----

Engine number 27

Engine oil

adding	170
changing	166

Engine oil level

checking	166
----------	-----

Engine sprocket

checking	98
----------	----

Environment 18

F

Figures 21

Filler cap

closing	36
opening	35

Filling up

fuel	77
------	----

Foot brake lever 40

free travel, adjusting	121
free travel, checking	120

Fork legs

dust boots, cleaning	89
----------------------	----

Front rider's seat

mounting	91
removing	90

Front spoiler	
installing	103
removing	101
Front wheel	
installing	124
removing	123
Fuse	
individual power consumers, changing	141
Fuses, ABS	
changing	139
G	
Grab handles	38
H	
Hand brake lever	29
Headlight range of low beam	
adjusting	150
Headlight range of the high beam	
adjusting	150
High beam bulb	
changing	145
High beam flasher button	31
High beam headlight adjustment	
checking	149
Horn button	30

I	
Ignition lock	33
Implied warranty	20
Indicator lamps	47
K	
Key number	28
Kilometers or miles	
adjusting	60
L	
Light switch	31
Loading the vehicle	65
Low beam bulb	
changing	143
Low beam headlight adjustment	
checking	148
M	
Misuse	9
Motorcycle	
cleaning	171
lifting with front lifting gear	87
raising with the rear lifting gear	86
removing the rear from the lifting gear	86
taking from the front lifting gear	88

0	
Oil filter	
changing	166
Oil screens	
cleaning	166
Operating substances	20
Owner's Manual	19
P	
Parking	75
Passenger footrests	38
Passenger seat	
mounting	92
removing	91
Play in the clutch lever	
adjusting	165
Preparing for use	
advice on first use	63
after storage	176
checks and maintenance when preparing for use	67
Protective clothing	18
R	
Rear hub rubber dampers	
checking	130
Rear sprocket	
checking	98

Rear wheel	
installing	127
removing	126
Riding	70
starting off	70
Right side cover	
installing	108
removing	107
S	
Safe operation	17
Seat lock	37
Service	21
Service schedule	80-82
Shift lever	39
adjusting	84
Shift speed RPM 1	
adjusting	61
Shift speed RPM 2	
adjusting	62
Shifting	70
Shock absorber	
spring pretension, adjusting	83
Side cover, left	
installing	106
removing	104
Side stand	40

INDEX

206

Spare parts	20
Starting	68
Steering	
locking	34
unlocking	34
Steering lock	33
Stopping	75
Storage	175

T

Technical data

capacities	184
chassis	184
chassis tightening torques	188
electrical system	186
engine	180
engine tightening torques	181
fork	187
shock absorber	187
tires	187
Throttle grip	30
Time	
adjusting	61
Tire air pressure	
checking	133
Tire condition	
checking	131

Tool set	37
Transport	76
Troubleshooting	177-179
Turn signal bulb	
changing	147
Turn signal switch	32
Type label	26

U

Use definition	9
-----------------------------	---

V

View of vehicle

front left	22
rear right	24

W

Warranty	20
Winter operation	
checks and maintenance steps	173
Work rules	18

READY TO RACE

[» www.ktm.com](http://www.ktm.com)



3213559en

01/2017

KTM Sportmotorcycle GmbH
3230 Mattighofen/Austria
<http://www.ktm.com>



Photo: Mitterbauer/KTM