# **OWNER'S MANUAL 2020**





Art. no. 3214120en





# **DEAR KTM CUSTOMER**

Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art sports motorcycle that will give you enormous pleasure if you service and maintain it properly.

We hope you enjoy riding this motorcycle!

Enter the serial numbers of your vehicle below.

| Vehicle identification number ( p. 24) | Dealer's stamp |
|--|----------------|
|  |                |
| Engine number (🕮 p. 25)                |                |
|  |                |
| Key number ( p. 25)                    |                |
|  |                |

The Owner's Manual contained the latest information for this model series at the time of going to print. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications contained herein are non-binding. KTM Sportmotorcycle GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, deviations from figures and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2019 KTM Sportmotorcycle GmbH, Mattighofen Austria All rights reserved



# **DEAR KTM CUSTOMER**

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

KTM applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard. Issued by: TÜV Management Service

REG.NO. 12 100 6061

KTM Sportmotorcycle GmbH Stallhofnerstraße 3 5230 Mattighofen, Austria

This document is valid for the following models:

200 Duke EU (F4103T5, F4103T6)

200 Duke B.D. EU (F4103T7, F4103T5L)

200 Duke B.D. 2 EU (F4103T6L, F4103T7L)

200 Duke AR (F4142T5, F4142T6)

200 Duke B.D. AR (F4142T7)

200 Duke ASEAN (F4188T3, F4188T3L)

200 Duke BR (F4140T5, F4140T6)

200 Duke B.D. BR (F4140T7)

200 Duke CO (F4141T5, F4141T6)

200 Duke B.D. CO (F4141T7)

200 Duke MY (F4189T5, F4189T6)

200 Duke B.D. MY (F4189T7)

200 Duke PH (F4182T5, F4182T6)

200 Duke B.D. PH (F4182T7)

| 1 | MEANS      | S OF REPRESENTATION               | 8  | 4 | VIEW O     | F VEHICLE   | 20 |
|---|------------|-----------------------------------|----|---|------------|---|----|
|   | 1.1<br>1.2 | Symbols used                      |    |   | 4.1<br>4.2 | View of vehicle, front left (example) View of vehicle, rear right |    |
| 2 | SAFET      | Y ADVICE                          | 10 |   |            | (example)   | 22 |
|   | 2.1        | Use definition – intended use     | 10 | 5 | SERIAL     | NUMBERS   | 24 |
|   | 2.2        | Misuse                            |    |   | 5.1        | Vehicle identification number                                     | 24 |
|   | 2.3        | Safety advice                     |    |   | 5.2        | Type label  | 24 |
|   | 2.4        | Degrees of risk and symbols       |    |   | 5.3        | Engine number   |    |
|   | 2.5        | Tampering warning                 |    |   | 5.4        | Key number  | 25 |
|   | 2.6        | Safe operation                    |    | 6 | CONTR      | 0LS   | 26 |
|   | 2.7        | Protective clothing               |    |   | C 1        | Clutab laver  | 20 |
|   | 2.8        | Work rules                        |    |   | 6.1        | Clutch lever  |    |
|   | 2.9        | Environment                       |    |   | 6.2        | Hand brake lever  |    |
|   | 2.10       | Owner's Manual                    | 15 |   | 6.3        | Throttle grip   |    |
| 3 | IMPOR      | TANT NOTES                        | 16 |   | 6.4        | Horn button   |    |
| J | 11111 011  | 17.111 110 120                    | 10 |   | 6.5        | Light switch  |    |
|   | 3.1        | Manufacturer and implied warranty | 16 |   | 6.6        | High beam flasher button  |    |
|   | 3.2        | Fuel, auxiliary substances        | 16 |   | 6.7        | Turn signal switch  |    |
|   | 3.3        | Spare parts, accessories          | 16 |   | 6.8        | Emergency OFF switch  | 29 |
|   | 3.4        | Service                           | 17 |   | 6.9        | Start button  | 30 |
|   | 3.5        | Figures                           | 17 |   | 6.10       | Ignition and steering lock  | 30 |
|   | 3.6        | Customer service                  |    |   | 6.11       | Locking the steering  | 31 |
|   |            |                                   |    |   | 6.12       | Unlocking the steering  | 32 |
|   |            |                                   |    |   | 6.13       | Opening fuel tank filler cap                                      |    |

|   | 6.14  | Closing the fuel tank filler cap | 34 |   | 7.16   | average fuel consumption 1/average |     |
|---|-------|----------------------------------|----|---|--------|------------------------------------|-----|
|   | 6.15  | Seat lock                        | 35 |   |        | fuel consumption 2 menu            | 59  |
|   | 6.16  | Tool set                         | 35 |   | 7.17   | average fuel consumption 2/service |     |
|   | 6.17  | Grab handles                     | 36 |   |        | menu                               | 60  |
|   | 6.18  | Passenger foot pegs              | 36 |   | 7.18   | service/range menu                 | 61  |
|   | 6.19  | Shift lever                      | 37 |   | 7.19   | range/riding time menu             | 62  |
|   | 6.20  | Foot brake lever                 | 38 |   | 7.20   | Setting the kilometers or miles    | 62  |
|   | 6.21  | Side stand                       | 38 |   | 7.21   | Setting the clock                  | 64  |
| , | COMPI | NATION INSTRUMENT                | 40 |   | 7.22   | Adjusting the shift speed RPM1     | 65  |
|   | COMP  | NATION INSTRUMENT                | 40 |   | 7.23   | Adjusting the shift speed RPM2     | 66  |
|   | 7.1   | Combination instrument           | 40 | 8 | DDEDAI | RING FOR USE                       | 68  |
|   | 7.2   | Activation and test              | 41 | O | INLIA  |                                    |     |
|   | 7.3   | Warnings                         | 42 |   | 8.1    | Advice on preparing for first use  | 68  |
|   | 7.4   | Indicator lamps                  | 46 |   | 8.2    | Running in the engine              | 70  |
|   | 7.5   | Shift warning light              | 48 |   | 8.3    | Loading the vehicle                | 70  |
|   | 7.6   | Display                          | 50 | 9 | RIDING | INSTRUCTIONS                       | 73  |
|   | 7.7   | Fuel level display               | 51 | , |        |                                    | , . |
|   | 7.8   | Coolant temperature indicator    | 52 |   | 9.1    | Checks and maintenance measures    |     |
|   | 7.9   | Function buttons                 | 53 |   |        | when preparing for use             |     |
|   | 7.10  | TRIP F display                   | 54 |   | 9.2    | Starting                           |     |
|   | 7.11  | ODO display                      | 55 |   | 9.3    | Starting off                       |     |
|   | 7.12  | TRIP 1 display                   | 56 |   | 9.4    | Shifting, riding.                  |     |
|   | 7.13  | TRIP 2 display                   | 57 |   | 9.5    | Applying the brakes                |     |
|   | 7.14  | riding time/average speed menu   | 58 |   | 9.6    | Stopping, parking                  |     |
|   | 7.15  | average speed/average fuel       |    |   | 9.7    | Transport                          |     |
|   |       | consumption 1 menu               | 58 |   | 9.8    | Refueling                          | 87  |

| 10 | SERVIO | CE SCHEDULE                           | 90  |    | 12.10 | Checking for chain dirt               |     |
|----|--------|---------------------------------------|-----|----|-------|---------------------------------------|-----|
|    | 10.1   | Additional information                | 90  |    |       | accumulation                          |     |
|    | 10.2   | Required work                         |     |    | 12.11 | Cleaning the chain                    | 107 |
|    | 10.3   | Recommended work                      |     |    | 12.12 | Checking the chain tension            | 109 |
|    |        |                                       |     |    | 12.13 | Adjusting the chain tension           | 111 |
| 11 | TUNIN  | G THE CHASSIS                         | 94  |    | 12.14 | Checking the chain, rear sprocket,    |     |
|    | 11.1   | Adjusting the spring preload of the   |     |    |       | and engine sprocket                   | 114 |
|    | 11.1   | shock absorber                        | 94  |    | 12.15 | Removing the front spoiler            | 117 |
|    | 11.2   | Adjusting the shift lever             |     |    | 12.16 | Fitting front spoiler                 | 118 |
|    |        |                                       |     |    | 12.17 | Removing front fender                 | 119 |
| 12 | SERVIO | CE WORK ON THE CHASSIS                | 97  |    | 12.18 | Installing the front fender           | 120 |
|    | 12.1   | Raising the motorcycle with rear      | -   | 13 | BRAKE | SYSTEM                                | 121 |
|    |        | lifting gear                          | 97  |    | 13.1  | Checking the brake discs              | 121 |
|    | 12.2   | Removing the rear of the motorcycle   |     |    | 13.2  | Checking the front brake fluid        | 121 |
|    |        | from the lifting gear                 | 97  |    | 15.2  | level                                 | 122 |
|    | 12.3   | Lifting the motorcycle with the front |     |    | 13.3  | Adding front brake fluid -            |     |
|    |        | lifting gear                          | 98  |    | 13.4  | Checking the front brake linings      |     |
|    | 12.4   | Taking the motorcycle off the front   |     |    | 13.5  | Checking the rear brake fluid         | 120 |
|    |        | lifting gear                          | 100 |    | 15.5  | level                                 | 127 |
|    | 12.5   | Cleaning the dust boots of the fork   |     |    | 13.6  | Adding rear brake fluid 🔏             |     |
|    |        | legs                                  |     |    | 13.7  | Checking the rear brake linings       |     |
|    | 12.6   | Removing the passenger seat 1         |     |    | 13.8  | Checking the free travel of foot      | 152 |
|    | 12.7   | Mounting the passenger seat 1         |     |    | 13.0  | brake lever                           | 123 |
|    | 12.8   | Removing the front rider's seat 1     |     |    | 13.9  | Adjusting the free travel of the foot | 130 |
|    | 12.9   | Mounting the front rider's seat 1     | 106 |    | 13.5  | brake lever 4                         | 125 |
|    |        |                                       |     |    |       | Diane level                           | 130 |

| 14 | WHEEL                        | S, TIRES  | 137        | 16 | COOLIN               | NG SYSTEM  | 183        |
|----|------------------------------|---|------------|----|----------------------|--|------------|
|    | 14.1<br>14.2<br>14.3<br>14.4 | Removing the front wheel                                      | 139<br>143 |    | 16.1<br>16.2<br>16.3 | Cooling system   | 185<br>187 |
|    | 14.5                         | Checking rear hub damping rubber pieces ❖                     | 151        |    | 16.4<br>16.5         | Filling/bleeding the cooling                                   | 190        |
|    | 14.6                         | Checking the tire condition                                   |            |    |                      | system 🔏   |            |
|    | 14.7                         | Checking tire pressure  | 155        |    | 16.6                 | Changing the coolant   | 194        |
| 15 | ELECTI                       | RICAL SYSTEM  | 156        | 17 | TUNING               | G THE ENGINE   | 198        |
|    | 15.1                         | Removing the 12-V battery                                     |            |    | 17.1                 | Checking throttle cable play                                   |            |
|    | 15.2<br>15.3                 | Installing the 12-V battery <b>⁴</b>                          |            |    | 17.2<br>17.3         | Adjusting throttle cable play  Checking the clutch lever play  |            |
|    | 15.4                         | Changing the ABS fuses  | 100        |    | 17.4                 | Adjusting play in the clutch                                   | 133        |
|    |                              | (200 Duke BR)   | 162        |    |                      | lever 4  | 201        |
|    | 15.5                         | Changing the fuses of individual power consumers              | 165        | 18 | SERVIC               | E WORK ON THE ENGINE   | 202        |
|    | 15.6                         | Changing the headlight bulb                                   | 170        |    | 18.1                 | Checking the engine oil level                                  | 202        |
|    | 15.7                         | Changing the position light lamp $\ldots\ldots$               |            |    | 18.2                 | Changing the engine oil and oil                                |            |
|    | 15.8<br>15.9                 | Checking the headlight setting  Adjusting the headlight range |            |    | 18.3                 | filter, cleaning the oil screen <b>\( \)</b> Adding engine oil |            |
|    | 15.10                        | Diagnostics connector   | 182        | 19 |                      | ING, CARE  |            |
|    | 15.11                        | AGOZ HOIR   | 102        |    | 19.1                 | Cleaning the motorcycle  | 209        |

| 19.2   | Checks and maintenance steps for winter operation  | 212              |   | 22  |
|--------|--|------------------|---|---|
| STORA  | GE   | 214              | 23  | Sl  |
| 20.1   | _  |                  | 24  | Αl  |
| 20.2   | Preparing for use after storage  | 216              | 25  | ST  |
| TROUB  | LESHOOTING   | 217              | 26  | IN  |
| TECHN  | ICAL DATA  | 221              | 27  | LI  |
| 22.1   | _  |                  | 28  | LI  |
|        |  |                  |   | 0.0   |
|        |  |                  |   | 28  |
|        |  |                  |   | 28  |
|        |  | 226              | IND   | EX  |
| 22.3.3 | Fuel   | 226              |   |   |
| 22.4   | Chassis  | 227              |   |   |
| 22.4.1 | Standard chassis   | 227              |   |   |
| 22.4.2 | Low chassis  | 227              |   |   |
| 22.5   | Electrical system  | 229              |   |   |
| 22.6   | -  |                  |   |   |
| 22.7   | Fork   | 230              |   |   |
| 22.7.1 |  |                  |   |   |
| 22.7.2 | Low chassis  | 230              |   |   |
| 22.8   | Shock absorber   | 231              |   |   |
| 22.8.1 | Standard chassis   | 231              |   |   |
|        | STORA 20.1 20.2 TROUB TECHN 22.1 22.2 22.3 22.3.1 22.3.2 22.4.1 22.4.2 22.5 22.6 22.7 22.7.1 22.7.2 22.8 | winter operation | winter operation       212         STORAGE       214         20.1 Storage       214         20.2 Preparing for use after storage       216         TROUBLESHOOTING       217         TECHNICAL DATA       221         22.1 Engine       221         22.2 Engine tightening torques       222         22.3 Capacities       226         22.3.1 Engine oil       226         22.3.2 Coolant       226         22.3.3 Fuel       226         22.4 Chassis       227         22.4.1 Standard chassis       227         22.4.2 Low chassis       227         22.5 Electrical system       229         22.6 Tires       230         22.7 Fork       230         22.7.1 Standard chassis       230         22.7.2 Low chassis       230         22.7.2 Low chassis       230         22.8 Shock absorber       231 | winter operation       212         STORAGE       214       23         20.1 Storage       214       24         20.2 Preparing for use after storage       216       25         TROUBLESHOOTING       217       26         TECHNICAL DATA       221       27         22.1 Engine       221       28         22.2 Engine tightening torques       222         22.3 Capacities       226         22.3.1 Engine oil       226         22.3.2 Coolant       226         22.3.3 Fuel       226         22.4.1 Standard chassis       227         22.4.2 Low chassis       227         22.4.2 Low chassis       227         22.5 Electrical system       229         22.6 Tires       230         22.7 Fork       230         22.7.1 Standard chassis       230         22.7.2 Low chassis       230         22.7.2 Low chassis       230         22.8 Shock absorber       231 |

|     |        | Low chassis               |     |
|-----|--------|---------------------------|-----|
| 23  | SUBST  | ANCES                     | 239 |
| 24  | AUXILI | ARY SUBSTANCES            | 243 |
| 25  | STAND  | ARDS                      | 24  |
| 26  | INDEX  | OF SPECIAL TERMS          | 246 |
| 27  | LIST 0 | F ABBREVIATIONS           | 247 |
| 28  | LIST 0 | F SYMBOLS                 | 248 |
|     |        | Yellow and orange symbols |     |
| IND | EX     |                           | 249 |

# 1 MEANS OF REPRESENTATION

### 1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



All work marked with this symbol requires specialist knowledge and technical understanding. In the interest of your own safety, have these jobs performed by an authorized KTM workshop! Your motorcycle will be optimally cared for there by specially trained experts using the auxiliary tools required.



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Indicates a voltage measurement.



Indicates a current measurement.



Indicates the end of an activity, including potential rework.

### 1.2 Formats used

The typographical formats used in this document are explained below.

| Proprietary name | Indicates a proprietary n | ame. |
|------------------|---------------------------|------|
|                  |                           |      |

Name® Indicates a protected name.

**Brand™** Indicates a brand available on the open market.

<u>Underlined terms</u>

Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

# 2 SAFETY ADVICE

### 2.1 Use definition – intended use

This vehicle has been designed and built to withstand the normal stresses and strains of road use. This vehicle is not suitable for use on race tracks or offroad.



### Info

This vehicle is only authorized for operation on public roads in its homologated version.

#### 2.2 Misuse

The vehicle must only be used as intended.

Dangers can arise for people, property and the environment through use not as intended.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Misuse also includes the use of operating and auxiliary fluids which do not meet the required specification for the respective use.

## 2.3 Safety advice

A number of safety instructions need to be followed to operate the product described safely. Therefore read this instruction and all further instructions included carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.

#### Info

Various information and warning labels are attached in prominent locations on the product described. Do not remove any information or warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

## 2.4 Degrees of risk and symbols



### **Danger**

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



### Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



### Caution

Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

### Note

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



### Note

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

# 2 SAFETY ADVICE

## 2.5 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

- 1 The removal or rendering inoperative by any person other than for purposes of servicing, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- Removal or puncturing of the main silencers, baffles, header pipes or any other components which conduct exhaust gases.
- 2 Removal or puncturing of parts of the intake system.
- 3 Lack of proper maintenance.
- 4 Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than those specified by the manufacturer.

### 2.6 Safe operation



### **Danger**

**Danger of accidents** A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



### **Danger**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.



### Warning

**Danger of burns** Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

An appropriate driver's license is needed to ride the vehicle on public roads.

Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.

Adhere to the information and warning labels on the vehicle.

## 2.7 Protective clothing



### Warning

**Risk of injury** Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

# 2 SAFETY ADVICE

In the interest of your own safety, KTM recommends that you only operate the vehicle while wearing protective clothing.

### 2.8 Work rules

Unless specified otherwise, the ignition must be turned off during all work (models with ignition lock, models with remote key) or the engine must be at a standstill (models without ignition lock or remote key).

Special tools are necessary for certain tasks. The tools are not a component of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, seals, sealing rings, O-rings, pins, and lock washers).

In the case of certain screws, a screw adhesive (e.g. **Loctite®**) is required. Observe the manufacturer's instructions

If thread locker (e.g., **Precote®**) has already been applied to a new part, do not apply any additional thread locker. After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After completing a repair or service work, check the operating safety of the vehicle.

### 2.9 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized KTM dealer will be glad to advise you.

### 2.10 Owner's Manual

It is important that you read this Owner's Manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and service your motorcycle. Only then will you find out how to customize the vehicle ideally for your own use and how you can protect yourself from injury.

Keep the Owner's Manual in an accessible place to enable you to refer to it as needed.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized KTM dealer.

The Owner's Manual is an important component of the vehicle and must be handed over to the new owner if the vehicle is sold.

The Owner's Manual is also available for download from your authorized KTM dealer and on the KTM website. International KTM Website: http://www.ktm.com

# 3 IMPORTANT NOTES

## 3.1 Manufacturer and implied warranty

The work specified in the service schedule may only be performed in an authorized KTM workshop and must be recorded in both the Service & Warranty Booklet and in the **KTM Dealer.net**, otherwise any warranty coverage will become void. Damage or secondary damage caused by tampering with and/or conversions on the vehicle is not covered by the manufacturer warranty.

Additional information on the manufacturer or manufacturer warranty and the procedures involved can be found in the Service & Warranty Booklet.

## 3.2 Fuel, auxiliary substances



#### Note

**Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

Use fuels and auxiliary substances in accordance with the Owner's Manual and specification.

### 3.3 Spare parts, accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by KTM and have them installed by an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss.

Certain spare parts and accessory products are specified in parentheses in the descriptions. Your authorized KTM dealer will be glad to advise you.

The current **KTM PowerParts** for your vehicle can be found on the KTM website. International KTM Website: http://www.ktm.com

### 3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under difficult conditions, such as in heavy rain, intense heat or with a heavy payload, may result in significantly increased wear of components such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service. It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

The relevant mileage or time interval is whichever occurs first.

### 3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

### 3.6 Customer service

Your authorized KTM dealer will be happy to answer any questions you may have on your vehicle and KTM.

# **3 IMPORTANT NOTES**

A list of authorized KTM dealers can be found on the KTM website. International KTM Website: http://www.ktm.com

# 4 VIEW OF VEHICLE


# 4.1 View of vehicle, front left (example)



- 1 Combination instrument
- 2 Rear mirror
- 3 Clutch lever ( p. 26)
- 4 Front rider's seat
- 6 Passenger seat
- 6 Seat lock ( p. 35)
- 7 Grab handles ( p. 36)
- 8 Shift lever ( p. 37)
- 9 Side stand ( p. 38)
- 10 Engine number ( p. 25)

# 4 VIEW OF VEHICLE


# 4.2 View of vehicle, rear right (example)

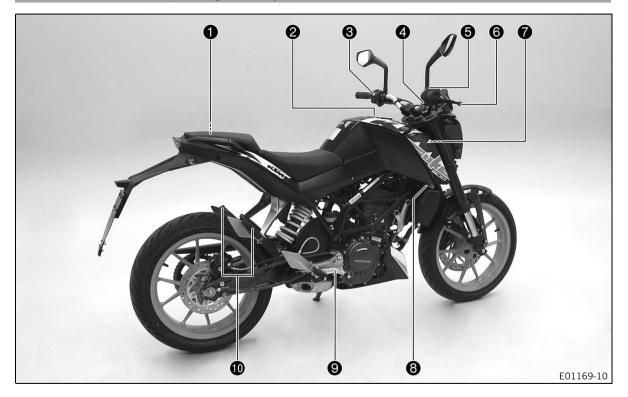

- 1 Tool set ( p. 35)
- 2 Fuel tank filler cap
- 3 Light switch ( p. 28)
- High beam flasher button ( p. 28)
- 3 Turn signal switch ( p. 29)
- 3 Horn button ( p. 27)
- 4 Start button ( p. 30)
- **5** Emergency OFF switch ( p. 29)
- 6 Hand brake lever ( p. 26)
- Vehicle identification number ( p. 24)
- 7 Type label (🕮 p. 24)
- 8 Radiator cap
- 9 Foot brake lever ( p. 38)
- Passenger foot pegs ( p. 36)


# **5 SERIAL NUMBERS**

## 5.1 Vehicle identification number

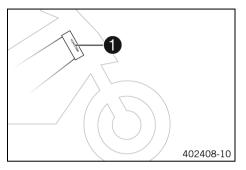


The vehicle identification number **1** is stamped on the right side of the steering head.

# 5.2 Type label

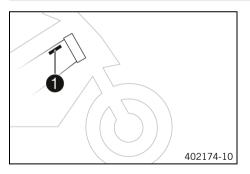


The type label **1** is on the right of the frame behind the steering head.

# 5.3 Engine number

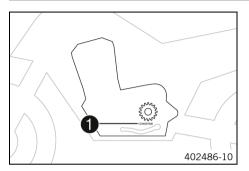

The engine number is stamped on the left side of the engine under the engine sprocket.

## 5.4 Key number

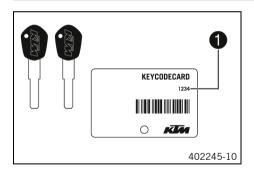

The key number 1 can be found on the **KEYCODECARD**.



### Info

You need the key number to order a spare key. Keep the **KEYCODECARD** in a safe place.

If at least one ignition key is still available, a spare key can be produced. If an ignition key is no longer present, the entire lock system must be replaced.

# 6 CONTROLS

# 6.1 Clutch lever



The clutch lever 1 is fitted on the left side of the handlebar.

# 6.2 Hand brake lever



The hand brake lever **1** is fitted on the right side of the handlebar.

The front brake is engaged using the hand brake lever.

# 6.3 Throttle grip



The throttle grip **1** is fitted on the right side of the handlebar.

## 6.4 Horn button



Horn button **1** is fitted on the left side of the handlebar.

#### Possible states

- The horn button **>** is in the basic position


# 6 CONTROLS

## 6.5 Light switch



The light switch 1 is fitted on the left side of the handlebar.

### Possible states



## 6.6 High beam flasher button



High beam flasher button **1** is fitted on the left side of the handlebar.

#### Possible states

- High beam flasher button in the basic position
- High beam flasher button pressed In this position, the headlight flasher (high beam) is actuated.

# 6.7 Turn signal switch



Turn signal switch 1 is fitted on the left side of the handlebar.

#### Possible states


| Δ             | Turn signal off – Turn signal switch pushed toward the switch housing.   |
|---------------|--|
| 4             | Left turn signal, on – Turn signal switch pressed to the left. The turn signal switch returns automatically to the central position after use.   |
| $\Rightarrow$ | Right turn signal, on – Turn signal switch pressed to the right. The turn signal switch returns automatically to the central position after use. |

## 6.8 Emergency OFF switch




The emergency OFF switch **1** is fitted on the right side of the handlebar.

#### Possible states

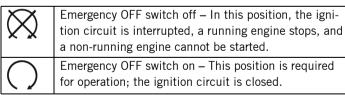

### 6.9 Start button

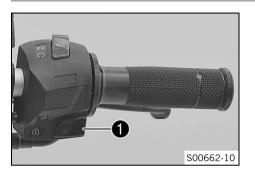

Start button 1 is fitted on the right side of the handlebar.

#### Possible states

- The start button ③ is in the basic position
- The start button ③ is pressed In this position, the starter motor is actuated.

## 6.10 Ignition and steering lock



The ignition and steering lock is located in front of the upper triple clamp.

### Possible states



Ignition off **OFF** – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start. The ignition key can be removed.



Ignition on  ${\bf ON}$  – In this position, the ignition circuit is closed and the engine can be started.


Steering locked – In this position, the ignition circuit is interrupted and the steering locked. The ignition key can be removed.

# 6.11 Locking the steering

#### Note

Danger of damage The parked vehicle can roll away or fall over.


Park the vehicle on a firm and level surface.

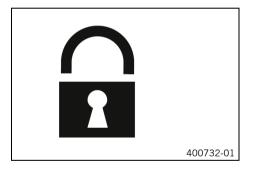

- Park the vehicle.
- Turn the handlebar all the way to the left.
- Insert the ignition key into the ignition and steering lock, press in, and turn to the left. Remove the ignition key.
  - ✓ Steering is no longer possible.

# 6 CONTROLS

## 6.12 Unlocking the steering

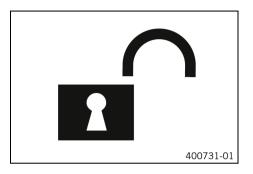

- Insert the ignition key into the ignition and steering lock, press in, and turn to the right. Remove the ignition key.
  - ✓ The handlebar can now be moved again.

## 6.13 Opening fuel tank filler cap



### **Danger**

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.

### Warning

**Danger of poisoning** Fuel is poisonous and a health hazard.


- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.
- Keep fuels correctly in a suitable canister, and out of the reach of children.



#### Note

**Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

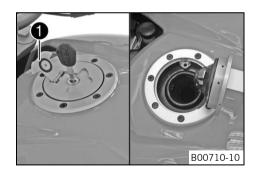

 Lift cover 1 of the fuel tank filler cap and insert the ignition key into the lock.

#### Note


**Danger of damage** The ignition key may break if overloaded. Damaged ignition keys must be replaced.

- Push down on the fuel tank filler cap to take pressure off the ignition key.
- Turn the ignition key 90° clockwise.
- Lift the fuel tank filler cap.

# 6 CONTROLS

Remove the ignition key.

## 6.14 Closing the fuel tank filler cap

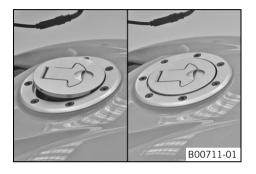




## Warning

**Fire hazard** Fuel is highly flammable, toxic and a health hazard.

- Check that the fuel tank filler cap is locked correctly after closing.
- Change your clothing if fuel spills on them.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Close the fuel tank filler cap.
- Push down the fuel tank filler cap until the lock engages.


## 6.15 Seat lock

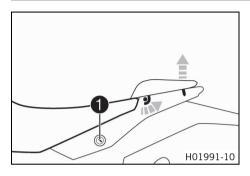

The seat lock 1 is located to the left of the seat.

The seat lock can be unlocked using the ignition key.

## 6.16 Tool set

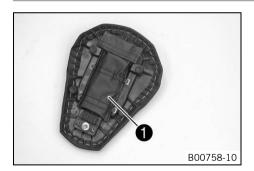

The tool set 1 is located under the passenger seat.


## 6 CONTROLS

## 6.17 Grab handles



The grab handles **1** are used for moving the motorcycle around. If you carry a passenger, the passenger can hold onto the grab handles during the trip.

## 6.18 Passenger foot pegs

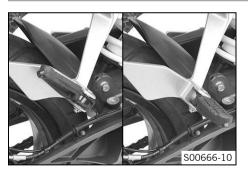


The passenger foot pegs can be folded up and down.


### Possible states

- Passenger foot pegs folded up For operation without a passenger.
- Passenger foot pegs folded down For operation with a passenger.

## 6.19 Shift lever

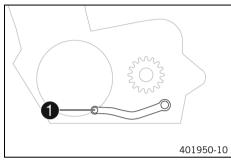


Shift lever 1 is mounted on the left side of the engine.

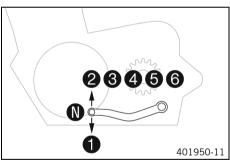

The gear positions can be seen in the photograph. The neutral or idle position is between the first and second gears.


## 6 CONTROLS

### 6.20 Foot brake lever

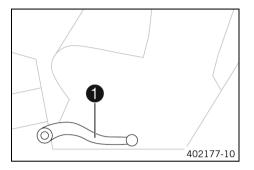

Foot brake lever **1** is located in front of the right footrest. The foot brake lever is used to activate the rear brake.

### 6.21 Side stand

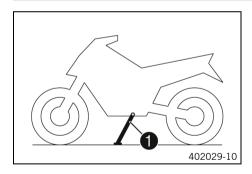

The side stand **1** is located on the left of the vehicle. The side stand is used for parking the motorcycle.




#### Info

The side stand must be folded up during motorcycle use. The side stand is coupled with the safety starting system; follow the riding instructions.

#### Possible states

• Side stand folded out – The vehicle can be supported on the side stand. The safety starting system is active.

## 7.1 Combination instrument

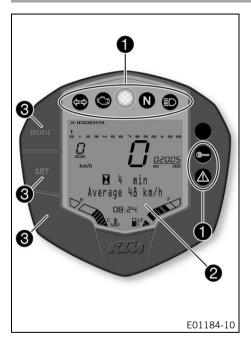

The combination instrument is attached in front of the handlebar.

- 1 Indicator lamps ( p. 46)
- 2 Display ( p. 50)
- **3** Function buttons (♠ p. 53)

### 7.2 Activation and test



#### **Activation**

The combination instrument is activated when the ignition is switched on.



### Info

The brightness of the displays is controlled by an ambient light sensor in the combination instrument.

#### Test

When the ignition is switched on, all indicator lamps light up briefly except for the turn signal indicator lamp and immobilizer indicator lamp.

The segments of the tachometer and the gear display light up and switch off in sequence.

The speedometer counts from 0 to 199 and back.

The remaining display segments of the display light up briefly.

The **READY TO RACE** >> logo appears on the display.

The display then changes to the last selected mode.



### Info

The malfunction indicator lamp always lights up as long as the engine is not running. If the engine is running and the malfunction indicator lamp lights up, stop (taking care not to endanger yourself or other road users in the process) and contact an authorized KTM workshop.

## 7.3 Warnings




#### Info


All warnings that have occurred are shown automatically in succession on the display until they are no longer active. As soon as an error occurs, the relevant indicator lamps light up to signal that an indication/warning note for the operating safety has been detected. As soon as a warning for operating safety has been detected, the general warning lamp 


also flashes.

If an error has occurred in the CAN bus, various warnings appear


CAN FAILURE and CAN EMS FAILURE can occur.

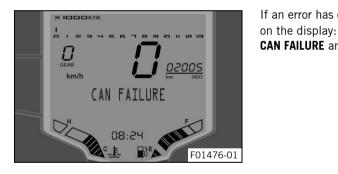

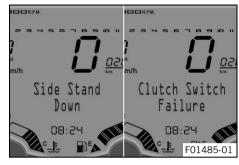

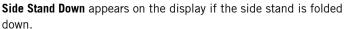



**Clutch Switch Failure** appears on the display if the clutch switch is faulty.

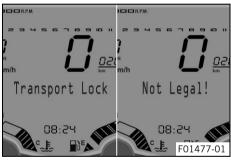

**Transport Lock** appears on the display if transport mode is activated.

**Not Legal!** appears on the display if the approval for road use is invalidated by modifications.

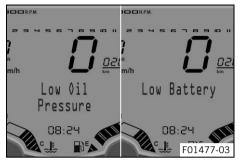

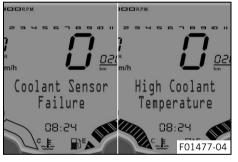

**Low Oil Pressure** appears on the display if the oil pressure is too low.


**Low Battery** appears on the display if the battery voltage falls below the specified value.

| Battery voltage | ≤ 10.5 V |
|-----------------|----------|
|-----------------|----------|

**Coolant Sensor Failure** appears on the display if the coolant temperature sensor is faulty.

**High Coolant Temperature** appears on the display if the coolant temperature rises above the specified value.

| Coolant temperature | > 110 °C (> 230 °F) |
|---------------------|---------------------|
|---------------------|---------------------|

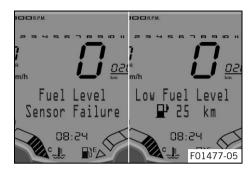

**Fuel Level Sensor Failure** appears on the display if the fuel level indicator is faulty.

**Low Fuel Level** appears on the display if the fuel level reaches the reserve mark.

### 7.4 Indicator lamps



The indicator lamps offer additional information about the operating state of the motorcycle.

When the ignition is switched on, all indicator lamps light up briefly except for the turn signal indicator lamp and immobilizer indicator lamp.

As soon as a warning for operating safety has been detected, the general warning lamp a also flashes.



#### Info

The malfunction indicator lamp always lights up as long as the engine is not running. If the engine is running and the malfunction indicator lamp lights up, stop (taking care not to endanger yourself or other road users in the process) and contact an authorized KTM workshop.


#### Possible states



The turn signal indicator lamp flashes green simultaneously with the turn signal – The turn signal is switched on.



Malfunction indicator lamp lights up yellow – The OBD has detected an error in the vehicle electronics. Come safely to a halt, and contact an authorized KTM workshop.

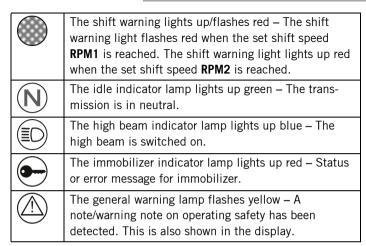

### (200 Duke BR)



ABS warning lamp lights up yellow – Status or error messages relating to ABS.

## 7.5 Shift warning light



The shift warning light **1** is located in the center above the display.



#### Info

The shift warning light can be configured in the **Trip 1** display and **Trip 2** display by keeping the **MODE** button pressed.

The shift warning light is always active during the running-in phase (up to 1,000 km / 621 mi). The shift warning light can only be deactivated, and the values for **RPM1** and **RPM2** can only be adjusted after this. The shift warning light flashes red at **RPM1** and the shift warning light lights up red at **RPM2**.




### Info

In sixth-gear, the shift warning light is deactivated when the engine is warm after the first service.

| Coolant temperature                         | ≤ 35 °C (≤ 95 °F)     |
|---|-----------------------|
| ODO   | < 1,000 km (< 620 mi) |
| The shift warning light always lights up at | 6,500 rpm             |

| Coolant temperature             | > 35 °C (> 95 °F)     |
|---------------------------------|-----------------------|
| ODO                             | > 1,000 km (> 620 mi) |
| RPM1 shift warning light        | flashes               |
| <b>RPM2</b> shift warning light | lights up             |

## 7.6 Display

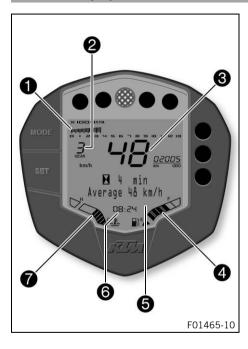

The tachometer **1** shows the engine speed in revolutions per minute.

The gear display **2** shows the engaged gear.

Speed **3** is shown in kilometers per hour **km/h** or in miles per hour **mph**.

The fuel level display is displayed in the 4 area.

The display **5** shows additional information.

The time appears in area **6**.


The coolant temperature display appears in area 7.



#### Info

The time must be reset if the 12-V battery was disconnected from the vehicle or the fuse was removed. The brightness of the displays is controlled by an ambient light sensor in the combination instrument.

## 7.7 Fuel level display

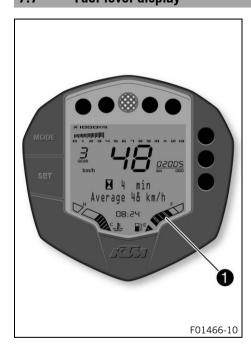

The fuel tank contents are shown in area **1** of the display. The fuel level indicator consists of bars. The more bars are lit, the more fuel is in the fuel tank.



#### Info

If the fuel level is getting low, the warning **Low Fuel Level** will also appear on the display.

The fuel level is displayed with a slight delay to prevent the indicator from constantly moving while riding.

The fuel level display is not updated while the side stand is folded out or the emergency off switch is switched off.

Once the side stand is folded up and the emergency OFF switch is switched on, the fuel level display is next updated after 2 minutes.

The fuel level display flashes if the combination instrument does not receive a signal from the fuel level sensor.

## 7.8 Coolant temperature indicator



The coolant temperature display is shown in segment **1** of the display.

The coolant temperature indicator consists of bars. The more bars that light up, the hotter the coolant.

#### Note

**Engine failure** Overheating damages the engine.

- If the coolant temperature warning is displayed, stop immediately and take care not to endanger yourself or other traffic participants in the process.
- Allow the engine and cooling system to cool down.
- Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.



#### Info

When all the bars light up, the warning **High Coolant Temperature** appears on the display.


If the cooling system overheats, the maximum engine speed is limited.

### Possible states

- The engine is cold Up to three bars light up.
- Engine warm Four to ten bars light up.

- Engine hot Eleven to thirteen bars light up.
- Engine very hot All thirteen bars light up.

## 7.9 Function buttons

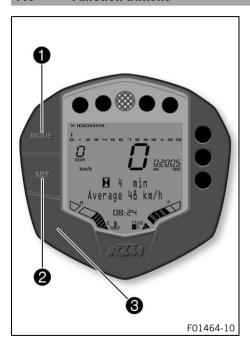

Press the **MODE** button **1** to change display modes. Possible display modes are **TRIP F** (after reaching the fuel reserve level), total distance traveled **(0D0)**, distance 1 **(TRIP 1)** and distance 2 **(TRIP 2)**.

Press the **SET** button **2** to change menus.

Button **3** has no function.

## 7.10 TRIP F display



 Press the MODE button briefly and repeatedly until TRIP F appears on the display.

**TRIP F** shows the distance traveled since the fuel reserve level was reached.



#### Info

When the fuel level reaches the reserve mark, the warning **Low Fuel Level** appears on the display. Pressing the **MODE** button briefly changes the display mode to **TRIP F** and starts to count from **0.0**, regardless of the previously active display mode.

In the **TRIP F** display, the menus **Fuel Range** and **Actual F.C.** can also be displayed.

As soon as a warning for operating safety has been detected, the general warning lamp a also flashes. Press the **SET** button briefly to change to the next menu in the display.

Press the **MODE** button briefly to change to the next display mode in the display.

#### 7.11 **ODO** display



Press the **MODE** button briefly and repeatedly until **ODO** appears on the display.

**ODO** shows the total distance covered.



### Info

This value is retained, even if the 12-V battery is disconnected from the vehicle or the fuse blows.

| Press the <b>SET</b> button briefly.  | Next menu on the display         |
|---------------------------------------|----------------------------------|
| Press the <b>MODE</b> button briefly. | Next display mode in the display |

## 7.12 TRIP 1 display



 Press the MODE button briefly and repeatedly until TRIP 1 appears on the display.

**TRIP 1** shows the distance since the last reset, such as between two refueling stops. **TRIP 1** is always running and counts up to **9999.9**.

| Press the <b>SET</b> button | Next menu on the display         |
|-----------------------------|----------------------------------|
| SEI DULLON                  |                                  |
| briefly.                    |                                  |
| Press the                   | Display of TRIP 1 is reset       |
| <b>SET</b> button           |                                  |
| for 3 seconds.              |                                  |
| Press the                   | Next display mode on the display |
| <b>MODE</b> button          |                                  |
| briefly.                    |                                  |
| Differry.                   |                                  |

## 7.13 TRIP 2 display



 Press the MODE button briefly and repeatedly until TRIP 2 appears on the display.

**TRIP 2** shows the distance since the last reset, such as between two refueling stops. **TRIP 2** is always running and counts up to **9999.9**.

| Press the <b>SET</b> button briefly.       | Next menu on the display         |
|--|----------------------------------|
| Press the <b>SET</b> button for 3 seconds. | Display of TRIP 2 is reset       |
| Press the <b>MODE</b> button briefly.      | Next display mode on the display |

### 7.14 riding time/average speed menu



 Press the SET button briefly and repeatedly until the desired menu appears.

The riding time and average speed are displayed in this menu.

| Press the <b>SET</b> button briefly.  | Next menu on the display         |
|---------------------------------------|----------------------------------|
| Press the <b>MODE</b> button briefly. | Next display mode on the display |

## 7.15 average speed/average fuel consumption 1 menu



 Press the SET button briefly and repeatedly until the desired menu appears.

In this menu, the average speed and the average fuel consumption 1 are displayed in L/100 km (or L/100 miles).



#### Info

The average fuel consumption 1 is displayed after several 100 meters of travel after the ignition is switched on.

| Press the <b>SET</b> button briefly.  | Next menu on the display         |
|---------------------------------------|----------------------------------|
| Press the <b>MODE</b> button briefly. | Next display mode on the display |

## 7.16 average fuel consumption 1/average fuel consumption 2 menu



 Press the SET button briefly and repeatedly until the desired menu appears.

In this menu, the average fuel consumption 1 in L/100 km (or L/100 miles) and the average fuel consumption 2 in km/L (or miles/L) are displayed.



#### Info

The average fuel consumptions 1 and 2 are displayed after several 100 meters of travel after the ignition is switched on.

| Press the  | Next menu on the display |
|------------|--------------------------|
| SET button |                          |
| briefly.   |                          |

| Press the   | Next display mode on the display |
|-------------|----------------------------------|
| MODE button |                                  |
| briefly.    |                                  |

## 7.17 average fuel consumption 2/service menu



 Press the SET button briefly and repeatedly until the desired menu appears.

The average fuel consumption 2 in km/L (or miles/L) and the distance to the next service are displayed in this menu.



#### Info

The average fuel consumption 2 is displayed after several 100 meters of travel after the ignition is switched on.

| Press the <b>SET</b> button briefly.  | Next menu on the display         |
|---------------------------------------|----------------------------------|
| Press the <b>MODE</b> button briefly. | Next display mode on the display |

## 7.18 service/range menu



 Press the SET button briefly and repeatedly until the desired menu appears.

This menu shows the distance to the next service and the range.



### Info

The range depends on the average fuel consumption and the fuel quantity in the fuel tank.

The range is displayed after several 100 meters of travel after the ignition is switched on.

| Press the <b>SET</b> button briefly.  | Next menu on the display         |
|---------------------------------------|----------------------------------|
| Press the <b>MODE</b> button briefly. | Next display mode on the display |

## 7.19 range/riding time menu



 Press the SET button briefly and repeatedly until the desired menu appears.

The range and the riding time are displayed in this menu.



#### Info

The range depends on the average fuel consumption and the fuel quantity in the fuel tank.

The range is displayed after several 100 meters of travel after the ignition is switched on.

| Press the <b>SET</b> button briefly.  | Next menu on the display         |
|---------------------------------------|----------------------------------|
| Press the <b>MODE</b> button briefly. | Next display mode on the display |

## 7.20 Setting the kilometers or miles



#### Info

Make the setting according to the country.

If you change the unit, the value **000** is retained and converted accordingly.

## Condition

02005

F01473-01

min

The motorcycle is stationary.

- Press the **MODE** button briefly and repeatedly until **ODO** appears on the display.
- Press the **MODF** button for 5 seconds
  - ✓ The display changes from **km/h** to **mph** or from **mph** to km/h.



### Info

The units can be set on the **0DO** display for each menu by keeping the **MODE** button pressed.



× IOOORPM

× IDDORPM

## 7.21 Setting the clock



#### Info

The time is displayed in 24-hour format.

The time must be reset if the 12-V battery was disconnected from the vehicle or the fuse was removed.



#### Condition

The motorcycle is stationary.

- Press the MODE button briefly and repeatedly until ODO appears on the display.
- Press the **MODE** and **SET** buttons for 5 10 seconds.
  - ✓ The time display begins to flash.




#### Info

The clock can be set in the **0D0** display for each menu by keeping the **M0DE** button and **SET** button pressed simultaneously.

- Set the hours display using the MODE button.
- Set the minutes display using the SET button.
- Press the MODE button and SET button simultaneously.
  - ✓ The set time is adopted and saved.

## 7.22 Adjusting the shift speed RPM1

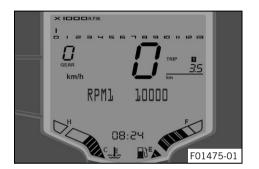

#### Condition

The motorcycle is stationary. 000 > 1,000 km (621 m).

- Press the MODE button briefly and repeatedly until TRIP 1 appears on the display.
- Press the MODE button for 5 seconds.
  - ✓ The RPM1 display appears.



#### Info

The **RPM1** display appears in the **TRIP 1** display for each menu by keeping the **MODE** button pressed. **RPM1** is the engine speed above which the shift warning light starts flashing.

The engine speed can be set at intervals of 50. The shift speed **RPM1** can only be set up to maximum 50 revolutions per minute below the shift speed **RPM2**.

Adjust the speed with the MODE button and SET button.




### Info

The **MODE** button increases the value. The **SET** button decreases the value.

Press the MODE button and SET button simultaneously.

✓ The RPM1 display disappears and the set shift speed RPM1 is adopted and saved.

### 7.23 Adjusting the shift speed RPM2

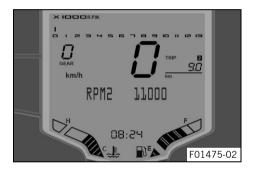

#### Condition

The motorcycle is stationary. **QDO** > 1.000 km (621 m).

- Press the MODE button briefly and repeatedly until TRIP 2 appears on the display.
- Press the MODE button for 5 seconds.
  - ✓ The RPM2 display appears.



#### Info

The **RPM2** display appears in the **TRIP 2** display for each menu by keeping the **MODE** button pressed. **RPM2** is the engine speed above which the shift warning light lights up.

The engine speed can be set at intervals of 50. The shift speed **RPM2** can only be set from a minimum of 50 revolutions per minute above the shift speed **RPM1**.

Adjust the speed with the MODE button and SET button.



### Info

The **MODE** button increases the value. The **SET** button decreases the value.

- Press the **MODE** button and **SET** button simultaneously.
  - ✓ The RPM2 display disappears and the set shift speed RPM2 is adopted and saved.

## 8 PREPARING FOR USE

## 8.1 Advice on preparing for first use



### **Danger**

Danger of accidents A rider who is not fit to ride poses a danger to him or herself and others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs or medication.
- Do not operate the vehicle if you are physically or mentally impaired.



### Warning

**Risk of injury** Missing or poor protective clothing presents an increased safety risk.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as trousers and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



### Warning

**Danger of crashing** Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

- Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



## Warning

**Danger of accidents** Non-approved or non-recommended tires and wheels impact the handling characteristic.

- Only use tires/wheels approved by KTM with the corresponding speed index.

### Warning

**Danger of accidents** New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

Run in new tires with moderate riding at alternating angles.
 Running-in phase
 200 km (124 mi)



#### Info

When using the vehicle, remember that others may feel disturbed by excessive noise.

- Ensure that the pre-sales inspection work has been carried out by an authorized KTM workshop.
- ✓ The delivery certificate and the Service and Manufacturer Warranty booklet must be transferred with the vehicle.
- Read the entire Owner's Manual before riding for the first time.
- Get to know the controls.
- Get used to the handling characteristic of the motorcycle on suitable terrain before undertaking a more challenging ride. Also, ride as slowly as possible to get a better feeling for the motorcycle.
- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.

4

## 8.2 Running in the engine

During the running-in phase, do not exceed the specified engine speed.

#### Guideline

Maximum engine speed

During the first: 1,000 km (620 mi) 7,500 rpm



#### Info

During the running-in phase, the shift warning light is set to a specified value and cannot be changed.

Avoid fully opening the throttle!

## 8.3 Loading the vehicle



### Warning

Danger of accidents Total weight and axle loads influence the handling characteristic.

The total weight consists of: motorcycle ready for operation and with a full tank, driver and passenger with protective clothing and helmet, and luggage.

Do not exceed the maximum permissible overall weight or the axle loads.



## Warning

**Danger of accidents** Improper mounting of cases or the tank rucksack impairs the handling characteristic.

Mount and secure cases and tank rucksack according to the manufacturer's instructions.



## Warning

Danger of accidents The luggage system will be damaged if it is overloaded.

- Read the manufacturer information on maximum payload when mounting cases.



### Warning

Danger of accidents Luggage which has slipped impairs visibility.

If the tail light is covered, you are less visible to traffic behind you, especially when it is dark.

Check that your luggage is fixed properly at regular intervals.



## Warning

**Danger of accidents** A high payload alters the handling characteristic and increases the stopping distance.

Adapt your speed to your payload.



## Warning

**Danger of accidents** Pieces of luggage which have slipped impair the handling characteristic.

- Check that your luggage is fixed properly at regular intervals.

# 8 PREPARING FOR USE

- If luggage is carried, ensure it is fixed firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.
- Do not exceed maximum permissible weight and maximum permissible axle loads.
   Guideline


| Maximum permissible overall weight  | 335 kg (739 lb.) |
|-------------------------------------|------------------|
| Maximum permissible front axle load | 125 kg (276 lb.) |
| Maximum permissible rear axle load  | 210 kg (463 lb.) |

## 9.1 Checks and maintenance measures when preparing for use



#### Info

Before every trip, check the condition of the vehicle and ensure that it is roadworthy. The vehicle must be in perfect technical condition when it is being operated.

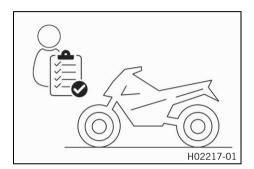

- Check the engine oil level. (
   p. 202)
- Check the front brake fluid level. (
   p. 122)
- Check the rear brake fluid level. ( p. 127)
- Check the rear brake linings. (🕮 p. 132)
- Check that the brake system is functioning properly.

- Check tire pressure. ( p. 155)
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check that the electrical system is functioning properly.
- Check that luggage is properly secured.
- Sit on the motorcycle and check the rear mirror setting.
- Check the fuel level.

## 9.2 Starting



## **Danger**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.



### Caution

**Danger of accidents** Electronic components and safety devices will be damaged if the 12-V battery is discharged or missing.

- Never operate the vehicle with a discharged 12-V battery or without a 12-V battery.

#### Note

**Engine damage** Unfiltered intake air has a negative effect on the service life of the engine.

Dust and dirt will enter the engine without an air filter.


Never start to use the vehicle without an air filter.

#### Note

Engine damage High revving speed with a cold engine negatively impacts the lifespan of the engine.

Always run the engine warm at a low speed.



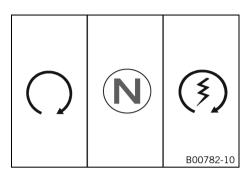

- Unlock the steering. (
   p. 32)
- Sit on the vehicle, take the weight off of the side stand, and move it all the way up with your foot.
- Turn the emergency OFF switch to the position ○.
- Switch on the ignition by turning the ignition key to the position ○.
  - ✓ After you switch on the ignition, you can hear the fuel pump working for about two seconds. The function check of the combination instrument is run at the same time.
- Shift the transmission to neutral position.
  - ✓ The green idle indicator lamp N lights up.

### (200 Duke BR)

- ✓ The <u>ABS</u> warning lamp lights up and goes back out after starting off.
- Press start button ③.



#### Info

Do not press the electric starter button until the combination instrument function check is finished.

Do not open the throttle to start.

Press the starter for a maximum of 5 seconds. Wait for a least 5 seconds before trying again.

This motorcycle is equipped with a safety starting system. You can only start the engine if the transmission is in neutral or if the clutch lever is pulled when a gear is engaged. If the side stand is folded out and you shift into gear and release the clutch lever, the engine stops.

\_

## 9.3 Starting off

 Pull the clutch lever, engage 1st gear, release the clutch lever slowly, and simultaneously open the throttle carefully.



#### Tip

If the engine dies while starting off, only pull the clutch lever and press the electric starter button. You do not need to shift into neutral.

•

## 9.4 Shifting, riding.



## Warning

**Danger of accidents** Abrupt load alterations can cause the vehicle to get out of control.

- Avoid abrupt load alterations and sudden braking actions.
- Adapt your speed to the road conditions.



## Warning

**Danger of accidents** If you change down at high engine speed, the rear wheel blocks and the engine races.

- Do not change into a low gear at high engine speed.



## Warning

**Danger of accidents** An incorrect ignition key position causes malfunctions.

- Do not change the ignition key position while driving.



### Warning

Danger of accidents Adjustments to the vehicle distract attention from traffic activity.

Make all adjustments when the vehicle is at a standstill.



## Warning

Risk of injury The passenger may fall from the motorcycle if they conduct themselves incorrectly.

- Ensure that the passenger sits correctly on the passenger seat, places his or her feet on the passenger foot pegs and holds on to the rider or the grab handles.
- Note the regulations governing the minimum age of passengers in your country.



## Warning

**Danger of accidents** A risky riding style constitutes a major risk.

 Comply with traffic regulations and ride defensively and with foresight to detect sources of danger as early as possible.



## Warning

**Danger of accidents** Cold tires have reduced road grip.

 Ride the first miles carefully on every journey at moderate speed until the tires reach operating temperature.



## Warning

**Danger of accidents** New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

Run in new tires with moderate riding at alternating angles.
 Running-in phase
 200 km (124 mi)



### Warning

**Danger of accidents** Pieces of luggage which have slipped impair the handling characteristic.

Check that your luggage is fixed properly at regular intervals.



## Warning

Danger of accidents A fall can damage the vehicle more seriously than it may first appear.

- Check the vehicle after a fall as you do when preparing for use.

### Note


**Engine failure** Overheating damages the engine.

- If the coolant temperature warning is displayed, stop immediately and take care not to endanger yourself or other traffic participants in the process.
- Allow the engine and cooling system to cool down.
- Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.



#### Info

If unusual noises occur while riding, stop immediately (taking care not to endanger yourself or other road users in the process), switch off the engine and contact an authorized KTM workshop.

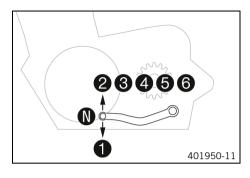

- Shift into a higher gear when conditions allow (incline, road situation, etc.).
- Release throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever, and open the throttle.



#### Info

The gear positions can be seen in the figure. The neutral or idle position is between the first and second gears. First gear is used for starting off and for steep inclines.

The operating temperature is reached when 4 bars of the temperature indicator light up.

- Only open the throttle as much as the engine can handle –
  abrupt throttle grip opening increases fuel consumption.
   Accelerate only up to a speed suitable for the road surface and weather conditions. Particularly in bends, do not shift, and accelerate very carefully.
- Brake if necessary and close the throttle at the same time in order to shift down.
- Pull clutch lever and shift into a lower gear, release the clutch lever slowly, and open the throttle or shift again.
- Switch off the engine if you are likely to be running at idle speed or stationary for a long time.

If the malfunction indicator lamp 
 ights up during a trip, stop immediately (taking care not to endanger yourself or other road users in the process), switch off the engine, and contact an authorized KTM workshop.

4

## 9.5 Applying the brakes



## Warning

**Danger of accidents** Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.



## Warning

Danger of accidents A spongy pressure point on the front or rear brake reduces braking efficiency.

 Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



## Warning

**Danger of accidents** The brake system fails in the event of overheating.

If the foot brake lever is not released, the brake linings drag continuously.

Take your foot off the foot brake lever when you are not braking.



## Warning

Danger of accidents Higher total weight increases the stopping distance.

- Take the longer stopping distance into account when carrying a passenger or luggage with you.



## Warning

**Danger of accidents** Salt on the roads impairs the brake system.

Brake carefully several times to remove salt from the brake linings and the brake discs.

#### (200 Duke EU/AR, ASEAN/CO/MY/PH)



## Warning

**Danger of accidents** Excessively forceful application of the brakes blocks the wheels.

Adjust application of the brakes to the respective riding situation and riding surface conditions.



### Warning

**Danger of accidents** The rear wheel can lock due to the engine braking effect.

 Pull in the clutch, if you perform emergency or full braking, or if you brake on a slippery ground.



## Warning

**Danger of accidents** Banked or laterally sloping ground reduces the maximum possible delay.

- If possible finish braking before going into a bend.
- When braking, release the throttle and apply the front and rear brakes at the same time.

9

- On sandy, wet, or slippery surfaces, use the rear brake.
- Shift down to a lower gear appropriate to your speed.
- Use the braking effect of the engine on long downhill stretches. Shift back one or two gears, but do not
  overrev the engine when doing so. This means that significantly less braking is required and the brake system does not overheat.

### (200 Duke BR)



### **Warning**

**Danger of accidents** ABS may increase the stopping distance in certain situations.

Adjust application of the brakes to the respective riding situation and riding surface conditions.



## **Warning**

Danger of accidents The rear wheel can lock due to the engine braking effect.

 Pull in the clutch, if you perform emergency or full braking, or if you brake on a slippery ground.



### Warning

**Danger of accidents** Braking with excessive force locks the rear wheel.

The ABS only controls the front wheel.

- Dose the rear brake carefully according to the driving situation.
- When braking, release the throttle and apply the front and rear brakes at the same time.



#### Info

When the <u>ABS</u> is enabled, the full braking force of the front brake can be applied even on surfaces with low road grip, such as sandy, wet, or slippery terrain, without locking the front wheel.



## Warning

**Danger of accidents** Banked or laterally sloping ground reduces the maximum possible delay.

- If possible finish braking before going into a bend.
- Shift down to a lower gear appropriate to your speed.
- Use the braking effect of the engine on long downhill stretches. Shift back one or two gears, but do not
  overrev the engine when doing so. This means that significantly less braking is required and the brake system does not overheat.

## 9.6 Stopping, parking



## Warning

**Risk of injury** People who act without authorization endanger themselves and others.

- Do not leave the vehicle unattended if the engine is running.
- Protect the vehicle against access by unauthorized persons.
- Lock the steering and remove the ignition key if you leave the vehicle unattended.



## Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, shock absorber, or brake system before the vehicle parts have cooled down.
- Let the vehicle parts cool down before you perform any work on the vehicle.

#### Note

**Material damage** The vehicle may be damaged by incorrect procedure when parking.

Significant damage may be caused if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Ensure that nobody sits on the vehicle when the vehicle is parked on a stand.

#### Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.
- Apply the brakes on the motorcycle.
- Shift the transmission to neutral position.
- Switch off the ignition by turning the ignition key to the position ⋈.



#### Info

If the engine is switched off with the emergency OFF switch and the ignition remains switched on at the ignition lock, power continues to flow to most power consumers and the 12-V battery will discharge. You should therefore always switch off the engine with the ignition lock – the emergency OFF switch is intended for emergencies only.

- Park the motorcycle on a firm surface.
- Swing the side stand forward with your foot as far as it will go and lean the vehicle on it.
- Lock the steering. (
   p. 31)

9.7 Transport

#### Note


Danger of damage The parked vehicle can roll away or fall over.

Park the vehicle on a firm and level surface.

#### Note

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near to materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

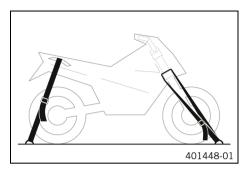

- Switch off the engine and remove the ignition key.
- Use tension belts or other suitable devices to secure the motorcycle against accidents or falling over.

## 9.8 Refueling



## **Danger**

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames or lit cigarettes.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it off immediately.
- Observe the specifications for refueling.



## Warning

**Danger of poisoning** Fuel is poisonous and a health hazard.

- Avoid skin, eye and clothing contact with fuel.
- Immediately consult a doctor if you swallow fuel.
- Do not inhale fuel vapors.
- In case of skin contact, rinse the affected area with plenty of water.
- Rinse the eyes thoroughly with water, and consult a doctor in case of fuel contact with the eyes.
- Change your clothing in case of fuel spills on them.

#### Note

Material damage Inadequate fuel quality causes the fuel filter to quickly become clogged.

In some countries and regions, the available fuel quality and cleanliness may not be sufficient. This will result in problems with the fuel system.

 Refuel only with clean fuel that meets the specified standards. (Your authorized KTM workshop will be glad to help.)



#### Note

**Environmental hazard** Improper handling of fuel is a danger to the environment.

Do not allow fuel to enter the groundwater, the soil, or the sewage system.



- Switch off the engine.
- Open the fuel tank filler cap. (
  p. 32)
- Fill the fuel tank with fuel up to the lower edge 1 of the fuel filler.

| Total fuel tank capacity, approx. | 11 l<br>(2.9 US gal) | Super unleaded<br>(ROZ 95/RON<br>95/PON 91)<br>(ID p. 241)<br>(200 Duke EU/AR,<br>ASEAN/CO/MY/PH) |
|-----------------------------------|----------------------|---|
| Total fuel tank capacity, approx. |                      | Super unleaded,<br>type C (ROZ<br>95/RON 95/PON<br>91) ( p. 242)<br>(200 Duke BR)                 |

Close the fuel tank filler cap. ( p. 34)

## 10 SERVICE SCHEDULE

## 10.1 Additional information

Any further work that results from the compulsory work or from the recommended work must be ordered separately and invoiced separately.

Different service intervals may apply in your country, depending on the local operating conditions.

Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule can always be found on KTM Dealer.net. Your authorized KTM dealer will be happy to advise you.

## 10.2 Required work

| every 24 months  |       |      |     |   | nths |
|--|-------|------|-----|---|------|
| every 12 months  |       |      |     |   |      |
| every 15,000 k   | (m (9 | ,300 | mi) |   |      |
| every 7,500 km (4  | ,650  | mi)  |     |   |      |
| after 1,000 km (620  | mi)   |      |     |   |      |
| Read out the fault memory using the KTM diagnostics tool.                | 0     | •    | •   | • | •    |
| Check that the electrical system is functioning properly.                | 0     | •    | •   | • | •    |
| Change the engine oil and oil filter, clean the oil screen. ◀ (ᆗ p. 203) | 0     | •    | •   | • | •    |
| Check the brake discs. (🕮 p. 121)  | 0     | •    | •   | • | •    |
| Check the front brake linings. (🕮 p. 126)                                | 0     | •    | •   | • | •    |
| Check the rear brake linings. (🕮 p. 132)                                 | 0     | •    | •   | • | •    |
| Check the brake lines for damage and leakage. 🔏                          | 0     | •    | •   | • | •    |
| Check the front brake fluid level. ( p. 122)                             | 0     | •    | •   | • |      |

| every 24 months   |       |      |     |   | ıths |
|---|-------|------|-----|---|------|
| every 12 months   |       |      |     |   |      |
| every 15,000  | km (9 | ,300 | mi) |   |      |
| every 7,500 km (4   |       | mi)  |     |   |      |
| after 1,000 km (620   | ) mi) |      |     |   |      |
| Check the rear brake fluid level. (🕮 p. 127)  | 0     | •    | •   | • |      |
| Check the tire condition. ( p. 153)   | 0     | •    | •   | • | •    |
| Check tire pressure. ( p. 155)  | 0     | •    | •   | • | •    |
| Check the shock absorber and fork for leaks   | 0     | •    | •   | • | •    |
| Clean the dust boots of the fork legs. ( p. 101)  |       | •    | •   |   |      |
| Check the chain, rear sprocket, and engine sprocket. (🕮 p. 114)   |       | •    | •   | • | •    |
| Check the chain tension. (🕮 p. 109)   | 0     | •    | •   | • | •    |
| Check the coolant level. ( p. 185)  | 0     | •    | •   | • | •    |
| Check that the radiator fan is functioning properly.  | 0     | •    | •   | • | •    |
| Change the air filter, clean the air filter box. ◀  |       | •    | •   |   |      |
| Check that the throttle cables are undamaged, routed without sharp bends, and set correctly. $\blacktriangleleft$ | 0     | •    | •   | • | •    |
| Check the cables for damage and routing without sharp bends. ◂  | 0     | •    | •   | • | •    |
| Check the valve clearance, change the spark plug. ◀   |       |      | •   |   |      |
| Change the front brake fluid.   |       |      |     |   | •    |
| Change the rear brake fluid. 🔏  |       |      |     |   | •    |
| Check the steering head bearing play.   | 0     | •    | •   | • | •    |

# 10 SERVICE SCHEDULE

|   |                    | eve    | ry 24 | l mon | ths |
|---|--------------------|--------|-------|-------|-----|
|   | eve                | ery 12 | om S  | ıths  |     |
|   | every 15,000 km (9 | ,300   | mi)   |       |     |
| evel  | ry 7,500 km (4,650 | mi)    |       |       |     |
| after 1   | 1,000 km (620 mi)  |        |       |       |     |
| Check the headlight setting. (@ p. 178)                                     | 0                  | •      | •     |       |     |
| Final check: Check the vehicle is roadworthy and take a test ride. •        | 0                  | •      | •     | •     | •   |
| Read out the error memory after the test ride using the KTM diagnostics too | l. <b>4</b>        | •      | •     | •     | •   |
| Reset the service interval display. •                                       | 0                  | •      | •     | •     | •   |
| Make a service entry in <b>KTM Dealer.net</b> . <b>▲</b>                    | 0                  | •      | •     | •     | •   |

- One-time interval
- Periodic interval

## 10.3 Recommended work

| every 48 month              |     |       |       | nths |  |
|-----------------------------|-----|-------|-------|------|--|
|                             | eve | ry 12 | 2 mor | ıths |  |
| every 30,000 km (18,600 mi) |     |       |       |      |  |
| every 7,500 km (4,650 mi)   |     |       |       |      |  |
| after 1,000 km (620         | mi) |       |       |      |  |
| Check the frame.            |     |       | •     |      |  |
| Check the link fork.        |     |       | •     |      |  |

| every 48 month  |       |      | ıths |      |   |
|---|-------|------|------|------|---|
| every 12 mont   |       |      |      | nths |   |
| every 30,000 k  | m (18 | ,600 | mi)  |      |   |
| every 7,500 km (  | 4,650 | mi)  |      |      |   |
| after 1,000 km (62  | 0 mi) |      |      |      |   |
| Check the fork bearing for play. ◀  |       | •    | •    |      |   |
| Check the wheel bearing for play. ◀   |       | •    | •    |      |   |
| Check the antifreeze.   | 0     | •    | •    | •    |   |
| Change the coolant. ( p. 194)   |       |      |      |      | • |
| Empty the drainage hoses.   | 0     | •    | •    | •    | • |
| Check all hoses (e.g. fuel, coolant, bleeder, drainage, etc.) and sleeves for cracking, leaks, and incorrect routing. ◀ | 0     | •    | •    | •    | • |
| Grease all moving parts (e.g., side stand, hand lever, chain,) and check for smooth operation. ◀                        | 0     | •    | •    | •    | • |
| Check the tightness of the safety-relevant screws and nuts which are easily accessible. ▲                               | 0     | •    | •    | •    | • |

- One-time interval
- Periodic interval

## 11 TUNING THE CHASSIS

## 11.1 Adjusting the spring preload of the shock absorber 4



## Warning

**Danger of accidents** Modifications to the suspension setting may seriously alter the handling characteristic.

- Ride slowly to start with after making adjustments to get the feel of the new handling characteristic.



#### Info

The spring preload defines the initial status of the spring operation on the shock absorber.

The best spring preload setting is achieved when it is set for the weight of the rider and that of any luggage and a passenger, thus ensuring an ideal compromise between handling and stability.



 Set the spring pretension by turning adjusting ring using the hook wrench from the tool set.

#### Guideline

| Spring preload |          |
|----------------|----------|
| Standard       | 3 clicks |
| Full payload   | 6 clicks |

| Hook wrench, shock absorber (90529077000) |
|---|
| Extension for hook wrench (90129099025)   |

## Info

The spring preload can be set to 10 different positions.

4


## 11.2 Adjusting the shift lever



## Info

The adjustment range of the shift lever is limited.

## 11 TUNING THE CHASSIS

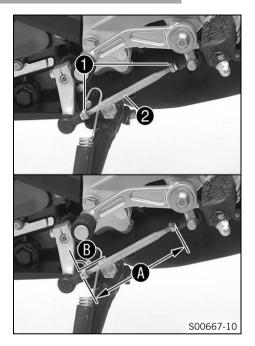

- Loosen nuts 1.
- Adjust the shift lever by turning shift rod 2.

#### Guideline

| Shift rod adjustment | 110 122 mm (4.33 |  |  |
|----------------------|------------------|--|--|
| range (A)            | 4.8 in)          |  |  |



#### Info

Make the same adjustments on both sides. At least five screw threads must be screwed into the seating.

Check adjusting angle **B**.

#### Guideline

| Adjusting angle <b>B</b> shift rod | 90° |
|------------------------------------|-----|
| - bell crank - shift lever         |     |

- Tighten nuts 🕦.



#### Info

After the nuts have been tightened, the bearings of the shift rod must be central and aligned identically to each other in order to ensure freedom of movement in the bearing shells.

 Check the shift lever to ensure it is functioning properly and can move freely.


•

## 12.1 Raising the motorcycle with rear lifting gear

#### Note

**Danger of damage** The parked vehicle can roll away or fall over.

Park the vehicle on a firm and level surface.

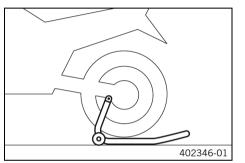

- Mount the supports of the lifting gear.
- Insert the adapter in the rear lifting gear.

Retaining adapter (61029955244)

Rear wheel work stand (69329955000)


 Stand the motorcycle upright, align the lifting gear to the link fork and the adapters, and raise the motorcycle.

## 12.2 Removing the rear of the motorcycle from the lifting gear

#### Note

Danger of damage The parked vehicle can roll away or fall over.

Park the vehicle on a firm and level surface.

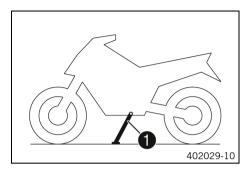

- Secure the motorcycle against falling over.
- Remove the rear lifting gear and lean the vehicle on side stand 1.
- Remove bushings kit.


## 12.3 Lifting the motorcycle with the front lifting gear

#### Note

**Danger of damage** The parked vehicle can roll away or fall over.


Park the vehicle on a firm and level surface.

### **Preparatory work**

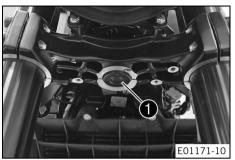

### Condition

Remove protection cap 1.

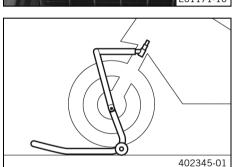

Move the handlebar to the straight-ahead position. Position the lifting gear.

Mounting pin (69329965030)

Front wheel work stand, large (69329965100)



### Info

Always raise the motorcycle at the rear first.


Lift the motorcycle at the front.

## 12.4 Taking the motorcycle off the front lifting gear

### Note

Danger of damage The parked vehicle can roll away or fall over.

Park the vehicle on a firm and level surface.

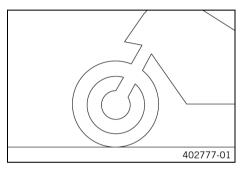

#### Main work

- Secure the motorcycle against falling over.
- Remove the front lifting gear.



Mount protection cap 1.


### **Finishing work**

Remove the rear of the motorcycle from the lifting gear. (🕮 p. 97)

#### 12.5 Cleaning the dust boots of the fork legs

### **Preparatory work**

- Raise the motorcycle with the rear lifting gear. ( p. 97)
- Lift the motorcycle with the front lifting gear. ( p. 98)

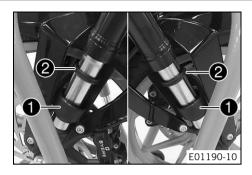

#### Main work

- Push protection caps 1 of both fork legs downward.
- Push dust boots 2 of both fork legs downward.



#### Info

The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.



## Warning

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.
- Clean and oil the dust boots and inner fork tubes of both fork legs.


Universal oil spray ( p. 244)

- Press dust boots 2 of both fork legs back into the installation position.
- Remove the excess oil.
- Push protection caps of both fork legs upward.

## **Finishing work**


- Take the motorcycle off the front lifting gear. ( p. 100)
- Remove the rear of the motorcycle from the lifting gear.
   p. 97)

## 12.6 Removing the passenger seat

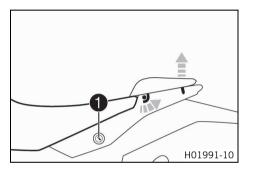

- Insert the ignition key in seat lock 1 and turn it clockwise.
- Raise the rear of the seat, push it towards the rear, and lift it off.
- Remove the ignition key from the seat lock.

## 12.7 Mounting the passenger seat

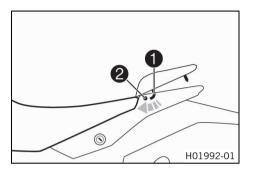

- Attach hooks 1 on the passenger seat to seat mounting 2 on the subframe, and lower it at the rear while pushing forward.
- Press the passenger seat downward until it clicks into place.



## Warning


**Danger of accidents** The seat can come loose from the anchoring if it is not mounted correctly.

- After assembly, check whether the seat is correctly locked and cannot be pulled up.
- Finally, check that the passenger seat is correctly mounted.

•

## 12.8 Removing the front rider's seat


### **Preparatory work**

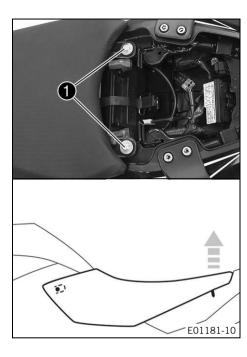

## Main work

- Remove screws 1.
- Raise the rear of the front rider's seat, pull it towards the rear, and remove it upwards.

## 12.9 Mounting the front rider's seat

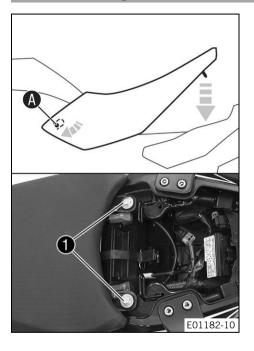

## Main work


- Attach the front rider's seat in area  $oldsymbol{A}$  and lower at the rear.
- Mount and tighten screws 1.
   Guideline

| Screw, seat | M6 | 10 Nm (7.4 lbf ft) |
|-------------|----|--------------------|

Finally, check that the front rider's seat is correctly mounted.

## **Finishing work**

## 12.10 Checking for chain dirt accumulation

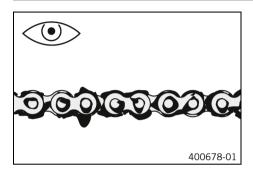

- Check the chain for coarse dirt accumulation.
  - » If the chain is very dirty:
    - Clean the chain. ( p. 107)

## 12.11 Cleaning the chain



## Warning

**Danger of accidents** Lubricants on the tires reduces the road grip.

- Remove lubricants from the tires using a suitable cleaning agent.



## Warning

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.



#### Note


**Environmental hazard** Hazardous substances cause environmental damage.

 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



#### Info

The service life of the chain depends largely on its maintenance.

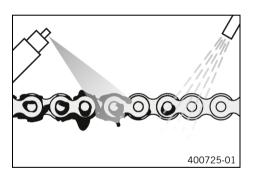

#### Preparatory work

Raise the motorcycle with the rear lifting gear. (

p. 97)

#### Main work

- Clean the chain regularly.
- Rinse off loose dirt with a soft jet of water.
- Remove old grease remains with chain cleaner.

Chain cleaner ( p. 243)

After drying, apply chain spray.

Street chain spray ( p. 244)

#### **Finishing work**

Remove the rear of the motorcycle from the lifting gear.
 p. 97)

## 12.12 Checking the chain tension



### Warning

Danger of accidents 
Incorrect chain tension damages components and results in accidents.


If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.


If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

#### **Preparatory work**

- Raise the motorcycle with the rear lifting gear. ( p. 97)

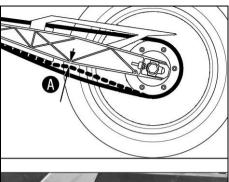

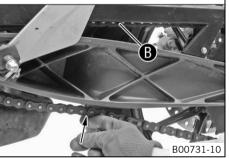

#### Main work

- Shift the transmission to neutral position.
- In the area after the chain sliding guard, press the chain upward toward the link fork and measure chain tension A.



#### Info

Top chain section **B** must be taut. Chain wear is not always even, so you should repeat this measurement at different chain positions.

Chain tension 5 ... 7 mm (0.2 ... 0.28 in)

- » If the chain tension does not meet the specification:
- Remove the rear of the motorcycle from the lifting gear.
   p. 97)

## 12.13 Adjusting the chain tension



## Warning

Danger of accidents 
Incorrect chain tension damages components and results in accidents.


If the chain is tensioned too much, the chain, engine sprocket, rear sprocket, transmission and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the engine sprocket or the rear sprocket. As a result, the rear wheel locks or the engine will be damaged.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

#### **Preparatory work**

- Raise the motorcycle with the rear lifting gear. (🕮 p. 97)
- Check the chain tension. (
   p. 109)

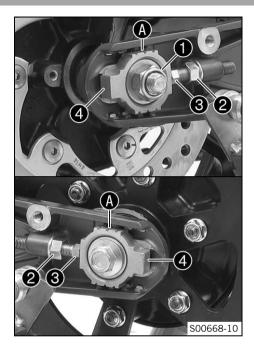

### Main work (200 Duke EU/AR, ASEAN/CO/MY/PH)

- Loosen nut 1.
- Loosen nuts 2.
- Adjust the chain tension by turning adjusting screws 3
  left and right.

#### Guideline

| Chain tension   | 5 7 mm (0.2 |  |
|---|-------------|--|
|   | 0.28 in)    |  |
| Turn the adjusting screws 3 on the left and right     |             |  |
| so that the markings on the left and right chain      |             |  |
| adjusters 4 are in the same position relative to the  |             |  |
| reference marks (A). The rear wheel is then correctly |             |  |
| aligned.  |             |  |




#### Info

The top chain section must be taut. Chain wear is not always even, so you should check the setting at different chain positions.

- Tighten nuts 2.
- Make sure that chain adjusters 4 are fitted correctly on adjusting screws 6.
- Tighten nut 1.

#### Guideline

| Nut, rear wheel | M14x1.5 | 90 Nm         |
|-----------------|---------|---------------|
| spindle         |         | (66.4 lbf ft) |

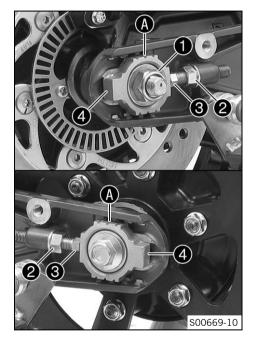

#### (200 Duke BR)

- Loosen nut 1.
- Loosen nuts 2.
- Adjust the chain tension by turning adjusting screws 3
   left and right.

#### Guideline

| Chain tension | 5 7 mm (0.2 |
|---------------|-------------|
|               | 0.28 in)    |

Turn the adjusting screws ③ on the left and right so that the markings on the left and right chain adjusters ④ are in the same position relative to the reference marks ♠. The rear wheel is then correctly aligned.



#### Info

The top chain section must be taut. Chain wear is not always even, so you should check the setting at different chain positions.

- Tighten nuts 2.

- Make sure that chain adjusters 4 are fitted correctly on adjusting screws 3.
- Tighten nut **1**.

Guideline

| Nut, rear wheel | M14x1.5 | 90 Nm         |
|-----------------|---------|---------------|
| spindle         |         | (66.4 lbf ft) |

## **Finishing work**

Remove the rear of the motorcycle from the lifting gear.
 p. 97)

## 12.14 Checking the chain, rear sprocket, and engine sprocket

100132-10

#### Preparatory work

#### Main work


- Check the rear sprocket and engine sprocket for wear.
  - » If the rear sprocket and engine sprocket are worn:
    - Change the drivetrain kit.



#### Info

The engine sprocket, rear sprocket, and chain should always be replaced together.

114

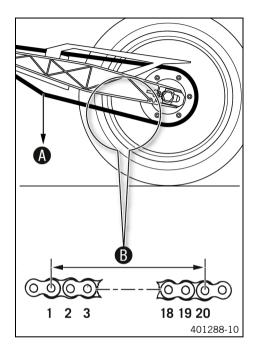

- Shift the transmission to neutral position.
- Pull on the lower chain section with the specified weight A.
   Guideline

| Weight, chain wear measure- | 15 kg (33 lb.) |
|-----------------------------|----------------|
| ment                        |                |



#### Info

Chain wear is not always even, so you should repeat this measurement at different chain positions.


| Maximum distance <b>B</b> from | 301.6 mm (11.874 in) |
|--------------------------------|----------------------|
| 20 chain rollers at the        |                      |
| longest chain section          |                      |

- » If distance **(B)** is greater than the specified measurement:
  - Change the drivetrain kit. 🔌



#### Info

When a new chain is mounted, the rear sprocket and engine sprocket should also be changed. New chains wear out faster on old, worn sprockets.

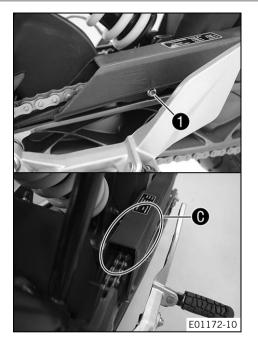


- Check the chain sliding guard for wear.
  - If screw becomes visible in area of the chain sliding guard when viewed from above:
    - Change the chain sliding guard. 🐴
- Check that the chain sliding guard is firmly seated.

### **Finishing work**


Remove the rear of the motorcycle from the lifting gear.
 p. 97)

116

## 12.15 Removing the front spoiler

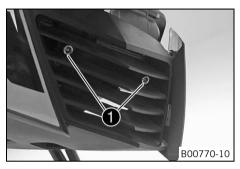


- Remove screws 1.

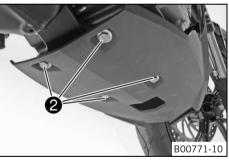


- Remove screws 2.
- Take off the front spoiler.

## 12.16 Fitting front spoiler

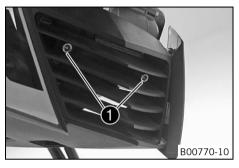

Position the front spoiler. Mount screws but do not tighten yet.

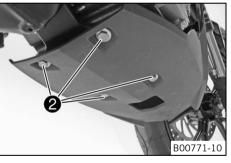


Mount and tighten screws 2.
 Guideline

Screw, front spoiler M6 9 Nm (6.6 lbf ft)


Tighten screw 1.
 Guideline

118

#### 12.17 **Removing front fender**

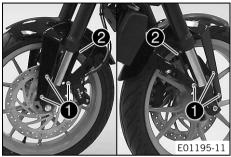



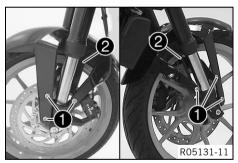


#### (200 Duke EU/AR, ASEAN/CO/MY/PH)


- Remove screws 1.
- Take off the front fender and remove fork protector **2**.

## (200 Duke BR)

- Remove screws 1.
- Take off the front fender and remove fork protector **2**.

## 12.18 Installing the front fender

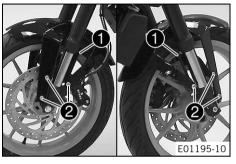

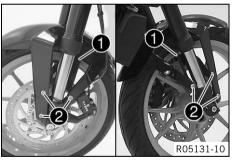

### (200 Duke EU/AR, ASEAN/CO/MY/PH)

- Position fork protector 1 and the front fender.
- Mount and tighten screws 2.
   Guideline

| Screw, front fender | M6 | 11 Nm (8.1 lbf ft) |
|---------------------|----|--------------------|
|---------------------|----|--------------------|

## (200 Duke BR)

- Position fork protector and the front fender.
- Mount and tighten screws 2.
   Guideline

| Screw, front fender | M6 | 11 Nm (8.1 lbf ft) |
|---------------------|----|--------------------|
|---------------------|----|--------------------|

4


## 13.1 Checking the brake discs



### Warning

**Danger of accidents** Worn-out brake discs reduce the braking effect.

 Make sure that worn-out brake discs are replaced immediately. (Your authorized KTM workshop will be glad to help.)

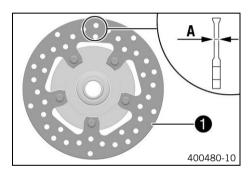

 Check the front and rear brake disc thickness at multiple points for the dimension A.



#### Info

Wear will reduce the thickness of the brake disc at contact surface ① of the brake linings.

| Brake discs - wear limit |                   |  |
|--------------------------|-------------------|--|
| front                    | 4.5 mm (0.177 in) |  |
| rear                     | 3.6 mm (0.142 in) |  |

- » If the brake disc thickness is less than the specified value.
  - Change the front brake disc.
  - Change the rear brake disc.
- Check the front and rear brake discs for damage, cracking, and deformation.

## 13 BRAKE SYSTEM

- If the brake disc exhibits damage, cracking, or deformation:
  - Change the front brake disc. 🔌
  - Change the rear brake disc.

## 13.2 Checking the front brake fluid level



### Warning

**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

 Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



## Warning

**Danger of accidents** Old brake fluid reduces the braking effect.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)

122



- Move the brake reservoir mounted on the handlebar into a horizontal position.
- Check the brake fluid level in the level viewer 1.
  - » If the brake fluid level is below the MIN marking:
    - Add front brake fluid. ◄ (♠ p. 123)

## 13.3 Adding front brake fluid 🔌



## Warning

**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

 Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)

## 13 BRAKE SYSTEM



## Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



### Warning

**Danger of accidents** Old brake fluid reduces the braking effect.

 Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



#### Note

**Environmental hazard** Hazardous substances cause environmental damage.


 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

#### Info

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

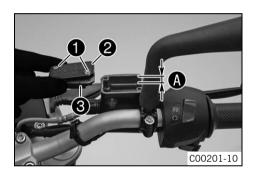

### **Preparatory work**

Check the front brake linings. (
 p. 126)

#### Main work

- Move the brake reservoir mounted on the handlebar into a horizontal position.
- Remove screws 1.
- Take off cover **2** with membrane **3**.
- Add brake fluid to level A.
   Guideline

Dimension (A) 5 mm (0.2 in)

Brake fluid DOT 4 / DOT 5.1 ( p. 239)

Position the cover with the membrane. Mount and tighten the screws.

### Info

Clean up overflowed or spilled brake fluid immediately with water.

13.4 Checking the front brake linings



### Warning

Danger of accidents Worn-out brake linings reduce the braking effect.

 Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)




### Warning

Danger of accidents Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

Check the brake linings regularly.

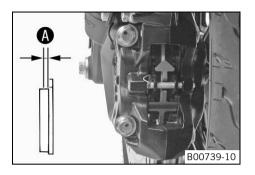

- Check the brake linings for minimum thickness  $\mathbf{A}$ .

Minimum thickness A ≥ 1 mm (≥ 0.04 in)

- If the minimum thickness is less than specified:
  - Change the front brake linings.
- Check the brake linings for damage and cracking.
  - » If there is wear or tearing:
    - Change the front brake linings.

## 13.5 Checking the rear brake fluid level



## Warning

**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

 Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



#### Warning

**Danger of accidents** Old brake fluid reduces the braking effect.

 Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)

## 13 BRAKE SYSTEM



- Stand the vehicle upright.
- Check the brake fluid level in the brake fluid reservoir.
  - » If the fluid level reaches the MIN marking 1:
    - Add rear brake fluid. ◀ (ՀՀՀ p. 128)

## 13.6 Adding rear brake fluid 🔌



## Warning

**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the **MIN** marking, the brake system is leaking or the brake linings are worn down.

 Check the brake system and do not continue riding until the problem is eliminated. (Your authorized KTM workshop will be glad to help.)



### Warning

Skin irritation Brake fluid causes skin irritation.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes or clothing.
- Consult a doctor immediately if brake fluid has been swallowed.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



### Warning

**Danger of accidents** Old brake fluid reduces the braking effect.

 Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule. (Your authorized KTM workshop will be glad to help.)



#### Note

**Environmental hazard** Hazardous substances cause environmental damage.

 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.

## 13 BRAKE SYSTEM




#### Info

Never use DOT 5 brake fluid. It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint.

Only use clean brake fluid from a sealed container.

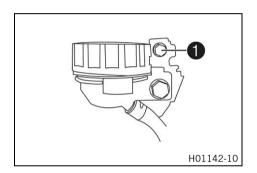


### **Preparatory work**

- Check the rear brake linings. ( p. 132)

#### Main work Condition

The screw cap is locked.

Remove screw and take off the screw cap lock.

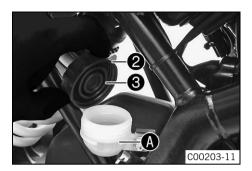

- Stand the vehicle upright.
- Remove screw cap **2** with membrane **3**.
- Add brake fluid up to the marking **A** .


Brake fluid DOT 4 / DOT 5.1 ( p. 239)

Mount the screw cap with the membrane.



#### Info

Clean up the overflowed or spilled brake fluid immediately with water.

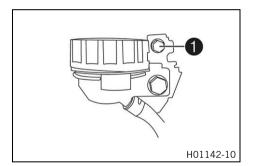

#### Condition

The screw cap is locked.

 Position the screw cap lock and mount and tighten screw 1.

Guideline

| Screw, compensat-  | M5 | 7 Nm (5.2 lbf ft) |
|--------------------|----|-------------------|
| ing tank cap lock, |    |                   |
| rear brake         |    |                   |

#### 13.7 Checking the rear brake linings



## Warning

**Danger of accidents** Worn-out brake linings reduce the braking effect.

Ensure that worn-out brake linings are replaced immediately. (Your authorized KTM workshop will be glad to help.)




## Warning

**Danger of accidents** Damaged brake discs reduce the braking effect.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the braking effect is greatly reduced and the brake discs are destroyed.

Check the brake linings regularly.

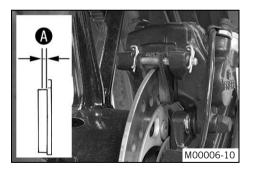

Check the brake linings for minimum thickness **A**.



Minimum thickness A

 $\geq 1 \text{ mm } (\geq 0.04 \text{ in})$ 

- If the minimum thickness is less than specified:
  - Change the rear brake linings.
- Check the brake linings for damage and cracking.
  - If there is wear or tearing:
    - Change the rear brake linings.

## 13.8 Checking the free travel of foot brake lever




## Warning

**Danger of accidents** The brake system fails in the event of overheating.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.

# 13 BRAKE SYSTEM

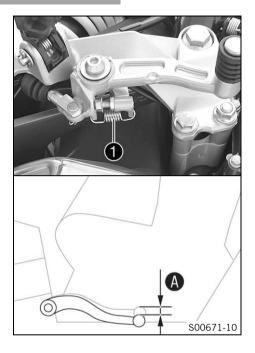

- Disconnect spring 1.
- Move the foot brake lever back and forth between the end stop and the contact to the foot brake cylinder piston and check free travel A.

#### Guideline

Free travel at foot brake lever 3 ... 5 mm (0.12 ... 0.2 in)

- » If the free travel does not meet specifications:
  - Adjust the free travel of the foot brake lever. ⁴
     (♠ p. 135)
- Reconnect spring ①.

134

## 13.9 Adjusting the free travel of the foot brake lever &




## Warning

**Danger of accidents** The brake system fails in the event of overheating.

If there is no free travel on the foot brake lever, pressure builds up in the brake system on the rear brake.

- Set the free travel on the foot brake lever in accordance with the specification.

# 13 BRAKE SYSTEM

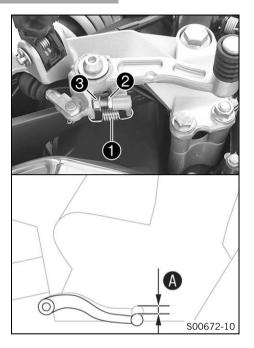

- Detach spring **1**.
- Release nut 2 and use screw 3 to adjust the specified free travel 4.

#### Guideline

Free travel at foot brake lever 3 ... 5 mm (0.12 ... 0.2 in)




### Info

The range of adjustment is limited.

- Hold screw 3 and tighten nut 2.
- Attach spring 1.

•

## 14.1 Removing the front wheel 🔌

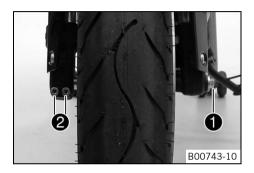

### **Preparatory work**

- Raise the motorcycle with the rear lifting gear. ( p. 97)
- Lift the motorcycle with the front lifting gear. (

  p. 98)

### Main work (200 Duke EU/AR, ASEAN/CO/MY/PH)

- Loosen screw 1 by several rotations.
- Loosen screws 2.
- Press on screw to push the wheel spindle out of the axle clamp.
- Remove screw 1.



## Warning

**Danger of accidents** Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.
- Hold the front wheel and remove the wheel spindle. Take the front wheel out of the fork.

# 14 WHEELS, TIRES



#### Info

Do not actuate the hand brake lever when the front wheel is removed.

#### (200 Duke BR)


- Remove screws 
   and push the fender to the side.
- Remove screw 2 and pull wheel speed sensor 3 out of the hole.
- Loosen screw 4 by several rotations.
- Loosen screws 6.
- Press on screw 4 to push the wheel spindle out of the axle clamp.
- Remove screw 4.



## Warning

**Danger of accidents** Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.
- Hold the front wheel and remove the wheel spindle. Take the front wheel out of the fork.

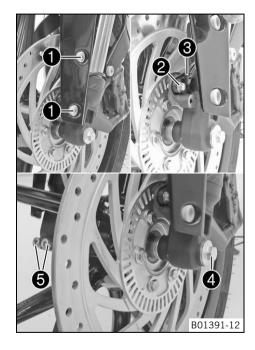

#### Info

Do not actuate the hand brake lever when the front wheel is removed.

## 14.2 Installing the front wheel 🔌




## Warning

Danger of accidents Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.

# 14 WHEELS, TIRES

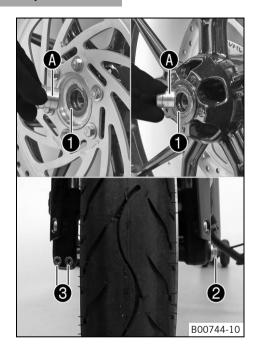

### Main work (200 Duke EU/AR, ASEAN/CO/MY/PH)

- Remove the spacers.
- Check the wheel bearing for damage and wear.
  - » If the wheel bearing is damaged or worn:
    - Change front wheel bearing.
- Clean and grease shaft seal rings 1 and contact surfaces A of the spacers.

- Insert the spacers.
- Clean screw 2 and the wheel spindle.
- Grease wheel spindle lightly.

- Jack up the front wheel into the fork, position it, and insert the wheel spindle.
  - ✓ The brake linings are correctly positioned.
- Mount and tighten screw 2.

#### Guideline

| Screw, front wheel | M8 | 26 Nm         |
|--------------------|----|---------------|
| spindle            |    | (19.2 lbf ft) |

- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.
- Take the motorcycle off the front lifting gear. ( p. 100)
- Remove the rear of the motorcycle from the lifting gear.
   ( p. 97)
- Operate the front brake and compress the fork a few times firmly.
  - ✓ The fork legs straighten.
- Tighten screws **3**.

#### Guideline


| Screw, fork stub | M8 | 15 Nm         |
|------------------|----|---------------|
|                  |    | (11.1 lbf ft) |




- Check the wheel bearing for damage and wear.
  - » If the wheel bearing is damaged or worn:
    - Change front wheel bearing.
- Clean and grease shaft seal rings 1 and contact surfaces A of the spacers.

Long-life grease ( p. 243)

- Insert the spacers.

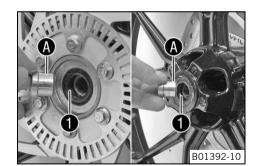

# 14 WHEELS, TIRES

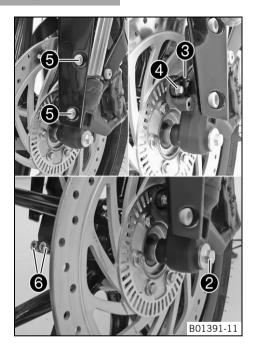

- Clean the thread of the wheel spindle and screw 2.
- Position the front wheel and insert the wheel spindle.
  - ✓ The brake linings are correctly positioned.
- Mount and tighten screw 2.

#### Guideline

| Screw, front wheel | M8 | 26 Nm         |
|--------------------|----|---------------|
| spindle            |    | (19.2 lbf ft) |

- Position wheel speed sensor 3 in the hole.
- Mount and tighten screw 4.
   Guideline

| Screw, wheel speed | M6 | 8 Nm (5.9 lbf ft) |
|--------------------|----|-------------------|
| sensor holder      |    |                   |

- Mount and tighten screws 6.
- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.
- Take the motorcycle off the front lifting gear. ( p. 100)
- Operate the front brake and compress the fork a few times firmly.
  - ✓ The fork legs straighten.
- Tighten screws **6**.

### Guideline

| Screw, fork stub | M8 | 15 Nm         |
|------------------|----|---------------|
|                  |    | (11.1 lbf ft) |

## Finishing work


Remove the rear of the motorcycle from the lifting gear.
 ( p. 97)

# 14.3 Removing rear wheel 🔌

## Preparatory work

- Raise the motorcycle with the rear lifting gear. (🕮 p. 97)

# 14 WHEELS, TIRES

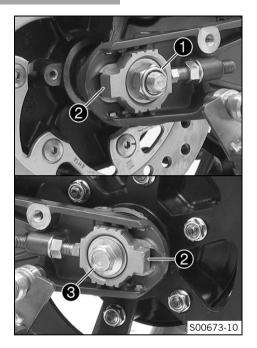

## Main work (200 Duke EU/AR, ASEAN/CO/MY/PH)

- Remove nut 1 and the washer.
  - Remove chain adjuster 2.
- Holding the rear wheel, withdraw wheel spindle **3** with the washer and chain adjuster **2**.
- Push the rear wheel forward as far as possible and take the chain off the rear sprocket.



## Warning


**Danger of accidents** Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.
- Pull the rear wheel back and take it out of the link fork.



### Info

Do not operate the foot brake lever when the rear wheel is removed.

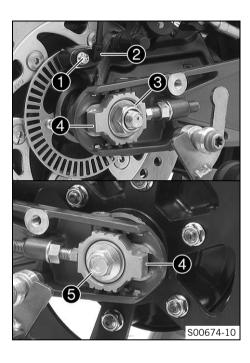

### (200 Duke BR)

- Remove screw and pull wheel speed sensor out of the hole.
- Remove nut 3 and washer.
- Remove chain adjuster 4.
- Holding the rear wheel, withdraw wheel spindle **5** with the washer and chain adjuster **4**.
- Push the rear wheel forward as far as possible and take the chain off the rear sprocket.



## Warning

**Danger of accidents** Damaged brake discs reduce the braking effect.

- Always lay the wheel down in such a way that the brake disc is not damaged.
- Pull the rear wheel back and take it out of the link fork.



### Info

Do not operate the foot brake lever when the rear wheel is removed.

•

# 14 WHEELS, TIRES

# 14.4 Installing the rear wheel 🔌



# Warning

**Danger of accidents** Oil or grease on the brake discs reduces the braking effect.

- Always keep the brake discs free of oil and grease.
- Clean the brake discs with brake cleaner when necessary.




## Warning

**Danger of accidents** There is no braking effect to start with at the rear brake after installing the rear wheel.

- Actuate the foot brake several times before going on a ride until you can feel a firm pressure point.

## Main work (200 Duke EU/AR, ASEAN/CO/MY/PH)

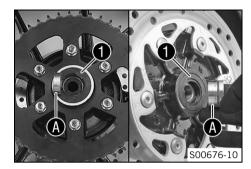

- Remove the spacers.
- Check the wheel bearing for damage and wear.
  - » If the wheel bearing is damaged or worn:
    - Change the rear wheel bearing.
- Clean and grease shaft seal rings 1 and contact surfaces A of the spacers.

```
Long-life grease (🕮 p. 243)
```

- Insert the spacers.
- Clean and grease the thread of the wheel spindle and nut.


```
Long-life grease ( p. 243)
```

- Clean and grease the wheel spindle.

```
Long-life grease ( p. 243)
```

- Clean the contact areas on the brake caliper bracket and link fork.
- Mount the damping rubber and rear sprocket carrier on the rear wheel.
- Position the rear wheel.
  - ✓ The brake linings are correctly positioned.
- Push the rear wheel forward as far as possible and lay chain on the rear sprocket.

# 14 WHEELS, TIRES

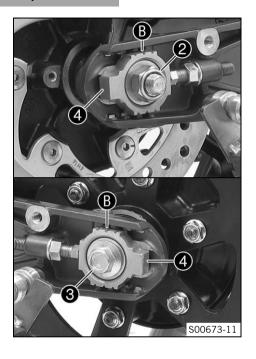

- Pull the rear wheel back and mount wheel spindle **3** with washer and chain adjuster **4**.

### Guideline

Mount left and right chain adjusters **4** in the same position.

- Mount nut 2 and the washer.
- Ensure that the chain adjusters lie flat on the screws and tighten nut 2.


#### Guideline

In order for the rear wheel to be correctly aligned, the markings on the left and right chain adjusters must be in the same position relative to reference markings **B**.

| Nut, rear wheel | M14x1.5 | 90 Nm         |
|-----------------|---------|---------------|
| spindle         |         | (66.4 lbf ft) |

### (200 Duke BR)

- Check the rear hub damping rubber pieces. 🔌 🕮 p. 151)

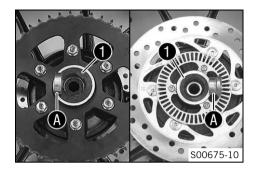

- Check the wheel bearing for damage and wear.
  - » If the wheel bearing is damaged or worn:
    - Change the rear wheel bearing.
- Clean and grease shaft seal rings 1 and contact surfaces **A** of the spacers.

Long-life grease ( p. 243)

Clean and grease the thread of the wheel spindle and nut.


Long-life grease ( p. 243)

Clean and grease the wheel spindle.

Long-life grease ( p. 243)

- Clean the contact areas on the brake caliper bracket and link fork.
- Mount the damping rubber and rear sprocket carrier on the rear wheel.
- Position the rear wheel.
  - ✓ The brake linings are correctly positioned.
- Push the rear wheel forward as far as possible and lay chain on the rear sprocket.

# 14 WHEELS, TIRES

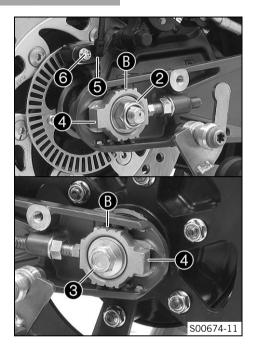

- Pull the rear wheel back and mount wheel spindle **3** with washer and chain adjuster **4**.

### Guideline

Mount left and right chain adjusters **4** in the same position.

- Mount nut 2 and the washer.
- Push the rear wheel forward so that the chain adjusters are in contact with the screws, and tighten nut 2.
   Guideline

In order for the rear wheel to be correctly aligned, the markings on the left and right chain adjusters must be in the same position relative to reference markings **B**.

| Nut, rear wheel | M14x1.5 | 90 Nm         |
|-----------------|---------|---------------|
| spindle         |         | (66.4 lbf ft) |

- Position wheel speed sensor 5 in the hole.
- Mount and tighten screw 6.
   Guideline

| Screw, wheel speed | M6 | 8 Nm (5.9 lbf ft) |
|--------------------|----|-------------------|
| sensor holder      |    |                   |

## **Finishing work**

Remove the rear of the motorcycle from the lifting gear.
 p. 97)

# 14.5 Checking rear hub damping rubber pieces 🔌



#### Info


The engine power is transmitted from the rear sprocket to the rear wheel via the 6 damping rubber pieces. They eventually wear out during operation. If the damping rubber pieces are not changed in time, the rear sprocket carrier and the rear hub will be damaged.



- Raise the motorcycle with the rear lifting gear. ( p. 97)
- Remove the rear wheel. 🔌 (🕮 p. 143)



- Check bearing 🕦.
  - » If the bearing is damaged or worn:
    - Change the rear wheel bearing.
- Check damping rubber pieces 2 of the rear hub for damage and wear.
  - » If the damping rubber pieces of the rear hub are damaged or worn:
    - Change all the damping rubber pieces of the rear hub.

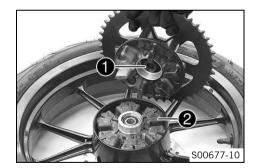

# 14 WHEELS, TIRES



- Lay the rear wheel on a workbench with the rear sprocket facing upward and insert the wheel spindle in the hub.
- To check play (A), hold the rear wheel tight and try to rotate the rear sprocket.



### Info

Measure the play on the outside of the rear sprocket.

| Play of damping rubber | ≤ 5 mm (≤ 0.2 in) |
|------------------------|-------------------|
| pieces on rear wheel   |                   |

- If clearance **(A)** is larger than the specified value:
  - Change all the damping rubber pieces of the rear hub.

### **Finishing work**

- Install the rear wheel. 🔌 (🕮 p. 146)
- Remove the rear of the motorcycle from the lifting gear.
   ( p. 97)
- Check the chain tension. ( p. 109)

## 14.6 Checking the tire condition



## Warning

**Danger of accidents** If a tire bursts while riding, the vehicle becomes uncontrollable.

- Ensure that damaged or worn tires are replaced immediately. (Your authorized KTM workshop will be glad to help.)



## Warning

**Danger of crashing** Different tire tread patterns on the front and rear wheel impair the handling characteristic.

Different tire tread patterns can make the vehicle significantly more difficult to control.

Make sure that only tires with a similar tire tread pattern are fitted to the front and rear wheel.



## Warning

**Danger of accidents** Non-approved or non-recommended tires and wheels impact the handling characteristic.

- Only use tires/wheels approved by KTM with the corresponding speed index.





### Info

The type, condition, and pressure of the tires all have a major impact on the handling characteristic of the motorcycle.

Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

# 14 WHEELS, TIRES

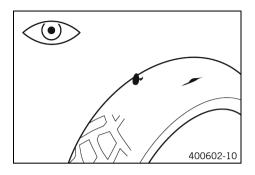

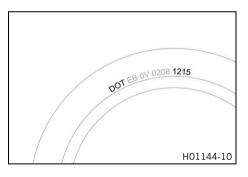

- Check the front and rear tires for cuts, run-in objects, and other damage.
  - » If the tires have cuts, run-in objects, or other damage:
    - Change the tires.
- Check the tread depth.



### Info

Observe the minimum tread depth required by national law.

| Minimum tread depth | ≥ 2 mm (≥ 0.08 in) |
|---------------------|--------------------|

- » If the tread depth is less than the minimum tread depth:
  - Change the tires.
- Check the tire age.



### Info

The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the **DOT** number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.

KTM recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.


- » If the tires are more than 5 years old:
  - Change the tires.

# 14.7 Checking tire pressure



### Info

Low tire pressure leads to abnormal wear and overheating of the tire. Correct tire pressure ensures optimal riding comfort and maximum tire service life.

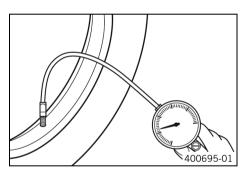

- Remove the protection cap.
- Check the tire pressure when the tires are cold.

| Tire pressure when solo |                  |  |
|-------------------------|------------------|--|
| front                   | 2.0 bar (29 psi) |  |
| rear                    | 2.0 bar (29 psi) |  |

| Tire pressure with passenger / full payload |                  |  |
|---|------------------|--|
| front                                       | 2.0 bar (29 psi) |  |
| rear  | 2.2 bar (32 psi) |  |

- » If the tire pressure does not meet specifications:
  - Correct the tire pressure.
- Mount the protection cap.

# 15.1 Removing the 12-V battery 🔌




# Warning

**Risk of injury** Battery acid and battery gases cause serious chemical burns.

- Keep 12 V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery acid and battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.


## Preparatory work

- Switch off the ignition by turning the ignition key to the position  $\boxtimes$ .
- Remove the passenger seat. ( p. 103)
- Remove the front rider's seat. ( p. 104)

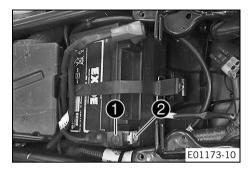

### Main work

- Pull back negative terminal cover 1.
- Disconnect negative cable 2 from the 12-V battery.

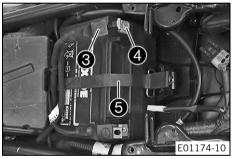

- Pull back positive terminal cover 3.
- Disconnect positive cable 4 from the 12-V battery.
- Detach rubber strap **5**.
- Pull the 12-V battery upwards and out of the battery compartment.





### Info

Never operate the motorcycle with a discharged 12-V battery or without a 12-V battery. In both cases, electrical components and safety devices can be damaged. The vehicle will therefore no longer be roadworthy.

•

# 15.2 Installing the 12-V battery 🔌

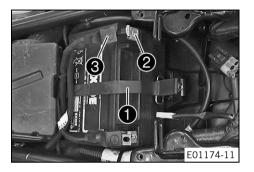

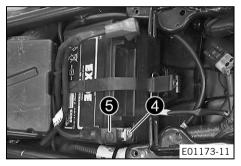

#### Main work

Position the 12-V battery in the battery compartment.
 Guideline

The terminals of the battery must face upwards.

12-V battery (ETZ-9-BS) ( p. 229)

- Attach rubber strap 1.
- Position positive cable 2 and mount and tighten the screw.
- Position positive terminal cover 3.
- Position negative cable 4, mount, and tighten the screw.
- Position the negative terminal cover 6.

## Finishing work

- Mount the front rider's seat. (
   p. 106)
- Mount the passenger seat. (
   p. 104)

Set the clock. (
 p. 64)

# 15.3 Charging the 12-V battery 🔦



## ▲ Warning

**Risk of injury** Battery acid and battery gases cause serious chemical burns.

- Keep 12 V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery acid and battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.



### Note

**Environmental hazard** 12 V batteries contain environmentally hazardous materials.

- Do not dispose of 12 V batteries as household waste.
- Dispose of 12 V batteries at a collection point for used batteries.



### Info

Even when there is no load on the 12-V battery, it discharges steadily each day.

The charging level and the method of charging are very important for the service life of the 12-V battery. Rapid recharging with a high charging current shortens the service life of the battery.


If the charging current, charging voltage, or charging time is exceeded, electrolyte escapes through the safety valves. This reduces the capacity of the 12-V battery.

If the 12-V battery is depleted by repeated starting, the 12-V battery must be charged immediately. If the 12-V battery is left in a discharged state for an extended period, it will become deeply discharged and sulfating occurs, destroying the battery.

The 12-V battery is maintenance-free. The acid level does not have to be checked.

### Preparatory work

- Switch off the ignition by turning the ignition key to the position  $\boxtimes$ .
- Remove the front rider's seat. (
   p. 104)
- Disconnect negative cable of the 12-V battery to avoid damage to the onboard electronics.

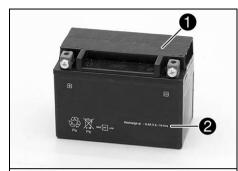



#### Main work

 Connect battery charger to the 12-V battery. Switch on battery charger.

## Battery charger (58429074000)

In addition, this battery charger can be used to test the opencircuit voltage, the starting ability of the 12-V battery, and the alternator. It is impossible to overcharge the 12-V battery using this device.



## Info

Never remove cover 1.

Charge the 12 V battery to a maximum of 10 % of the capacity specified on battery housing **2**.

- Switch off the battery charger after charging and disconnect from the 12-V battery.

#### Guideline

The charging current, charging voltage, and charging time must not be exceeded.

Recharge the 12-V battery regularly when the motorcycle is not being used

- Position the negative cable and mount and tighten the screw.
- Position the negative terminal cover.

### **Finishing work**

- Mount the front rider's seat. (
   p. 106)

# 15.4 Changing the ABS fuses (200 Duke BR)



## Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.




### Info

Two fuses for the ABS are located under the passenger seat. These fuses protect the return pump and the hydraulic unit of the ABS. The third fuse, which protects the ABS control unit, is located in the fuse box.

### Preparatory work

- Switch off the ignition by turning the ignition key to the position  $\boxtimes$ .

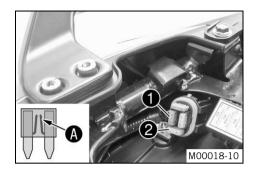

### To change the fuse of the ABS hydraulic unit:

Take off the protection cap and remove fuse 1.



### Info

A faulty fuse has a burned-out fuse wire **A**.





# Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.
- Insert a spare fuse with the correct rating.


Fuse (75011088015) ( p. 229)



### qiT

Insert spare fuse **2** in the fuse box so that it is available if needed.

Mount the protection cap.

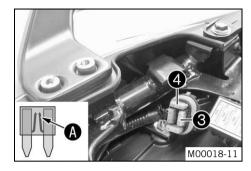

### To change the fuse of the ABS return pump:

Take off the protection cap and remove fuse 3.



## Warning

**Fire hazard** Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.
- Insert a spare fuse with the correct rating.

Fuse (90111088025) ( p. 229)



### Tip

Insert spare fuse **4** in the fuse box so that it is available if needed.

Mount the protection cap.

## Finishing work

- Mount the passenger seat. ( p. 104)

164

# 15.5 Changing the fuses of individual power consumers



### Info

The fuse box with the main fuse and the fuses of the individual power consumers is located under the passenger seat.


## **Preparatory work**

- Switch off the ignition by turning the ignition key to the position ⋈.
- Remove the passenger seat. ( p. 103)



## Main work (200 Duke EU/AR, ASEAN/CO/MY/PH)

Open fuse box cover 1.

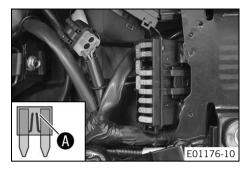

Remove the faulty fuse.

Guideline

Fuse 1 - 30 A - main fuse

Fuse 2 - 15 A - combination instrument

Fuse 3 - 15 A - power relay, fuel pump

Fuse 4 - 15 A - ignition coil, alarm system (OPTIONAL)

Fuse 5 - 15 A - radiator fan

Fuse 6 - 15 A - horn, brake light, turn signal, high beam, low beam, position light, tail light, license plate lamp, diagnostics connector

Fuse 7 - not assigned

Fuse 8 - 10 A - EFI control unit

Fuse **9** - 10 A - ignition positive for auxiliary equipment (ACC2 front)

Fuse **SPARE** - 10 A/15 A/30 A - spare fuses



### Info

A faulty fuse has a burned-out fuse wire **A**.



## Warning

**Fire hazard** Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.
- Insert a spare fuse with the correct rating.

Fuse (75011088010) (🕮 p. 229)

Fuse (75011088015) ( p. 229)


Fuse (75011088030) ( p. 229)




### Tip

Replace the spare fuse in the fuse box so that it is available if needed.

- Check that the power consumer is functioning properly.
- Close the fuse box cover 1.

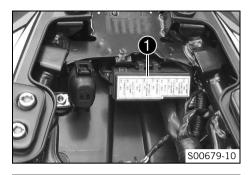

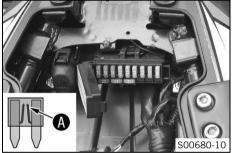

### (200 Duke BR)

Open fuse box cover 1.

Remove the faulty fuse.

Guideline

Fuse 1 - 30 A - main fuse

Fuse **2** - 15 A - combination instrument, alarm system (optional)

Fuse **3** - 15 A - fuel pump, power relay

Fuse 4 - 15 A - ignition coil, alarm system (optional)

Fuse 5 - 15 A - radiator fan

Fuse **6** - 15 A - horn, brake light, turn signal, high beam, low beam, position light, tail light, license plate lamp

Fuse 7 - 10 A - ABS control unit

Fuse 8 - 10 A - combination instrument, control unit

Fuse 9 - 10 A - auxiliary equipment



### Info

A faulty fuse has a burned-out fuse wire **A**.





# Warning

Fire hazard Incorrect fuses overload the electrical system.

- Only use fuses with the required ampere value.
- Do not bypass or repair fuses.
- Insert a spare fuse with the correct rating.

Fuse (75011088010) ( p. 229)

Fuse (75011088015) ( p. 229)

Fuse (75011088030) ( p. 229)



## Tip

Replace the spare fuse in the fuse box so that it is available if needed.

- Check that the power consumer is functioning properly.
- Close the fuse box cover.

### Finishing work

Mount the passenger seat. ( p. 104)


# 15.6 Changing the headlight bulb

### Note

Damage to reflector Grease on the reflector reduces the light intensity.

Grease on the bulb will evaporate due to the heat and be deposited on the reflector.

- Clean and degrease the bulbs before mounting.
- Do not touch the bulbs with your bare hands.

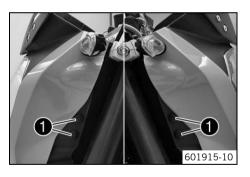


### **Preparatory work**


– Switch off the ignition by turning the ignition key to the position  $\boxtimes$ .

### Main work


Remove expanding rivets 1.

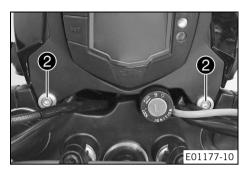


- Remove screws 2.
- Lift the headlight mask slightly and swing forward.

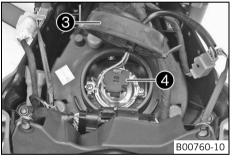

- Remove protection cap 3.
- Unplug connector 4.

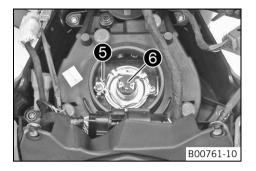

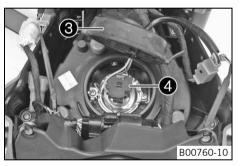


- Detach retaining clamp 6.
- Remove headlight bulb **6**.
- Position the new headlight bulb in the headlight housing.
   Guideline

Insert the headlight bulb so that the holding lugs latch into the recesses.

Headlight (H4/socket P43t) ( p. 229)

- Attach retaining clamp **5**.
- Plug in connector 4.
- Mount protection cap 3.

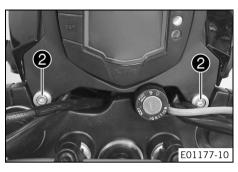

- Swivel the headlight mask upward.
- Mount and tighten screws **2**. Guideline

| Screw, head- | M6 | 11 Nm (8.1 lbf ft) |
|--------------|----|--------------------|
| light mask   |    | Loctite®243™       |



- Check that the lighting is functioning properly.


# 15.7 Changing the position light lamp

### Note

Damage to reflector Grease on the reflector reduces the light intensity.

Grease on the bulb will evaporate due to the heat and be deposited on the reflector.

- Clean and degrease the bulbs before mounting.
- Do not touch the bulbs with your bare hands.

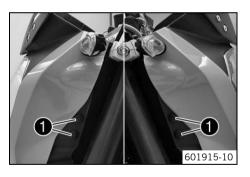


### **Preparatory work**


– Switch off the ignition by turning the ignition key to the position  $\boxtimes$ .

### Main work


Remove expanding rivets 1.

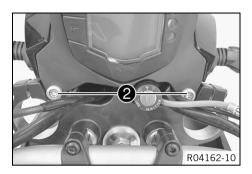

- Remove screws 2.
- Lift the headlight mask slightly and swing forward.

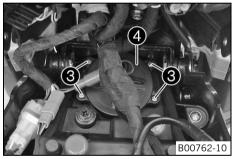


- Remove screws 3.
- Remove cover 4.

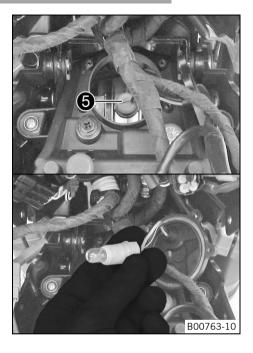


- Pull the socket with bulb **5** out of the housing.
- Remove the bulb.
- Position a new bulb in the socket.

Position light (W5W / socket W2.1x9.5d) ( p. 229)

- Position the socket with bulb **6** in the housing.

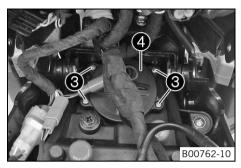


- Position cover **4**.
- Mount and tighten screws 3.

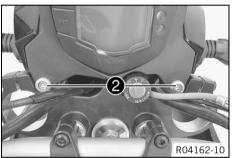


- Swivel the headlight mask upward.
- Mount and tighten screws 2.
   Guideline

| Screw, head- | M6 | 11 Nm (8.1 lbf ft) |
|--------------|----|--------------------|
| light mask   |    | Loctite®243™       |

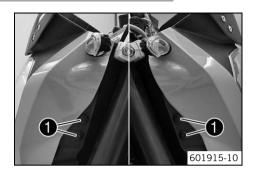

- Mount expanding rivets 1 on both sides.
- Check that the lighting is functioning properly.

# 15.8 Checking the headlight setting

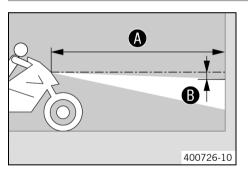

- Park the vehicle on a horizontal surface in front of a lightcolored wall and make a mark at the height of the center of the low beam headlight.
- Make another mark at a distance 
   • under the first marking.

   Guideline

Distance **B** 5 cm (2 in)

Position the vehicle perpendicular to the wall at a distance A from the wall and switch on the low beam.
 Guideline


| _ |                   |             |
|---|-------------------|-------------|
|   | Distance <b>A</b> | 5 m (16 ft) |

- The rider now mounts the motorcycle with luggage and passenger if applicable.
- Check the headlight setting.

The light-dark boundary must be exactly on the lower marking when the motorcycle is ready to be operated with the rider mounted along with any luggage and a passenger if applicable.

- » If the boundary between light and dark does not meet specifications:


15.9 Adjusting the headlight range

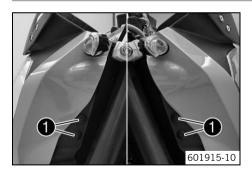

#### Main work


Remove expanding rivets 1.

## 15 ELECTRICAL SYSTEM

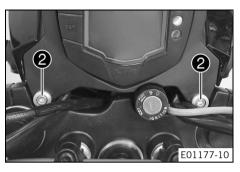



Lift the headlight mask slightly and swing forward.

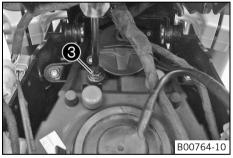

Adjust the beam headlight range by turning screw 3.
 Guideline


For a motorcycle with a rider, and any luggage and/or passenger, the light/dark boundary must be exactly on the lower marking (applied in: Checking the headlight setting).



### Info

Turn clockwise to reduce the headlight range; turn counterclockwise to increase the headlight range.

## **ELECTRICAL SYSTEM**

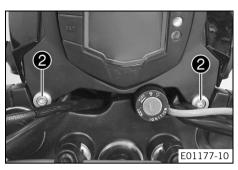



Mount and tighten screws 2.
 Guideline

| Screw, head- | M6 | 11 Nm (8.1 lbf ft) |
|--------------|----|--------------------|
| light mask   |    | Loctite®243™       |




Mount expanding rivets 1 on both sides.

### **Finishing work**

Check the headlight setting. (
 p. 178)


## 15 ELECTRICAL SYSTEM

## 15.10 Diagnostics connector

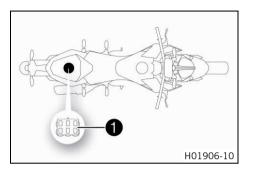

Diagnostics connector 1 is located under the passenger seat.


## **15.11 ACC2 front**

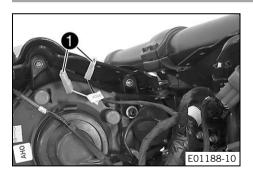

### **Installation location**

The front power supply ACC2 1 is located behind the head-light mask.


## 16.1 Cooling system

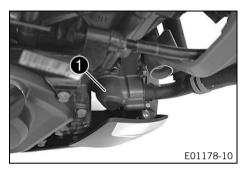

Water pump 1 in the engine ensures forced circulation of the coolant.

The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap ②. Heat expansion causes excess coolant to flow into compensating tank ③. When the temperature falls, this surplus coolant is sucked back into the cooling system. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

110 °C (230 °F)

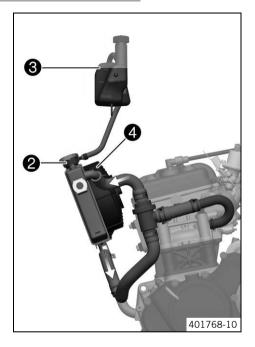

The coolant is cooled by the air stream and a radiator fan **4**, which is activated at high temperature.

The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.



### Info

If the cooling system overheats, the maximum engine speed is limited.

## 16.2 Checking the coolant level



### Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



### Warning


**Danger of poisoning** Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

#### Condition

The engine is cold.



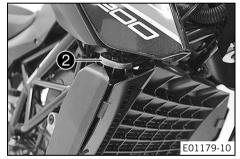

- Stand the motorcycle upright on a horizontal surface.
- Check the coolant level in the compensating tank 1.

The coolant level must be between MIN and MAX.

- » If the coolant level does not match the specified value:
  - Correct the coolant level.

Coolant ( p. 239)

 Remove the radiator cap 2 and check the coolant level in the radiator.

The radiator must be completely filled.

- » If the coolant level does not match the specified value:
  - Correct the coolant level and find out the cause of the loss.

Coolant (IPP p. 239)

- » If you had to add more coolant than the specified amount: > 0.20 I (> 0.21 qt.)
- Mount the radiator cap.

### 16.3 Checking the antifreeze and coolant level



## Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



### Warning

**Danger of poisoning** Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

#### Condition

The engine is cold.




- Stand the motorcycle upright on a horizontal surface.
- Remove the cap of the compensating tank 1.
- Check the coolant antifreeze.

- » If the antifreeze in the coolant does not match the specified value:
  - Correct the coolant antifreeze.
- Check the coolant level in the compensating tank.

The coolant level must be between **MIN** and **MAX**.

- » If the coolant level does not match the specified value:
  - Correct the coolant level.

Mount the cap of the compensating tank.

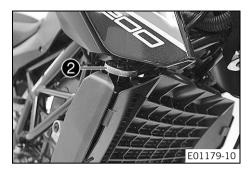

- Remove radiator cap 2.
- Check the coolant antifreeze.

- » If the antifreeze in the coolant does not match the specified value:
  - Correct the coolant antifreeze.
- Check the coolant level in the radiator.

The radiator must be completely filled.

- » If the coolant level does not match the specified value:
  - Correct the coolant level and find out the cause of the loss.

- » If you had to add more coolant than the specified amount: > 0.20 l (> 0.21 qt.)
- Mount the radiator cap.

4

## 16.4 Draining the coolant 🔌



## Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



## Warning

**Danger of poisoning** Coolant is toxic and a health hazard.


- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

### Condition

The engine is cold.

### **Preparatory work**

Remove the front spoiler. (
 p. 117)

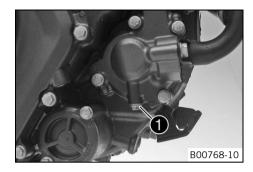

#### Main work

- Position the motorcycle upright.
- Position an appropriate container under the engine.
- Remove screw with the seal ring.
- Remove the radiator cap.
- Completely drain the coolant.
- Mount and tighten screw with a new seal ring.
   Guideline

| Screw plug, water | M6 | 10 Nm (7.4 lbf ft) |
|-------------------|----|--------------------|
| pump drain hole   |    |                    |


## 16.5 Filling/bleeding the cooling system 🔌



### Warning

**Danger of poisoning** Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

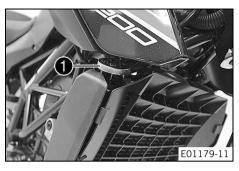

### Main work

- Remove radiator cap 1.



Loosen bleeder screw 2.
 Guideline

3 turns

- Tilt the vehicle slightly to the right.
- Pour in coolant until it emerges without bubbles at the bleeder screw, and then mount and tighten the bleeder screw immediately.


Coolant ( p. 239)


- Completely fill the radiator with coolant. Mount the radiator cap.
- Rest the vehicle on the side stand.

### Danger

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.





- When the engine is cool, check the coolant level in the radiator and, if necessary, add coolant.
- Remove the cap of compensating tank (3) and top up the coolant level up to the MAX marking.
- Mount the cap of the compensating tank.



### Finishing work

## 16.6 Changing the coolant



## Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.

- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.




## Warning


**Danger of poisoning** Coolant is toxic and a health hazard.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with the skin, the eyes and clothing.
- Consult a doctor immediately if coolant is swallowed.
- Rinse the affected area immediately with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant gets into the eyes.
- Change clothing if coolant spills onto your clothing.

### **Preparatory work**

- Remove the front spoiler. ( p. 117)

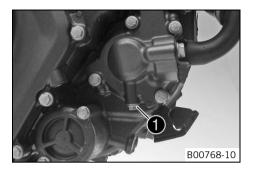

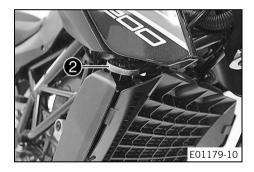


### Main work

- Position the motorcycle upright.
- Position an appropriate container under the engine.
- Remove screw with the seal ring.
- Remove the radiator cap.
- Completely drain the coolant.
- Mount and tighten screw with a new seal ring.
   Guideline

| Screw plug, water | M6 | 10 Nm (7.4 lbf ft) |
|-------------------|----|--------------------|
| pump drain hole   |    |                    |

- Remove radiator cap 2.

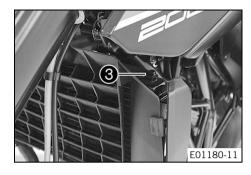

Loosen bleeder screw 3.
 Guideline

3 turns

- Tilt the vehicle slightly to the right.
- Pour in the coolant until it emerges without bubbles at the bleeder screw, and then mount and tighten the bleeder screw immediately.

Coolant ( p. 239)

- Completely fill the radiator with coolant. Mount the radiator cap.
- Rest the vehicle on the side stand.



### **Danger**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and allow it to warm up.



- Stop the engine and allow it to cool down.
- When the engine is cool, check the coolant level in the radiator and, if necessary, add coolant.
- Remove the cap of compensating tank **4** and top up the coolant level up to the **MAX** marking.
- Mount the cap of the compensating tank.


### Finishing work

- Fit the front spoiler. ( p. 118)

•

## TUNING THE ENGINE

#### 17.1 Checking throttle cable play

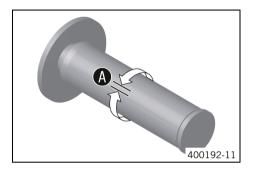

- Check the throttle grip for smooth operation.
- Move the handlebar to the straight-ahead position. Turn the throttle grip back and forth slightly and determine the play in throttle cable **A**.

Throttle cable play (A)



3 ... 5 mm (0.12 ... 0.2 in)

- If the throttle cable play does not meet specifications:
  - Adjust the throttle cable play. 4 ( p. 199)



### **Danger**


Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and let it run at idle speed. Move the handlebar to and fro over the entire steering range.

The idle speed must not change.

- If the idle speed changes:
  - Check the throttle cable routing.

#### 17.2 Adjusting throttle cable play 🔌

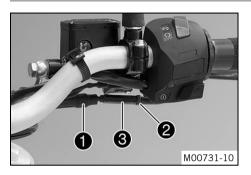

- Move the handlebar to the straight-ahead position.
- Push back sleeve 1.
- Loosen lock nut **2**.
- Adjust the throttle cable play with barrel adjuster **3**. Guideline

Throttle cable play 3 ... 5 mm (0.12 ... 0.2 in)

- Tighten lock nut **2**.
- Slide on sleeve 1.

#### 17.3 Checking the clutch lever play


### Note

**Clutch damage** If there is no free travel by the clutch lever, the clutch will begin to slip.

- Check the free travel of the clutch lever each time before using the motorcycle.
- Adjust the free travel of the clutch lever when necessary in accordance with the specification.

199

## 17 TUNING THE ENGINE

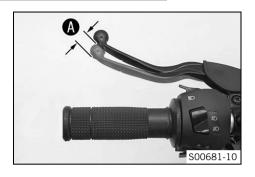

- Check the clutch lever for smooth operation.
- Move the handlebar to the straight-ahead position.
- Pull the clutch lever until resistance is perceptible, and determine the play in the clutch lever (A).


| Clutch lever play \Lambda | 1 3 mm (0.04 |
|---------------------------|--------------|
|                           | 0.12 in)     |

- » If the clutch lever play does not meet the specified value:
  - Adjust play in the clutch lever. ♣ (♠ p. 201)
- Move the handlebar to and fro over the entire steering range.

The clutch lever play must not change.

- » If the clutch lever play changes:
  - Check the routing of the clutch cable.

## 17.4 Adjusting play in the clutch lever 🔌

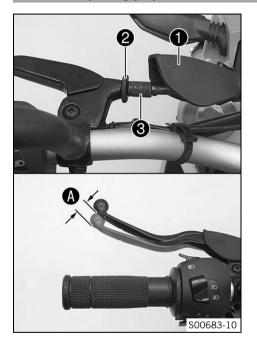


- Move the handlebar to the straight-ahead position.
- Push back sleeve 1.
- Loosen lock nut 2.
- Adjust the play in the clutch level by turning adjusting screw 3.

### Guideline

| Clutch lever play A | 1 3 mm (0.04 |
|---------------------|--------------|
| , , ,               | 0.12 in)     |

- Tighten lock nut 2.
- Position bellows 1.

#### 18.1 Checking the engine oil level

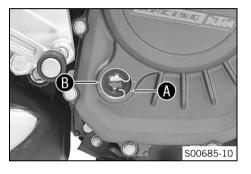

#### Condition

The engine is at operating temperature.

### Preparatory work

Stand the motorcycle upright on a horizontal surface.

#### Main work

Check the engine oil level.



### Info

After switching off the engine, wait one minute before checking the level.

The engine oil must be between the markings (A) and (B) .





- If the engine oil is below the marking **A**:
  - Add engine oil. ( p. 206)
- If the engine oil is above the marking **B**:
  - Correct the engine oil level.

## 18.2 Changing the engine oil and oil filter, cleaning the oil screen 🔌



## Warning

**Danger of scalding** Engine and gear oil get very hot when the motorcycle is ridden.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



### Note

**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.





#### Info

Drain the engine oil while the engine is at operating temperature.

### Preparatory work

- Remove the front spoiler. (
   p. 117)
- Place the motorcycle on a horizontal surface using the side stand.

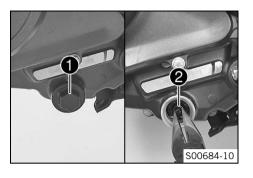

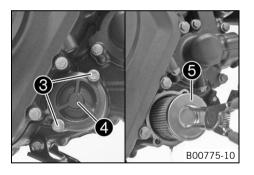


#### Main work


- Place an appropriate container under the engine.
- Remove oil drain plug with the O-ring.
- Remove oil screen **2** with the O-ring.
- Allow the engine oil to drain completely.
- Clean the oil drain plug and the oil screen thoroughly.
- Position oil screen 2 and mount and tighten oil drain plug 1 with the O-ring.

Guideline

| Oil drain plug | M24x1.5 | 15 Nm (11.1 lbf ft) |
|----------------|---------|---------------------|

- Remove screws 3. Take off oil filter cover 4 with the Oring.
- Pull oil filter **5** out of the oil filter housing.
- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surface.

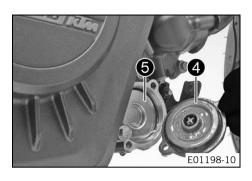



Oil the O-ring of the oil filter cover. Mount oil filter cover 4.


Mount and tighten screws **3**. Guideline

| Screw, on the cover Mo | Ī | Screw, oil filter cover | M6 | 10 Nm (7.4 lbf ft) |
|------------------------|---|-------------------------|----|--------------------|
|------------------------|---|-------------------------|----|--------------------|




### Info

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.



| Engine oil<br>Ambient tempera-<br>ture: 0 50 °C (32<br>122 °F)   | 1.5 I (1.6 qt.) | Engine oil<br>(SAE 15W/50)<br>( p. 240) |
|--|-----------------|---|
| Engine oil<br>Ambient tempera-<br>ture: -10 40 °C<br>(14 104 °F) |                 | Engine oil<br>(SAE 10W/40)<br>(P. 241)  |

Mount and tighten the filler plug together with the O-ring.

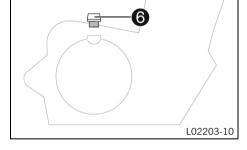



## **Danger**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and check for tightness.

### **Finishing work**

- Fit the front spoiler. (
   p. 118)
- Check the engine oil level. ( p. 202)


18.3 Adding engine oil



### Info

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

206

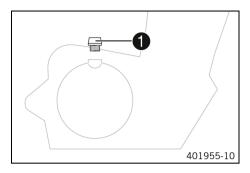

#### Main work

Remove filler plug 1 with the O-ring, and fill up with engine oil.

Engine oil (SAE 15W/50) ( p. 240) Engine oil (SAE 10W/40) ( p. 241)



#### Info

In order to achieve optimal engine oil performance, it is not advisable to mix different engine oils. We recommend changing the engine oil when necessary.

Mount and tighten the filler plug together with the O-ring.



## **Danger**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always make sure there is sufficient ventilation when running the engine.
- Use effective exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and check for tightness.

## Finishing work

- Check the engine oil level. ( p. 202)

4

#### 19.1 Cleaning the motorcycle

#### Note

**Material damage** Components become damaged or destroyed if a pressure cleaner is used incorrectly.

The high pressure forces water into the electrical components, connectors, throttle cables, and bearings, etc. Pressure which is too high causes malfunctions and destroys components.

- Do not direct the water jet directly on to electrical components, connectors, throttle cables or bearings.
- Maintain a minimum distance between the nozzle of the pressure cleaner and the component. Minimum clearance 60 cm (23.6 in)



**Environmental hazard** Hazardous substances cause environmental damage.


Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc., correctly and in compliance with the applicable regulations.



#### Info

Clean the motorcycle regularly to maintain its value and appearance over a long period. Avoid direct sunshine when cleaning the motorcycle.

## 19 CLEANING, CARE

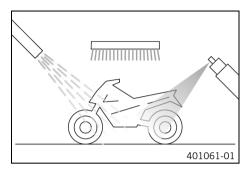

- Close off the exhaust system to keep water from entering.
- Remove loose dirt first with a soft jet of water.
- Spray heavily soiled parts with a normal commercial motorcycle cleaner and then brush off with a soft brush.

Motorcycle cleaner ( p. 243)



#### Info

Use warm water containing normal motorcycle cleaner and a soft sponge.

Never apply motorcycle cleaner to a dry motorcycle; always rinse the vehicle with water first. Clean the motorcycle with cold water if it has been used on salted roads. Warm water enhances the corrosive effects of salt

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the closure of the exhaust system.



### Warning

**Danger of accidents** Moisture and dirt impair the brake system.

 Brake carefully several times to dry out and remove dirt from the brake linings and the brake discs.  After cleaning, ride the vehicle a short distance until the engine warms up.



### Info

The heat produced causes water at inaccessible locations in the engine and on the brake system to evaporate.

- Push back the sleeves of the handlebar controls to allow any water that has penetrated to evaporate.
- After the motorcycle has cooled down, lubricate all moving parts and pivot points.
- Clean the chain. ( p. 107)
- Treat bare metal (except for brake discs and the exhaust system) with a corrosion inhibitor.

Preserving materials for paints, metal and rubber ( p. 244)

- Treat all painted parts with a mild paint care product.

Perfect finish and high gloss polish for paints (p. 243)



#### Info

Do not polish parts that were matte when delivered as this would strongly impair the material quality.

## 19 CLEANING, CARE

 Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Special cleaner for glossy and matte paint finishes, metal and plastic surfaces ( p. 244)

- Lubricate the ignition and steering lock.

Universal oil spray (🕮 p. 244)

4


## 19.2 Checks and maintenance steps for winter operation



### Info

If you use the motorcycle in winter, you must expect salt on the roads. You should therefore take precautions against aggressive road salt.

Clean the motorcycle with cold water if it has been used on salted roads. Warm water enhances the corrosive effects of salt.

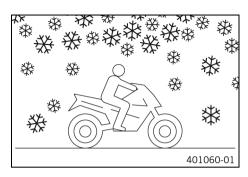

- Clean the motorcycle. (
   p. 209)
- Clean the brakes.



### Info

After **EVERY** trip on salted roads, thoroughly clean the motorcycle and, in particular, the brake calipers and brake linings, after they have cooled down and without removing them, with cold water and dry carefully.

 Treat the engine, the link fork, and all other bare or zinc-plated parts (except the brake discs) with a wax-based corrosion inhibitor.



#### Info

Corrosion inhibitor must not come in contact with the brake discs as this would greatly reduce the braking force.

- Clean the chain. ( p. 107)


## 20.1 Storage



#### Info

If you plan to garage the motorcycle for a longer period, perform the following steps or have them performed.

Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

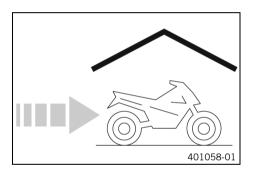

 When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive (🕮 p. 243)

- Clean the motorcycle. (
   p. 209)
- Change the engine oil and oil filter, clean the oil screen.
   p. 203)

- Remove the 12-V battery. ♣ (♠ p. 156)
- Charge the 12-V battery. ◀ (🕮 p. 159)

#### Guideline

| Storage temperature of the  | 0 35 °C (32 95 °F) |
|-----------------------------|--------------------|
| 12-V battery without direct |                    |
| sunlight                    |                    |

Store vehicle in a dry location that is not subject to large fluctuations in temperature.



#### Info

KTM recommends jacking up the motorcycle.

- Raise the motorcycle with the rear lifting gear. ( p. 97)
- Lift the motorcycle with the front lifting gear. ( p. 98)
- Cover the motorcycle with a tarp or cover that is permeable to air.




#### Info

Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion. Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.

•

## 20 STORAGE

## 20.2 Preparing for use after storage

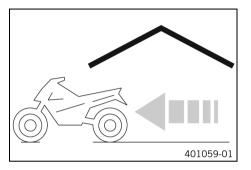

- Take the motorcycle off the front lifting gear. ( p. 100)
- Remove the rear of the motorcycle from the lifting gear.
   p. 97)

- Perform checks and maintenance measures when preparing for use. (
   p. 73)
- Take a test ride.

216

| Faults   | Possible cause  | Action   |  |
|--|---|--|--|
| The engine does not turn when                  | Operating error   | <ul> <li>Carry out start procedure. (</li></ul>  |  |
| the start button is pressed                    | 12-V battery discharged                                 | <ul> <li>Charge the 12-V battery. ◀ (♣ p. 159)</li> </ul>                              |  |
|  | Fuse 1, 3, 4, or 8 is blown                             | <ul> <li>Change the fuses of individual power<br/>consumers. (     p. 165)</li> </ul>  |  |
|  | No ground connection present                            | <ul> <li>Check the ground connection.</li> </ul>                                       |  |
| Engine turns only if the clutch lever is drawn | The vehicle is in gear                                  | <ul> <li>Shift the transmission to neutral position.</li> </ul>                        |  |
|  | The vehicle is in gear and the side stand is folded out | <ul> <li>Shift the transmission to neutral position.</li> </ul>                        |  |
| Engine turns but does not start                |   | <ul> <li>Carry out start procedure. (</li></ul>  |  |
|  | Malfunction in the electronic fuel injection            | <ul> <li>Read out the fault memory using the<br/>KTM diagnostics tool.</li> </ul>      |  |
| Engine has too little power                    | Air filter is very dirty                                | - Change the air filter.   |  |
|  | Fuel filter is very dirty                               | <ul> <li>Check the fuel pressure.</li> </ul>   |  |
|  | Malfunction in the electronic fuel injection            | <ul> <li>Read out the fault memory using the<br/>KTM diagnostics tool. &lt;</li> </ul> |  |
| Engine overheats                               | Too little coolant in cooling sys-                      | <ul> <li>Check the cooling system for leakage.</li> </ul>                              |  |
|  | tem   | <ul> <li>Check the coolant level. (</li></ul>  |  |
|  | Radiator fins very dirty                                | <ul> <li>Clean the radiator fins.</li> </ul>   |  |

# 21 TROUBLESHOOTING

| Faults                                      | Possible cause  | Action   |
|---|---|--|
| Engine overheats                            | Foam formation in cooling system                              | <ul> <li>Drain the coolant. ♣ (□ p. 190)</li> <li>Fill/bleed the cooling system. ♣ (□ p. 191)</li> </ul> |
|   | Thermostat defective  | <ul> <li>Check the thermostat. ⁴</li> </ul>  |
|   | Fuse <b>5</b> blown   | <ul> <li>Change the fuses of individual power<br/>consumers. (</li></ul>                                 |
|   | Defect in radiator fan system                                 | <ul> <li>Check the radiator fan system.</li> </ul>   |
| Malfunction indicator lamp lights up yellow | Malfunction in the electronic fuel injection                  | <ul> <li>Read out the fault memory using the<br/>KTM diagnostics tool. &lt;</li> </ul>                   |
| Engine dies during the trip                 | Lack of fuel  | – Refuel. (🕮 p. 87)  |
|   | Fuse <b>1</b> , <b>3</b> , <b>4</b> , or <b>8</b> is blown    | - Change the fuses of individual power consumers. (🕮 p. 165)   |
| The ABS warning lamp lights                 | ABS fuse blown  | - Change the ABS fuses. ( p. 162)  |
| up<br>(200 Duke BR)                         | Large difference in wheel speeds of the front and rear wheels | Stop the vehicle, switch off the ignition, and start it again.   |
|   | Malfunction in ABS  | <ul> <li>Read out the fault memory using the<br/>KTM diagnostics tool. ⁴</li> </ul>                      |
| High oil consumption                        | Engine vent hose bent   | Route the vent hose without bends or change it if necessary.   |
|   | Engine oil level too high                                     | - Check the engine oil level. (🕮 p. 202)   |

| Faults  | Possible cause   | Action   |  |
|---|--|--|--|
| High oil consumption                                  | Engine oil too thin (low viscosity)                        | <ul> <li>Change the engine oil and oil filter,<br/>clean the oil screen. ♣ (♠ p. 203)</li> </ul>                 |  |
| Headlight and position light are not functioning      | Fuse 6 blown   | <ul> <li>Change the fuses of individual power<br/>consumers. (         p. 165)</li> </ul>                        |  |
| Turn signal, brake light, and horn are not functional | Fuse 6 blown   | <ul> <li>Change the fuses of individual power<br/>consumers. (</li></ul>   |  |
| Time is not (correctly) displayed                     | Fuse 2 blown<br>(200 Duke EU/AR,<br>ASEAN/CO/MY/PH)        | <ul> <li>Change the fuses of individual power consumers. ( p. 165)</li> <li>Set the clock. ( p. 64)</li> </ul>   |  |
|   | Fuse 8 is blown (200 Duke BR)                              | <ul> <li>Change the fuses of individual power consumers. ( p. 165)</li> <li>Set the clock. ( p. 64)</li> </ul>   |  |
| 12 V battery discharged                               | Ignition was not switched off when vehicle was parked      | - Charge the 12-V battery. <b>◄</b> (□ p. 159)   |  |
|   | The 12-V battery is not being charged by the alternator    | <ul><li>Check the charging voltage. ⁴</li><li>Check the open-circuit current. ⁴</li></ul>                        |  |
| Combination instrument shows nothing on the display   | Fuse <b>2</b> blown<br>(200 Duke EU/AR,<br>ASEAN/CO/MY/PH) | <ul> <li>Change the fuses of individual power consumers. (♠ p. 165)</li> <li>Set the clock. (♠ p. 64)</li> </ul> |  |
|   | Fuse <b>8</b> is blown (200 Duke BR)                       | <ul> <li>Change the fuses of individual power consumers. ( p. 165)</li> <li>Set the clock. ( p. 64)</li> </ul>   |  |

# 21 TROUBLESHOOTING

| Faults  | Possible cause   | Action  |
|---|--|---|
| Speedometer in combination instrument not functioning | Speedometer wiring harness is damaged or plug-in connector is oxidized | <ul> <li>Check the wiring harness and plug-in connector.</li> </ul> |

## 22.1 Engine

| Design  | 1-cylinder 4-stroke engine, water-cooled                                  |  |
|---|---|--|
| Displacement  | 200 cm <sup>3</sup> (12.2 cu in)  |  |
| Stroke  | 49 mm (1.93 in)   |  |
| Bore  | 72 mm (2.83 in)   |  |
| Compression ratio   | 11,5:1  |  |
| Control   | DOHC, 4 valves controlled via cam lever, chain drive                      |  |
| Intake valve diameter   | 28.5 mm (1.122 in)  |  |
| Exhaust valve diameter  | 24 mm (0.94 in)   |  |
| Valve clearance, intake, cold                                       | 0.08 0.12 mm (0.0031 0.0047 in)   |  |
| Valve clearance, exhaust valve, cold 0.13 0.17 mm (0.0051 0.0067 ir |   |  |
| Crankshaft bearing Two ball bearings                                |   |  |
| Conrod bearing Sleeve bearing                                       |   |  |
| Pistons   | Cast light alloy  |  |
| Piston rings  | 1 compression ring, 1 tapered compression piston ring, 1 oil scraper ring |  |
| Engine lubrication  | Pressure circulation lubrication with 1 trochoidal                        |  |
|   | pump  |  |
| Primary transmission 22:72  |   |  |
| Clutch  | Clutch in oil bath/mechanically activated                                 |  |
| Transmission 6-gear transmission, claw shifted                      |   |  |

| Transmission ratio       |   |  |  |
|--------------------------|---|--|--|
| 1st gear                 | 12:34   |  |  |
| 2nd gear                 | 15:31   |  |  |
| 3rd gear                 | 18:28   |  |  |
| 4th gear                 | 21:26   |  |  |
| 5th gear                 | 22:23   |  |  |
| 6th gear                 | 24:22   |  |  |
| Mixture preparation      | Electronic fuel injection                             |  |  |
| Ignition                 | Contactless controlled fully electronic ignition with |  |  |
|                          | digital ignition adjustment                           |  |  |
| Alternator               | 12 V, 230 W   |  |  |
| Spark plug               | BOSCHVR5NEU   |  |  |
| Spark plug electrode gap | 1 mm (0.04 in)  |  |  |
| Cooling                  | Water cooling, permanent circulation of coolant by    |  |  |
|                          | water pump  |  |  |
| Idle speed               | 1,450 1,550 rpm                                       |  |  |
| Starting aid             | Starter motor   |  |  |

## 22.2 Engine tightening torques

| Oil nozzle | M5 | 6 Nm (4.4 lbf ft) |              |
|------------|----|-------------------|--------------|
|            |    | L                 | .octite®243™ |

| Screw, engine vent plate          | M5    | 7 Nm (5.2 lbf ft)  |              |
|-----------------------------------|-------|--------------------|--------------|
|                                   |       |                    | Loctite®243™ |
| Screw, retaining bracket          | M5    | 6 Nm (4.4 lbf ft)  |              |
|                                   |       |                    | Loctite®243™ |
| Screw, retaining bracket, stator  | M5    | 8 Nm (5.9 lbf ft)  |              |
| cable                             |       |                    | Loctite®243™ |
| Screw, stator                     | M5    | 8 Nm (5.9 lbf ft)  |              |
|                                   |       |                    | Loctite®243™ |
| Cylinder head screw               | M6    | 12 Nm (8.9 lbf ft) |              |
| Nut, water pump impeller          | M6    | 10 Nm (7.4 lbf ft) |              |
|                                   |       |                    | Loctite®243™ |
| Screw plug, water pump drain hole | M6    | 10 Nm (7.4 lbf ft) |              |
| Screw, alternator cover           | M6    | 12 Nm (8.9 lbf ft) |              |
| Screw, bearing retainer           | M6    | 12 Nm (8.9 lbf ft) |              |
|                                   |       |                    | Loctite®243™ |
| Screw, camshaft bearing bridge    | M6    | 10 Nm (7.4 lbf ft) |              |
| Screw, chain securing guide       | M6    | 10 Nm (7.4 lbf ft) |              |
|                                   |       |                    | Loctite®243™ |
| Screw, clutch cable retaining     | M6    | 6 Nm (4.4 lbf ft)  |              |
| bracket                           |       |                    | Loctite®243™ |
| Screw, clutch cover               | M6    | 12 Nm (8.9 lbf ft) |              |
| Screw, engine case                | M6x40 | 12 Nm (8.9 lbf ft) |              |

| Screw, engine case                  | M6x60 | 12 Nm (8.9 lbf ft)  |              |
|-------------------------------------|-------|---------------------|--------------|
|                                     |       |                     | Loctite®243™ |
| Screw, engine sprocket              | M6    | 12 Nm (8.9 lbf ft)  |              |
| Screw, freewheel gear retaining     | M6    | 12 Nm (8.9 lbf ft)  |              |
| bracket                             |       |                     | Loctite®243™ |
| Screw, locking lever                | M6    | 12 Nm (8.9 lbf ft)  |              |
|                                     |       |                     | Loctite®243™ |
| Screw, oil filter cover             | M6    | 10 Nm (7.4 lbf ft)  |              |
| Screw, oil pump                     | M6    | 12 Nm (8.9 lbf ft)  |              |
|                                     |       |                     | Loctite®243™ |
| Screw, retaining bracket            | M6    | 12 Nm (8.9 lbf ft)  |              |
|                                     |       |                     | Loctite®243™ |
| Screw, retaining bracket, radial    | M6    | 12 Nm (8.9 lbf ft)  |              |
| shaft seal ring, clutch cover       |       |                     | Loctite®243™ |
| Screw, shift drum locating          | M6    | 12 Nm (8.9 lbf ft)  |              |
|                                     |       |                     | Loctite®243™ |
| Screw, starter motor                | M6    | 12 Nm (8.9 lbf ft)  |              |
| Screw, timing chain tensioner       | M6    | 12 Nm (8.9 lbf ft)  |              |
| Screw, timing chain tensioning rail | M6    | 12 Nm (8.9 lbf ft)  |              |
|                                     |       |                     | Loctite®243™ |
| Screw, valve cover                  | M6    | 12 Nm (8.9 lbf ft)  |              |
| Screw, water pump cover             | M6    | 12 Nm (8.9 lbf ft)  |              |
| Screw, conrod bearing               | M7    | 24 Nm (17.7 lbf ft) |              |

| Nut, exhaust flange                           | M8      | 8 Nm (5.9 lbf ft)   |
|---|---------|---|
| Screw, balancer shaft gear wheel              | M8      | 40 Nm (29.5 lbf ft)  Loctite®243™   |
| Screw, camshaft gear wheel                    | M8      | 32 Nm (23.6 lbf ft)  Loctite®243™   |
| Screw, shift mechanism return spring          | M8      | 20 Nm (14.8 lbf ft)  Loctite®243™   |
| Stud, exhaust flange                          | M8      | 22 Nm (16.2 lbf ft)   |
| Coolant temperature sensor                    | M10     | 14 Nm (10.3 lbf ft)   |
| Oil pressure sensor                           | M10     | 14 Nm (10.3 lbf ft)   |
| Rotor screw                                   | M10     | 70 Nm (51.6 lbf ft)  Loctite®243™   |
| Screw, cylinder head                          | M10     | Step 1 25 Nm (18.4 lbf ft) Step 2 50 Nm (36.9 lbf ft) Thread is oiled, head flat is greased |
| Screw plug, cam lever axis                    | M10x1   | 10 Nm (7.4 lbf ft)  |
| Spark plug                                    | M12     | 15 Nm (11.1 lbf ft)   |
| Nut, inner clutch hub                         | M14LH   | 60 Nm (44.3 lbf ft)  Loctite®243™   |
| Nut, primary gear wheel/timing chain sprocket | M14     | 55 Nm (40.6 lbf ft)  Loctite®243™   |
| Oil drain plug                                | M24x1.5 | 15 Nm (11.1 lbf ft)   |

| Nut, drive gear wheel for balancer shaft                    | M28               | 60 Nm (44.3 lbf ft) Loctite®243™   |  |
|---|-------------------|--|--|
| 22.3 Capacities   |                   |  |  |
| 22.3.1 Engine oil   |                   |  |  |
| Engine oil<br>Ambient temperature: 0 50 °C<br>(32 122 °F)   | 1.5 l (1.6 qt.)   | Engine oil (SAE 15W/50) ( p. 240)  |  |
| Engine oil<br>Ambient temperature: -10<br>40 °C (14 104 °F) |                   | Engine oil (SAE 10W/40) ( p. 241)  |  |
| 22.3.2 Coolant  |                   |  |  |
| Coolant   | 1   (1 qt.)       | Coolant ( p. 239)  |  |
| 22.3.3 Fuel   |                   |  |  |
| Total fuel tank capacity, approx.                           | 11 I (2.9 US gal) | Super unleaded (ROZ<br>95/RON 95/PON 91)<br>(ID) p. 241) (200 Duke EU/AR,<br>ASEAN/CO/MY/PH) |  |

| Total fuel tank capacity, approx. | 11 I (2.9 US gal) | Super unleaded, type C (ROZ 95/RON 95/PON 91) ( p. 242) (200 Duke BR) |
|-----------------------------------|-------------------|---|
|                                   |                   | (Lee Baile Bit)   |
| l — .                             |                   |   |

Fuel reserve, approx. 1.5 | (1.6 qt.)

## 22.4 Chassis

| Frame | Lattice frame of steel tubes, powder-coated |
|-------|---|
|-------|---|

## 22.4.1 Standard chassis

| Fork           | WP Suspension |
|----------------|---------------|
| Shock absorber | WP Suspension |

## 22.4.2 Low chassis

| Fork           | WP Suspension |
|----------------|---------------|
| Shock absorber | WP Suspension |

| Brake system           |  |
|------------------------|--|
| front                  | Disc brake with 4-piston brake caliper             |
| rear                   | Disc brake with single-pot brake caliper, floating |
| Brake discs - diameter |  |

| front                                       | 300 mm (11.81 in)                                      |  |
|---|--|--|
| rear  | 230 mm (9.06 in)                                       |  |
| Brake discs - wear limit                    |  |  |
| front                                       | 4.5 mm (0.177 in)                                      |  |
| rear  | 3.6 mm (0.142 in)                                      |  |
| Tire pressure when solo                     | ·  |  |
| front                                       | 2.0 bar (29 psi)                                       |  |
| rear  | 2.0 bar (29 psi)                                       |  |
| Tire pressure with passenger / full payload |  |  |
| front                                       | 2.0 bar (29 psi)                                       |  |
| rear  | 2.2 bar (32 psi)                                       |  |
| Secondary ratio                             | 14:42  |  |
| Chain                                       | 5/8 x 1/4" (520) X-ring                                |  |
| Steering head angle                         | 65°  |  |
| Wheelbase                                   | $1,367 \pm 15 \text{ mm } (53.82 \pm 0.59 \text{ in})$ |  |
| Seat height, unloaded                       | ·  |  |
| Standard                                    | 800 mm (31.5 in)                                       |  |
| Low   | 785 mm (30.91 in)                                      |  |
| Dry weight                                  | 129.5 kg (285.5 lb.)                                   |  |
| Maximum permissible front axle load         | 125 kg (276 lb.)                                       |  |
| Maximum permissible rear axle load          | 210 kg (463 lb.)                                       |  |
|   |  |  |

| Maximum permissible overall weight | 335 kg (739 lb.) |
|------------------------------------|------------------|
|                                    | ,                |

## 22.5 Electrical system

| 12-V battery  | ETZ-9-BS               | Battery voltage: 12 V<br>Nominal capacity: 8 Ah<br>Maintenance-free |
|---|------------------------|---|
| Fuse  | 75011088010            | 10 A  |
| Fuse  | 75011088015            | 15 A  |
| Fuse  | 90111088025            | 25 A  |
| Fuse  | 75011088030            | 30 A  |
| Headlight   | H4/socket P43t         | 12 V<br>60/55 W   |
| Position light                                      | W5W / socket W2.1x9.5d | 12 V<br>5 W   |
| Combination instrument lighting and indicator lamps | LED                    |   |
| Turn signal   | LED                    |   |
| Brake/tail light                                    | LED                    |   |
| License plate lamp                                  | LED                    |   |

## **22.6** Tires

| Front tire             | Rear tire              |
|------------------------|------------------------|
| 110/70 R 17 M/C 54S TL | 150/60 R 17 M/C 66S TL |
| MRF REVZ-FC            | MRF REVZ-C             |

The tires specified represent one of the possible series production tires. Additional information is available in the Service section under: http://www.ktm.com

## 22.7 Fork

### 22.7.1 Standard chassis

| Fork article number | 93001000044       |
|---------------------|-------------------|
| Fork                | WP Suspension     |
| Fork length         | 736 mm (28.98 in) |

| Fork oil | 450 ml (15.21 fl. oz.) | Fork oil (SAE 4) (48601166S1) |
|----------|------------------------|-------------------------------|
|          |                        | (🕮 p. 241)                    |

### 22.7.2 Low chassis

| Fork article number | 05.58.6S.03       |
|---------------------|-------------------|
| Fork                | WP Suspension     |
| Fork length         | 736 mm (28.98 in) |

| Fork oil | 450 ml (15.21 fl. oz.) | Fork oil (SAE 4) (48601166S1) |
|----------|------------------------|-------------------------------|
|          |                        | (🕮 p. 241)                    |

## 22.8 Shock absorber

## 22.8.1 Standard chassis

| Shock absorber article number | 90604010100             |
|-------------------------------|-------------------------|
| Shock absorber                | WP Suspension           |
| Spring preload                | ·                       |
| Standard                      | 3 clicks                |
| Full payload                  | 6 clicks                |
| Static sag                    | 15 mm (0.59 in)         |
| Riding sag                    | 45 50 mm (1.77 1.97 in) |
| Fitted length                 | 300 mm (11.81 in)       |

## 22.8.2 Low chassis

| Shock absorber article number | 93104110000   |
|-------------------------------|---------------|
| Shock absorber                | WP Suspension |
| Spring preload                |               |
| Standard                      | 3 clicks      |
| Full payload                  | 6 clicks      |

| Static sag    | 15 mm (0.59 in)         |
|---------------|-------------------------|
| Riding sag    | 45 50 mm (1.77 1.97 in) |
| Fitted length | 300 mm (11.81 in)       |

## 22.9 Chassis tightening torques

| Exhaust clamp                          | -        | 19 Nm (14 lbf ft)               |
|--|----------|---------------------------------|
| Helmet holder screw                    | EJOT PT® | 3 Nm (2.2 lbf ft)               |
| Screw, chain guard                     | EJOT PT® | 4 Nm (3 lbf ft)                 |
| Screw, headlight                       | EJOT PT® | 4 Nm (3 lbf ft)                 |
| Remaining screws, chassis              | M4       | 4 Nm (3 lbf ft)                 |
| Screw, bottom subframe trim            | M4       | 5 Nm (3.7 lbf ft)               |
| Screw, EFI control unit                | M4       | 5 Nm (3.7 lbf ft)               |
| Screw, license plate lamp              | M4       | 2 Nm (1.5 lbf ft)               |
| Remaining nuts, chassis                | M5       | 5 Nm (3.7 lbf ft)               |
| Remaining screws, chassis              | M5       | 5 Nm (3.7 lbf ft)               |
| Screw, ABS hose clamp<br>(200 Duke BR) | M5       | 6 Nm (4.4 lbf ft)               |
| Screw, brake line holder, rear         | M5       | 7 Nm (5.2 lbf ft)  Loctite®243™ |
| Screw, chain guard                     | M5       | 4 Nm (3 lbf ft) Loctite®243™    |
| Screw, fuel pump                       | M5       | 5 Nm (3.7 lbf ft)               |

| Screw, fuel tank closure flange    | M5 | 5 Nm (3.7 lbf ft)               |
|------------------------------------|----|---------------------------------|
| Screw, fuel tank cover             | M5 | 4 Nm (3 lbf ft)                 |
| Screw, fuel tank trim              | M5 | 5 Nm (3.7 lbf ft)               |
| Screw, license plate holder        | M5 | 11 Nm (8.1 lbf ft)              |
| Screw, side stand sensor           | M5 | 5 Nm (3.7 lbf ft)  Loctite®243™ |
| Screw, spoiler                     | M5 | 5 Nm (3.7 lbf ft)               |
| Screw, subframe cover, bottom      | M5 | 5 Nm (3.7 lbf ft)               |
| Screw, tail end lower part         | M5 | 6 Nm (4.4 lbf ft)               |
| Screw, tail light                  | M5 | 5 Nm (3.7 lbf ft)               |
| Screw, tilt sensor                 | M5 | 6 Nm (4.4 lbf ft)  Loctite®243™ |
| Screw, windshield                  | M5 | 3 Nm (2.2 lbf ft)               |
| Damping rubber frame screw         | M6 | 7 Nm (5.2 lbf ft)               |
| Nut, foot brake lever adjustment   | M6 | 9 Nm (6.6 lbf ft)               |
| Nut, radiator                      | M6 | 5 Nm (3.7 lbf ft)               |
| Remaining nuts, chassis            | M6 | 10 Nm (7.4 lbf ft)              |
| Remaining screws, chassis          | M6 | 10 Nm (7.4 lbf ft)              |
| Screw, ABS module<br>(200 Duke BR) | M6 | 7 Nm (5.2 lbf ft)               |
| Screw, air filter box              | M6 | 6 Nm (4.4 lbf ft)               |
| Screw, air filter box cover        | M6 | 3 Nm (2.2 lbf ft)               |

| Screw, brake fluid reservoir for rear | M6 | 9 Nm (6.6 lbf ft)  |
|---------------------------------------|----|--------------------|
| brake                                 |    |                    |
| Screw, chain sliding guard            | M6 | 9 Nm (6.6 lbf ft)  |
| Screw, clutch cable retaining         | M6 | 6 Nm (4.4 lbf ft)  |
| bracket                               |    |                    |
| Screw, compensating tank              | M6 | 13 Nm (9.6 lbf ft) |
| Screw, foot brake cylinder            | M6 | 9 Nm (6.6 lbf ft)  |
|                                       |    | Loctite®243™       |
| Screw, front fender                   | M6 | 11 Nm (8.1 lbf ft) |
| Screw, front lower rear panel         | M6 | 11 Nm (8.1 lbf ft) |
| Screw, front seat fixing              | M6 | 6 Nm (4.4 lbf ft)  |
| Screw, front spoiler                  | M6 | 9 Nm (6.6 lbf ft)  |
| Screw, fuel tank                      | M6 | 13 Nm (9.6 lbf ft) |
| Screw, headlight holder               | M6 | 11 Nm (8.1 lbf ft) |
| Screw, headlight mask                 | M6 | 11 Nm (8.1 lbf ft) |
|                                       |    | Loctite®243™       |
| Screw, ignition coil                  | M6 | 9 Nm (6.6 lbf ft)  |
| Screw, license plate holder           | M6 | 12 Nm (8.9 lbf ft) |
|                                       |    | Loctite®243™       |
| Screw, lower rear panel               | M6 | 5 Nm (3.7 lbf ft)  |
| Screw, magnetic holder on side        | M6 | 5 Nm (3.7 lbf ft)  |
| stand                                 |    | Loctite®243™       |
| Screw, main silencer                  | M6 | 10 Nm (7.4 lbf ft) |

| Screw, radiator bracket          | M6 | 6 Nm (4.4 lbf ft)   |
|----------------------------------|----|---------------------|
| Screw, radiator holder           | M6 | 9 Nm (6.6 lbf ft)   |
| Screw, rear ABS sensor wheel     | M6 | 8 Nm (5.9 lbf ft)   |
| (200 Duke BR)                    |    | Loctite®243™        |
| Screw, rear splash protector     | M6 | 9 Nm (6.6 lbf ft)   |
| Screw, rollover sensor holder    | M6 | 11 Nm (8.1 lbf ft)  |
| Screw, seat                      | M6 | 10 Nm (7.4 lbf ft)  |
| Screw, shift lever linkage       | M6 | 11 Nm (8.1 lbf ft)  |
|                                  |    | Loctite®243™        |
| Screw, side stand sensor cable   | M6 | 9 Nm (6.6 lbf ft)   |
| holder                           |    | Loctite®243™        |
| Screw, voltage regulator         | M6 | 10 Nm (7.4 lbf ft)  |
| Screw, voltage regulator holder  | M6 | 11 Nm (8.1 lbf ft)  |
| Screw, wheel speed sensor holder | M6 | 8 Nm (5.9 lbf ft)   |
| (200 Duke BR)                    |    |                     |
| Silent block retaining bracket   | M6 | 7 Nm (5.2 lbf ft)   |
| screw                            |    |                     |
| Nut, rear sprocket               | M8 | 27 Nm (19.9 lbf ft) |
|                                  |    | Loctite®243™        |
| Remaining nuts, chassis          | M8 | 25 Nm (18.4 lbf ft) |
| Remaining screws, chassis        | M8 | 25 Nm (18.4 lbf ft) |
| Screw, bottom triple clamp       | M8 | 15 Nm (11.1 lbf ft) |
| Screw, engine bearer on engine   | M8 | 25 Nm (18.4 lbf ft) |
|                                  | 1  | I .                 |

| Screw, engine bearer on frame  | M8   | 26 Nm (19.2 lbf ft) |                           |
|--------------------------------|------|---------------------|---------------------------|
| Screw, foot brake lever        | M8   | 16 Nm (11.8 lbf ft) |                           |
|                                |      |                     | Loctite®243™              |
| Screw, fork stub               | M8   | 15 Nm (11.1 lbf ft) |                           |
| Screw, front brake disc        | M8   | 30 Nm (22.1 lbf ft) |                           |
|                                |      |                     | Loctite®243™              |
| Screw, front wheel spindle     | M8   | 26 Nm (19.2 lbf ft) |                           |
| Screw, handlebar clamp         | M8   | 21 Nm (15.5 lbf ft) |                           |
|                                |      |                     | Loctite®243™              |
| Screw, handrail                | M8   | 32 Nm (23.6 lbf ft) |                           |
| Screw, horn                    | M8   | 7 Nm (5.2 lbf ft)   |                           |
| Screw, main silencer           | M8   | 24 Nm (17.7 lbf ft) |                           |
| Screw, passenger footrest unit | M8   | 26 Nm (19.2 lbf ft) |                           |
|                                |      |                     | Loctite®243™              |
| Screw, rear brake disc         | M8   | 30 Nm (22.1 lbf ft) |                           |
|                                |      |                     | Loctite®243™              |
| Screw, shift lever             | M8   | 16 Nm (11.8 lbf ft) |                           |
|                                |      |                     | Loctite®243™              |
| Screw, top triple clamp        | M8   | 11 Nm (8.1 lbf ft)  |                           |
| Screw, front brake caliper     | M8x1 | 30 Nm (22.1 lbf ft) |                           |
|                                |      |                     | Loctite <sup>®</sup> 204™ |
| Banjo bolt, brake line         | M10  | 24 Nm (17.7 lbf ft) |                           |

| Fitting side stand               | M10        | 35 Nm (25.8 lbf ft)  |              |
|----------------------------------|------------|----------------------|--------------|
|                                  |            |                      | Loctite®243™ |
| Fitting, engine mounting bracket | M10        | 45 Nm (33.2 lbf ft)  |              |
| Nut, left rear mirror            | M10        | 16 Nm (11.8 lbf ft)  |              |
| Remaining nuts, chassis          | M10        | 45 Nm (33.2 lbf ft)  |              |
| Remaining screws, chassis        | M10        | 45 Nm (33.2 lbf ft)  |              |
| Fitting, handlebar support       | M10x1.25   | 21 Nm (15.5 lbf ft)  |              |
| Fitting, shock absorber, bottom  | M10x1.25   | 45 Nm (33.2 lbf ft)  |              |
|                                  |            |                      | Loctite®243™ |
| Nut, right rear mirror           | M10LHx1.25 | 16 Nm (11.8 lbf ft)  |              |
| Nut, side stand bracket          | M10x1.25   | 35 Nm (25.8 lbf ft)  |              |
| Nut, turn signal                 | M10x1.25   | 6 Nm (4.4 lbf ft)    |              |
| Screw, front footrest bracket    | M10x1.25   | 47 Nm (34.7 lbf ft)  |              |
|                                  |            |                      | Loctite®243™ |
| Screw, front footrest bracket /  | M10x1.25   | 47 Nm (34.7 lbf ft)  |              |
| engine bearer                    |            |                      |              |
| Screw, top shock absorber        | M10x1.25   | 51 Nm (37.6 lbf ft)  |              |
|                                  |            |                      | Loctite®243™ |
| Stud, rear sprocket              | M10x1.25   | 50 Nm (36.9 lbf ft)  |              |
| Nut, fork pivot                  | M14x1.5    | 100 Nm (73.8 lbf ft) |              |
| Nut, rear wheel spindle          | M14x1.5    | 90 Nm (66.4 lbf ft)  |              |
| Screw, top steering head         | M16x1.5    | 53 Nm (39.1 lbf ft)  |              |
|                                  |            |                      | Loctite®243™ |

| Lambda sensor                     | M18x1.5 | 19 Nm (14 lbf ft)  |
|-----------------------------------|---------|--|
| Adjusting ring, link fork bearing | M22x1   | Tighten and ensure that there is no play   |
| Nut, steering head                | M30x1   | Step 1 55 Nm (40.6 lbf ft) 2nd stage (loosen, counterclockwise) 2 turns Step 3 5 Nm (3.7 lbf ft) |

#### Brake fluid DOT 4 / DOT 5.1

#### Standard/classification

- DOT

#### Guideline

 Use only brake fluid that complies with the specified standard (see specifications on the container) and that exhibits the corresponding properties.

### Recommended supplier

#### Castrol

REACT PERFORMANCE DOT 4

#### **MOTOREX®**

Brake Fluid DOT 5.1

#### Coolant

#### Guideline

- Only use high-grade, silicate-free coolant with corrosion inhibitor additive for aluminum motors. Low grade and unsuitable antifreeze causes corrosion, deposits and frothing.
- Do not use pure water as only coolant is able to meet the requirements needed in terms of corrosion protection and lubrication properties.
- Only use coolant that complies with the requirements stated (see specifications on the container) and that has the relevant properties.

| Antifreeze protection to at least |  |
|-----------------------------------|--|
|-----------------------------------|--|

## 23 SUBSTANCES

The mixture ratio must be adjusted to the necessary antifreeze protection. Use distilled water if the coolant needs to be diluted.

The use of premixed coolant is recommended.

Observe the coolant manufacturer specifications for antifreeze protection, dilution and miscibility (compatibility) with other coolants.

# Recommended supplier MOTOREX®

COOLANT M3.0

### Engine oil (SAE 15W/50)

#### Standard/classification

#### Guideline

 Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Semi-synthetic engine oil

## Recommended supplier MOTOREX®

Formula 4T

### Engine oil (SAE 10W/40)

#### Standard/classification

- JASO T903 MA2 (
   p. 245)
- SAE (♠ p. 245) (SAE 10W/40)

#### Guideline

 Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Semi-synthetic engine oil

### **Recommended supplier**

#### **MOTOREX®**

- Formula 4T

### Fork oil (SAE 4) (48601166S1)

#### Standard/classification

- SAE (♠ p. 245) (SAE 4)

#### **Guideline**

 Use only oils that comply with the specified standards (see specifications on the container) and that exhibit the corresponding properties.

### Super unleaded (ROZ 95/RON 95/PON 91)

#### Standard/classification

DIN EN 228 (ROZ 95/RON 95/PON 91)

#### Guideline

Only use unleaded super fuel that matches or is equivalent to the specified fuel grade.

## 23 SUBSTANCES

Fuel with an ethanol content of up to 10 % (E10 fuel) is safe to use.



#### Info

Do **not** use fuel containing methanol (e. g. M15, M85, M100) or more than 10 % ethanol (e. g. E15, E25, E85, E100).

### Super unleaded, type C (ROZ 95/RON 95/PON 91)

#### Standard/classification

ANP (Agência Nacional do Petróleo) #57 (ROZ 95/RON 95/PON 91)

#### Guideline

- Only use super unleaded fuel that matches or is equivalent to the following specifications.
- Super unleaded fuel with an ethanol content of 19 to 27 % is permissible.



#### Info

Do **not** use fuel made of methanol (e. g. M15, M85, M100).

Do **not** use fuel with less than 19 % ethanol (e. g. E10).

Do **not** use fuel with more than 27 % ethanol (e.g. E30, E85, E100).

### Chain cleaner

Recommended supplier MOTOREX®

- Chain Clean

### **Fuel additive**

Recommended supplier MOTOREX®

Fuel Stabilizer

### Long-life grease

Recommended supplier MOTOREX®

- Bike Grease 2000

## Motorcycle cleaner

Recommended supplier MOTOREX®

- Moto Clean

## Perfect finish and high gloss polish for paints

Recommended supplier MOTOREX®

Moto Shine

## 24 AUXILIARY SUBSTANCES

## Preserving materials for paints, metal and rubber

Recommended supplier MOTOREX®

Moto Protect

## Special cleaner for glossy and matte paint finishes, metal and plastic surfaces

Recommended supplier MOTOREX®

- Quick Cleaner

### Street chain spray

**Guideline** 

Recommended supplier MOTOREX®

- Chainlube Road Strong

## Universal oil spray

Recommended supplier MOTOREX®

- Joker 440 Synthetic

### **JASO T903 MA2**

Different technical development directions required a separate specification for motorcycles – the **JASO T903 MA2** standard.

Earlier, engine oils from the automobile industry were used for motorcycles because there was no separate motorcycle specification.

Whereas long service intervals are demanded for automobile engines, the focus for motorcycle engines is on high performance at high engine speeds.

In most motorcycle engines, the transmission and clutch are lubricated with the same oil.

The JASO T903 MA2 standard meets these special requirements.

### SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

## **26 INDEX OF SPECIAL TERMS**

| ABS | Anti-lock braking system | Safety system that prevents locking of the wheels when driving straight ahead without the influence of lateral forces |
|-----|--------------------------|---|
| OBD | On-board diagnosis       | Vehicle system, which monitors the specified parameters of the vehicle electronics                                    |

| Art. no. | Article number |
|----------|----------------|
| ca.      | circa          |
| cf.      | compare        |
| e.g.     | for example    |
| etc.     | et cetera      |
| i.a.     | inter alia     |
| no.      | number         |
| poss.    | possibly       |

## 28 LIST OF SYMBOLS

## 28.1 Yellow and orange symbols

Yellow and orange symbols indicate an error condition that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

|       | Malfunction indicator lamp lights up yellow – The OBD has detected an error in the vehicle electronics. Come safely to a halt, and contact an authorized KTM workshop. |
|-------|--|
|       | The general warning lamp flashes yellow – A note/warning note on operating safety has been detected. This is also shown in the display.                                |
| (ABS) | ABS warning lamp lights up yellow – Status or error messages relating to ABS.  |

## 28.2 Green and blue symbols

Green and blue symbols reflect information.

| ( <del>+</del> | The turn signal indicator lamp flashes green simultaneously with the turn signal – The turn signal is switched on. |
|---|--|
| N   | The idle indicator lamp lights up green – The transmission is in neutral.  |
|   | The high beam indicator lamp lights up blue – The high beam is switched on.  |

|  | Brake fluid level   |
|--|---|
| 1  | front brake, checking   |
| 12-V battery       charging       159         installing       158         removing       156  | rear brake, checking  |
| A  | <b>Brakes</b>   |
| ABS fuses  | C   |
| changing       162         ACC2       182         front       182         Accessories       16         Antifreeze       187         Applying the brakes       81         Auxiliary substances       16 | Capacity         coolant         226           engine oil         205, 226           fuel         89, 226-227           Chain         107           checking         114           cleaning         107           Chain tension |
| В  | adjusting   |
| Brake discs checking   | checking  |
| Brake fluid front brake, adding  | Clutch lever play checking  |

| Combination instrument 40-67                     | Cooling system        |
|--|-----------------------|
| activation and test                              | filling/bleeding      |
| average fuel consumption 1/average fuel          | Customer service      |
| consumption 2 menu                               | D                     |
| average fuel consumption 2/service menu 60       | -                     |
| average speed/average fuel consumption 1 menu 58 | Diagnostics connector |
| coolant temperature indicator 52                 | E                     |
| display  | Emergency OFF switch  |
| fuel level display                               | Engine                |
| function buttons                                 | running in70          |
| indicator lamps                                  | Engine number         |
| <b>0D0</b> display                               |                       |
| overview   | Engine oil            |
| range/riding time menu                           | adding                |
| service/range menu 61                            | changing              |
| shift warning light                              | Engine oil level      |
| <b>TRIP 1</b> display                            | checking 202          |
| <b>TRIP 2</b> display                            | Engine sprocket       |
| <b>TRIP F</b> display                            | checking 114          |
| warnings   | Environment           |
| Coolant  | F                     |
| draining190                                      | Figures               |
| Coolant level                                    | Filling up            |
| checking   | fuel                  |
|  |                       |

| Foot brake lever                         | G                        |
|--|--------------------------|
| free travel, adjusting                   | Grab handles             |
| free travel, checking                    | Н                        |
| Fork legs                                | Hand brake lever         |
| dust boots, cleaning                     |                          |
| Front fender                             | Headlight bulb           |
| installing                               | changing                 |
| removing                                 | Headlight range          |
| Front rider's seat                       | adjusting                |
| mounting 106                             | Headlight setting        |
| removing                                 | checking                 |
| Front spoiler                            | High beam flasher button |
| installing                               | Horn button              |
| removing                                 |                          |
| Front wheel                              | Ignition lock            |
| installing                               | Implied warranty         |
| removing                                 | Indicator lamps          |
| Fuel tank filler cap                     | Intended use             |
| closing                                  | K                        |
| opening                                  | Key number               |
| Fuel, oils, etc                          | Kilometers or miles      |
| Fuse                                     | adjusting 62             |
| individual power consumers, changing 165 | , 3                      |

| Passenger seat                                       |
|--|
| mounting   |
| Play in the clutch lever                             |
| adjusting 201  |
| Position light lamp changing                         |
| Preparing for use  advice on preparing for first use |
| R  |
| Rear hub damping rubber pieces checking              |
| Rear sprocket checking                               |
| Rear wheel   |
| installing   |
|  |
|  |

| S  | <b>Storage</b>  |
|--|---|
| Safe operation   | Т   |
| Seat lock       35         Service       17         Service schedule       90-93     | Technical data capacities   |
| Shift lever  | chassis   |
| Shift speed RPM1 adjusting   | engine  |
| Shift speed RPM2 adjusting   | fork       230         shock absorber       231         tires       230 |
| Shifting   | Throttle cable play adjusting   |
| Side stand       38         Spare parts       16         Start button       30       | Throttle grip   |
| Starting       74         Steering       locking       31         unlocking       32 | Tire condition  checking  |
| Steering lock         30           Stopping         84                               | checking  |

| Transport       |         |     |     |    |     |    |  |  |   |    |     | 86  |
|-----------------|---------|-----|-----|----|-----|----|--|--|---|----|-----|-----|
| Γroubleshootin  | g       |     |     |    |     |    |  |  | 2 | 17 | 7-2 | 220 |
| Turn signal swi | itch    |     |     |    |     |    |  |  |   |    |     | 29  |
| Гуре label      |         |     |     |    |     |    |  |  |   |    |     | 24  |
| U               |         |     |     |    |     |    |  |  |   |    |     |     |
| Jse definition  |         |     |     |    |     |    |  |  |   |    |     | 10  |
| V               |         |     |     |    |     |    |  |  |   |    |     |     |
| /ehicle identif | ication | num | ber |    |     |    |  |  |   |    |     | 24  |
| liew of vehicle |         |     |     |    |     |    |  |  |   |    |     |     |
| front left      |         |     |     |    |     |    |  |  |   |    |     |     |
| rear right      |         |     | ٠.  | ٠. |     | ٠. |  |  |   |    |     | 22  |
| W               |         |     |     |    |     |    |  |  |   |    |     |     |
| Ninter operatio | on      |     |     |    |     |    |  |  |   |    |     |     |
| checks and      | d maint | ena | nce | st | eps | ·  |  |  |   |    | . 2 | 212 |
| Nork rules .    |         |     |     |    |     |    |  |  |   |    |     | 14  |





3214120en 12/2019







